


Vehicle Identification/Recognition



SONATA




Accessing Vehicle

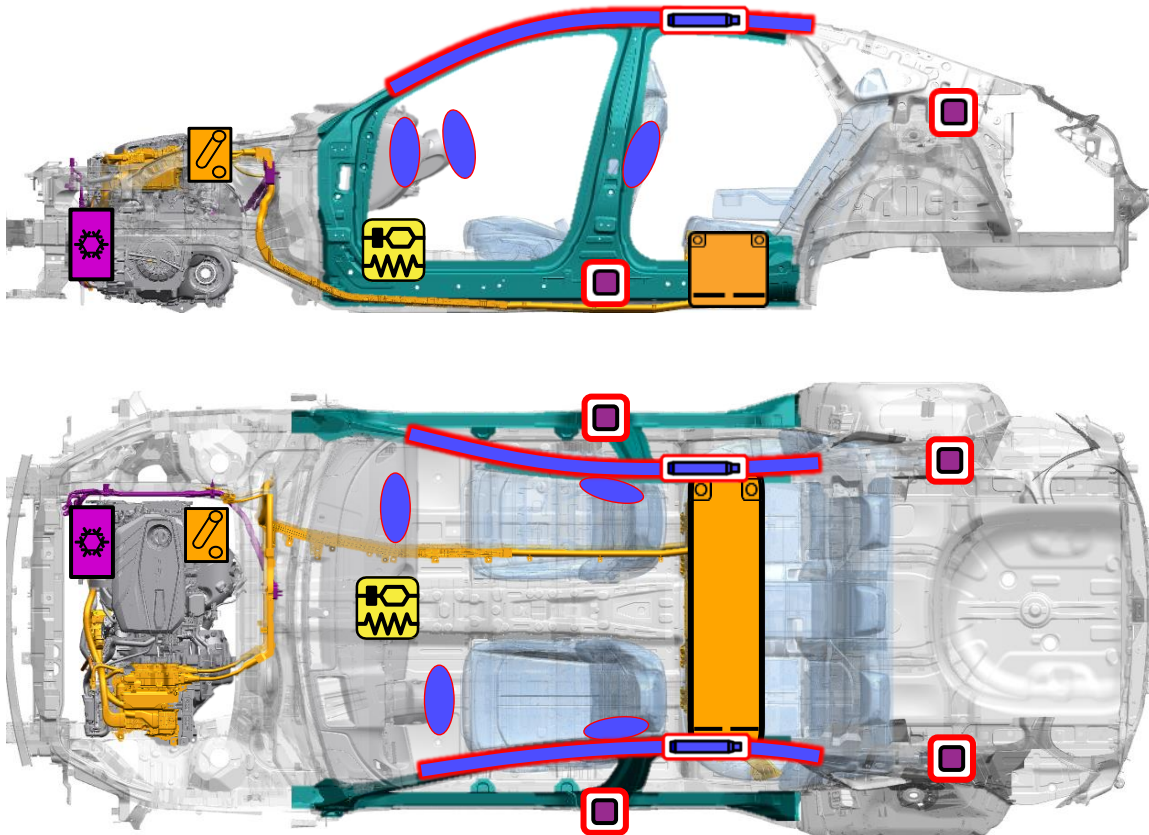

	Supplemental Restraint System Control Module (SRSCM)		Airbag		Airbag Gas Inflators
	High voltage cable		12V Battery		Air-conditioning line
	High voltage disconnect		OBC (On – Board Charger)		Ultra-High Strength Steel
	High Voltage Battery		Air-conditioning component		Seat belt pretensioner

Disabling Vehicle

1

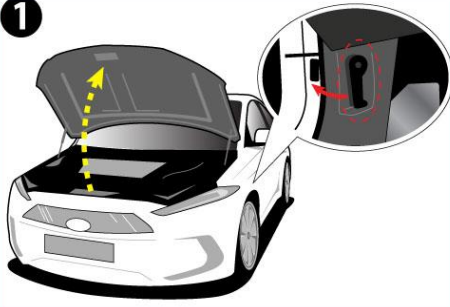


2



5m (16.4ft) or more
To Prevent Accidental Restart


3 **DISCONNECT NEGATIVE TERMINAL**

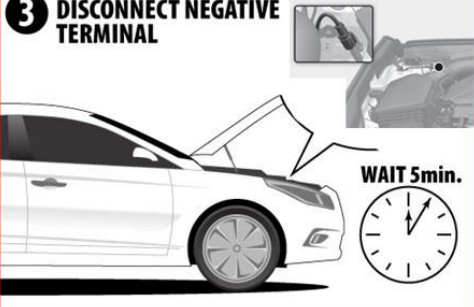

WAIT 5min.

OR

1

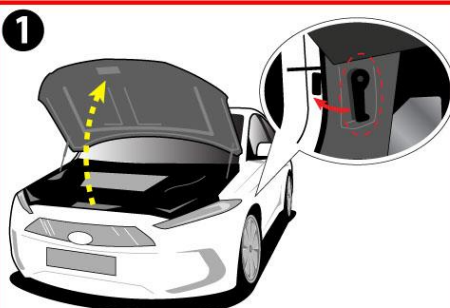


2



5m (16.4ft) or more

3

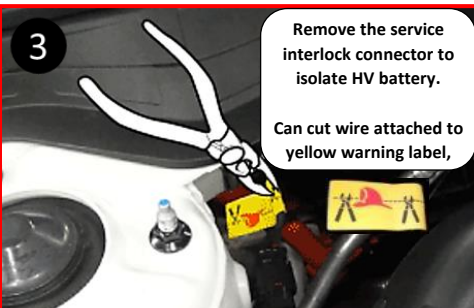

Remove the service interlock connector to isolate HV battery.
Can cut wire attached to yellow warning label,

Vehicle Towing Information

Tow the vehicle using a flat bed or using wheel dollies. Never tow the vehicle with the front or rear wheels on the ground



For further information, please refer to the Emergency Response Guide (ERG).

Applicable to Sonata Hybrid vehicles first sold in the United States.	ID. No. KMH-DN8PE HEV	Version No. 10.03.2023	Page 2 of 2
---	--------------------------	---------------------------	----------------