




Kia Sportage Hybrid
SUV, 5doors
From 2024

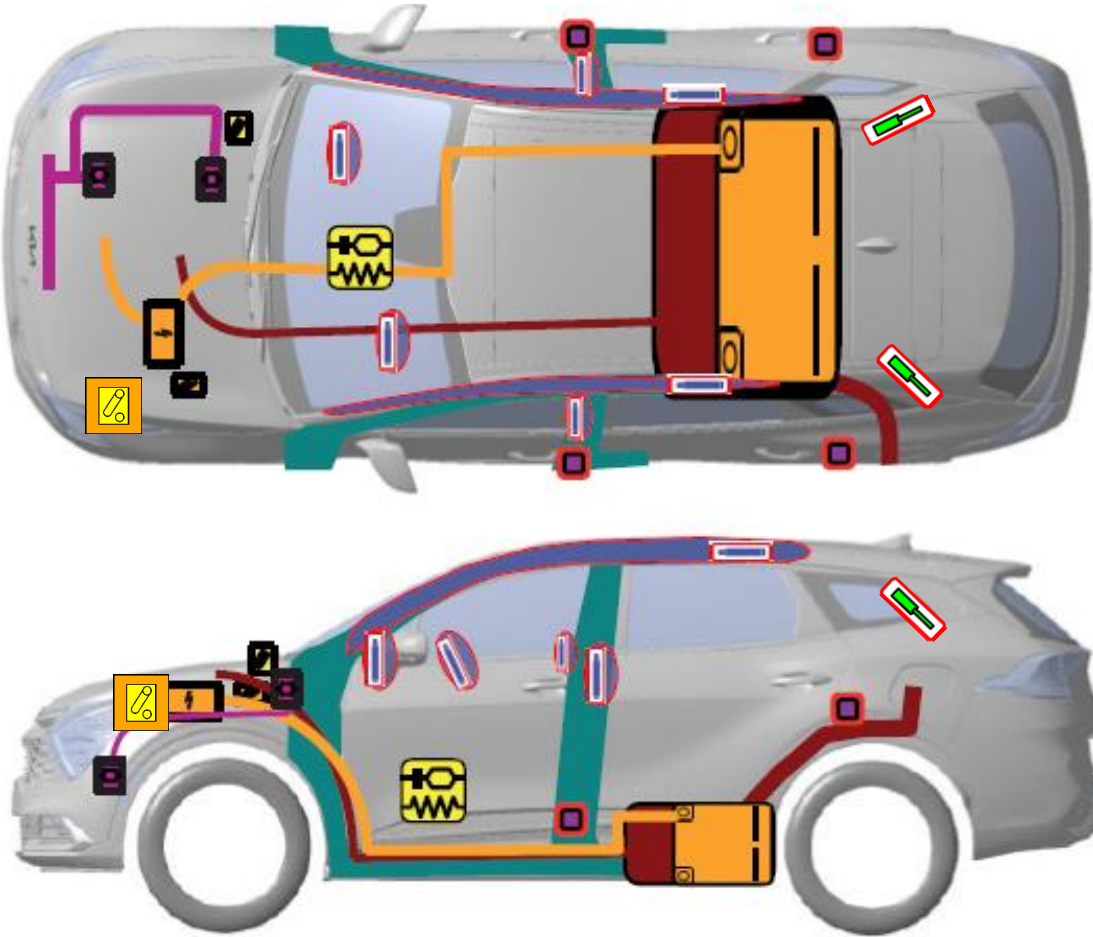

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		High voltage component
	Battery, low-voltage		Gas strut / Preloaded spring		High strength zone		Fuel tank content gasoline / ethanol		Disconnect high voltage device
	Battery pack, high-voltage		High voltage power cable		Air-conditioning line		Air-conditioning component		

1. Identification / recognition

 LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. 



Brand Logo Name



Model name



Hybrid emblem



2. Immobilization / stabilization / lifting

Immobilization:




1. Chock the wheels and pull the **EPB** switch to set the parking brake.
2. For automatic vehicles the shift button to the park(P) position.

For stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects



Lifting points under the vehicle: 

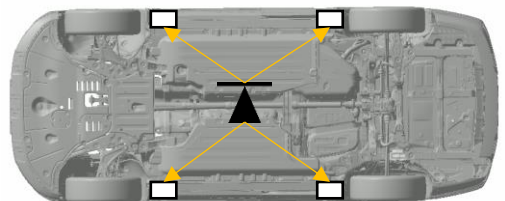


JACK/SUPPORT POSITION:

3. Disable direct hazards / safety regulations


 IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT RETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. 
FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW

Disabling High Voltage System:

a. Remove the service interlock connector (A)

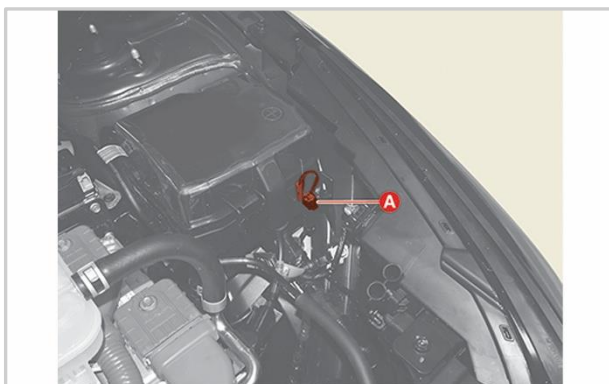

b. If the service interlock connector cannot be disconnected, cut the service interlock connector wire (A).

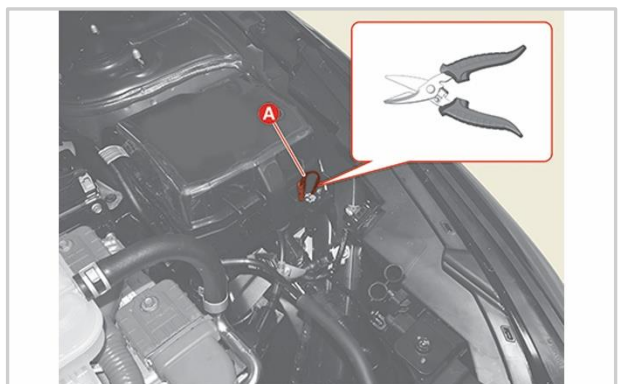

Disabling battery, low-voltage:

- 1. If necessary, lower the windows, unlock the doors and open the liftgate as required, before disconnecting the battery, low-voltage. Once the battery, low-voltage is disconnected, power controls will not operate.
- 2. Before disconnecting the battery, low-voltage, remove the Smart Key at least 6 feet away from the vehicle to prevent accidental restart.
- 3. Disconnect the auxiliary battery, low-voltage positive (+) terminal (A).




4. Access to the occupants


Steering column adjustment:



Seat adjustment:

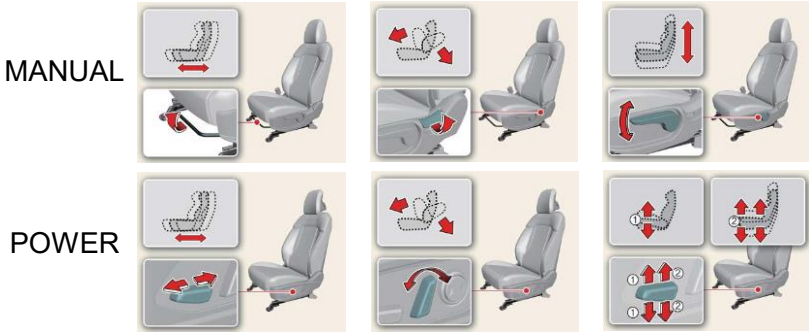


Vehicle body → Hardened Steel

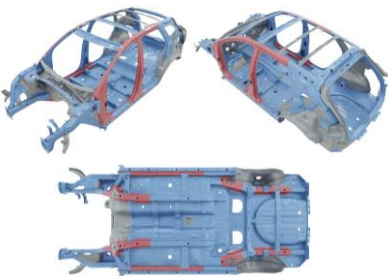

- Mild zone
- Advanced high strength zone
- High strength zone

Glass: ① : Laminated
②③④ : Tempered

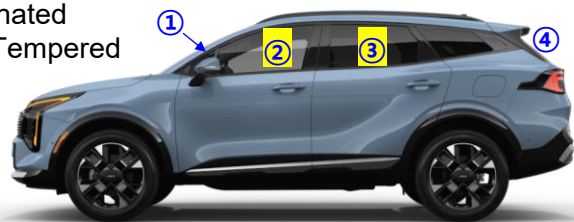

Liftgate:




- 1. Insert a long, flat object into the opening at the bottom of the liftgate.
- 2. Slide the latch in the direction of the arrow to unlock the liftgate.
- 3. Push the liftgate to open.

5. Stored energy / liquids / gases / solids

		52L	
		12V	R-1234yf 550g
		270V	




WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL INFRARED CAMERA



6. In case of fire



Use large amount of water

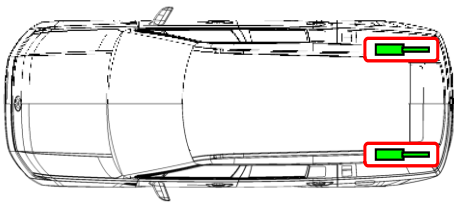

BATTERY RE-IGNITION!



GAS STRUT!



RISK OF MISSILE EFFECT OF HOOD AND LIFTGATE.

7. In case of submersion




DO NOT TOUCH ANY OF THE HIGH-VOLTAGE COMPONENTS OR CABLES INCLUDING THE HIGH VOLTAGE CUT-OFF SWITCH, AS DOING SO POSES AN ELECTROCUTION HAZARD. WORK ON THE VEHICLE ONLY AFTER THE VEHICLE HAS BEEN PULLED OUT OF THE WATER.



8. Towing / transportation / storage

OK

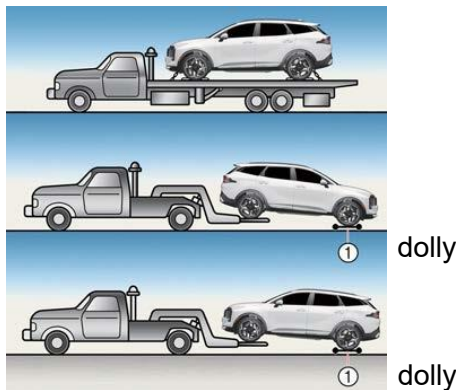

Notice: The use of wheel dollies (1) or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK



Notice : Do not tow with sling-type equipment. Do not tow the vehicle with the driven wheels on the ground as this may cause damage to the vehicle.

9. Important additional information

10. Explanation of pictograms used

	Hybrid electric vehicle		Fuel tank content gasoline / ethanol		Hood
	General warning sign		Air-conditioning component		Trunk
	Corrosives		Hazardous to the human health		Flammable
	Explosive		Acute toxicity		Environmental hazard
	Use thermal Infrared camera		Use water to extinguish the fire		Warning, Electricity