



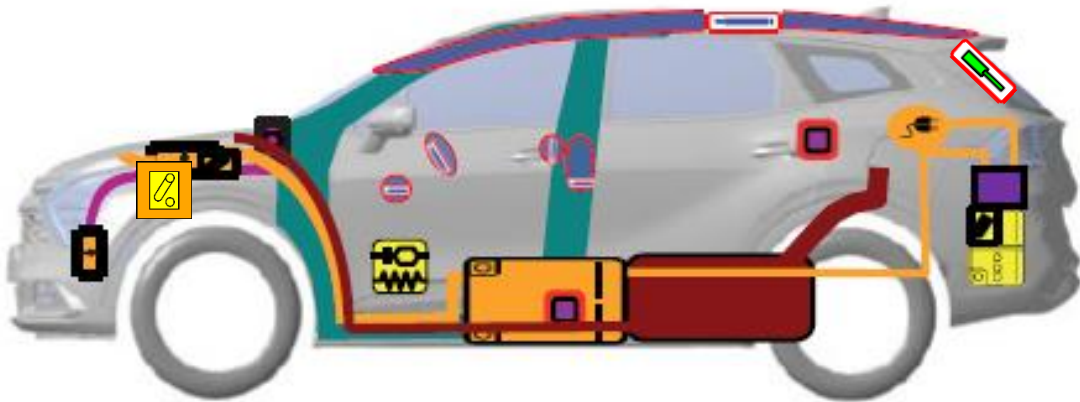

Kia Sportage Plug in Hybrid
SUV, 5doors
From 2024

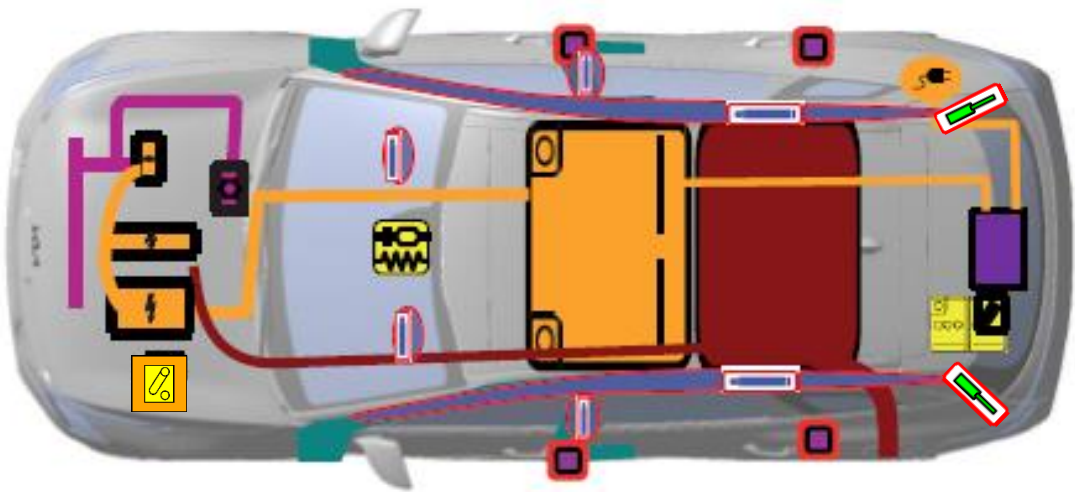

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		High voltage component
	Battery, low-voltage		Gas strut / Preloaded spring		High strength zone		Fuel tank content gasoline / ethanol		Disconnect high voltage device
	Battery pack, high-voltage		High voltage power cable		Air-conditioning line				

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.





Brand Logo Name



Model name



Hybrid emblem



Charging door






2. Immobilization / stabilization / lifting

Immobilization:





Lifting points under the vehicle: 

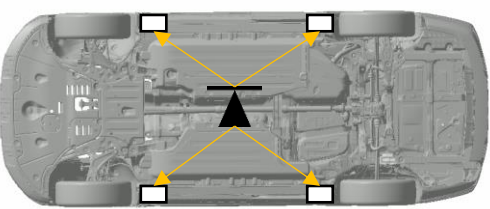

JACK/SUPPORT POSITION:

1. Chock the wheels and pull the **EPB** switch to set the parking brake.

2. For automatic vehicles the shift button to the park(P) position.

For stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects

3. Disable direct hazards / safety regulations




IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT RETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW




Disabling High Voltage System:

a. Remove the service interlock connector (A).

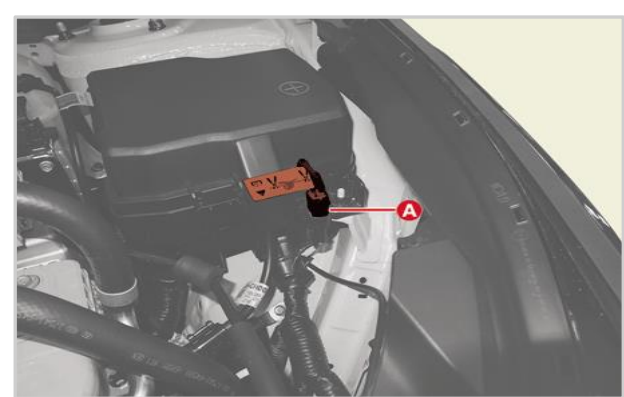


b. If it is not possible to remove the service interlock connector (A), then cut the wire as shown.

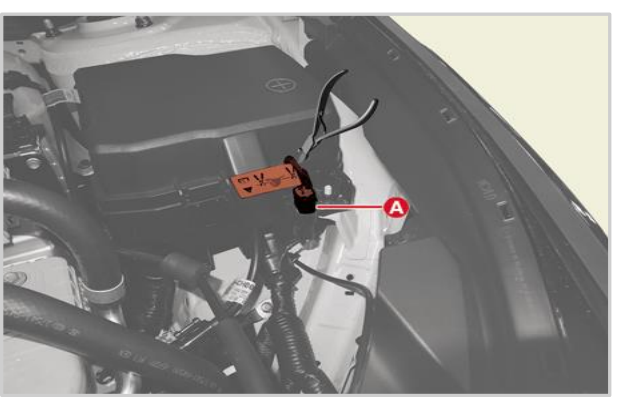


Disabling battery, low voltage:


1. Remove the luggage covering board (A).

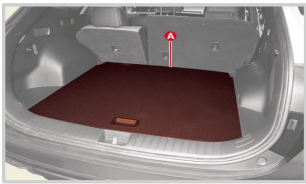


2. Remove the luggage center tray (A).

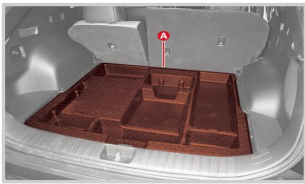

3. Loosen the auxiliary battery, low- voltage negative (-) terminal nut (A).

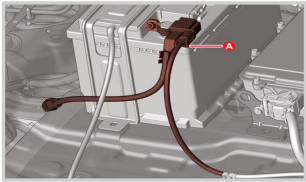

4. Disconnect the auxiliary battery, low-voltage negative (-) terminal (A).

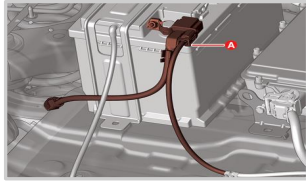

4. Access to the occupants

Steering column adjustment:




Seat adjustment:


MANUAL



POWER

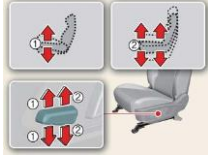

Vehicle body → Hardened Steel

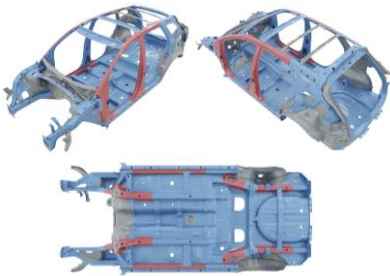

Glass: ① : Laminated
②③④ : Tempered



Liftgate:



1. Insert a long, flat object into the opening at the bottom of the liftgate.
2. Slide the latch in the direction of the arrow to unlock the liftgate.
3. Push the liftgate to open.


Mild zone
Advanced high strength zone
High strength zone

5. Stored energy / liquids / gases / solids

		42l	
		12V	R-1234yf 550g
		360V	




WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL INFRARED CAMERA




6. In case of fire



Use large amount of water

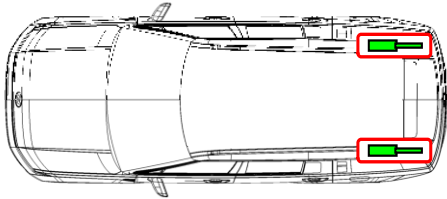



**BATTERY RE-IGNITION!**



GAS STRUT!
RISK OF MISSILE EFFECT OF HOOD
AND LIFTGATE.

7. In case of submersion



DO NOT TOUCH ANY OF THE HIGH-VOLTAGE COMPONENTS OR CABLES INCLUDING THE HIGH VOLTAGE CUT-OFF SWITCH, AS DOING SO POSES AN ELECTROCUTION HAZARD. WORK ON THE VEHICLE ONLY AFTER THE VEHICLE HAS BEEN PULLED OUT OF THE WATER.



8. Towing / transportation / storage

OK



dolly
dolly

Notice: The use of wheel dollies (1) or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK



Notice : Do not tow with sling-type equipment. Do not tow the vehicle with the driven wheels on the ground as this may cause damage to the vehicle.

9. Important additional information

10. Explanation of pictograms used

	Plug-in Hybrid electric vehicle		Fuel tank content gasoline / ethanol		Hood
	General warning sign		Air-conditioning component		Trunk
	Corrosives		Hazardous to the human health		Flammable
	Explosive		Acute toxicity		Environmental hazard
	Use thermal Infrared camera		Use water to extinguish the fire		Warning, Electricity