




Mullen ONE

Rescue Sheet

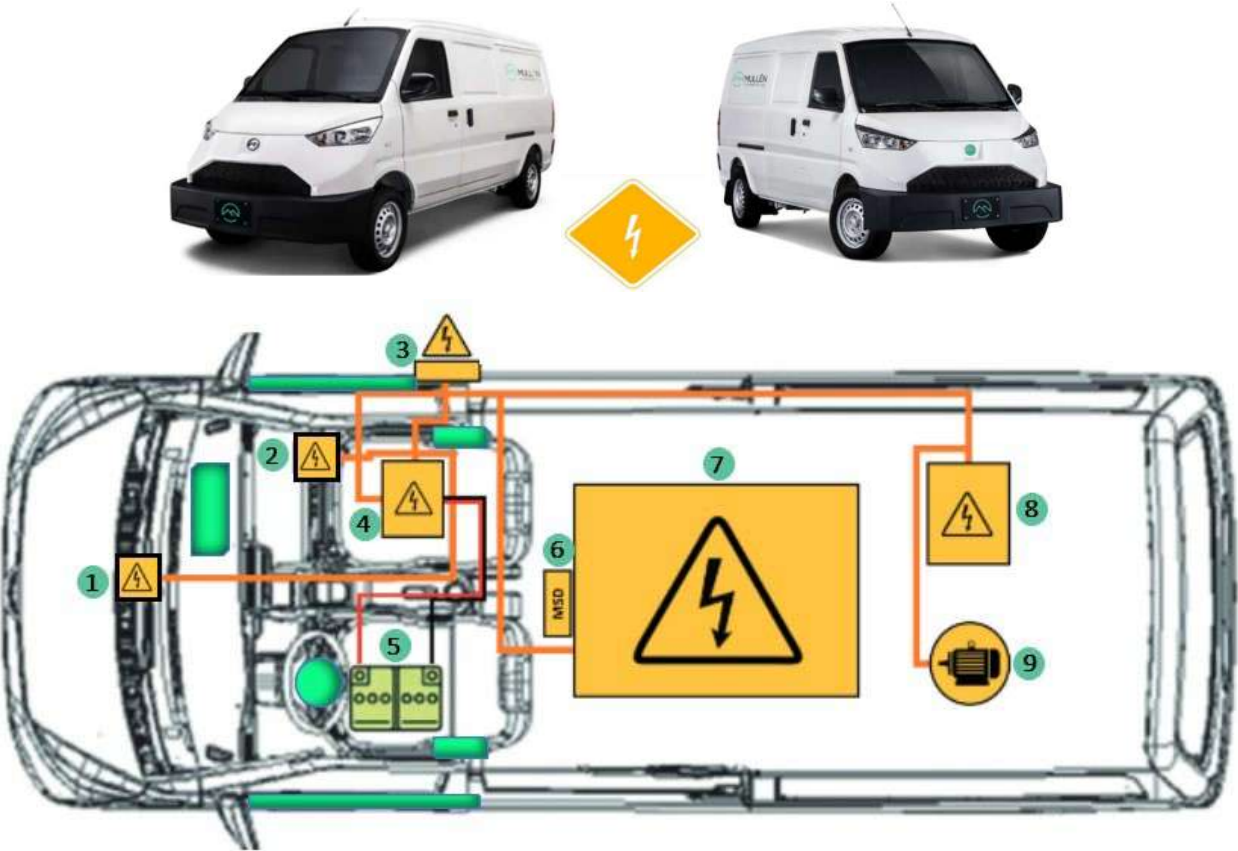

1. Positive Temperature Coefficient (PTC) Heater		6. Manual Service Disconnect (MSD)	
2. Air Conditioning Compressor		7. High Voltage Battery	
3. Inlet Charging Port		8. Motor Control Unit (MCU)	
4. Triple Auxiliary Drive System (3-in-1)		9. High Voltage Drive Motor	
5. 12-Volt Battery		Airbags	
Cables		12-Volt (Positive) Cables	
High Voltage Cables		12-Volt (Negative) Cables	


1. Identification / Recognition

⚠ CAUTION

THIS VEHICLE IS NOT EQUIPPED WITH "PARK" ON THE GEAR SELECTOR. YOU MUST ALWAYS ENGAGE THE PARKING BRAKE LOCATED TO THE RIGHT OF THE DRIVER'S SEAT.



WARNING LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT (PPE).

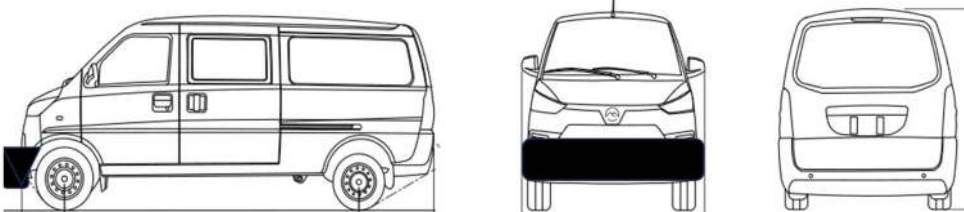

Vehicle Badging

Mullen One Cargo Van's have a unique badge.

- The Mullen logo is located on the front of the vehicle, below the hood and on the rear cargo door, above the license plate.

NOTE: The model's name does not appear on the exterior of the vehicle.

2. Immobilization / Stabilization / Lifting

IMMOBILIZATION



Image: Tire chocks.



Image: Dash Cluster in Neutral with Parking Brake engaged.



Image: Parking Brake located Right of driver's seat.



Cargo Area Light Switch Gear Selector USB Port

STABILIZATION / LIFTING POINTS



Figure 80: Front jacking position



Figure 81: Rear jacking position



Do not push on HV Battery.



3. Disable Direct Hazards / Safety Regulations

High and Low Voltage Battery Hazards

- Removing the MSD from the vehicle does not dissipate voltage inside the battery, the battery pack remains live and dangerous. This may also be true for the high-voltage components discussed below.
- There is no way to instantaneously discharge the energy that is stored inside of a battery pack when a vehicle is in an accident.
- High-voltage battery packs damaged in a traffic accident may emit toxic irritants to eyes, skin, and lungs as well as emitting combustible gases. Always wear personal protective equipment (PPE) and self-contained breathing apparatus when working near a damaged electric vehicle.
- Avoid working on a damaged electric vehicle in a confined area, such as a tunnel or garage. Move the vehicle or ventilate the work area if possible. Ventilate the interior of a damaged vehicle by opening windows or doors if possible.
- All high-voltage wires and harnesses are wrapped in orange insulation. Treat every battery pack and high-voltage (orange) cable as if they are "hot". Never cut a high-voltage (orange) cable or cut into a battery pack.
- When the 12-volt (low-voltage) cables are cut at the battery, the high-voltage system will be disabled due to low-voltage actuating the high-voltage contactors inside the high-voltage battery pack.
- The high-voltage battery cells contain a base electrolyte consisting of lithium hexafluorophosphate and organic solvents as the dominant active ingredient, absorbed in special polymeric film.
- The electrolyte will not leak from the battery under most conditions. However, if the battery is crushed, it is possible for a small amount of electrolyte to leak. Use proper clean-up procedures, followed by flushing the impacted area with large amounts of water to clean up any leaked material.

⚠ DANGER

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH.

Disabling High and Low Voltage Systems

Disable both low and high voltage electrical systems by following the instructions below:

STEP ONE:

Turn OFF the vehicle and remove the key from the ignition.

1. Confirm that the vehicle is at a standstill.
2. Ensure parking brake is securely engaged on level ground ("Park" telltale  will illuminate to indicate parking brake is engaged in the driver's cluster).
3. Vehicle must be in the Neutral (N) gear position ("N" telltale  will illuminate to indicate Neutral gear position is engaged in the driver's cluster).
4. Turn the key in the ignition to the "OFF" position and remove the key from the ignition.
5. Position wheel and tire chocks to prevent rolling or shifting of the vehicle.



Image: Dash Cluster in Neutral with Parking Brake engaged.



Image: Parking Brake located Right of driver's seat.



Image: Tire chocks.

STEP TWO:

Access and disable low voltage electrical system located under the driver seat.

1. Lift the fore/aft lever and position the seat midway on its track.
2. Lift the recliner lever and bring the seat back forward and down fully.
3. Locate the seat latches at the front base of the seat.
4. Push in the orange tab while lifting on the seat latch until it is unfastened. The seat has two latches.
5. Flip the seat backward and ensure that it is secured, prior to accessing the 12-Volt battery.
6. Disconnect both the Positive and Negative terminals from the 12-Volt battery and insulate them from accidental contact.



Image: (1) Fore/aft Lever. (2) Recliner Lever



Image: Latch secured



Image: Latch unsecured

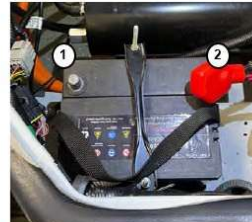


Image: (1) Negative Terminal. (2) Positive Terminal

STEP THREE:

The MSD plug must be removed to disable the high-voltage system.

1. Locate the MSD plug on the front side of the high-voltage battery between the driver's seat and mobile office console or passenger's seat.
2. Pull out the orange trigger, also known as the Connector Position Assurance located on the bottom of the MSD.
3. Pull the black locking lever up to expose the release tab (1).
4. Press and hold the release tab inward (2).
5. Rotate the black locking lever up (3).
6. Pull straight out on the body of the MSD to remove it (4).
7. Wait a minimum of 15 minutes to allow charges to dissipate.

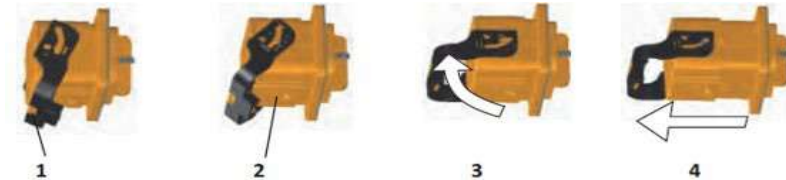


Image: MSD (Manual Service Disconnect).



Image: MSD located on the front side of the high-voltage battery, next to HV cables.

4. Access to the occupants



Electrical and mechanical releases may be compromised after a collision.



NOTE: The seats and steering wheel are electrically powered and may not function after a collision.

NOTE: After a collision, the doors may not unlock from the outside. Extrication may be required.

NOTE: The windshield is made of laminated safety glass and side windows are made of tempered safety glass.

Occupant Removal

This vehicle is equipped with five designated entry points.

1. Driver Door
2. Driver Side Cargo Door
3. Passenger Door
4. Passenger Side Cargo Door
5. Cargo Door



⚠ CAUTION


THIS VEHICLE IS NOT EQUIPPED WITH “PARK” ON THE GEAR SELECTOR. YOU MUST ALWAYS ENGAGE THE PARKING BRAKE LOCATED TO THE RIGHT OF THE DRIVER’S SEAT.

⚠ CAUTION

THIS VEHICLE IS EQUIPPED WITH PYROTECHNIC PASSIVE SAFETY RESTRAINTS (AIRBAG/SEATBELT).

Locations as follows:

- Driver’s Side
 - Steering Wheel
 - Seat Side (outboard)
 - Curtain
 - Seatbelt Pretensioner
- Passenger Side (only with passenger seating position)
 - Instrument Panel
 - Seat Side (outboard)
 - Curtain
 - Seatbelt Pretensioner

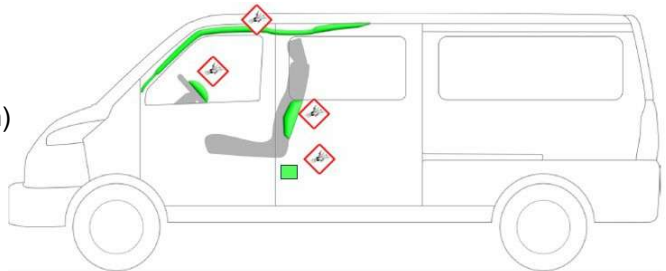

5. Stored energy / liquids / gases / solids

	  	12V
	     	400V

LFP
Lithium Iron Phosphate



 Coolant leaking inside the battery pack can become unstable and possibly a risk for a fire. Check the battery pack temperature using a thermal imaging camera.

 All high voltage cables have ORANGE INSULATION.

 Never cut or open high voltage components or cables.

 Coolant is blue

6. In Case of Fire




 DO NOT SUBMERGE VEHICLE TO EXTINGUISH/COOL BATTERY FIRE

 POSSIBLE BATTERY RE-IGNITION!

MONITOR HV BATTERY AMBIENT TEMPERATURE FOR AT LEAST 24 HOURS



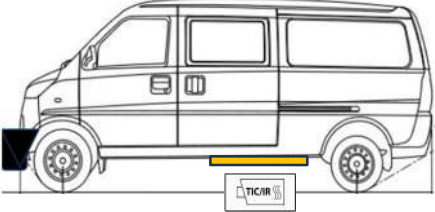

 USE LARGE AMOUNTS OF WATER TO COOL THE BATTERY ENCLOSURE FROM THE BOTTOM OF THE VEHICLE

 USE OF FIREFIGHTING FOAM IS NOT RECOMMENDED AND ONLY WATER SHOULD BE USED TO COOL THE BATTERY ENCLOSURE

In Case of Fire

If the vehicle is on fire, use a Class ABC powder-type extinguisher to contain and smother the flames.

- While not ideal, water can be used in copious amounts to extinguish the flames. The cooling and smothering effects of water flushing the affected article is still beneficial for minimizing the severity of the event.
- Note that water can cause some degree of arcing/shorting across exposed battery cells and terminals; it can also react with the electrolyte from the battery cells to generate combustible gases and other byproducts such as hydrofluoric acid.

7. In Case of Submersion

In Case of Submersion

If the vehicle is submerged in water, varying degrees of arcing/shorting within the battery will take place.

- Do not remove the vehicle until you are sure the high voltage battery is completely discharged.
- A submerged high voltage battery may produce a fizzing or bubbling reaction to the water.
- If fizzing or bubbling is observed, the high voltage battery is not fully discharged.

8. Towing / Transportation / Storage



Moving Damaged Vehicles

If the vehicle becomes disabled and requires towing, please do the following:

- Make sure the gear selector dial is in NEUTRAL (N) position and the parking brake is disengaged.
- Disengage high voltage components by removing the MSD and disconnecting the 12-volt battery.



HV BATTERY TEMPERATURE
SHOULD BE CHECKED
BEFORE TRANSPORT



POSSIBLE BATTERY RE-IGNITION!

AFTER A FIRE INCIDENT, STORE OUTSIDE AT A SAFE DISTANCE (AT LEAST 50 FT/15 M) FROM OTHER VEHICLES AND STRUCTURES!

CAUTION

WHEN TOWING THE VEHICLE, USE A FLATBED TRAILER OR TOW FROM THE FRONT WHEELS.
TOWING FROM THE REAR WHEELS CAN DAMAGE THE VEHICLE.

9. Important Additional Information

Contact Information



Please visit us at www.mullenusa.com for Mullen's Customer Solutions Team.

Scan code to access vehicle information. This label is located inside the charge port door and inside the glove box.

These instructions are applicable to Mullen ONE vehicles. Certain devices, facilities or functions introduced in these instructions may not be installed on your vehicle due to different vehicle configurations. Mullen reserves the right to modify any and all information shown without notification. Options subject to change.

10. Explanation of Pictograms

Explanation of Pictograms

	Battery Technology		Flammable		Corrosive		Toxic
	High Voltage		Explosive		Injury Risk		Infrared



TIC/IR – Thermal Imagery Camera / Infrared



SCBA – Mandatory use breathing equipment