LLENTAB - Prefabricated steel hall

```
clc;clear all;clearvars;uqlab;close all; addpath 'Functions\'
```

```
Copyright 2013-2024, Stefano Marelli and Bruno Sudret.
This is UQLab, version 2.1
UQLab is distributed under the BSD 3-clause open source license available at:
https://uqlab.com/license.

To request special permissions, please contact:
  - Stefano Marelli (marelli@ibk.baug.ethz.ch).

Useful commands to get started with UQLab:
uqlab -doc           - Access the available documentation
uqlab -help          - Additional help on how to get started with UQLab
uq_citation help   - Information on how to cite UQLab in publications
uqlab -license       - Display UQLab license information
```

Vazník - Dolní pás

Section properties

```
section.h_w =  119.0   * 10^-3; % m
section.b   =  110.0   * 10^-3; % m
section.c   =   42.0   * 10^-3; % m
section.e_1 =   55.8   * 10^-3; % m
section.A_s = 1615.93  * 10^-6; % m^2
section.t   =    4.0   * 10^-3; % m
section.n_cross = 2            ; % ea
section.d_0 = 12.5 * 10^-3     ; % m
section.X = 1                  ;
section.A_net = section.A_s - section.t * (section.n_cross * section.d_0 * 2 /
section.X);

% Material properties
section.f_u =   480.0  * 10^3 ; % kN/m
section.f_y =   420.0  * 10^3  ; % kN/m

% Internal forces - characteristic values
snow.s_kg = 70; % mm/m2
snow.s_k = snow.s_kg;
snow.s_kd = snow.s_k*0.8;
forces.G_s.N_k = 100.28 ; %kN
forces.G_p.N_k = 61.60 ; %kN
forces.Q.N_k = 140.47 ; %kN

snow.ratio = forces.Q.N_k / snow.s_kd; % taken from static report
forces.Q.N_k = snow.ratio * snow.s_kd;
fprintf ('Internal forces:\n'); fprintf ('    Self weight: %.3f
kN\n',forces.G_s.N_k); fprintf ('    Pernament load: %.3f kN\n',forces.G_p.N_k);
fprintf ('    Snow load: %.3f kN\n',forces.Q.N_k); fprintf ('    Snow to
internal forces ratio: %.3f',snow.ratio);
```

```
Internal forces:
    Self weight: 100.280 kN
    Pernament load: 61.600 kN
```

```
Snow load: 140.470 kN
Snow to internal forces ratio: 2.508
```

Eurocode analysis

$$E_d = \gamma_g \cdot G + \gamma_q \cdot Q$$

$$R_d = \min\left(\frac{A_s \cdot f_y}{\gamma_{M0}}; \frac{A_{net} \cdot f_u}{\gamma_{M2}}\right)$$

```
EN.gamma_q = 1.50 ;
EN.gamma_g = 1.35 ;
EN.gamma_M0 = 1.00 ;
EN.gamma_M2 = 1.25 ;
EN.E_d = (forces.G_s.N_k + forces.G_p.N_k) * EN.gamma_g + forces.Q.N_k *
EN.gamma_q; % kN
EN.R_d_l = section.A_s * section.f_y / EN.gamma_M0;
EN.R_d_net = section.A_net * section.f_u / EN.gamma_M2;
EN.R_d = min(EN.R_d_net,EN.R_d_l);  % CHECK
EN.ration = EN.E_d / EN.R_d;
EN.A_s_en = EN.E_d / section.f_y * EN.gamma_M0; %m^2
```

Probabilistic reliability analysis

```
% Probablistic models of variables
inputOpts = defineProbabilisticModels(section, forces);
```

Real snow data from Ruzyne

```
% 1. Načtení dat
data = readtable('data_Ruzyne.csv');
roky = data.Var1;  % první sloupec obsahuje roky
rocni_maxima = data.Var2;  % druhý sloupec obsahuje maxima

% 2. Odhad parametrů Gumbelova rozdělení
pd = fitdist(rocni_maxima, 'Extreme Value');  % Gumbel = Extreme Value Type I
mu = pd.mu;    % location parametr
beta = pd.sigma;  % scale parametr

% 3. Vytvoření proměnné pro UQ lab bez použití createUQVariable funkce
% Definujte přímo strukturu proměnné podle UQ lab požadavků
inputOpts.Marginals(11).Type = 'Gumbel';
inputOpts.Marginals(11).Parameters = [mu, beta];  % [location, scale]
inputOpts.Marginals(11).Name = 'Sg';  % jméno proměnné
```

```
input = uq_createInput(inputOpts);
```

Limit State Function - snow data

$$g(x) = \theta_R \cdot \min(R_u; R_y) - \theta_E \cdot (G + s_{gk} \cdot C_0 \cdot s_{ratio})$$

```
N = 10^7; % počet simulací
```

```
ModelOpts.mFile = 'limitStateSnowDataFunction';
ModelOpts.isVectorized = true;

% Vytvoření modelu
myModel = uq_createModel(ModelOpts);
% Nastavení analýzy spolehlivosti metodou FORM
SimOpts.FORM.ComputeSensitivity = true;  % Explicitní příkaz k výpočtu
citlivostních indexů
SimOpts.Type = 'Reliability';
SimOpts.Method = 'FORM';  % Změna na FORM metodu
SimOpts.FORM.Search = 'StrongJoint';  % Výběr algoritmu hledání designového bodu
SimOpts.FORM.MaxIterations = 100;  % Maximální počet iterací
SimOpts.FORM.Tolerance = 1e-6;  % Toleranční kritérium konvergence

% Vytvoření a spuštění analýzy
reliability = uq_createAnalysis(SimOpts);
```

Reliability Analysis Visualization

```
% Save graph
if ~exist('Plots', 'dir')
   mkdir('Plots')
end

% Použití s exportem (zobrazení a uložení grafů)
plotReliabilityForPoster(reliability,'Plots/RA_snowData',{'Yield
Strength','Ultimate tensile strength', 'Geometry', 'Self weight load','Permanent
Load', '', 'Resistance Model - tension','Resistance Model - net', 'Load Effect
Model','Shape coeficient','Annual snow maximums'});
```

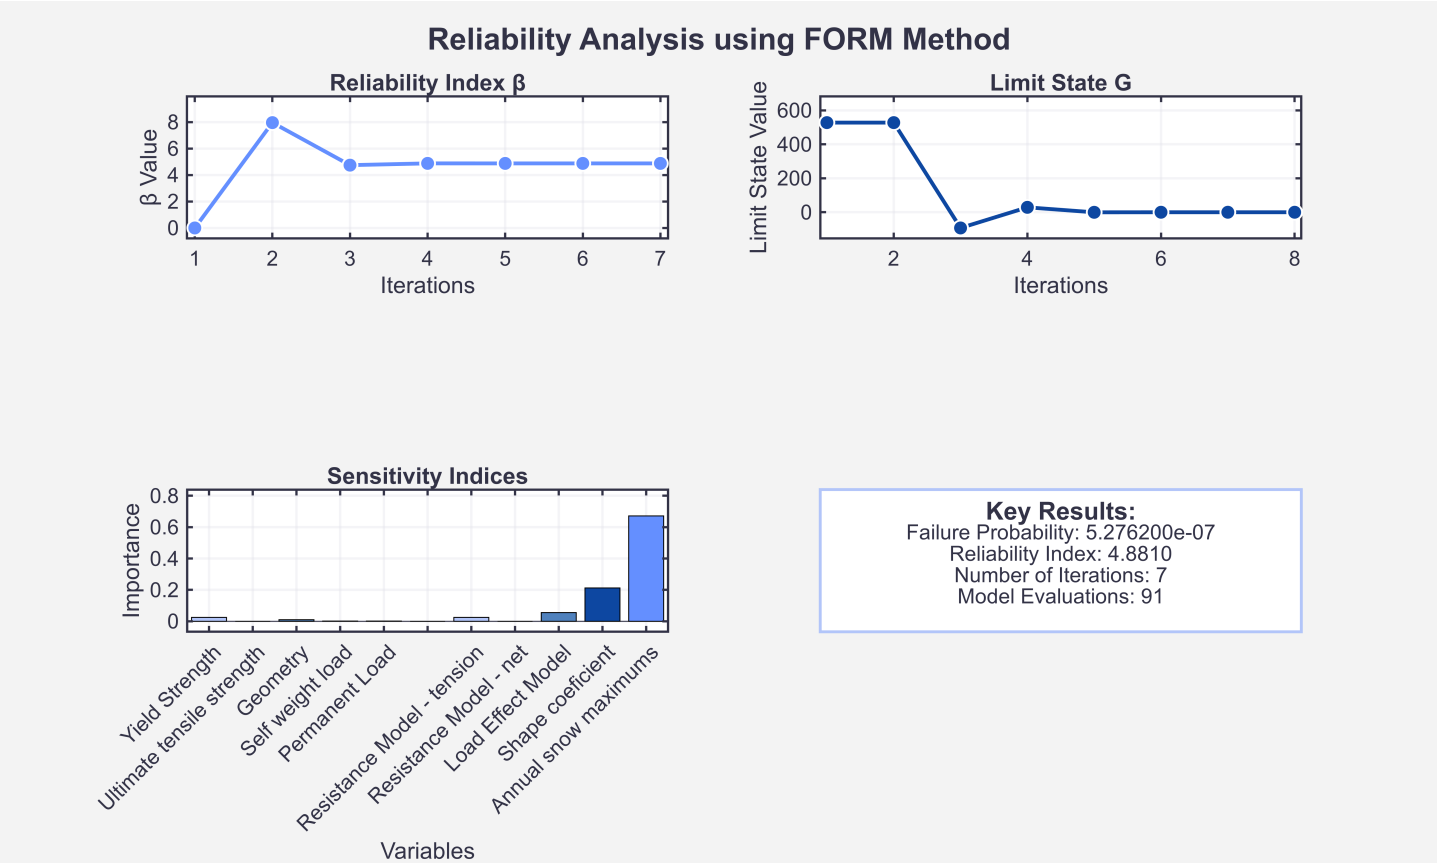


```
if false
Print key numerical results
fprintf('\nKey Reliability Analysis Results:\n');
fprintf('Failure Probability: %e\n', results.Pf);
fprintf('Reliability Index: %.4f\n', results.BetaHL);
fprintf('Number of Iterations: %d\n', results.Iterations);
fprintf('Number of Model Evaluations: %d\n', results.ModelEvaluations);

% Interpretation of results
fprintf('\nResults Interpretation:\n');
fprintf('- Extremely low failure probability (%.2e)\n', results.Pf);
fprintf('- High reliability index (%.4f)\n', results.BetaHL);
fprintf('- Convergence achieved in %d iterations\n', results.Iterations);
end
```

Comparison of Probabilistic and Eurocode Safety Levels

```
%% Reliability Analysis vs. Cross-Sectional Area Ratio
% This section analyzes how reliability index (beta) and resistance-to-load
ratio (R_d/E_d)
% change based on the ratio of actual cross-sectional area (A_g) to Eurocode
required area (A_s_EN)

displayOriginalValues(section,EN);
```

```
Original cross-sectional area values:
Original section area (A_s): 0.001616 m² (1615.93 mm²)
Eurocode required area (A_s_EN): 0.001022 m² (1022.01 mm²)
Original ratio (A_s/A_s_EN): 1.5811
```

```
% Define the range of ratios A_g/A_s_EN to analyze
ratio_range = linspace(0.5, 2.0, 50);  % Ratio from 0.5 to 2.0 times A_s_EN
beta_values = zeros(size(ratio_range));
rd_ed_ratio = zeros(size(ratio_range));

% Store original section area for reference
original_area = section.A_s;
original_EN_area = EN.A_s_en;
original_ratio = original_area / original_EN_area;

% Loop through each ratio value
for i = 1:length(ratio_range)
    % Calculate new section area based on the ratio
    section.A_s = original_EN_area * ratio_range(i);

    % Update the geometry variable in the probabilistic model
    model.a_s.V_x = 3 / 100; % percent
    model.a_s.ratio = 1.00 ;
    model.a_s.Dist = 'Gaussian';
    model.a_s.nominal = section.A_s;
    model.a_s.variable = createUQVariable(model.a_s, 'As');
    inputOpts.Marginals(3) = model.a_s.variable;

    % Update input object
    input = uq_createInput(inputOpts);

    % Run reliability analysis
    reliability = uq_createAnalysis(SimOpts);

    % Store the reliability index for this ratio
    beta_values(i) = reliability.Results.BetaHL;

    % Calculate and store R_d/E_d ratio
    EN.R_d = section.A_s * section.f_y / EN.gamma_M0;
    rd_ed_ratio(i) = EN.R_d / EN.E_d;
end

% Reset section area to original value after analysis
section.A_s = original_area;

%Plots
plotReliabilityVsAreaRatio(ratio_range, beta_values, rd_ed_ratio,
original_ratio, 'Plots/reliability_analysis');
```

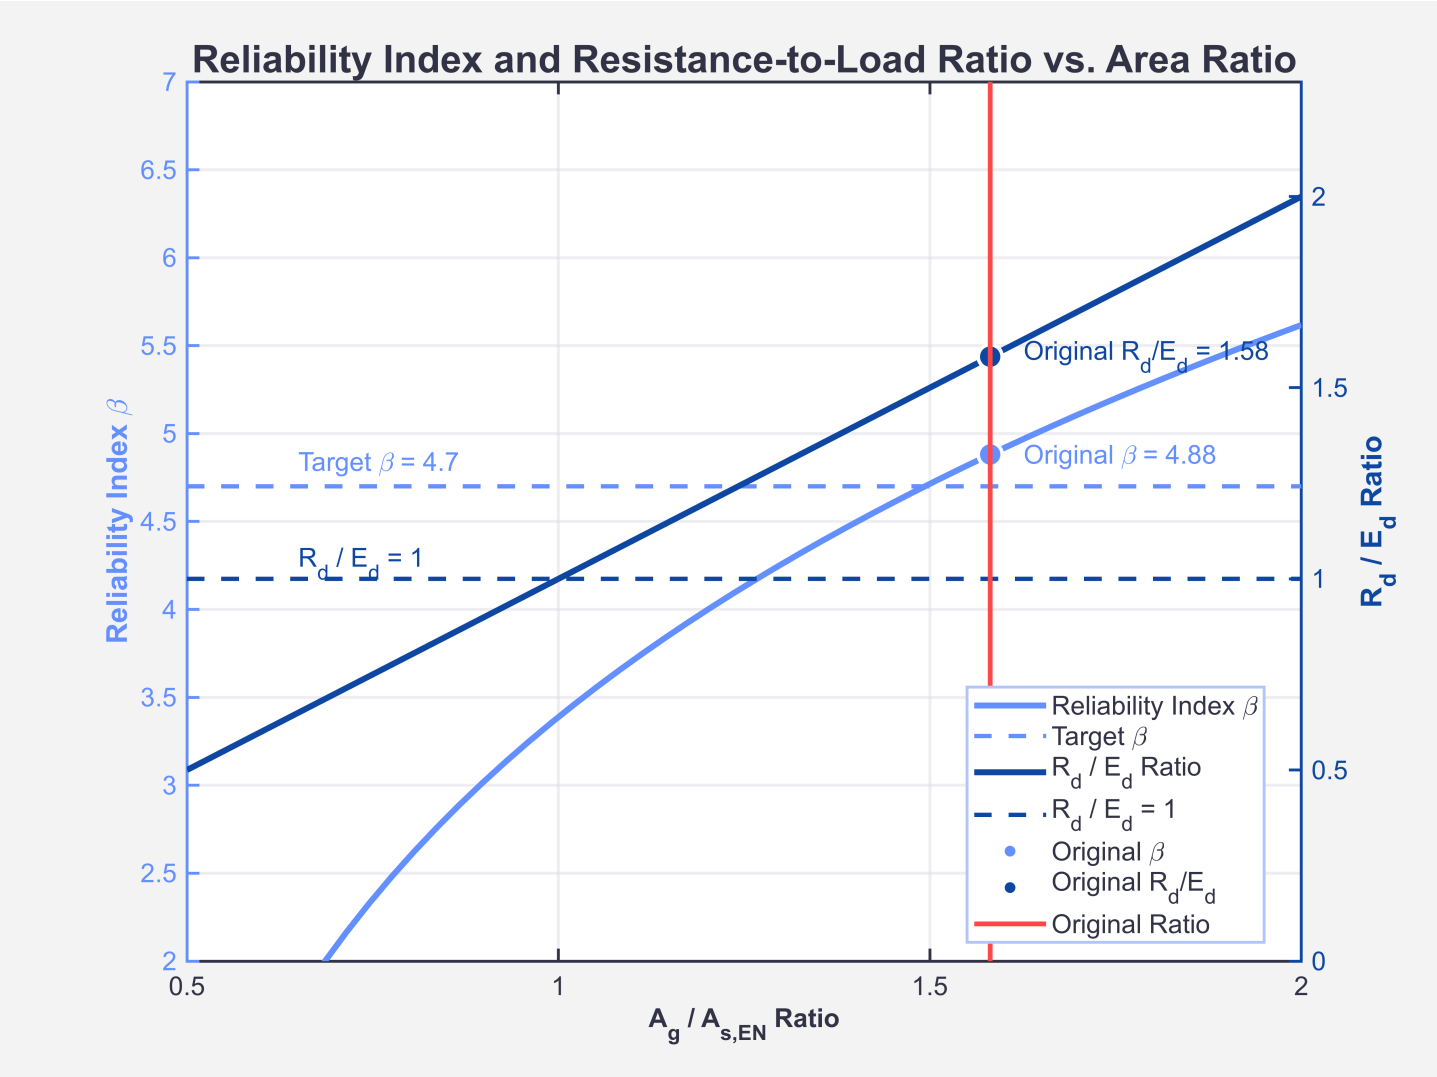


```
Graf byl uložen do: Plots\reliability_analysis

Safety at original cross-section area:
   Reliability index (β) at original area: 4.8809
   R_d/E_d ratio at original area: 1.5811

Minimum A_g/A_s,EN ratio needed to achieve target reliability (β = 4.7): 1.480
Minimum A_g/A_s,EN ratio needed for R_d/E_d ≥ 1: 0.990
```