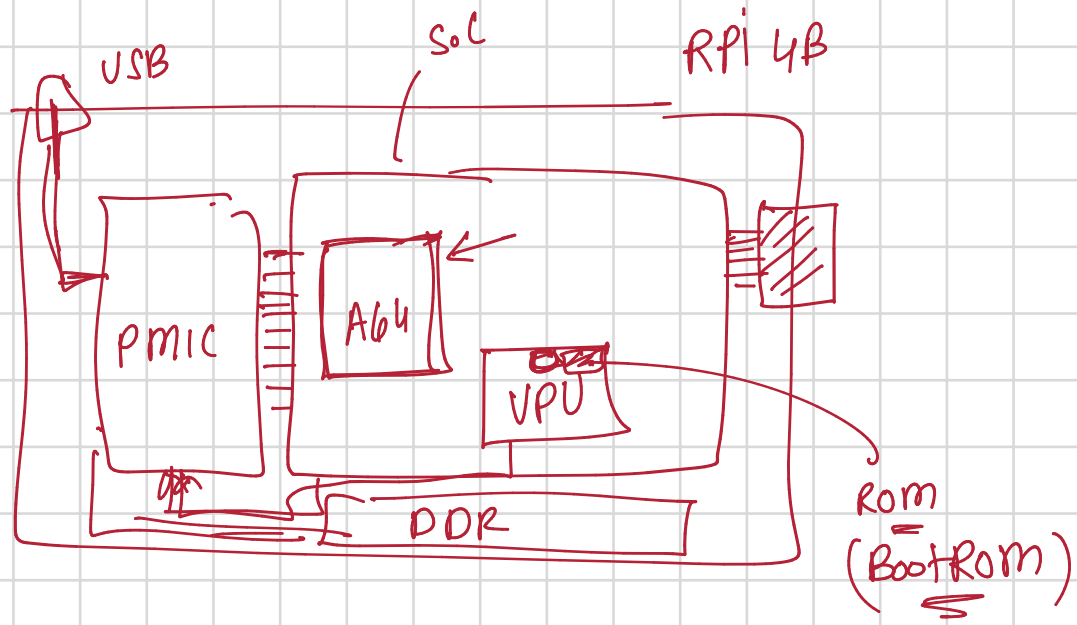

① Power ON

→ AP (aarch64 CPU)

Held in rest

VPU

↳ Activates BootROM

② First Stage of Bootloader

Enable · Hardware

SD Card — fat32 / fat16

→ USB

→ Network ?

boot code.bin

L2 — GPU/VPU

— DRAM (DDR)

— Clock / Power manager

bootcode.bin

SD Card.

start4.elf

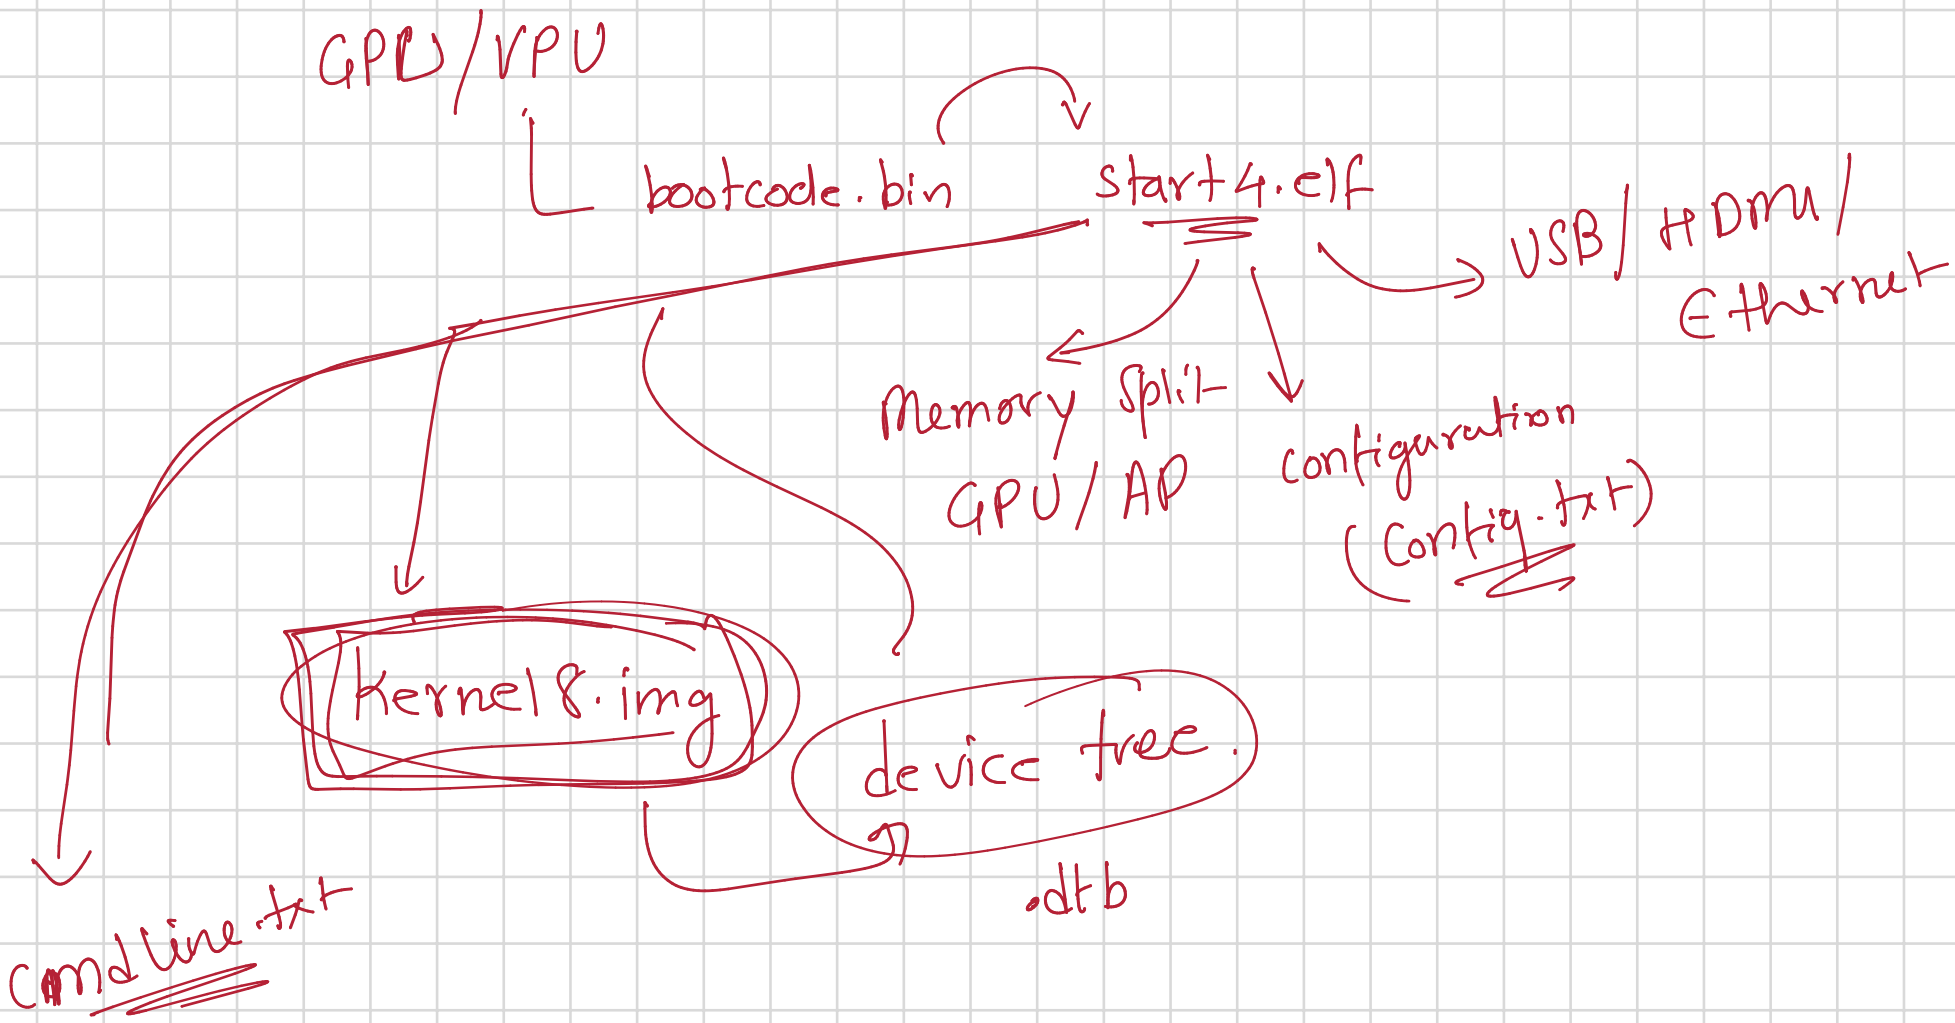
GPU/VPU
bootcode.bin
start4.elf
USB/HDMI/
Ethernet
Memory split
GPU/AP
configuration
(Config.txt)
kernel8.img
device tree.
.dtb
cmdline.txt