

DeepSDR Reload

MANUAL DE INSTALACIÓN · INSTALLATION MANUAL



BOOTLOADER · FIRMWARE · BASES DE DATOS

<https://github.com/gmtii/deepsdr-101-open-firmware>

Edición bilingüe · Español / English

DeepSDR Reload

Descripción del equipo · Español

Receptor SDR V5

El receptor SDR V5 es un clon del DeepSDR 101, fabricado por la empresa china Hangzhou Minghong Electronic Technology Co., Ltd., bajo la marca Deepelec.



Receptor SDR V5 y accesorios.

El receptor y sus accesorios se suministran en una caja de cartón. El paquete incluye:

- Cables USB de 1 metro, con conector tipo C en un extremo y tipo A en el otro.
- Antena telescópica de 760 mm.
- Lápiz táctil de plástico.

Construcción exterior

La carcasa del SDR V5 está fabricada en aluminio pintado de negro. Tiene forma rectangular y dos paneles laterales desmontables, sujetos mediante cuatro tornillos cada uno.


En la parte frontal hay una abertura rectangular para la pantalla. A su derecha se encuentran los orificios de salida del sonido del altavoz.

El panel lateral izquierdo incorpora una toma de auriculares de 3,5 mm, identificada como Audio.

En el panel lateral derecho se encuentran:

- Puerto USB-C, marcado TYPE-C / Charging, para conectar el receptor al ordenador y al cargador.
- Interruptor de alimentación ON-OFF.
- Puerto USB-A, marcado 5V Out, que permite utilizar el receptor como batería externa.
- Indicador del estado del receptor: funcionamiento, carga de la batería, etc.
- Encoder giratorio con pulsador.

En la parte posterior aparecen el diagrama de bloques del receptor, la información sobre el modelo y los rangos de recepción, y los símbolos de certificación de conformidad.

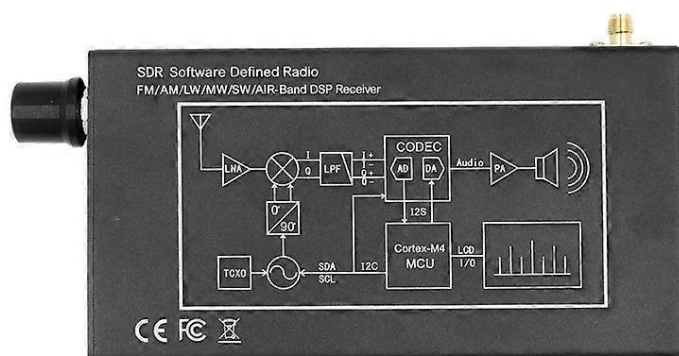

Vista trasera con el diagrama de bloques grabado en la carcasa.

En la parte superior se encuentra el conector SMA hembra para la antena. Todas las inscripciones de la carcasa están realizadas mediante grabado láser.

Construcción interior

Todos los componentes del SDR V5, excepto la batería, están montados en una única placa de circuito impreso principal, que se fija dentro de la carcasa mediante unas guías o ranuras.

El altavoz, de 4 Ω y 3 W, está insertado en una abertura circular de la placa principal y fijado con sellador blanco.

La batería está pegada con cinta adhesiva de doble cara a una placa independiente de fibra de vidrio. Esta placa se fija a la placa principal mediante cuatro tornillos que se enroscan en separadores de latón.

Las conexiones entre la placa principal, el altavoz y la batería se realizan mediante conectores. En esta cara de la placa principal también se encuentran los siguientes circuitos integrados:


- Componente no identificado, marcado 3BR: el marcado no está claro. El DeepSDR 101 original utiliza un TS5A23157, marcado JBR, que es un conmutador analógico de dos posiciones. El autor considera que el componente 3BR podría ser una falsificación china del TS5A23157 de Texas Instruments.
- Componente no identificado, marcado Z21dB: el marcado no está claro. El DeepSDR 101 original utiliza un AiP74LVC2G04GC363.TR, marcado AM, que es un inversor doble.
- BGA2817, marcado LSt: amplificador de radiofrecuencia de banda ancha, desde continua hasta 2,2 GHz.
- MXD8641, marcado 8641: conmutador de radiofrecuencia de cuatro entradas, de 100 a 3000 MHz.
- MXD8661, marcado 8661: conmutador de radiofrecuencia de seis entradas, de 100 a 3000 MHz.
- MS5351M: generador de señales de onda cuadrada, de 8 kHz a 160 MHz.
- RY3730, marcado KD: convertidor elevador de corriente continua y controlador de retroiluminación LED, de 2,5 a 30 V.
- TPA6211A1, marcado AYK: amplificador de potencia de audio de un canal y 3,1 W.
- 25Q16JVS1Q: memoria flash no volátil de 16 Mbit, organizada como $2\text{ M} \times 8$.
- HR2046: controlador de pantalla táctil resistiva.
- IP5306: controlador de gestión de batería, de 2,1 A / 2,4 A.
- GD32F450 VET6: microcontrolador ARM Cortex-M4 de 32 bits, a 200 MHz, con 512 KB de memoria flash y 256 KB de RAM.
- LD1117AG AD: regulador lineal de tensión ajustable, con corriente de 1 A.
- TLV320A3204IRHBRG4, marcado AIC3204: códec de audio estéreo con entradas y salidas programables.

La placa incluye también otros componentes. En la otra cara se encuentra el módulo de pantalla táctil de 4,3 pulgadas y 800×480 píxeles. Se conecta mediante conectores y se fija con cinta adhesiva de doble cara.

Características técnicas principales

- *Rango de recepción: de 100 kHz a 149 MHz.*
- *Modos: AM; banda lateral única SSB, tanto USB como LSB; CW; FM de banda ancha WFM; FM estéreo STE; e I/Q, componentes en fase y cuadratura.*
- *Pasos de sintonía: 1 Hz, 10 Hz, 100 Hz, 1 kHz, 10 kHz, 100 kHz, 1 MHz y 10 MHz.*
- *Anchos de banda: AM, 9 kHz; CW, 800 Hz; USB y LSB, 2,6 kHz; WFM, STE e I/Q, 192 kHz.*
- *Anchura del espectro: 64, 128 o 192 kHz.*
- *Batería integrada: polímero de litio de 3,7 V y 3000 mAh, referencia 605080.*
- *Dimensiones: 23 × 85 × 158 mm, ancho × alto × largo.*
- *Peso: 280 g.*

Diagrama de bloques del DeepSDR 101

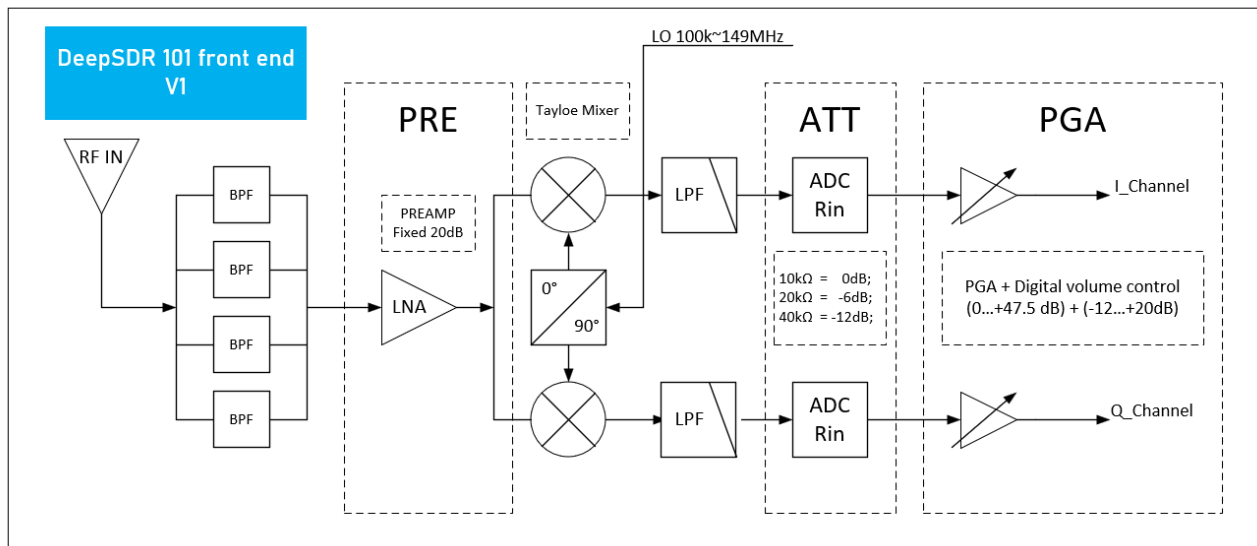


Etapas de entrada de RF y canales I/Q del DeepSDR 101, versión V1.

DeepSDR Reload

Manual de instalación · Español

Requisito previo — Soporte USB activado

Este manual asume que ya tienes activado el soporte USB del DeepSDR. De fábrica, el PC no reconoce la radio a través de su puerto USB-C. Para habilitar esta conexión, hay que sustituir la resistencia R8 de 2,4 k Ω por una de 22 Ω . Esta modificación debe estar realizada antes de seguir los pasos de grabación de este manual.

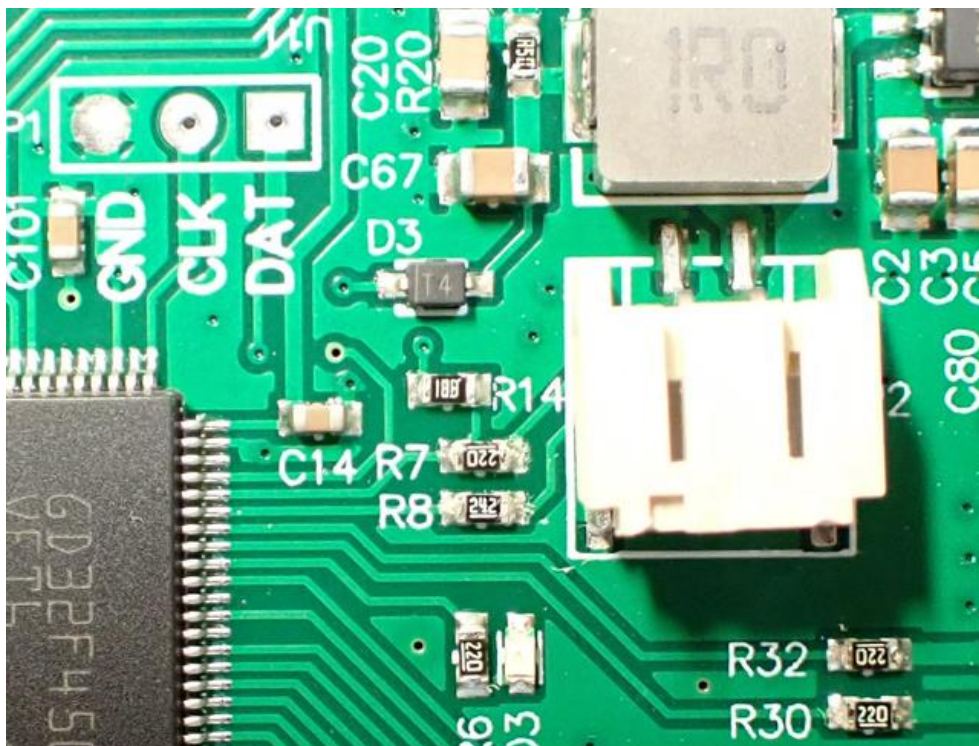

1 Acceder al modo DFU

Conecta el DeepSDR al ordenador por USB. Hay dos formas de entrar en modo DFU.

Desde el firmware anterior

Este método requiere la última versión del firmware anterior.

1. Entra en Ajustes → Equipo → Información → Versión.
2. Toca Versión cinco veces para activar las opciones ocultas.
3. Toca Modo DFU dos veces. La radio pasará a modo DFU por USB.

Mediante el puente BOOT0

1. Con la radio apagada, abre el equipo e identifica BOOT0 y 3,3 V.
2. Enciende la radio manteniendo un puente entre BOOT0 y 3,3 V. Evita hacer contacto con otros componentes.

Realiza el puente entre el contacto derecho de R11 (BOOT0) y el contacto derecho de C15 (+3V3), con la placa orientada como en la foto.



Los círculos señalan los contactos; la línea roja indica el puente entre ellos.

2 Grabar el bootloader desde Linux

Necesitarás tener instalada la herramienta dfu-util. Conecta la radio por USB y ponla en modo DFU.

Comprobar la detección

```
dfu-util -l
```

Debe aparecer [28e9:0189] y una entrada alt=0 identificada como Internal Flash. La entrada alt=1, Option Bytes, no se utiliza en este procedimiento.

```
dfu-util 0.11

Copyright 2005-2009 Weston Schmidt, Harald Welte and OpenMoko Inc.
Copyright 2010-2021 Tormod Volden and Stefan Schmidt
This program is Free Software and has ABSOLUTELY NO WARRANTY
Please report bugs to http://sourceforge.net/p/dfu-util/tickets/

Found DFU: [28e9:0189] ver=1000, devnum=20, cfg=1, intf=0, path="1-3", alt=1, name="@Option Bytes /0x1FFFF800/01*016 g", serial="9VEE"
Found DFU: [28e9:0189] ver=1000, devnum=20, cfg=1, intf=0, path="1-3", alt=0, name="@Internal Flash /0x08000000/512*002Kq", serial="9VEE"
```

Dispositivo detectado en modo DFU.

Grabar customboot.bin

Abre una terminal en la carpeta que contiene customboot.bin y ejecuta:

```
dfu-util -a 0 -s 0x08000000:leave -D customboot.bin
```

No desconectes el USB ni apagues la radio durante la grabación.

```
dfu-util 0.11

Copyright 2005-2009 Weston Schmidt, Harald Welte and OpenMoko Inc.
Copyright 2010-2021 Tormod Volden and Stefan Schmidt
This program is Free Software and has ABSOLUTELY NO WARRANTY
Please report bugs to http://sourceforge.net/p/dfu-util/tickets/

dfu-util: Warning: Invalid DFU suffix signature
dfu-util: A valid DFU suffix will be required in a future dfu-util release
Opening DFU capable USB device...
Device ID 28e9:0189
Device DFU version 011a
Claiming USB DFU Interface...
Setting Alternate Interface #0 ...
Determining device status...
DFU state(10) = dfuERROR, status(10) = Device's firmware is corrupt. It cannot return to run-time (non-DFU) operations
Clearing status
Determining device status...
DFU state(2) = dfuIDLE, status(0) = No error condition is present
DFU mode device DFU version 011a
Device returned transfer size 2048
DfuSe interface name: "Internal Flash "
Downloading element to address = 0x08000000, size = 33516
Erase [=====] 100% 33516 bytes
Erase done.
Download [=====] 100% 33516 bytes
Download done.
File downloaded successfully
Submitting leave request...
```

Ejemplo de una grabación completada.

Comprueba que Erase y Download alcanzan el 100 % y aparece File downloaded successfully. En este ejemplo, el estado de error inicial se limpia antes de la escritura.

Una vez finalizado el proceso, apaga la radio.

Windows Descargar e instalar las herramientas

Para grabar el bootloader desde Windows necesitas GD32 All-In-One Programmer y los controladores USB DFU de GD32. Ambos se descargan desde la página oficial de GigaDevice:

<https://www.gd32mcu.com/en/download/7?kw=GD32F4>

1. Descarga GD32 All-In-One Programmer. La captura muestra la entrada correspondiente al programa.
2. Descarga GD32 Dfu Drivers, versión 3.6.6.6167, archivo GD32DfuDrivers_V3.6.6.6167.rar.
3. Instala los controladores GD32 antes de conectar con el programa. Después continúa con los pasos de la página siguiente.

GD32 All-In-One Programmer

5.4.0.42035



none

2026-08-14

Introduction: GD32 All-In-One Programmer is a software tool for programming GD32 series MCU chips. The software supports firmware download, chip erasure, read and write Flash, setting option bytes and other operations on GD32 microcontrollers through a variety of interfaces (such as serial port, USB, GD ISP Bridge, etc.) and protocols (such as UART, I2C, OSPI, DFU, HID, CAN, LIN, etc.). It is suitable for development, testing and mass production scenarios.

Entrada de GD32 All-In-One Programmer en la página de descargas.

Filename	Version	English Document	Chinese Document	Published Date
GD32 Dfu Drivers	3.6.6.6167		none	2020-06-09
Introduction: The drivers for the GD32 Dfu device				


Entrada de GD32 Dfu Drivers, versión 3.6.6.6167, en la misma página.

3 Grabar el bootloader desde Windows

Utiliza GD32 All In One Programmer. Conecta la radio por USB y ponla en modo DFU.


Detectar y conectar

1. Selecciona USB en Interface y DFU en BootLoader.
2. En Configuration → USB, comprueba que Device muestra GD DFU DEVICE 1. Después pulsa Connect.

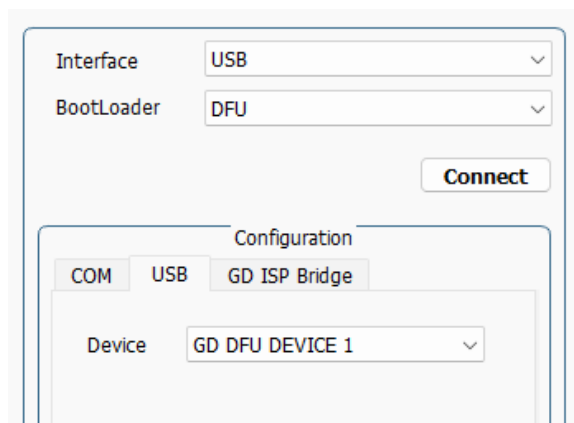

El dispositivo aparece antes de pulsar Connect.


Tras conectar, Device Information mostrará GD32F450VET6, Flash Size 512 KB y SRAM Size 256 KB.

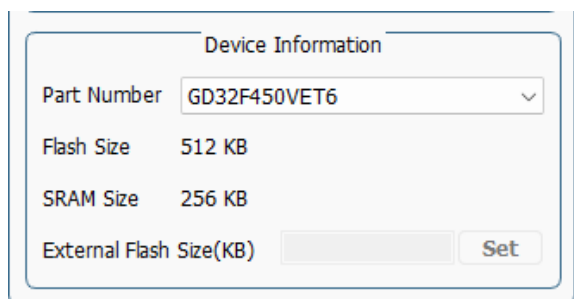

Información del equipo conectado.

Equipos con protección de lectura

Después de pulsar Connect, si aparece el botón Remove Protection, el equipo tiene protección de lectura. Eliminarla borra por completo el chip, incluido el firmware instalado, y reinicia la radio.

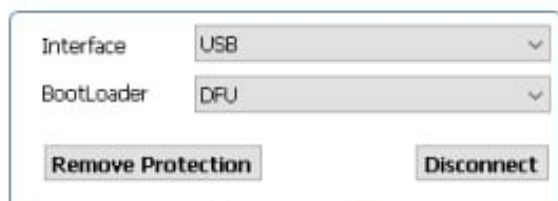


Botón para eliminar la protección.

Será necesario abrir la radio y utilizar el puente BOOT0–3,3 V. No basta con entrar en DFU desde el menú del firmware.

1. Pulsa Remove Protection y espera a que termine.
2. Apaga la radio y enciéndela manteniendo el puente entre BOOT0 y 3,3 V.
3. Vuelve a conectar con el programa y continúa con la grabación.

Windows Seleccionar y grabar el archivo

1. En la pestaña Flash, dentro de Download, pulsa Browse y selecciona customboot.bin.
2. Comprueba que Start Address muestra 08000000. El prefijo 0x ya aparece junto al campo.
3. Marca Necessary erase. Mantén activadas Verify after download y Jump to run the App program, como en la captura.
4. Pulsa Download para iniciar la grabación.

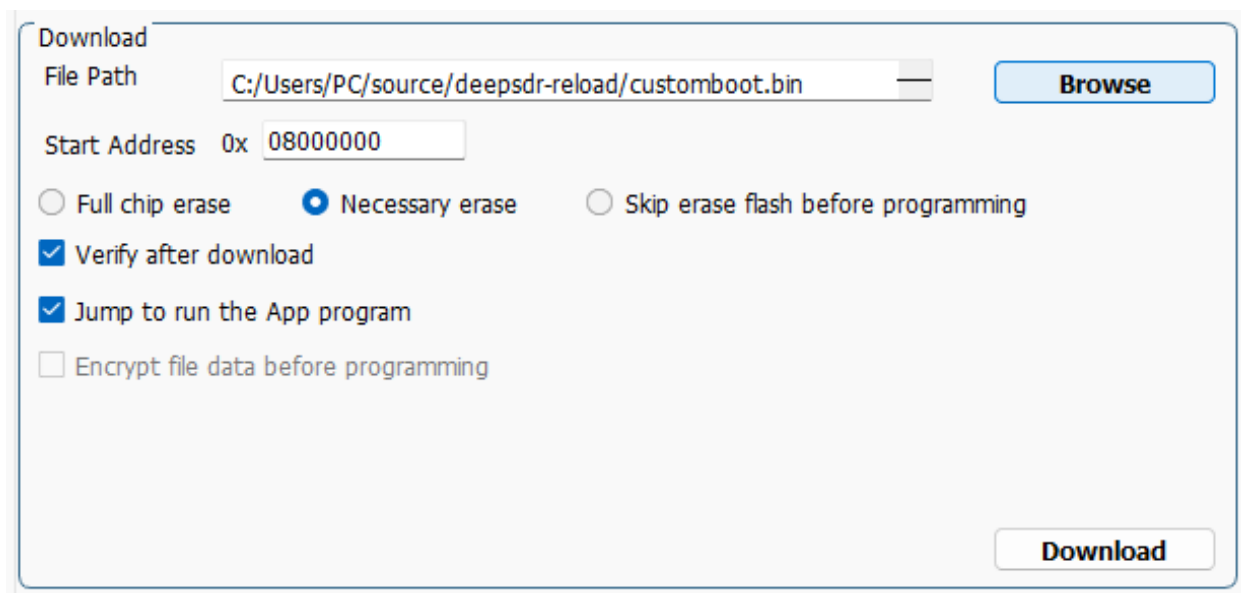

Download

File Path

Start Address 0x

☐ Full chip erase ☒ Necessary erase ☐ Skip erase flash before programming

☒ Verify after download


☒ Jump to run the App program

☐ Encrypt file data before programming

Configuración de la grabación. La ruta dependerá de dónde hayas guardado el archivo.

No desconectes el USB ni apagues la radio durante la grabación.

Espera a que Process alcance el 100 % y comprueba que el proceso termina sin errores.

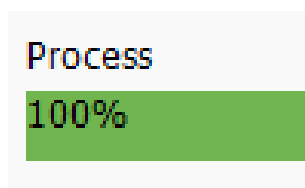

Barra de progreso al 100 %.

El bootloader ya está grabado. Apaga la radio.

4 Instalar el firmware

Estos pasos son iguales en Windows y Linux. Realízalos después de grabar el bootloader y apagar la radio.

- 1. Conecta el DeepSDR al ordenador por USB.
- 2. Mantén pulsado el botón del encoder mientras enciendes la radio. Aparecerá una nueva unidad USB en el ordenador.
- 3. Copia update.bin dentro de esa unidad y espera a que termine la copia.
- 4. Reinicia la radio sin pulsar ningún botón.

La actualización comenzará automáticamente durante el arranque. No apagues la radio mientras se actualiza. Cuando termine, arrancará DeepSDR Reload.




Pantalla de inicio cuando el nuevo firmware ya se está ejecutando.

5 Bases de datos EiBi Aoki y modelos de aviones

Instala BD.BIN para identificar el modelo de avión y mostrar el nombre de las emisoras que estás sintonizando.

1. Apaga la radio y conéctala al ordenador por USB.
2. Enciéndela manteniendo pulsado el botón del encoder para entrar en modo USB.
3. Copia BD.BIN dentro de la nueva unidad USB y espera a que termine la copia.
4. Reinicia la radio sin pulsar ningún botón.

Al reiniciar, la base de datos se grabará automáticamente en la memoria interna del DeepSDR. No apagues la radio hasta que termine.

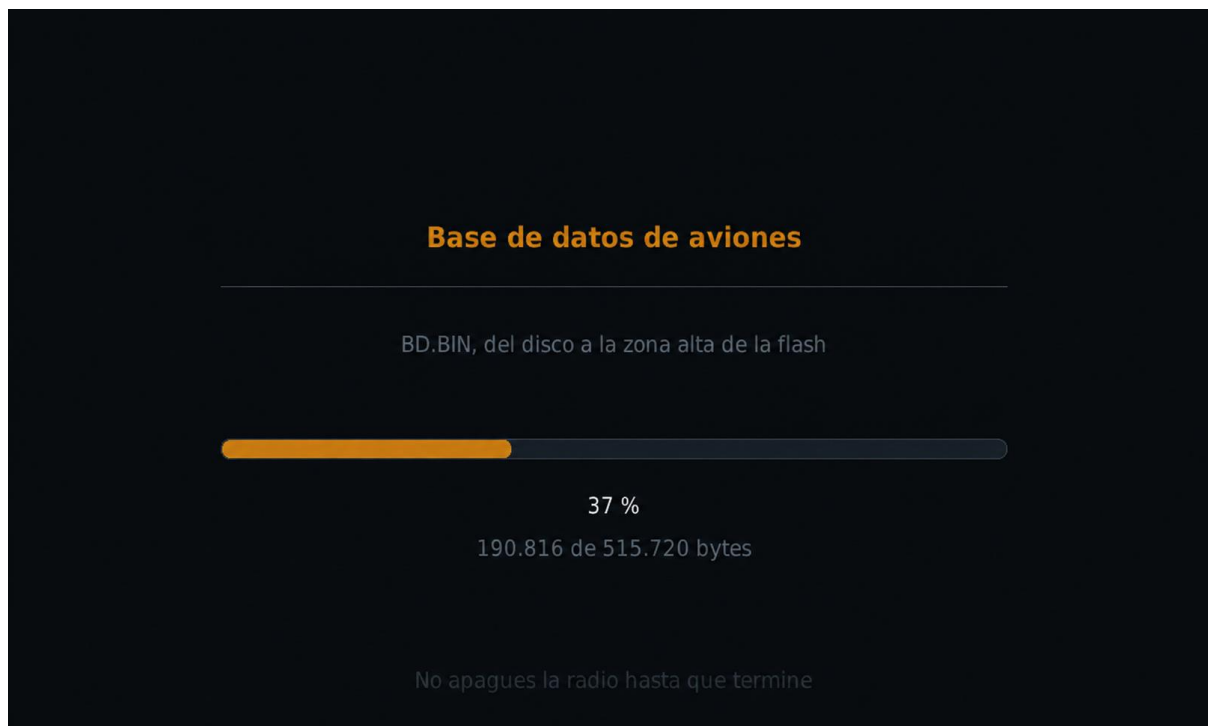

Grabación de BD.BIN en la memoria interna.

DeepSDR Reload

Receiver overview · English

SDR V5 receiver

The SDR V5 receiver is a clone of the DeepSDR 101, which was manufactured by the Chinese company Hangzhou Minghong Electronic Technology Co., Ltd., under the Deepelec brand.



SDR V5 receiver and accessories.

The receiver and its accessories are supplied in a cardboard box. The package includes:

- 1-metre USB cables, with a Type-C connector at one end and a Type-A connector at the other.
- 760 mm telescopic antenna.
- Plastic stylus.

Exterior construction

The SDR V5 has a black-painted aluminium enclosure. It is rectangular, with two removable end panels secured by four screws each.


The front has a rectangular opening for the display. Speaker openings are located to its right.

The left end panel has a 3.5 mm headphone socket labelled Audio.

The right end panel contains:

- USB-C port labelled TYPE-C / Charging, for connecting the receiver to a computer and charger.
- ON-OFF power switch.
- USB-A port labelled 5V Out, allowing the receiver to be used as a power bank.
- Receiver status indicator for operation, battery charging, etc.
- Rotary encoder with push-button.

The rear shows the receiver block diagram, model and reception range information, and conformity certification symbols.

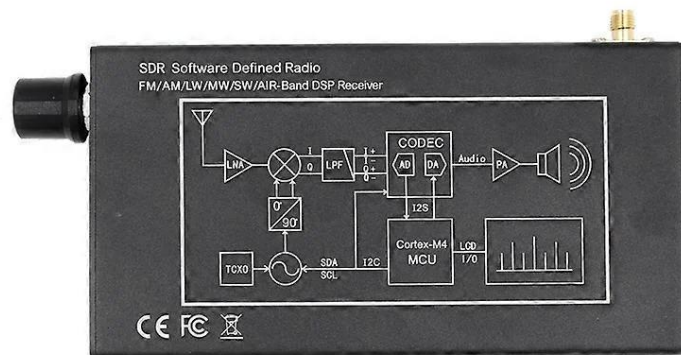

Rear view showing the block diagram engraved on the enclosure.

An SMA female antenna connector is located on top. All enclosure markings are laser engraved.

Internal construction

All SDR V5 components, except the battery, are mounted on a single main circuit board, which is held inside the enclosure by guide slots.

The 4 Ω , 3 W speaker is inserted into a circular opening in the main board and secured with white sealant.

The battery is attached with double-sided tape to a separate fibreglass plate. This plate is secured to the main board by four screws threaded into brass spacers.

Connections between the main board, speaker and battery use connectors. This side of the main board also contains the following integrated circuits:


- Unidentified component marked 3BR: the marking is unclear. The original DeepSDR 101 uses a TS5A23157, marked JBR, which is a two-position analogue switch. The author suggests that the 3BR component might be a Chinese counterfeit of the Texas Instruments TS5A23157.
- Unidentified component marked Z21dB: the marking is unclear. The original DeepSDR 101 uses an AiP74LVC2G04GC363.TR, marked AM, which is a dual inverter.
- BGA2817, marked LSt: broadband RF amplifier, DC to 2.2 GHz.
- MXD8641, marked 8641: four-input RF switch, 100–3000 MHz.
- MXD8661, marked 8661: six-input RF switch, 100–3000 MHz.
- MS5351M: square-wave generator, 8 kHz to 160 MHz.
- RY3730, marked KD: step-up DC-DC converter and LED backlight driver, 2.5–30 V.
- TPA6211A1, marked AYK: 3.1 W single-channel audio power amplifier.
- 25Q16JVS1Q: 16 Mbit non-volatile flash memory, organised as 2 M $\times$ 8.
- HR2046: resistive touchscreen controller.
- IP5306: battery management controller, 2.1 A / 2.4 A.
- GD32F450 VET6: 32-bit ARM Cortex-M4 microcontroller, 200 MHz, with 512 KB flash and 256 KB RAM.
- LD1117AG AD: adjustable linear voltage regulator, rated at 1 A.
- TLV320A3204IRHBRG4, marked AIC3204: stereo audio codec with programmable inputs and outputs.

The board also includes other components. The opposite side carries the 4.3-inch, 800 $\times$ 480-pixel touchscreen module. It is connected through connectors and secured with double-sided tape.

Main technical specifications

- *Reception range: 100 kHz to 149 MHz.*
- *Modes: AM; single sideband SSB, both USB and LSB; CW; wideband FM WFM; stereo FM STE; and I/Q, in-phase and quadrature components.*
- *Tuning steps: 1 Hz, 10 Hz, 100 Hz, 1 kHz, 10 kHz, 100 kHz, 1 MHz and 10 MHz.*
- *Bandwidths: AM, 9 kHz; CW, 800 Hz; USB and LSB, 2.6 kHz; WFM, STE and I/Q, 192 kHz.*
- *Spectrum span: 64, 128 or 192 kHz.*
- *Built-in battery: 3.7 V, 3000 mAh lithium polymer, reference 605080.*
- *Dimensions: 23 × 85 × 158 mm, width × height × length.*
- *Weight: 280 g.*

DeepSDR 101 block diagram

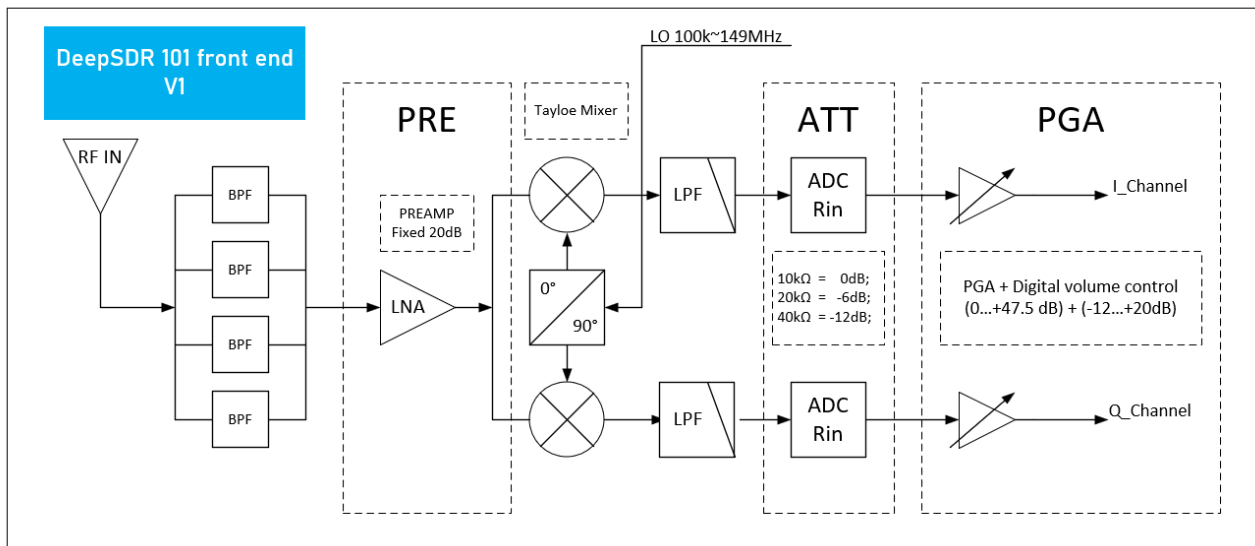


DeepSDR 101 RF front end and I/Q channels, version V1.

DeepSDR Reload

Installation manual · English

Prerequisite — USB support enabled

This manual assumes that USB support has already been enabled on your DeepSDR. In its factory configuration, the PC does not recognize the radio through its USB-C port. To enable this connection, replace the 2.4 k Ω resistor R8 with a 22 Ω resistor. This modification must be completed before following the flashing steps in this manual.

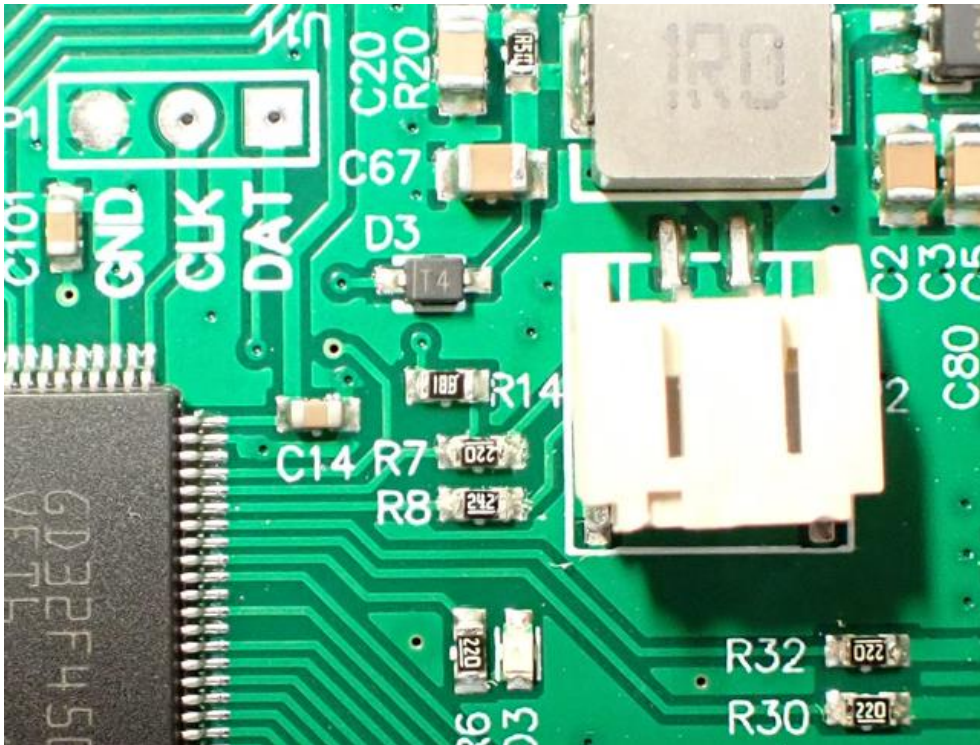

Original 2.4 k Ω resistor R8, marked 242, below R7. Replace with 22 Ω .

This guide explains how to flash the bootloader, install the firmware and load the databases using Windows or Linux.

Required files: customboot.bin, update.bin and BD.BIN. Flash the bootloader first using either of the two methods. Then install the firmware and database.

1 Enter DFU mode

Connect the DeepSDR to the computer via USB. There are two ways to enter DFU mode.

Using the previous firmware

This method requires the latest version of the previous firmware.

1. Open Ajustes → Equipo → Información → Versión (Settings → Equipment → Information → Version).
2. Tap Version five times to enable the hidden options.
3. Tap DFU mode twice. The radio will enter USB DFU mode.

Using the BOOT0 jumper

1. With the radio switched off, open the unit and identify BOOT0 and 3.3 V.
2. Switch on the radio while bridging BOOT0 and 3.3 V. Avoid contact with other components.

Bridge the right-hand contact of R11 (BOOT0) and the right-hand contact of C15 (+3V3), with the board oriented as shown in the photo.



The circles mark the contacts; the red line indicates the jumper between them.

2 Flash the bootloader using Linux

The dfu-util tool must be installed. Connect the radio via USB and put it in DFU mode.

Check device detection

```
dfu-util -l
```

Look for [28e9:0189] and the alt=0 entry named Internal Flash. The alt=1 entry, Option Bytes, is not used in this procedure.

```
dfu-util 0.11

Copyright 2005-2009 Weston Schmidt, Harald Welte and OpenMoko Inc.
Copyright 2010-2021 Tormod Volden and Stefan Schmidt
This program is Free Software and has ABSOLUTELY NO WARRANTY
Please report bugs to http://sourceforge.net/p/dfu-util/tickets/

Found DFU: [28e9:0189] ver=1000, devnum=20, cfg=1, intf=0, path="1-3", alt=1, name="@Option Bytes /0x1FFFF800/01*016 g", serial="9VEE"
Found DFU: [28e9:0189] ver=1000, devnum=20, cfg=1, intf=0, path="1-3", alt=0, name="@Internal Flash /0x08000000/512*002Kq", serial="9VEE"
```

Device detected in DFU mode.

Flash customboot.bin

Open a terminal in the folder containing customboot.bin and run:

```
dfu-util -a 0 -s 0x08000000:leave -D customboot.bin
```

Do not disconnect USB or switch off the radio while flashing.

```
dfu-util 0.11

Copyright 2005-2009 Weston Schmidt, Harald Welte and OpenMoko Inc.
Copyright 2010-2021 Tormod Volden and Stefan Schmidt
This program is Free Software and has ABSOLUTELY NO WARRANTY
Please report bugs to http://sourceforge.net/p/dfu-util/tickets/

dfu-util: Warning: Invalid DFU suffix signature
dfu-util: A valid DFU suffix will be required in a future dfu-util release
Opening DFU capable USB device...
Device ID 28e9:0189
Device DFU version 011a
Claiming USB DFU Interface...
Setting Alternate Interface #0 ...
Determining device status...
DFU state(10) = dfuERROR, status(10) = Device's firmware is corrupt. It cannot return to run-time (non-DFU) operations
Clearing status
Determining device status...
DFU state(2) = dfuIDLE, status(0) = No error condition is present
DFU mode device DFU version 011a
Device returned transfer size 2048
DfuSe interface name: "Internal Flash "
Downloading element to address = 0x08000000, size = 33516
Erase [=====] 100% 33516 bytes
Erase done.
Download [=====] 100% 33516 bytes
Download done.
File downloaded successfully
Submitting leave request...
```

Example of a completed flash operation.

Check that Erase and Download reach 100% and File downloaded successfully appears. In this example, the initial error state is cleared before writing.

Once the process has finished, switch off the radio.

Windows Download and install the tools

To flash the bootloader from Windows, you need GD32 All-In-One Programmer and the GD32 USB DFU drivers. Both are available from the official GigaDevice download page:

<https://www.gd32mcu.com/en/download/7?kw=GD32F4>

- 1. Download GD32 All-In-One Programmer. The screenshot shows the programmer entry.
- 2. Download GD32 Dfu Drivers, version 3.6.6.6167, archive GD32DfuDrivers_V3.6.6.6167.rar.
- 3. Install the GD32 drivers before connecting with the programmer. Then continue with the steps on the next page.

GD32 All-In-One Programmer

5.4.0.42035



none

2026-08-14

Introduction: GD32 All-In-One Programmer is a software tool for programming GD32 series MCU chips. The software supports firmware download, chip erasure, read and write Flash, setting option bytes and other operations on GD32 microcontrollers through a variety of interfaces (such as serial port, USB, GD ISP Bridge, etc.) and protocols (such as UART, I2C, OSPI, DFU, HID, CAN, LIN, etc.). It is suitable for development, testing and mass production scenarios.

GD32 All-In-One Programmer entry on the download page.

Filename	Version	English Document	Chinese Document	Published Date
GD32 Dfu Drivers	3.6.6.6167		none	2020-06-09

Introduction: The drivers for the GD32 Dfu device


GD32 Dfu Drivers entry, version 3.6.6.6167, on the same page.

3 Flash the bootloader using Windows

Use GD32 All In One Programmer. Connect the radio via USB and put it in DFU mode.


Detect and connect

1. Set Interface to USB and BootLoader to DFU.
2. Under Configuration → USB, check that Device shows GD DFU DEVICE 1. Then click Connect.

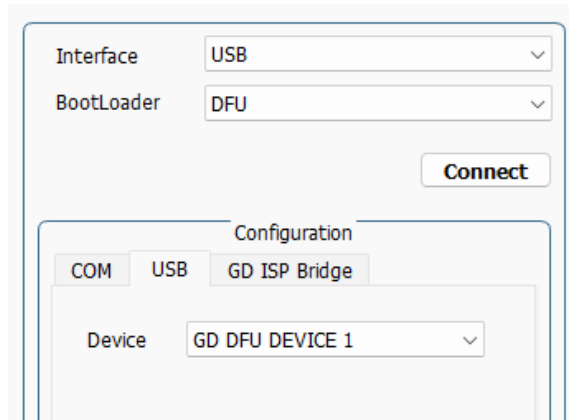

The device appears before clicking Connect.


After connecting, Device Information will show GD32F450VET6, Flash Size 512 KB and SRAM Size 256 KB.

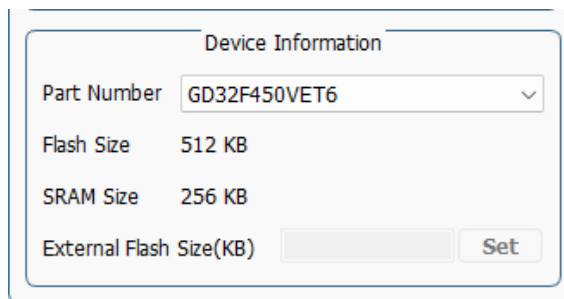

Connected device information.

Devices with readout protection

After clicking Connect, if the Remove Protection button appears, readout protection is enabled. Removing it erases the entire chip, including the installed firmware, and resets the radio.

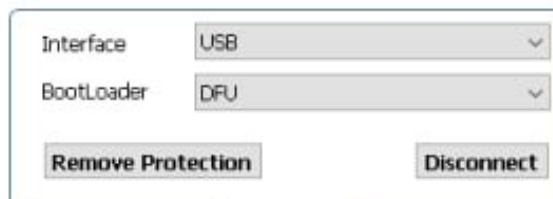


Button used to remove protection.

You will need to open the radio and use the BOOT0–3.3 V jumper. Entering DFU from the firmware menu alone is not sufficient.

1. Click Remove Protection and wait for it to finish.
2. Switch the radio off, then switch it on while bridging BOOT0 and 3.3 V.
3. Reconnect in the programmer and continue with flashing.

Windows Select and flash the file

1. On the Flash tab, in Download, click Browse and select customboot.bin.
2. Check that Start Address reads 08000000. The 0x prefix is already displayed beside the field.
3. Select Necessary erase. Keep Verify after download and Jump to run the App program checked, as shown.
4. Click Download to start flashing.

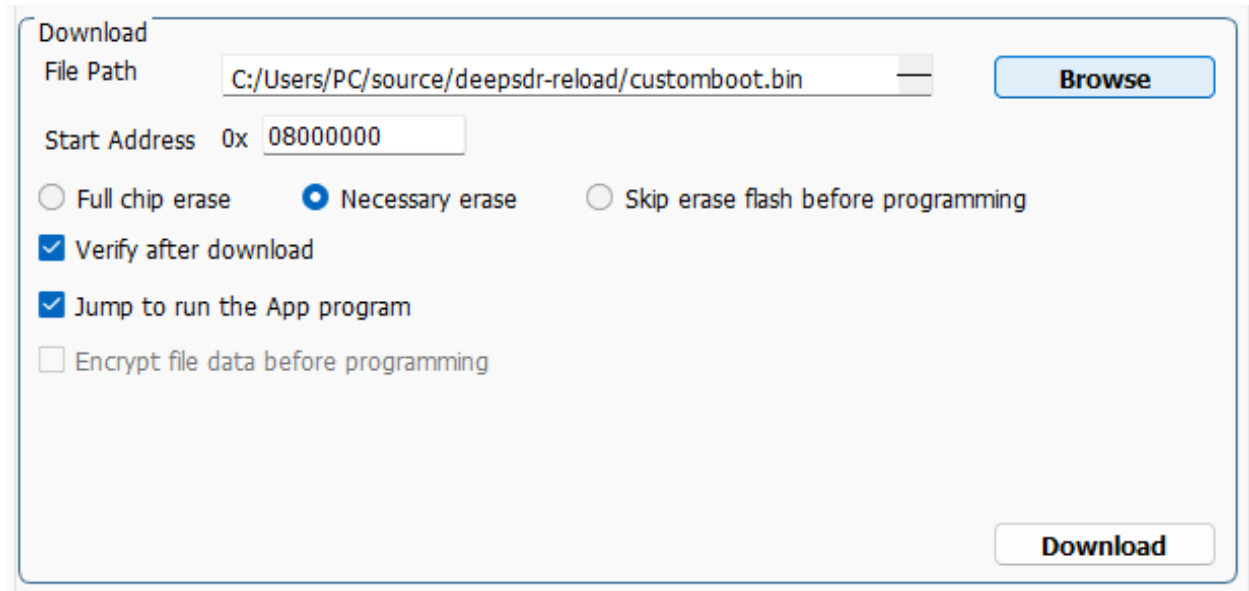

Flash settings. The file path depends on where you saved the file.

Do not disconnect USB or switch off the radio while flashing.

Wait for Process to reach 100% and check that the operation finishes without errors.

Process

100%

Progress bar at 100%.

The bootloader has now been flashed. Switch off the radio.

4 Install the firmware

These steps are the same on Windows and Linux. Follow them after flashing the bootloader and switching off the radio.

1. Connect the DeepSDR to the computer via USB.
2. Hold down the encoder button while switching on the radio. A new USB drive will appear on the computer.
3. Copy update.bin to that drive and wait for the copy to finish.
4. Restart the radio without pressing any buttons.

The update will start automatically during boot. Do not switch off the radio during the update. When it finishes, DeepSDR Reload will start.




Startup screen shown when the new firmware is running.

5 EiBi Aoki and aircraft model databases

Install BD.BIN to identify aircraft models and display the names of the stations you are tuning in to.

1. Switch off the radio and connect it to the computer via USB.
2. Switch it on while holding down the encoder button to enter USB mode.
3. Copy BD.BIN to the new USB drive and wait for the copy to finish.
4. Restart the radio without pressing any buttons.

On restart, the database will automatically be written to the DeepSDR internal memory. Do not switch off the radio until the process has finished.

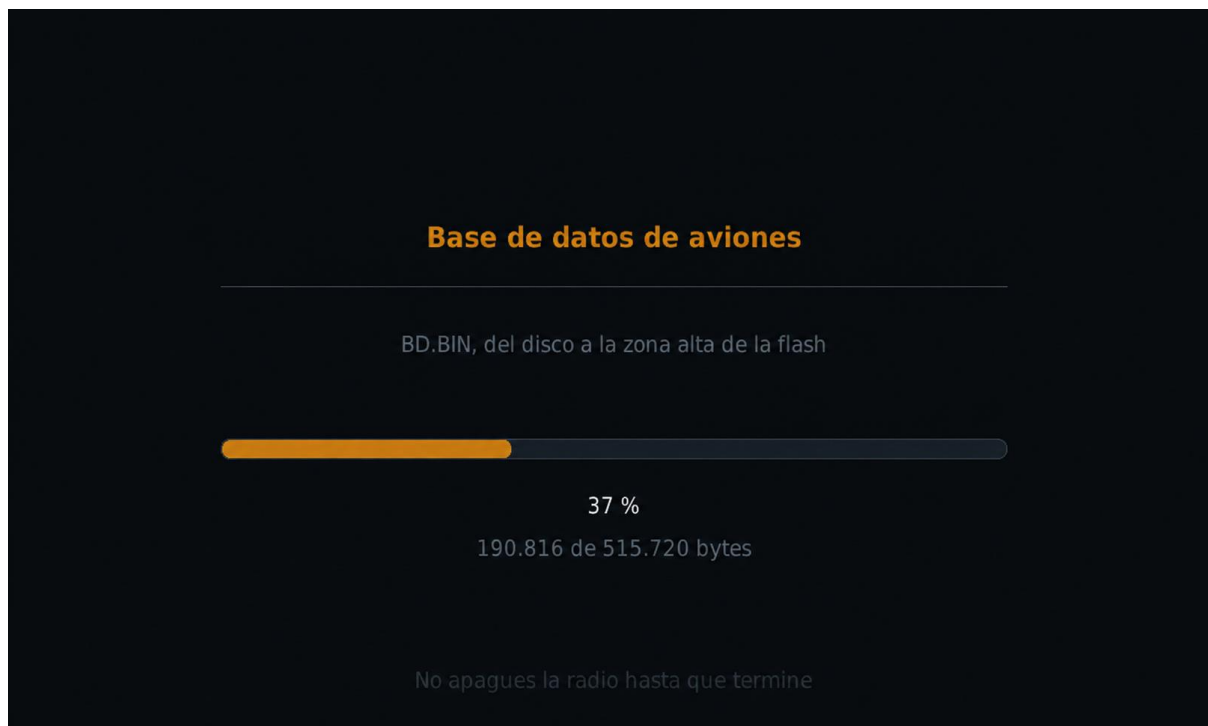

Writing BD.BIN to internal memory.