




3D Printed Motion Card

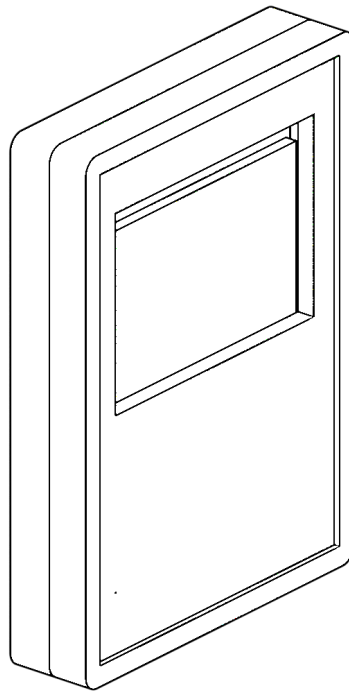

Instruction Manual



September 2026
Version 2.1.0


Table of Contents

<u>Product Overview</u>	3
<u>Package Contents</u>	3
<u>Safety Information</u>	4
<u>Assembly Instructions</u>	4
<u>Final Inspection</u>	4
<u>Maintenance</u>	5
<u>Troubleshooting</u>	5

Product Overview

Motion Cards are 3D-printed versions of traditional trading cards that offer a tactile experience based on the artwork of the original trading card. Assembly of the Motion Card generally requires no tools, and requires no particular training.

Package Contents

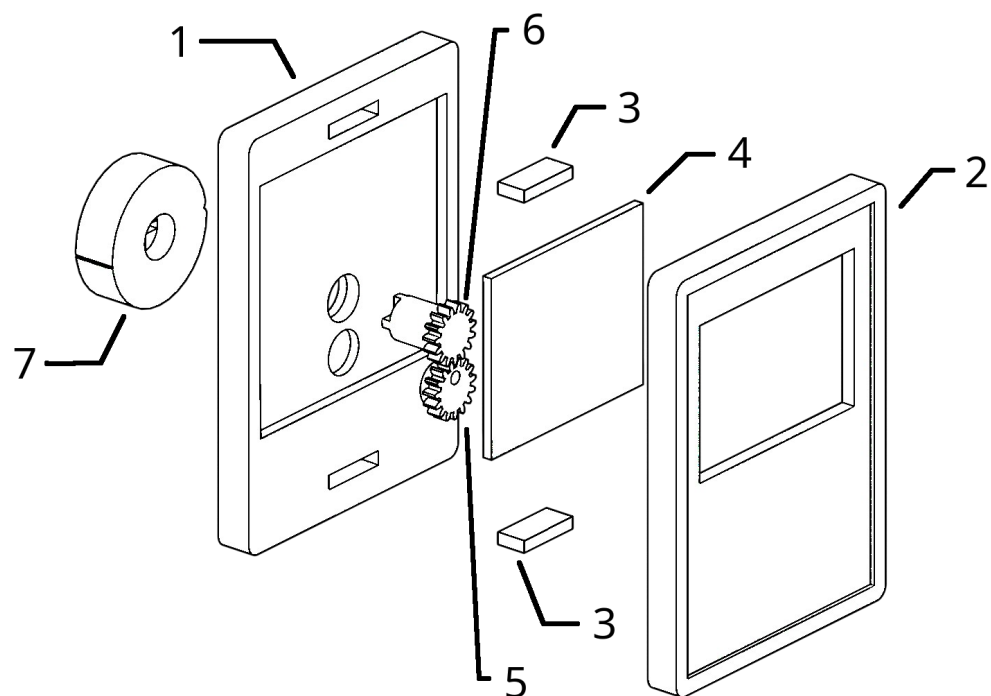

LABEL	ITEM	QUANTITY	DESCRIPTION
1	Card Back	1	Structural component containing series logo and card background artwork
2	Card Front	1	Primary aesthetic component
3	Interface Connectors	2	Bridge components for card front and back
4	Character Plate	1	Main character figure that is subject to motion
5	Character Gear	1	Secures the Character Plate in place
6	Secondary Gear	1	Interlocks with the Character Gear and drives the main Motion Card action
7	Gear Handle	1	Connects to the Secondary Gear and provides a grip for operation

Safety Information

Suitable for ages 6 and up.

Keep away from small children due to choking hazards.

Avoid excessive force during assembly to prevent breakage of components.

- Inspect all parts before assembly. Do not use any component that is cracked, warped, incomplete, or visibly damaged.
- Keep away from excessive heat, open flame, and direct sunlight if the material is heat-sensitive.
- Use only light hand pressure during assembly.
- Do not force parts together.

Assembly Instructions

1. Lay the Card Back on a flat surface, then insert the Interface Connectors into the Card Back notches.
2. Insert the Secondary Gear through the hole in the Card Back with the cross end facing downward. Connect the Gear Handle to the Secondary Gear by lining up the cross notches.
3. Insert the Character Gear into the main depression adjacent to the Secondary Gear.
4. Insert the Character Plate into the Character Gear by lining up the peg on the back of the Character Plate with the notch in the Character Gear
5. Attach the Card Front to the Card Back by aligning the Interface Connectors and pressing firmly.
6. Verify the Motion Card is assembled by turning the Gear Handle and observing the movement of the Character Plate.

Final Inspection

- Check that all joints are fully engaged.
- Rotate the Gear Handle in both directions to ensure smooth movement.
- Gently test stability before use.

Maintenance

- Clean with a dry microfibercloth.
- If needed, use mild soap and water, then dry immediately.
- Avoid abrasive cleaners or solvents.
- Store in a cool, dry place.

Troubleshooting

ISSUE	POSSIBLE CAUSE	RECOMMENDED ACTION
Part will not fit	Incorrect orientation or misalignment	Recheck alignment before applying pressure.
Assembly feels loose	Part not fully seated	Reinsert and verify full engagement.
Character Plate not moving	Turn the Gear Handle with some slight force to break in the assembly.	Stop use and replace affected part.
Visible warping	Heat exposure or material deformation	Stop use and replace affected part.