
HARDWARE PATCH for OneChipBook/MSXBOOK #1

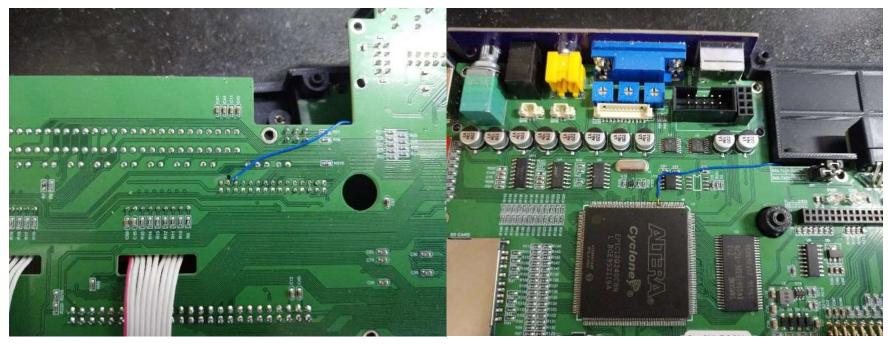

MainBoard PCB CON15-Pin28 to Cyclone-Pin17.

HARDWARE PATCH for OneChipBook/MSXBOOK #2



Keyboard PCB CON-Pin28 to R80 right side.