


Wireless Quick-Dial Cards

Setting an assigned frequency on transmitter & portable receiver

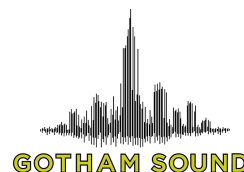

How to use: when a unit is checked in, find its family below and turn to the card. Each card has **two procedures** — one for the **transmitter**, one for the **portable receiver** — each set up to dial an *arbitrary* assigned frequency, not just a preset. The colored tag says how that family reaches an arbitrary MHz.

FREE-TUNE TO ANY MHz

Free-tune to any MHz (user bank / Tune / Frequency field).

PICK FINE GROUP FIRST

You must select a **fine / unlocked group** first, then set the freq (Sony, Wisycom).

FREE-TUNE WITHIN BLOCK

Free-tune within a fixed hardware **block**; TX and RX must share the block (Lectro).

CHANNEL CHART ONLY


Channels only — pick from the published **channel chart**; no arbitrary MHz dial (Comtek).

FAMILY (TX / RX)	USE THIS CARD	HOW TO REACH ANY MHz
Sennheiser Evol G3 / G4 (SK/SKM)	Sennheiser evolution G3 / G4	FREE-TUNE TO ANY MHz
Sennheiser EM6000 / SK(M) 6000	Sennheiser Digital 6000	FREE-TUNE TO ANY MHz
Sennheiser 2000 (SK/SKM/SKP 2000)	Sennheiser 2000 Series	FREE-TUNE TO ANY MHz
Sennheiser 3000/5000 (SK 5212 / SKM 5200)	Sennheiser 3000 / 5000 Series	FREE-TUNE TO ANY MHz
Shure ULXD (ULXD1 / ULXD2)	Shure ULX-D	FREE-TUNE TO ANY MHz
Shure Axient AD / ADX	Shure Axient Digital	FREE-TUNE TO ANY MHz
Shure PSM-1000 (P10T / P10R+)	Shure PSM 1000	FREE-TUNE TO ANY MHz
Sony UWP / UWP-D (UTX...)	Sony UWP-D	PICK FINE GROUP FIRST
Sony DWX (DWR / DWT)	Sony DWX Digital	PICK FINE GROUP FIRST
Wisycom MTP / MCR	Wisycom MTP / MCR	PICK FINE GROUP FIRST
Lectrosonics block units (SMV/SMQV...)	Lectrosonics Digital Hybrid	FREE-TUNE WITHIN BLOCK
Lectrosonics wideband (LT / LR “3 Block”)	Lectrosonics L-Series wideband	FREE-TUNE WITHIN BLOCK
Lectrosonics IFB (IFBT4 → IFBlue)	Lectrosonics IFB (IFBlue)	FREE-TUNE WITHIN BLOCK
Lectrosonics Duet (M2T → M2R / M2Ra)	Lectrosonics Duet (M2T / M2Ra)	FREE-TUNE TO ANY MHz
Comtek 216 (BST-25/216 → PR-216)	Comtek 216 (BST-25 / PR-216)	CHANNEL CHART ONLY
Sound Devices Astral (A20-TX/Mini/HH)	Sound Devices Astral (A20)	FREE-TUNE TO ANY MHz
Generic / unspecified model	— verify the actual hardware at check-in	VERIFY

Four rules that prevent most check-in failures: (1) **never power up an uncoordinated transmitter with RF on** — put it in its RF-off / standby / mute state first (see each card’s red **RF OFF FIRST** note), set the assigned frequency, *then* enable RF; (2) transmitter and receiver must be in the **same band / block**; (3) on Sony & Wisycom, select the **fine / unlocked group** before an arbitrary frequency is reachable; (4) on digital systems an **IR-sync** (RX→TX) copies the frequency onto the other unit — re-sync after band or encryption changes.

Sennheiser evolution G3 / G4

Analog UHF · portable (camera) receiver shown

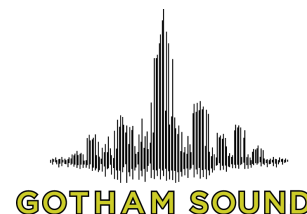

FREE-TUNE TO ANY MHz

Step 25 kHz

Range Tune only inside the unit's band letter (A 516–558, G 566–608, Aw+ 470–558...)

Typical report label: **Sennheiser Evol G3 A** **Sennheiser Evol G3 G** **Sennheiser Evol G4 Aw+**

TRANSMITTER

SK / SKM (bodypack / handheld)

- 1 Press **SET** (jog/rocker) → scroll to **Tune** → **SET**. Unit jumps to user bank **U**; RF mutes.
- 2 **UP**/**DOWN** to dial the assigned **MHz** (25 kHz steps; hold to scroll). **SET** to store.
- 3 **ESC** back to home; confirm the MHz on screen.

PORTABLE RECEIVER

EK 100 G3 / G4 (camera receiver)

- 1 Press **SET** → **Advanced** → **Tune** → **SET** (selects user bank **U**).
- 2 **UP**/**DOWN** to the same **MHz**; **SET** to store.
- 3 Or set the RX here, then **SYNC** the transmitter to it via IR.

RF OFF FIRST

Set the MUTE switch to **RF MUTE** (menu), engage mute *before* power-up (display shows it muted), tune, then unmute. The **Tune** menu also mutes RF while you set the freq.

RF POWER

300/500-series: **10 / 30 / 50 mW** (Low/Std/High) in **Advanced ▶ RF Power**. 100-series: fixed (~30 mW).

MATCHING TX & RX


Bank presets (1–20) only hold fixed compatible channels — use **Tune** (bank U) to reach an arbitrary freq.

WATCH OUT

- RX and TX must be the same band letter, or they can't meet on frequency.
- G3 and G4 tune identically.

Sennheiser Digital 6000

Digital UHF · portable (camera) receiver shown

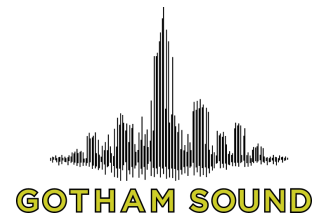

FREE-TUNE TO ANY MHz

Step 25 kHz

Range Up to 88–184 MHz tuning, depending on unit

Typical report label: **Sennheiser EM6000 A1-4**

TRANSMITTER

SK 6000 / SKM 6000

- 1 On the TX, open the menu with the function buttons → **Frequency**.
- 2 Set the assigned **MHz** (25 kHz steps); confirm.
- 3 Match the **transmission mode** (e.g. LR) to the receiver, or the link won't form.

PORTABLE RECEIVER

EK 6042 (2-ch camera receiver, LR)

- 1 Press the channel button → **CH Settings** → **Tune** ("manually sets the frequency").
- 2 Set the same **MHz**; confirm.
- 3 Then **Sync** transfers the frequency to the transmitter over IR.

RF OFF FIRST

No standby-off on the pack — set the freq on the EM 6000 / EK 6042 and **IR-sync before the pack goes live**; keep it muted/locked until confirmed.

RF POWER

Set by **mode**: LR = **25 mW**, LD ≈ 1 mW (SK 6212: 14 / 4 mW) — not a free dial.

MATCHING TX & RX


EK 6042 / EM 6000 → **Sync ▶ Frequency Only** pushes just the freq, leaving other settings alone.

WATCH OUT

- Digital 6000 TX work with EK 6042 in **Long-Range (LR)** mode — set both to LR.
- EM 6000 is the rack receiver; EK 6042 is the portable equivalent.

Sennheiser 2000 Series

Analog UHF (high-band) · portable (camera) receiver shown

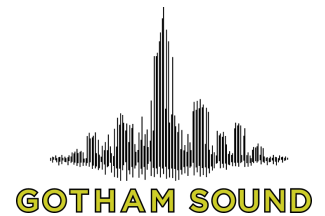

FREE-TUNE TO ANY MHz

Step 25 kHz

Range Up to 75 MHz switching bandwidth; tune inside the unit's band (e.g. Aw, Gw, Bw). 25 kHz steps.

Typical report label: **Sennheiser EM 2000** **SK 2000 / SKM 2000**

TRANSMITTER

SK 2000 / SKM 2000 / SKP 2000 (bodypack / handheld / plug-on)

- 1 Press the **jog dial** → **Advanced** → **Tune**. Pick a **user bank (U1-U6)**; the fixed banks 1-20 are intermod presets only.
- 2 Set the channel and dial the assigned **MHz** (25 kHz steps); press the **jog** to store.
- 3 Easier: set it on the receiver and IR-sync down to the TX (right). RF mutes during sync.

PORTABLE RECEIVER

EK 2000 (camera receiver)

- 1 Press the **rocker** / **jog** → **Advanced** → **Tune**; select a **user bank (U1-U6)** and channel.
- 2 Set the same assigned **MHz** (25 kHz); store the setting.
- 3 Hold the RX IR window to the TX IR window → **Sync**: the freq transfers to the TX; press the TX **jog** to save.

RF OFF FIRST

Press **STANDBY** to mute RF before power-up; set/sync the freq, then leave standby to go live. Sync itself mutes the TX RF while transferring.

RF POWER

10 / 30 / 50 mW (US: up to 100 mW) — **Advanced ▶ RF Power** on the TX.

MATCHING TX & RX


EM 2000 / EK 2000 → **Advanced ▶ Sync** transfers the frequency to the transmitter over IR. Or set both by hand to the same bank / channel / MHz.

WATCH OUT

- RX and TX must share the same band / range, or they can't meet on frequency.
- Fixed banks 1-20 are presets only — use a **user bank (U1-U6)** to land on an arbitrary coordinated MHz.
- 2000 series sits above ew G3/G4 and below 3000/5000 — same 25 kHz raster, jog-dial menu.

Sennheiser 3000 / 5000 Series

SK 5212-II bodypack · SKM 5200-II handheld · SKP 3000 plug-on — EK 3241 portable receiver

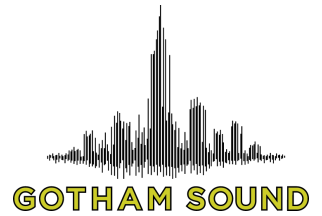

FREE-TUNE TO ANY MHz

Step 5 kHz — finest on these cards

Range Tune within the unit's switching bandwidth ($\approx$ 36 MHz on SK 5212-II / EK 3241); stay in the legal range.

Typical report label: **Sennheiser EM 3732 / 3732-II** **SK 5212(-II)** **SKM 5200(-II)**

TRANSMITTER

SK 5212(-II) / SKM 5200(-II) / SKP 3000
(bodypack / handheld / plug-on)

- 1 Deactivate the autolock if on. Open the menu → **CHAN**: pick a **VAR-bank** channel (the **FIX** bank is service-locked presets).
- 2 Go to **TUNE** and set the assigned **MHz** — tunes in **5 kHz** steps; press **SET** to store ("STORED").
- 3 Set output in **POWER**, then EXIT. (TUNE / CHAN only take effect once you **SET** them.)

PORTABLE RECEIVER

EK 3241 (camera receiver)

- 1 Use **CHAN** to pick a channel in bank "**U**" (the variable bank; bank "**F**" is 32 factory presets).
- 2 Open **tunE** and set the same **MHz** by hand (5 kHz steps); press **SET** ("StorEd").
- 3 **No IR sync on this receiver** — confirm the MHz matches the TX exactly. (Use an EM 3732 rack if you need IR sync.)

RF OFF FIRST

No standby-off boot — set the freq in **TUNE** (and a low **POWER** level) before the pack is near other rigs; confirm, then raise power / go live.

RF POWER

Set in the **POWER** menu on the TX (selectable output — verify the levels on your unit, e.g. 10 / 50 mW).

MATCHING TX & RX


The EK 3241 camera receiver has **no IR transmitter-sync** — match the frequency by hand on both ends (5 kHz). An EM 3732 rack can IR-sync the transmitters if you have one.

WATCH OUT

- FIX bank = service-locked intermod presets; use the **VAR bank** to land on a coordinated MHz.
- EK 3241 has no transmitter IR-sync — match by hand (or sync from an EM 3732 rack).
- TX and RX must share the same range / band.

Shure ULX-D

Digital UHF · (no portable receiver — half-rack ULXD4 shown)

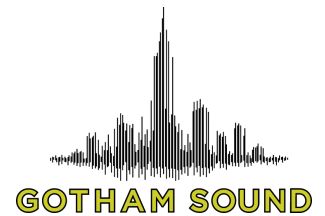

FREE-TUNE TO ANY MHz

Step 25 kHz

Range Band on the label must match (e.g. G50 = 470–534 MHz)

Typical report label: **Shure ULXD4 G50**

TRANSMITTER

ULXD1 / ULXD2 (bodypack / handheld)

- 1 On the TX, **MENU** → navigate with **▲▼** to the **Frequency** field.
- 2 **▲▼** to set the assigned **MHz** (25 kHz); **ENTER** to save.
- 3 Or just IR-sync from the receiver (see right) — simpler in practice.

PORTABLE RECEIVER

ULXD4 (half-rack receiver)

- 1 Open the channel's **RADIO** screen; push the **control wheel** to edit.
- 2 Rotate to the **Frequency** field and set the assigned **MHz** directly; **ENTER** to save.
- 3 Align IR windows, press **SYNC** → **Sync Success** copies it to the TX.

RF OFF FIRST

ULX-D radiates whenever it's on — **IR-sync the assigned (coordinated) freq from the receiver before** bringing the pack up near other rigs.

RF POWER

1 / 10 / 20 mW (RF Power — on the TX menu, or pushed from the receiver).

MATCHING TX & RX


In the RADIO menu you can set Group/Channel *or* edit the **Frequency** field for an exact coordinated MHz.

WATCH OUT

- ULX-D has no bodypack/portable receiver — all receivers are rack/half-rack.
- Re-sync after enabling/disabling **encryption**. TX and RX must share the band.

Shure Axient Digital

Digital UHF · portable receiver shown

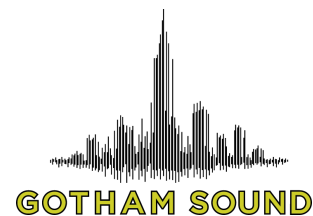

FREE-TUNE TO ANY MHz

Step 25 kHz

Range G55 470–636 · K57 606–790 · X55 941–960 MHz (legal spectrum only)

Typical report label: Shure AD G55 Shure AD X55 Shure AD K57 Shure AD-B K57

TRANSMITTER

AD1/ADX1 · AD2/ADX2 (pack/handheld)

- 1 On the TX, **MENU** → **Frequency**; **control wheel** / arrows to set the assigned **MHz**; **ENTER**.
- 2 Or IR-sync from the receiver (right). ADX can also be re-tuned remotely via ShowLink / AD610.

PORTABLE RECEIVER

ADX5D (2-ch portable receiver)

- 1 Select the channel; open its RF/Frequency screen; push the **control wheel** to edit.
- 2 Set the assigned **Frequency (MHz)** directly (or Group/Channel); **ENTER** to save.
- 3 Power the TX, press **SYNC**, align IR windows until the LED glows red → **Sync Success!**

RF OFF FIRST

Turn on **Safe Start** so the TX boots **RF-muted** (Power LED **red**), or use **RF Mute**. Set/sync the freq, then unmute.

RF POWER 2 / 10 / 35 mW (Radio menu; some bands 2 / 10).

MATCHING TX & RX


Channels are grouped for intermod safety, but you can type an exact **Frequency** on either device.

WATCH OUT

- Receiver **RF Band** must equal the TX band; after changing RF band, re-sync every TX.
- ADX5D is the portable receiver; AD4D/AD4Q are the rack versions.

Shure PSM 1000 (IEM / IFB)

Digital UHF · the bodypack IS the portable receiver

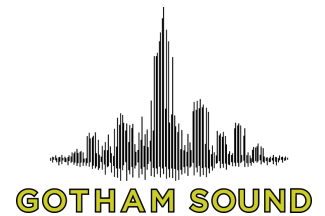

FREE-TUNE TO ANY MHz

Step 25 kHz

Range Band on the label (e.g. G10 = 470–542 MHz)

Typical report label: **Shure PSM-1000 G10**

TRANSMITTER

P10T (rack transmitter)

- 1 Press **ENTER** → select the channel (TX1/TX2) → **RADIO / Frequency** screen.
- 2 **ENTER** to edit; wheel/arrows to set the assigned **MHz** (or Group/Channel); **ENTER** to save.
- 3 Align the earpack IR window and press **SYNC** to push the freq to it.

PORTABLE RECEIVER

P10R+ (bodypack receiver, worn)

- 1 Press **ENTER** to open the menu → **Group/Channel/Frequency**.
- 2 Edit the **Frequency** to the assigned **MHz**; confirm.
- 3 Or scan on the P10R+, then **IR-sync up** to the P10T.

RF OFF FIRST

Use the P10T's **RF MUTE** (front panel, per channel) before it's on a frequency; set the channel, then un-mute.

RF POWER

10 / 50 / 100 mW (P10T Radio menu ► PWR).

MATCHING TX & RX


Here the **transmitter is the rack (P10T)** and the **receiver is the bodypack (P10R+)** — reverse of a mic.

WATCH OUT

- P10T and P10R+ must be the same band.
- Switch RF off before powering up near other systems.

Sony UWP-D

Analog UHF + digital audio · portable receiver shown

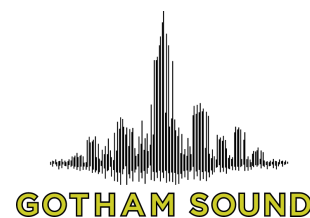

PICK FINE GROUP FIRST

Step 25 kHz raster

Range Band on the label (UC14 470–542, UC25 536–608...)

Typical report label: **Sony UWP (UTX-B40 / M40 / P40)**

PICK FINE GROUP FIRST

To reach **any** coordinated MHz, both units must be in a fine group: the group whose number **matches the TV channel** (e.g. Group **14** for TV-14) — these step in **25 kHz**. The low groups **01–09** are intermod presets with only a few fixed channels and will NOT reach an arbitrary freq.

TRANSMITTER

UTX-B40 / M40 / P40 (TX)

- 1 Power OFF, then hold **SET** + **POWER** ~1 s → **transmission-stopped** mode (RF off).
- 2 **+**/**–** to **GP/CH**; hold **SET** until **GROUP** flashes → pick the **TV-channel-number group** (not 01–09); **SET**.
- 3 **CHANNEL** flashes → **+**/**–** to the channel = assigned **MHz**; **SET**. Power-cycle to transmit.

PORTABLE RECEIVER

URX-P40 (portable diversity tuner)

- 1 **+**/**–** to **GP/CH**; hold **SET** to edit. Select the same **TV-channel-number group**, then the channel matching the **MHz**.
- 2 Confirm the MHz on the OLED.
- 3 Or run **NFC / IR SYNC (RX→TX)** to copy the receiver's freq to the transmitter.

RF OFF FIRST

You're already RF-off: GP/CH is set in **transmission-stopped mode** (hold SET+POWER). Only power-cycle to transmit once the freq is right.

RF POWER

5 / 30 mW selectable (J/E/KR versions: 2 / 10 mW).

MATCHING TX & RX


Use Sony's **UWP-D Frequency List** to map an assigned MHz → Group/Channel. Group 00 = coarse 125 kHz steps.

WATCH OUT

- Stuck on only a few channels = you're in a preset group (01–09); switch to the TV-channel group.
- GP/CH & BAND change only with transmission stopped.

Sony DWX Digital

Digital UHF · portable (slot) receiver shown

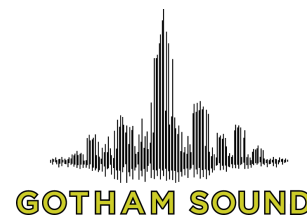

PICK FINE GROUP FIRST

Step 25 kHz (US 375 kHz channel plan)

Range TX block must match the RX (e.g. TV14-17 = 470-494 MHz)

Typical report label: **Sony DWR / DWT ("TV1417", "DWT 15-075"...)**

PICK FINE GROUP FIRST

Frequency = **Band** → **Group** → **Channel**. The factory groups are the **TV-channel blocks** (TV14-17, TV18-21...) stepping in 25 kHz — select the one that contains the assigned MHz; small preset groups carry only a few intermod-safe channels.

TRANSMITTER

DWT-B03R / B01N / P-series (TX)

- 1 Power OFF, hold **SET** and turn on → setting mode (transmission stopped).
- 2 **+**/**-** to **GP/CH**; hold **SET** until **GROUP** flashes → pick the TV-channel group; **SET**.
- 3 **CHANNEL** flashes → set to the channel = assigned **MHz**; **SET**. Power-cycle to transmit.

PORTABLE RECEIVER

DWR-S03D (2-ch slot receiver)

- 1 Open the channel menu → Group/Channel; **SET** to edit. Pick the TV-channel group, then the channel = **MHz**.
- 2 Confirm the MHz on the OLED.
- 3 Or press **MENU SEL** + **SET** to auto-scan, then **Cross Remote** pushes the freq to the TX.

RF OFF FIRST

You're already RF-off: GP/CH is set in **setting mode** (hold SET while powering on = transmission stopped). Power-cycle to transmit after the freq is set.

RF POWER

2 / 10 / 25 mW selectable (DWT-B03R).

MATCHING TX & RX


Cross Remote / pairing carries the exact freq from RX to TX. Use the Sony **DWX Frequency List** for the mapping.

WATCH OUT

- TX band/block must match the RX or they won't link.
- A small preset group shows only a few channels — move to the TV-channel group.

Wisycom MTP / MCR

Wideband UHF · portable receiver shown

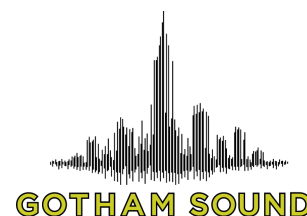

PICK FINE GROUP FIRST

Step fine (to 25 kHz)

Range Very wide — Band 1 ≈ 470–640 MHz

Typical report label: Wisycom Band 1 470-640

PICK FINE GROUP FIRST

TUNING holds a **Group (GR 0-39)** and **Channel (CH 0-59)**; you edit the frequency inside the selected slot. A group can be **locked or hidden** — to free-tune, first select an **unlocked** group (the **USER** / free-tune group, or one left tunable in Wisycom Manager).

TRANSMITTER

MTP40S / MTP60 (bodypack TX)

- 1 **MTP60**: **SEL** + **UP** → **Setup** → **TUNING**. At **GR**, pick an **unlocked/USER** group; move to **CH**.
- 2 At **Freq**, **SEL** to edit, **UP** / **DOWN** to set the **MHz**, **SEL** to save.
- 3 **MTP40S**: use the scroll **selector** / **CH** keys → set **GR** (unlocked) → **CH** → **Freq**.

PORTABLE RECEIVER

MCR42 / MCR54 (portable receiver)

- 1 Open **TUNING** → select an **unlocked group**, then a channel slot.
- 2 Set the **Freq** to the assigned **MHz**; confirm.
- 3 Or **IR-sync** the transmitter to the receiver (carries freq + group + channel).

RF OFF FIRST

Power up with transmission disabled — **MTP60**: hold EXIT/OFF to switch on without RF (or set RF Power = **OFF**); **MTP40S**: leave the wireless switch off. **LED2 RED = RF off**; set the freq, then enable a power level — **LED2 GREEN = radiating**.

RF POWER

MTP60: **10 / L10 / 20 / L20 / 50 / 100 mW** (+ OFF). MTP40S: **10 / 50 / 100 mW**. (RF ► Power)

MATCHING TX & RX


If the freq won't change, the active group is **locked/hidden** — switch to the **USER** / free group.

WATCH OUT

- Enable RF — wireless power switch to **I** (LED green). Set the correct battery type.
- Keep one open group for field tuning; locks live in Wisycom Manager.

Lectrosonics Digital Hybrid

Block UHF · portable (slot) receiver shown

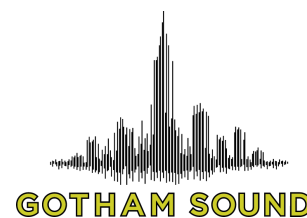

FREE-TUNE WITHIN BLOCK

Step 100 kHz front-panel (25 kHz via hex / PC / IR)

Range Fixed BLOCK on the housing (470, 19, 21, 22...)

Typical report label: **Lectro 100 kHz Block 19** **Block 21** **Block 22** **Lectro 25 kHz Block 470**

FREE-TUNE WITHIN BLOCK

No menus full of presets — each unit free-tunes **within its hardware BLOCK**. The only “group” rule: **TX and RX must be the same block**. Confirm the block (engraved on the housing; shown at power-up) before tuning.

TRANSMITTER

SMV / SMQV (and SMa, SSM, LT...)

- 1 From home, press and **HOLD** **FREQ**; while holding, **UP**/**DOWN** moves the freq in 100 kHz steps. Release to set.
- 2 Press **FREQ** again to toggle the display between **MHz** and the 2-digit **hex** channel.
- 3 To set with RF off, boot Standby: from OFF hold UP, then press AUDIO+FREQ together.

PORTABLE RECEIVER

SRc / SRc5P (2-ch slot receiver)

- 1 Press **MENU/SEL** to open setup; pick the receiver (1 or 2).
- 2 Hold **MENU/SEL** + **UP**/**DOWN** to step the **frequency** (or use SCAN, then set).
- 3 Then trigger **IR SYNC** to copy the receiver's freq to the transmitter.

RF OFF FIRST

Boot in **STANDBY** (RF off): from OFF hold UP, then press AUDIO+FREQ together — the unit powers up with the RF carrier off. Set the freq, then leave Standby to transmit.

RF POWER

50 / 100 / 250 mW in the Power menu (250 mW not on the 941 band).

MATCHING TX & RX


Block = the fixed hardware range; it can't be changed in the field on single-block units. Match TX and RX blocks.

WATCH OUT

- If TX and RX blocks differ, they will never link.
- Coordinated freqs on 100 kHz boundaries are reachable from the front panel; finer steps need hex / PC / IR.
- Blocks run past TV-band UHF — “Lectro 100 kHz Block 944” on a report = the 944-952 MHz STL band; same tuning drill.

Lectrosonics L-Series wideband

Digital Hybrid UHF · spans 3 legacy blocks · portable receiver shown

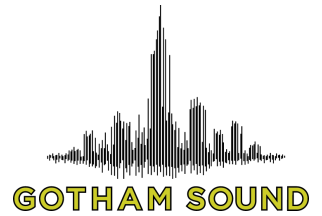

FREE-TUNE WITHIN BLOCK

Step 100 kHz default — set Step Size = 25 kHz

Range A1 470.100-537.575 · B1 537.600-614.375 · C1 614.400-691.175 (each unit covers one 3-block range)

Typical report label: **Lectrosonics 3 Block A1** **Lectrosonics 3 Block B1** **LT / LMb → LR**

FREE-TUNE WITHIN BLOCK

Same Digital Hybrid family as the block-units card, but each unit free-tunes across **three legacy blocks** (“3 Block” on reports). The catch is the **Step Size** setting: front panels default to **100 kHz** — set **Step Size = 25 kHz on BOTH ends** or a .025 / .050 / .075 assignment is unreachable.

TRANSMITTER

LT / LMb (bodypack transmitters)

- 1 Power on in **Standby Mode** — the RF carrier stays off (“Standby” in the Main Window) while you browse menus and tune.
- 2 Menu → **StepSize**: set **25 kHz**. Then **Frequency**: **UP**/**DOWN** to the assigned **MHz**.
- 3 **Rf On** from the Main / Power menu once confirmed — or IR-sync from the LR first, then enable RF.

PORTABLE RECEIVER

LR (camera-mount receiver)

- 1 **MENU/SEL** → set **Step Size = 25 kHz**, then open **Frequency** (or run **SmartTune** to scan for clear air).
- 2 Dial the same assigned **MHz**; confirm on the LCD.
- 3 Trigger **IR sync** at the transmitter to copy the LR’s frequency across (RX → TX).

RF OFF FIRST

Power the LT / LMb on in **Standby Mode** (RF off) and do all tuning there; turn **Rf On** from the Main / Power menu once set. **AutoOn** in the Power menu controls whether RF comes up at boot.

RF POWER

50 / 100 mW (Power menu).

MATCHING TX & RX


TX and RX ranges must overlap on the assigned MHz (A1 / B1 / C1 spans). **Step Size must match on both ends** — same rule as the block-units card, wider hardware.

WATCH OUT

- Reports list these as “**Lectrosonics 3 Block A1 / B1**” — the wideband LT / LR family, not the single-block SMV card.
- Step Size left at 100 kHz silently hides .025 / .050 / .075 assignments — set **25 kHz** on both TX and RX.
- Compat mode (Digital Hybrid / 100 / 200 / IFB / Mode 3...) must match the receiver or no audio.

Lectrosonics IFB (IFBlue)

Block UHF/VHF IFB — talent & crew cue feeds · portable receiver shown

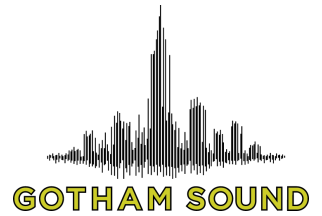

FREE-TUNE WITHIN BLOCK

Step 25 / 100 kHz (VHF 125 kHz)

Range Fixed ~75 MHz range; RX & TX ranges must match (A1 470–537, B1 537–614, C1 614–692; VHF 174–216)

Typical report label: **Lectro IFBT4** **IFBT2.0** **Digital Hybrid TX in IFB mode**

FREE-TUNE WITHIN BLOCK

IFB is one-way: an IFB transmitter feeds belt-pack receivers. No presets to fight — each unit free-tunes within its **range/block**. Rule: the **receiver's range must contain the transmitter's frequency**, and both must be in the same **compatibility mode** (IFB / Nu Hybrid / 400).

TRANSMITTER

IFBT4 / IFBT2.0 (or any Lectro DH TX in IFB mode)

- 1 IFBT4:** set the switch to **TUNE** (RF off — freq changes only in TUNE). Set **COMPAT** to match the RX (IFB is the default).
- Press **MENU** to the **Frequency** window; **UP**/**DOWN** to the assigned **MHz** (**MENU**+**UP**/**DOWN** jumps 16 ch). TUNING = **NORMAL** for free choice.
- Flip to **XMIT** to go on air. (**IFBT2.0:** menu-driven colour LCD — pick the channel's Frequency + mode within its A1/B1/C1 range.)

PORTABLE RECEIVER

IFBlue IFBR1C / IFBR1B (belt-pack)

- 1** Press **FREQ** to show the receiver frequency in **MHz**.
- 2** **UP**/**DOWN** to the assigned **MHz** (25 or 100 kHz steps; VHF 125 kHz). **FREQ**+**UP**/**DOWN** jumps 1 MHz.
- 3** Store it to one of the **10 presets**; **UP**/**DOWN** then scrolls saved freqs on the fly. (IFBR1C tunes the same way in a tinier body.)

RF OFF FIRST

Set the IFBT4 switch to **TUNE** — RF is off (a blinking **"T"** shows) and the freq can only be changed here. Flip to **XMIT** once set.

RF POWER

IFBT4: ~250 mW. IFBT2.0: selectable **10 / 25 / 50 / 100 / 250 mW**.

MATCHING TX & RX


No sync. Set the **same MHz** on TX and RX, keep both in the same **compatibility mode**, and make sure the RX range covers the TX frequency. A **pilot tone** keeps the RX muted until it sees a valid signal.

WATCH OUT

- RX and TX must share the tuning range (A1/B1/C1 or VHF) or it can't tune there.
- Hearing nothing? Check COMPAT mode and the pilot tone — not just the frequency.
- IFBT4 frequency changes only in TUNE, not XMIT.

Lectrosonics Duet (M2T / M2Ra)

Digital UHF IEM / IFB · the bodypack IS the portable receiver

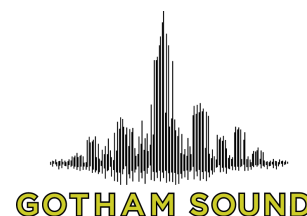

FREE-TUNE TO ANY MHz

Step 25 kHz

Range A1B1 470.100-607.975 (NA) · B1C1 version 537-691 — the unit's range must cover the assigned MHz

Typical report label: **Lectrosonics M2T A1B1**

TRANSMITTER

M2T (half-rack TX — two carriers, two audio ch each)

- 1 **Menu** → **RF Tuning** → pick the carrier (each of the two carriers tunes separately); **UP**/**DOWN** in **25 kHz** steps; confirm.
- 2 **RF Enable/Level**: keep the carrier **off** while tuning; set the power level per carrier.
- 3 Or drive the whole rack from **Wireless Designer** (USB / Ethernet) — freq, names, levels.

PORTABLE RECEIVER

M2Ra (belt-pack stereo receiver)

- 1 Open the menu and tune to the assigned **MHz** (25 kHz steps) — or run **SmartTune** to scan on-site RF.
- 2 **2-way IR sync**: hold the M2Ra to the M2T's IR port — settings and scan data transfer between units (RX → TX works).
- 3 If the rig uses a **FlexList**, pick the feed by name instead of dialing.

RF OFF FIRST

The **RF Enable/Level** menu keeps each carrier OFF until you explicitly enable it — tune first, enable second. Same habit as the SMV standby boot, just menu-driven.

RF POWER

10 / 25 / 50 mW per carrier (RF Enable/Level menu).

MATCHING TX & RX


Transmitter is the rack (M2T), receiver is the belt-pack (M2Ra) — reverse of a mic, like PSM 1000. 2-way IR sync moves settings in either direction.

WATCH OUT

- Not the IFB card: Duet is the **digital stereo** IEM system. The M2Ra's **IFB / D2 / HDM** compat modes let it stand in for an IFB R1a or D-Squared receiver — set the mode to match the TX.
- Two independent carriers per M2T half-rack — confirm *which* carrier you're tuning before you dial.
- A1B1 vs B1C1 hardware versions — the assigned MHz must sit inside the unit's range.

Comtek 216 (BST-25 / PR-216)

VHF FM IFB / cueing (216–217 MHz) · belt-pack receiver shown

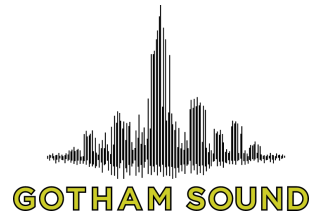**CHANNEL CHART ONLY**

Step channel chart — 57 channels

Range 216–217 MHz (FCC Part 95) — 38 narrow + 19 hi-fi companded channels

Typical report label: **Comtek BST-216 Narrow 23****CHANNEL CHART ONLY**

No MHz dial at all — coordination assigns a **channel from Comtek's published chart** (e.g. "Narrow 23" = 216.5625). Narrow (non-companded) and hi-fi (companded) are **separate channel sets**; the TX auto-sets deviation / EQ per channel, and the RX must be on the same channel type.

TRANSMITTER**BST-25/216 (base-station transmitter)**

- 1 Select the assigned **channel** with the front-panel controls — the LED window shows the channel *and* exact frequency.
- 2 Confirm the channel **type** (narrow vs hi-fi companded) matches the assignment; deviation and EQ set themselves per channel.
- 3 Switch the **DISPLAY off** once set — with the display disabled the tuning controls are locked, so the freq can't walk.

PORTABLE RECEIVER**PR-216 (belt-pack receiver)**

- 1 Select the **same channel number** on the PR-216 — it tunes both the standard and hi-fi channel sets.
- 2 Use the BST's **400 Hz TONE** switch to confirm the link and set listen level, then kill the tone.
- 3 Channel stays put once set — no sync, nothing else to match.

RF OFF FIRST

No RF-off standby — the BST radiates once powered. **Set the channel before powering near the rig** (or before the antenna goes on), then use the display-off lockout to freeze tuning.

RF POWER

Fixed low power under FCC **Part 95** (BST-25). The BST 75-216 is the higher-power variant; the M-216 is the belt-pack TX version.

MATCHING TX & RX


No sync — match the **channel number** on TX and RX from the chart. Running 2+ channels on one site needs intermod-checked channel groups (Comtek's chart / frequency software).

WATCH OUT

- VHF 216–217 — completely outside UHF TV coordination; it appears on reports as a **channel number**, not a free MHz.
- Narrow vs hi-fi companded are different channel sets — a mismatch passes RF but sounds wrong.
- Display disabled = tuning locked. Re-enable the display to change channels.

Sound Devices Astral (A20)

Digital wideband (SpectraBand) · portable receiver shown

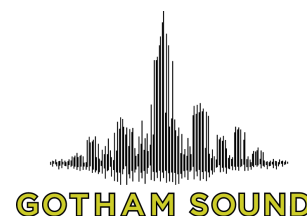

FREE-TUNE TO ANY MHz

Step fine — any MHz (off the sub-channel grid is OK)

Range SpectraBand 470–1525 MHz (Astral TX & A20-RX down to 169) — region/license-gated

Typical report label: **Astral TX (A20-TX)** **Astral Mini (A20-Mini)** **Astral HH (A20-HH)**

TRANSMITTER

Astral TX / HH (display) · Mini (app)

- 1 Astral TX / HH:** open the menu → set **Country / Tuning Band** first (unlocks the legal range), then **Frequency**.
- 2** Dial the assigned **MHz** and confirm; turn **RF on**.
- 3 Astral Mini** (no screen): set frequency from the **A20-Remote app**, or push it from the receiver / Nexus over **NexLink**.

PORTABLE RECEIVER

A20-RX (2-ch portable receiver)

- 1** Press or to select a channel (single-channel view); press the centre **ENTER** to open its menu.
- 2** Go to **Frequency** → **ENTER**; to set the assigned **MHz**; **ENTER** to confirm. (An * just means it's off the preset sub-channel grid — fine.)
- 3** Set the transmitter to the **same MHz** (on-unit, app, or NexLink). Tip: **AutoAssign** scans a chosen band and fills both channels.

RF OFF FIRST

Use the menu **RF Off** toggle (or set RF Power = **Off** on the Mini) so it's powered but not radiating; set the freq; then **RF On**.

RF POWER

A20-TX **2 / 10 / 20 / 40 mW**; Mini Off / 2 / 10 / 20 / 40; HH up to **100 mW** (Extra-High must be enabled). Set on the unit, A20-Remote, or the receiver. Tip: raise Long-Range modulation before power.

MATCHING TX & RX

No IR sync. TX and RX must share the same **frequency + modulation**; match by hand, via **A20-Remote**, or push over **NexLink** (the screenless Mini must be set this way).

WATCH OUT

- Set **Country / Tuning Band** first — available freqs depend on region and any **FA license code**; restricted bands stay locked.
- GainForward:** no gain on the transmitter — gain is set at the receiver / mixer.
- Digital & intermod-immune, but keep A20 units **≥ 400 kHz** apart.