

User Information

Fronius Wattpilot OCPP

DE Benutzerinformation

EN User Information



Inhaltsverzeichnis

Allgemeine Informationen	Ę
Wichtige Hinweise zu diesem Dokument Zweck des Dokumentes Zielgruppe	
OCPP (Open Charge Point Protocol)	Ş
Allgemein	11
Funktionsprinzip	
Datensicherheit	12
OCPP	
Konfiguration	
OCPP aktivieren	17

Allgemeine Informationen

Wichtige Hinweise zu diesem Dokument

Zweck des Dokumentes

Dieses Dokument beschreibt, welche Funktionen des Open Charge Point Protocols OCPP vom Fronius Wattpilot unterstützt werden.

Zielgruppe

Die Informationen in diesem Dokument richten sich an Ladestations-Betreiber, die den Fronius Wattpilot in eine Ladeinfrastruktur integrieren möchten.

Diese Benutzerinformation richtet sich ausschließlich an Fachpersonal mit Qualifikation im Umgang mit dem OCPP.

OCPP (Open Charge Point Protocol)

Allgemein

Funktionsprinzip

OCPP (Open Charge Point Protocol) ist ein offener Kommunikationsstandard, der von der OCA (Open Charge Alliance) veröffentlicht wird. Durch OCPP wird die Kommunikation zwischen einem Ladepunkt (z. B. Fronius Wattpilot) und einem Backend-System geregelt. Mit Backend-Systemen können die Ladestationen in Echtzeit überwacht und gegebenenfalls gesteuert werden.

Der Fronius Wattpilot unterstützt OCPP 1.6J. Dadurch ist die Integration eines Fronius Wattpilot in z. B. ein Lademanagement-System möglich und die Interoperabilität des Wattpilot mit einem Backend-System gegeben.

Datensicherheit

Die Verbindungen zu einem externen Server des Fronius Wattpilot über OCPP (Open Charge Point Protocol) sind immer verschlüsselt (WebSocket Secure, wss://).

Die Verbindungen zu einem internen Server des Fronius Wattpilot über OCPP können verschlüsselt (WebSocket Secure, wss://) oder unverschlüsselt sein (WebSocket, ws://). Wird eine unverschlüsselte Verbindung über einen internen Server aufgebaut, ist der Betreiber für die mögliche Weitergabe von personenbezogenen Daten selbst verantwortlich. Diese Funktion richtet sich an Endanwender die eigenverantwortlich einen Server für lokales Lastmanagement einrichten wollen.

Wird eigenverantwortlich ein Server für das lokale Lastmanagement eingerichtet, können vom qualifizierten Fachpersonal selbst signierte Zertifikate für OCPP verwendet werden. Der Betreiber ist für die Verwendung selbst signierter Zertifikate verantwortlich.

OCPP

Konfiguration

Folgende OCPP-Parameter werden vom Fronius Wattpilot unterstützt. Nähere Informationen zu den Parametern sind in der OCPP-Dokumentation im angegebenen Kapitel der Protokollspezifikation zu finden. Die OCPP-Dokumentation ist auf der Website der Open Charge Alliance zu finden, siehe https://www.open-chargealliance.org/

ChargePoint messages (OCPP 1.6J)	Kapitel der Protokollspezifikation
Authorize	4.1
BootNotification	4.2
FirmwareStatus	4.5
Heartbeat	4.6
MeterValues	4.7
StartTransaction	4.8
StatusNotification	4.9
StopTransaction	4.10

CentralSystem messages (OCPP 1.6J)	Kapitel der Protokollspezifikation
ChangeConfiguration	5.3 - limited
ClearChargingProfile	5.5
GetConfiguration	5.8 - limited
RemoteStartTransaction	5.11
RemoteStopTransaction	5.12
Reset	5.14
SetChargingProfile	5.16
TriggerMessage	5.17
UnlockConnector	5.18
UpdateFirmware	5.19

ChargePoint configuration parameters (OCPP 1.6J)	Kapitel der Protokollspezifikation
HeartbeatInterval	9.1.10
LightIntensity	9.1.11
MeterValuesSampledDataMaxLength	9.1.18
MeterValueSampleInterval	9.1.19
NumberOfConnectors	9.1.21
ChargeProfileMaxStackLevel	9.4.1
ChargingScheduleAllowedCharging- RateUnit	9.4.2
ConnectorSwitch3to1PhaseSupported	9.4.4

OCPP aktivieren

Folgende Schritte durchführen.


- Fronius Solar.wattpilot App starten.
- Auf "Internet" klicken.
- 3 Auf "OCPP" klicken.
- "OCPP 1.6J" aktivieren.
- 5 OCPP Server-Adresse eingeben (z. B. wss://...).

HINWEIS!

Die OCPP Server-Adresse wird vom Ladestations-Betreiber zur Verfügung gestellt.

▶ Ladestations-Betreiber für die OCPP Server-Adresse kontaktieren.

Übersicht der Einstellungen OCPP in der Fronius Solar.wattpilot - App

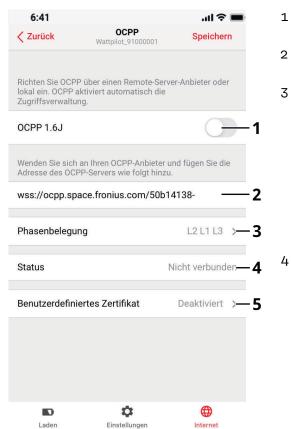

- Aktivieren oder Deaktivieren von OCPP.
- Eingabefeld für die OCPP Server-Adresse.
 - Einstellungen zur Phasenbelegung des Wattpilot im Vergleich zu einem Smart Meter. Notwendig, wenn das Lastmanagement über OCPP gemacht wird, damit das Lastmanagement weiß bei welchem Wattpilot die Rückregelung die Phase entlastet.

Folgende Status-Anzeigen gibt es:

- Nicht verbunden: OCPP ist nicht aktiviert und nicht mit einem Backend-Server verbunden.
- Gestartet: OCPP ist aktiviert, Verbindung zum Backend-Server nicht vorhanden.
- Verbunden: OCPP ist aktiviert, Verbindung zum Backend-Server vorhanden und nicht akzeptiert.
- Verbunden und akzeptiert: OCPP ist aktiviert, Verbindung zum Backend-Server vorhanden und akzeptiert.
- 5 Eingabemöglichkeit für ein benutzerdefiniertes Zertifikat.

Contents

General information	17
Important notes about this document	19
Purpose of this document	
Target group	19
OCPP (Open Charge Point Protocol)	21
General	23
Functional principle	23
Data security	23
OCPP	24
Configuration	24
Activating OCPP	25

General information

Important notes about this document

Purpose of this document

This document describes which functions of the Open Charge Point Protocol (OCPP) are supported by the Fronius Wattpilot.

Target group

The information in this document is intended for charging station operators who wish to integrate the Fronius Wattpilot into a charging infrastructure.

This User Information is intended exclusively for specialist personnel who are qualified to work with the OCPP.

OCPP (Open Charge Point Protocol)

General

Functional principle

OCPP (Open Charge Point Protocol) is an open communication standard published by the OCA (Open Charge Alliance). OCPP controls the communication between a charging point (e.g. Fronius Wattpilot) and a backend system. Backend systems can be used to monitor and, if necessary, control the charging stations in real time.

The Fronius Wattpilot supports OCPP 1.6J. This enables the integration of a Fronius Wattpilot into e.g. a charging management system and ensures the interoperability of the Wattpilot with a backend system.

Data security

Connections to an external server of the Fronius Wattpilot via OCPP (Open Charge Point Protocol) are always encrypted (WebSocket Secure, wss://).

The connections to an internal server of the Fronius Wattpilot via OCPP can be encrypted (WebSocket Secure, wss://) or unencrypted (WebSocket, ws://). If an unencrypted connection is established via an internal server, the operator is responsible for the possible disclosure of personal data. This function is intended for end users who want to set up a server for local load management on their own.

If a server is set up independently for local load management, self-signed certificates can be used for OCPP by qualified technical personnel. The operator is responsible for the use of self-signed certificates.

OCPP

Configuration

The following OCPP parameters are supported by the Fronius Wattpilot. More detailed information on the parameters can be found in the OCPP documentation in the specified chapter of the protocol specification. The OCPP documentation can be found on the Open Charge Alliance website, see https://www.openchargealliance.org/

ChargePoint messages (OCPP 1.6J)	Protocol specification chapter
Authorize	4.1
BootNotification	4.2
FirmwareStatus	4.5
Heartbeat	4.6
MeterValues	4.7
StartTransaction	4.8
StatusNotification	4.9
StopTransaction	4.10

CentralSystem messages (OCPP 1.6J)	Protocol specification chapter
ChangeConfiguration	5.3 - limited
ClearChargingProfile	5.5
GetConfiguration	5.8 - limited
RemoteStartTransaction	5.11
RemoteStopTransaction	5.12
Reset	5.14
SetChargingProfile	5.16
TriggerMessage	5.17
UnlockConnector	5.18
UpdateFirmware	5.19

ChargePoint configuration parameters (OCPP 1.6J)	Protocol specification chapter
HeartbeatInterval	9.1.10
LightIntensity	9.1.11
MeterValuesSampledDataMaxLength	9.1.18
MeterValueSampleInterval	9.1.19
NumberOfConnectors	9.1.21
ChargeProfileMaxStackLevel	9.4.1
ChargingScheduleAllowedCharging- RateUnit	9.4.2
ConnectorSwitch3to1PhaseSupported	9.4.4

Activating OCPP

Perform the following steps.


- Start the Fronius Solar.wattpilot app.
- 2 Click on "Internet".
- Click on "OCPP".
- 4 Enable "OCPP 1.6J".
- 5 Enter the OCPP server address (e.g. wss://...).

NOTE!

The OCPP server address is provided by the charging station operator.

▶ Contact the charging station operator for the OCPP server address.

Overview of OCPP settings in the Fronius Solar.wattpilot app

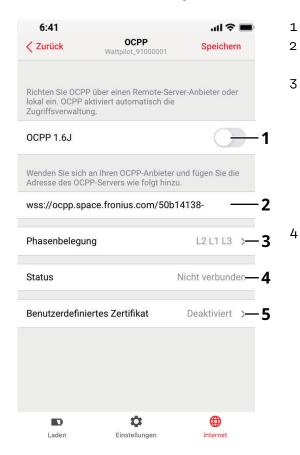

- Enable or disable OCPP.
 - Input field for the OCPP server address.
 - Settings for phase assignment of the Wattpilot compared to a smart meter. Necessary if the load management is performed via OCPP, so that the load management knows at which Wattpilot the reduction relieves the phase.

The following status indicators are available:

- Not connected: OCPP is not enabled and not connected to a backend server.
- Started: OCPP is enabled, connection to the backend server is not present.
- Connected: OCPP is enabled, connection to the backend server is present and not accepted.
- Connected and accepted:
 OCPP is enabled, connection to the backend server is present and accepted.
- 5 Input option for a user-defined certificate.



Fronius International GmbH

Froniusstraße 1 4643 Pettenbach Austria contact@fronius.com www.fronius.com

Under <u>www.fronius.com/contact</u> you will find the addresses of all Fronius Sales & Service Partners and locations.