
left side panel: 3/4 in softwood plywood, full size on 2 page(s)


Print at 100% (no fit to page) and check the 3 in ruler on each page. Trim each page's right and bottom margins, lay it over the next page so its grey strip covers the matching strip and the grid lines meet, and tape. Then tape the pattern to the board, or prick through the line every inch with an awl and join the dots. A hole: drill a 3/8 in hole inside its line to start the jigsaw.

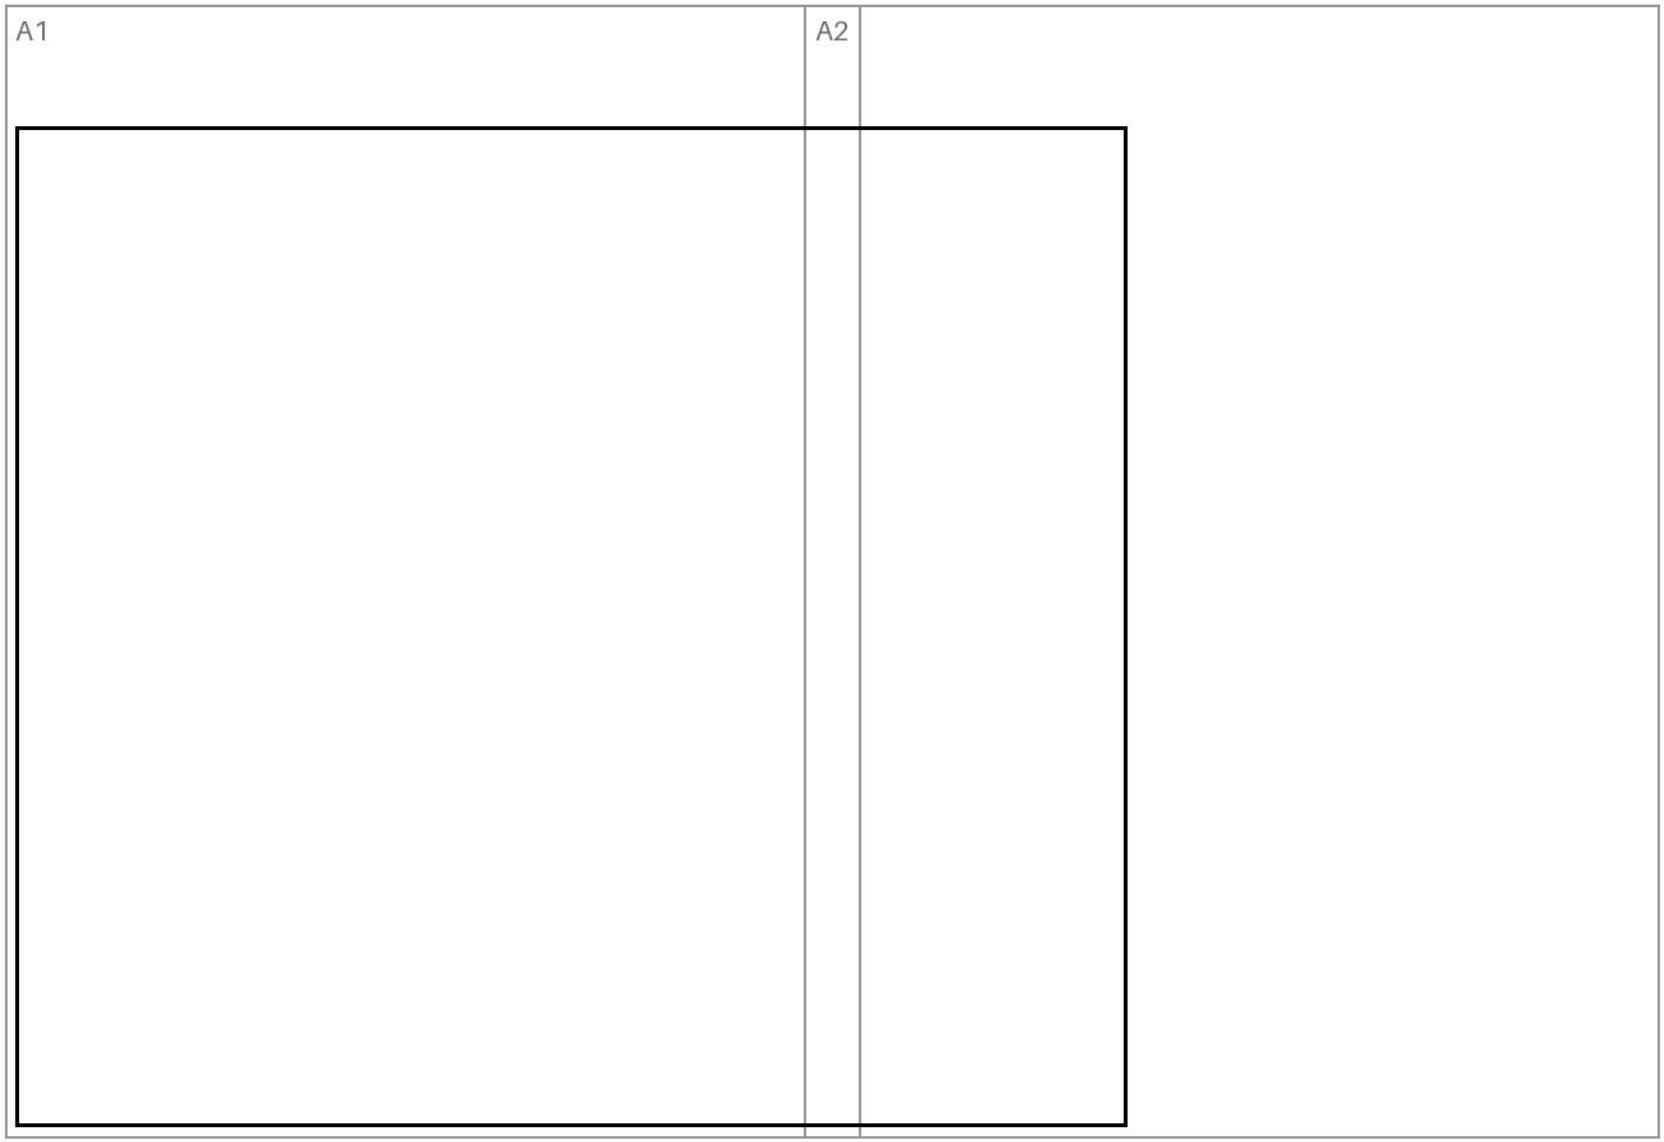

left side panel, page A1 (1 of 2) · overlaps A2 on the right


3 in: measure it. If it isn't, print at 100% (no fit to page).


3 in: measure it. If it isn't, print at 100% (no fit to page).

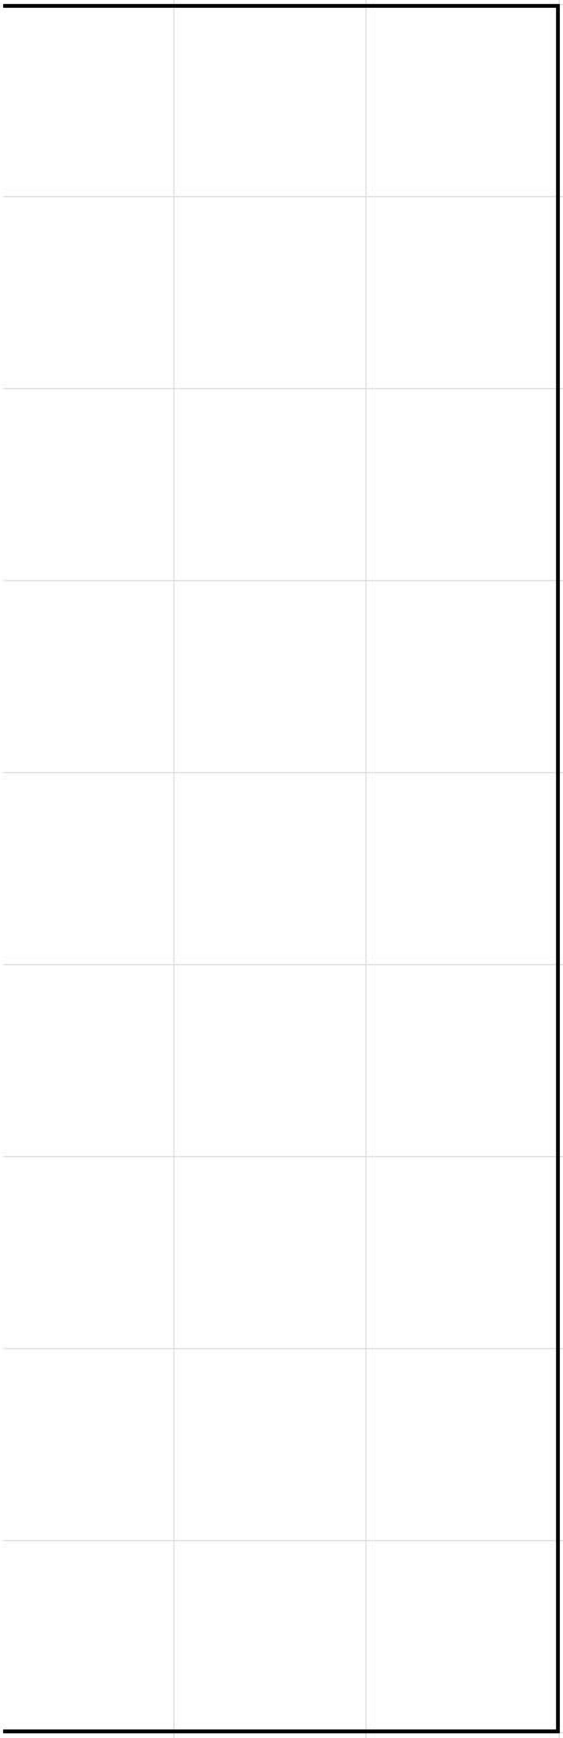


right side panel: 3/4 in softwood plywood, full size on 2 page(s)

Print at 100% (no fit to page) and check the 3 in ruler on each page. Trim each page's right and bottom margins, lay it over the next page so its grey strip covers the matching strip and the grid lines meet, and tape. Then tape the pattern to the board, or prick through the line every inch with an awl and join the dots. A hole: drill a 3/8 in hole inside its line to start the jigsaw.

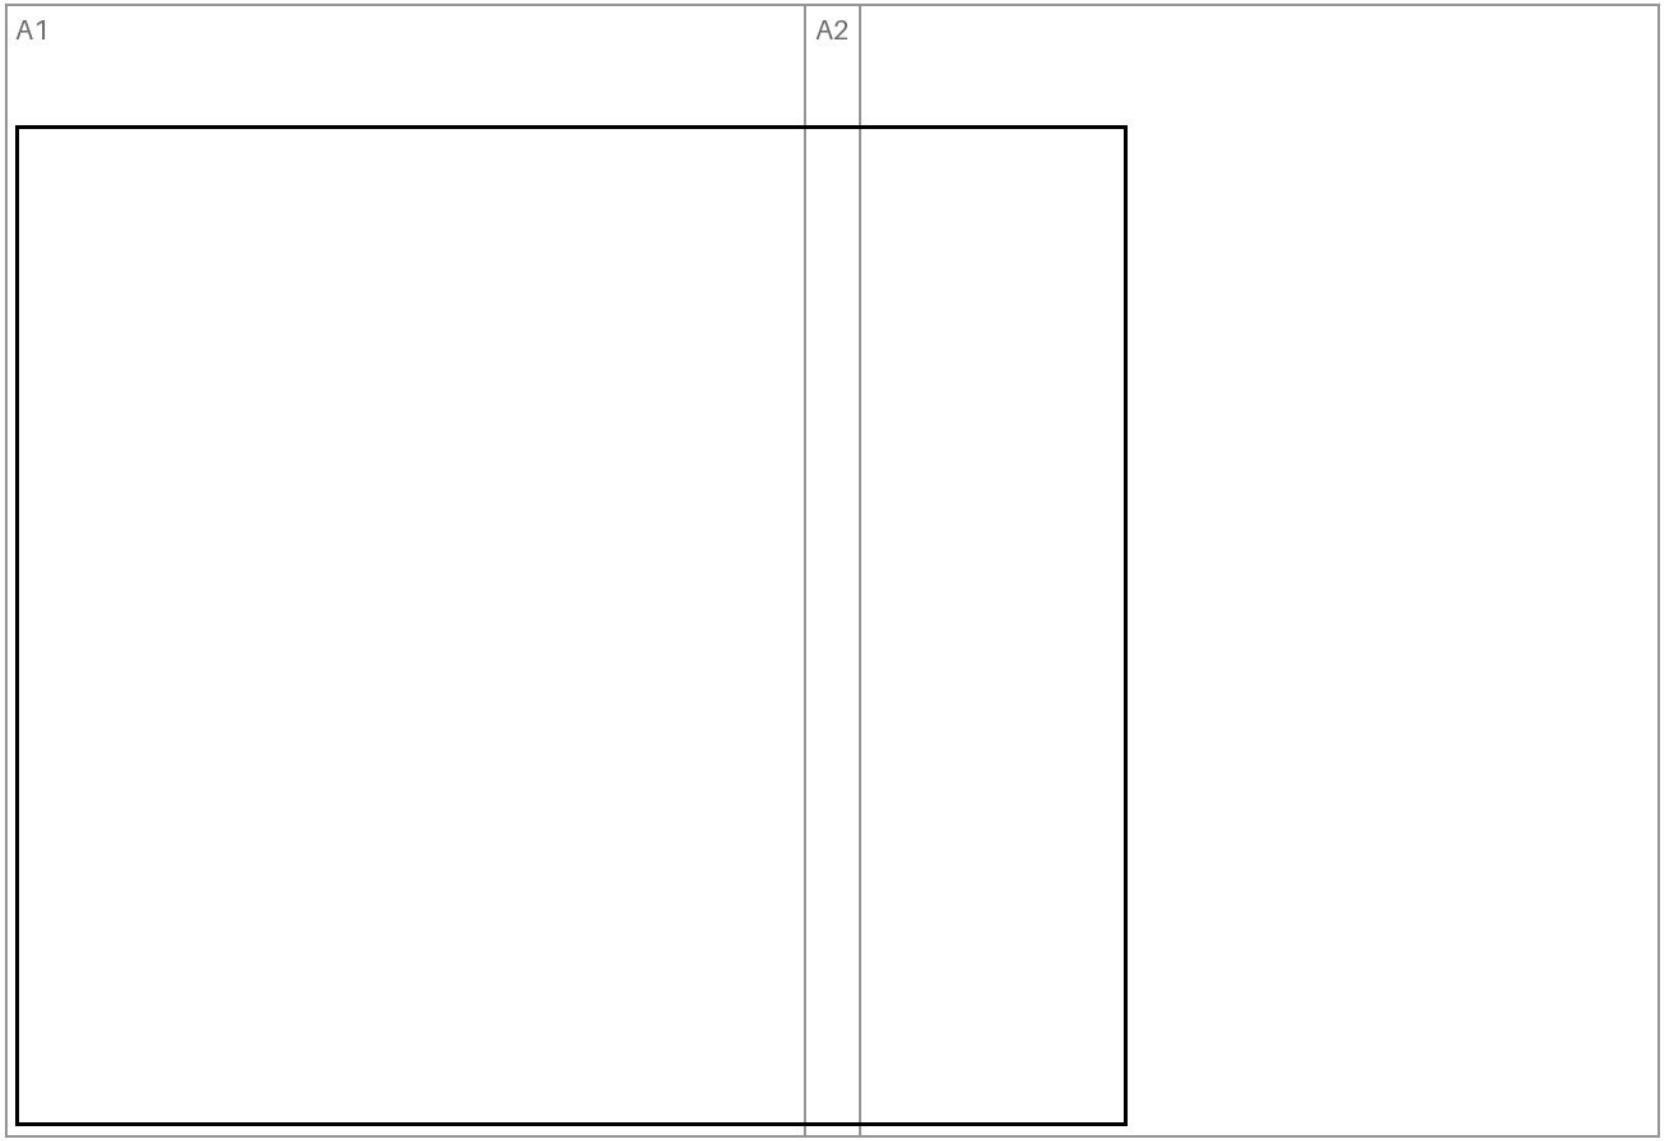



3 in: measure it. If it isn't, print at 100% (no fit to page).

3 in: measure it. If it isn't, print at 100% (no fit to page).

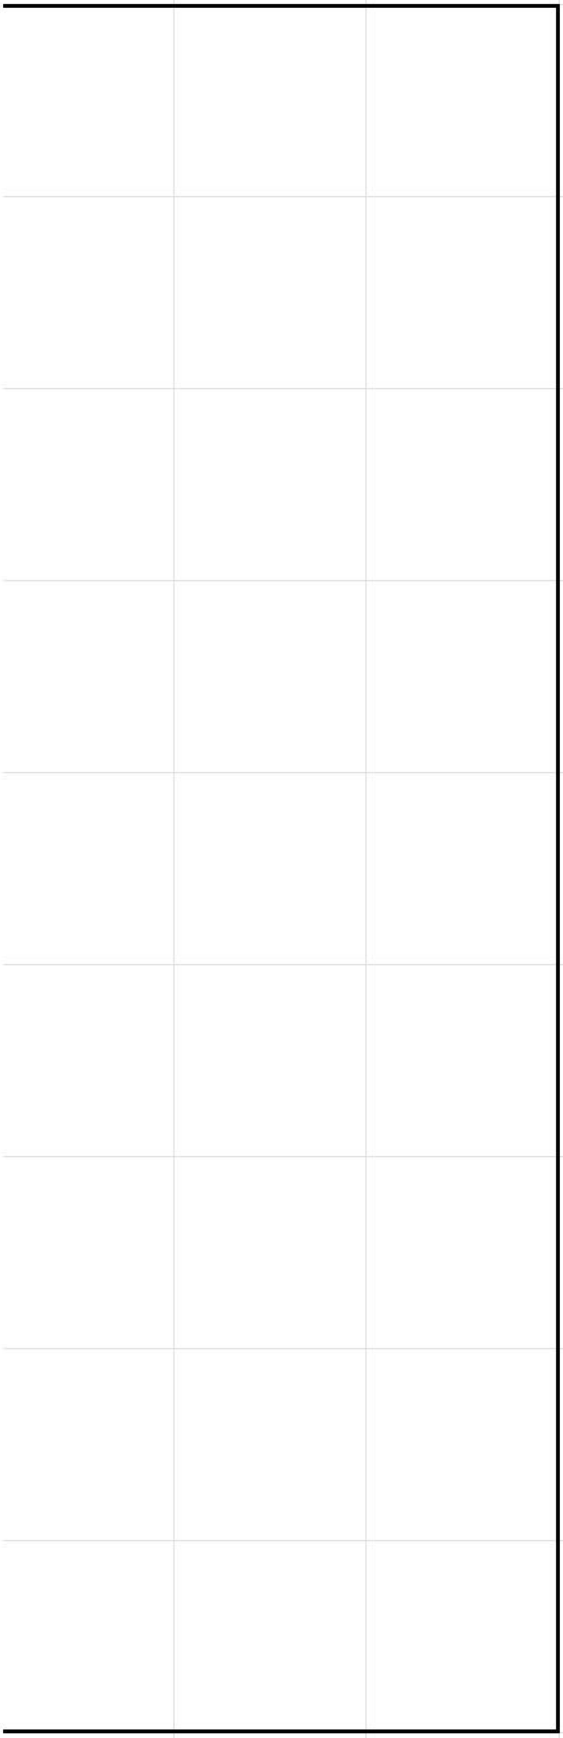

front panel: 3/4 in softwood plywood, full size on 2 page(s)

Print at 100% (no fit to page) and check the 3 in ruler on each page. Trim each page's right and bottom margins, lay it over the next page so its grey strip covers the matching strip and the grid lines meet, and tape. Then tape the pattern to the board, or prick through the line every inch with an awl and join the dots. A hole: drill a 3/8 in hole inside its line to start the jigsaw.

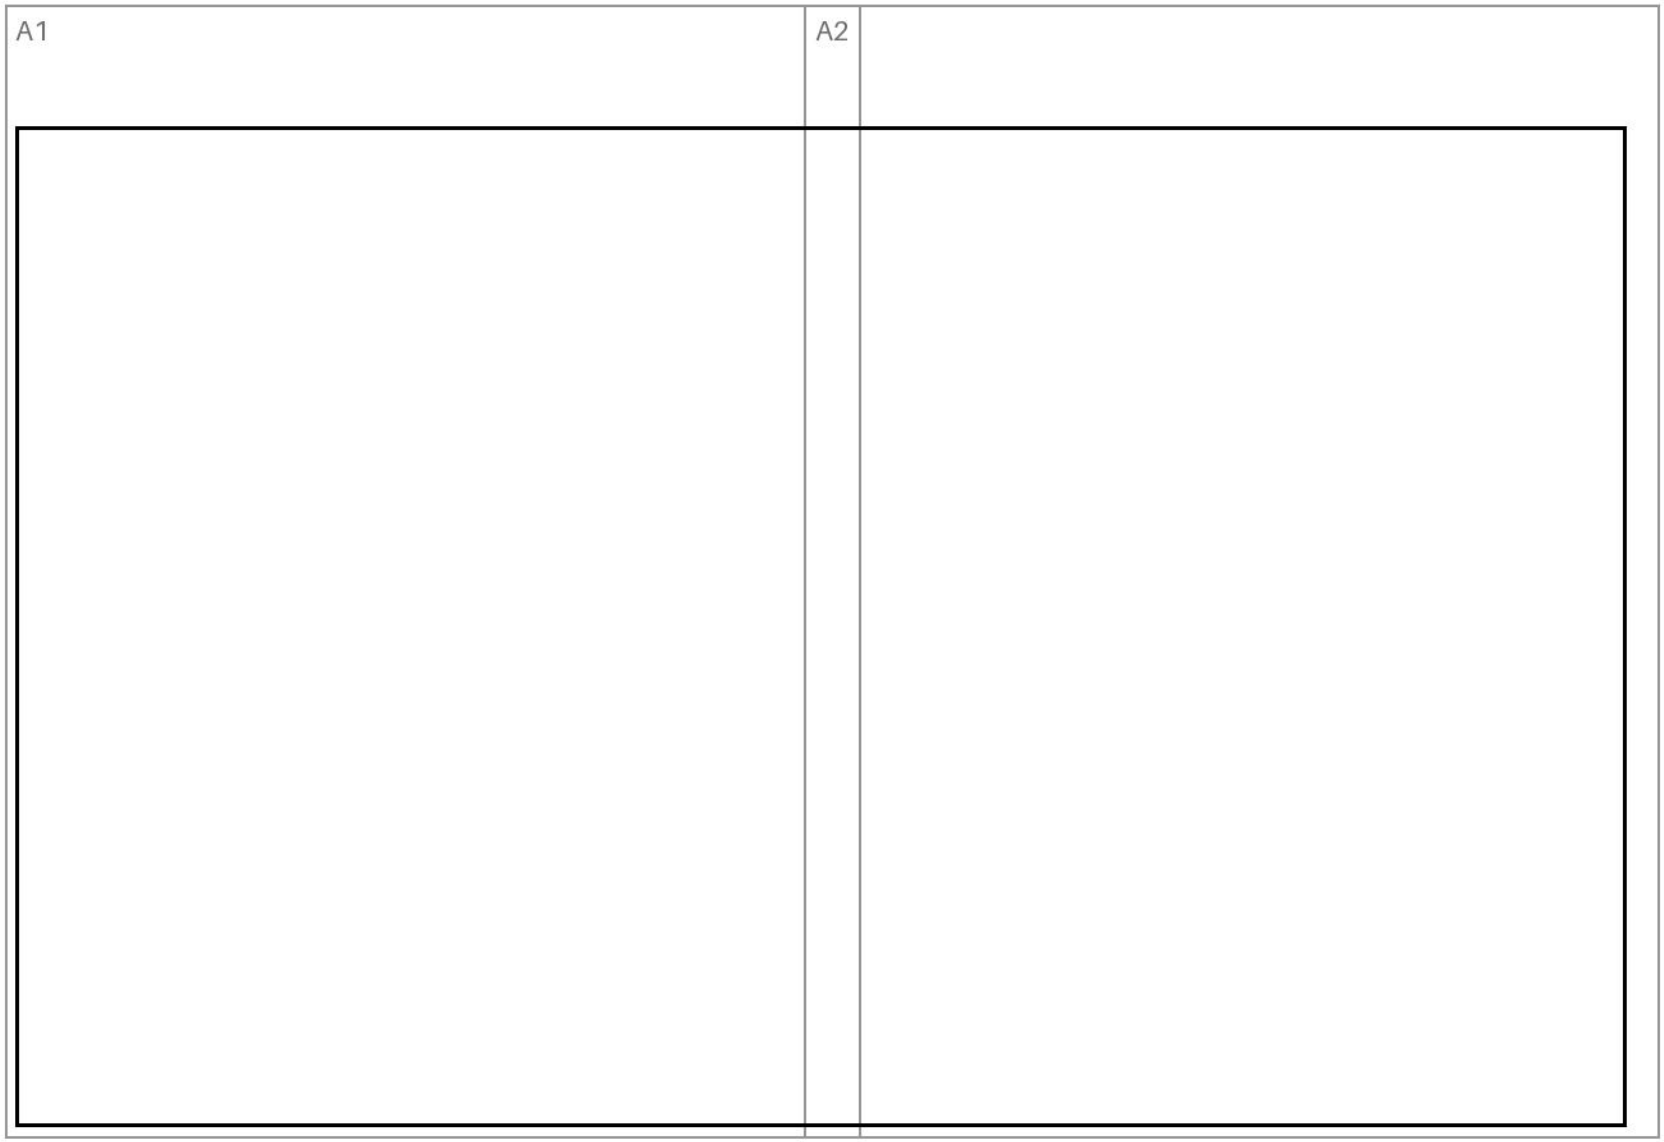


front panel, page A1 (1 of 2) · overlaps A2 on the right




3 in: measure it. If it isn't, print at 100% (no fit to page).

back panel: 3/4 in softwood plywood, full size on 2 page(s)

Print at 100% (no fit to page) and check the 3 in ruler on each page. Trim each page's right and bottom margins, lay it over the next page so its grey strip covers the matching strip and the grid lines meet, and tape. Then tape the pattern to the board, or prick through the line every inch with an awl and join the dots. A hole: drill a 3/8 in hole inside its line to start the jigsaw.

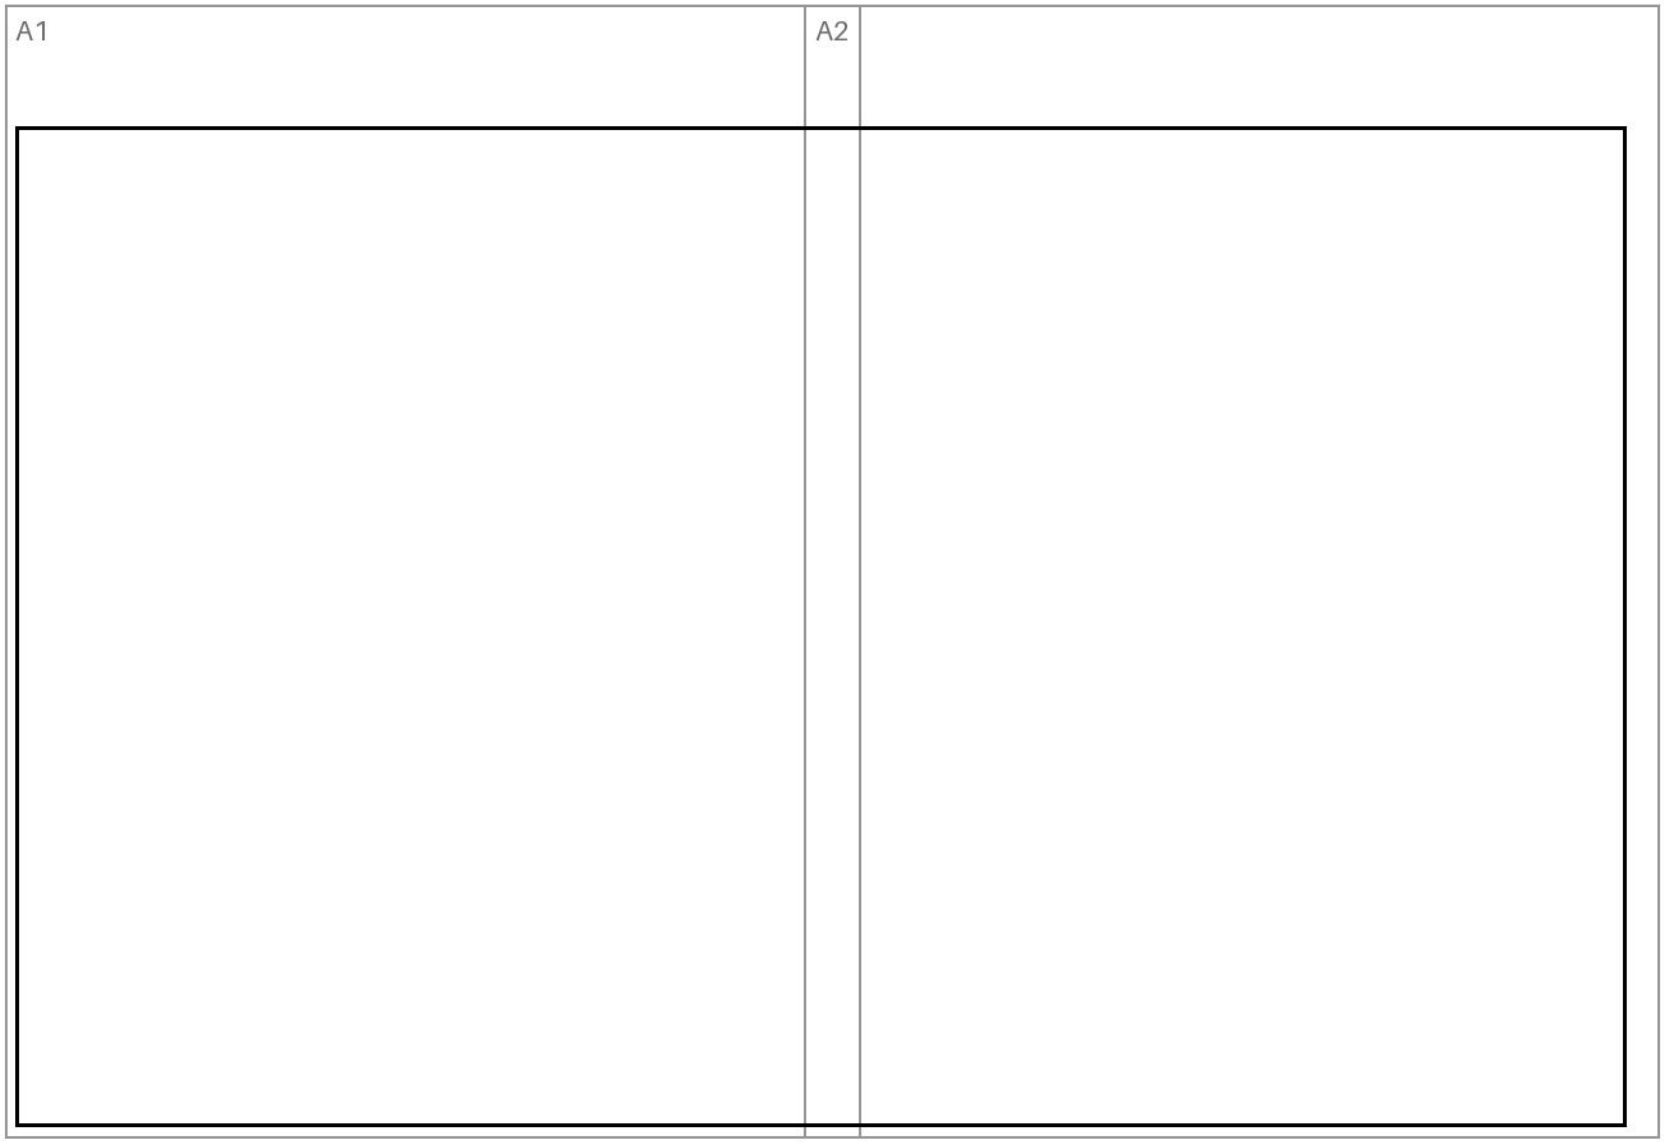


back panel, page A1 (1 of 2) · overlaps A2 on the right

3 in: measure it. If it isn't, print at 100% (no fit to page).


3 in: measure it. If it isn't, print at 100% (no fit to page).


top tread: 3/4 in softwood plywood, full size on 2 page(s)

Print at 100% (no fit to page) and check the 3 in ruler on each page. Trim each page's right and bottom margins, lay it over the next page so its grey strip covers the matching strip and the grid lines meet, and tape. Then tape the pattern to the board, or prick through the line every inch with an awl and join the dots. A hole: drill a 3/8 in hole inside its line to start the jigsaw.

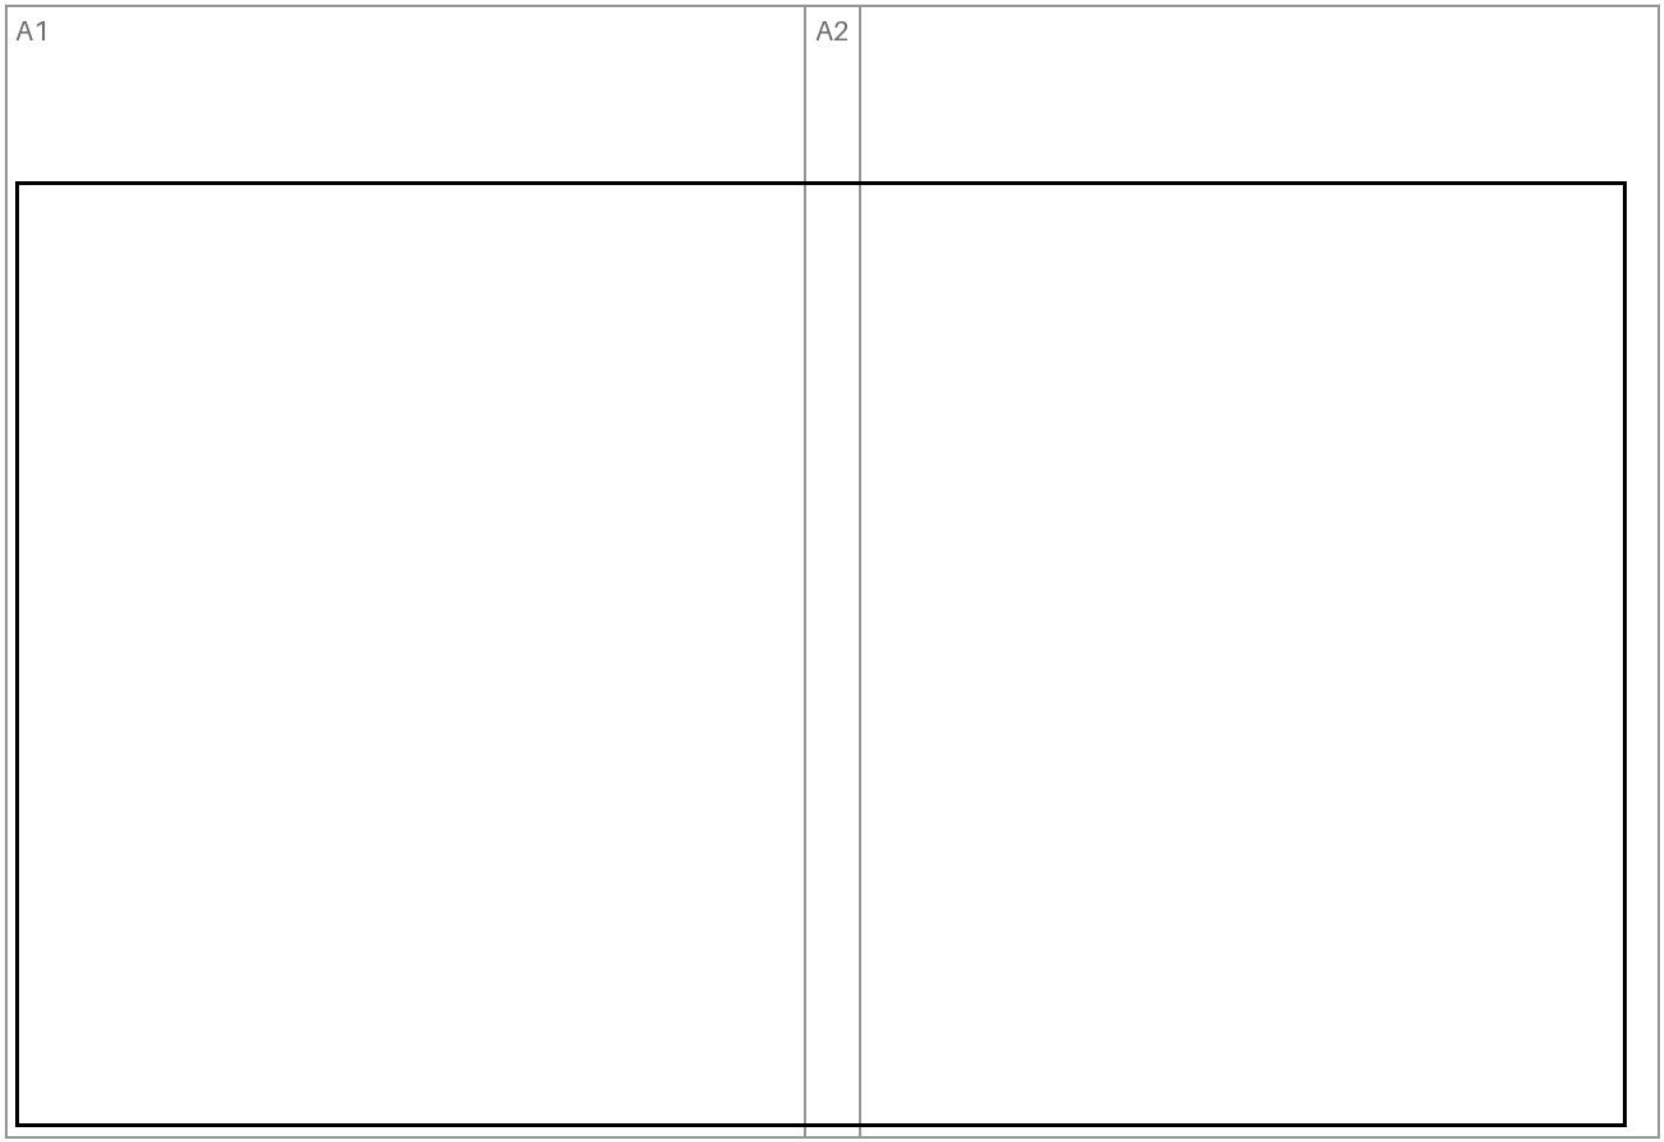

top tread, page A1 (1 of 2) · overlaps A2 on the right

3 in: measure it. If it isn't, print at 100% (no fit to page).

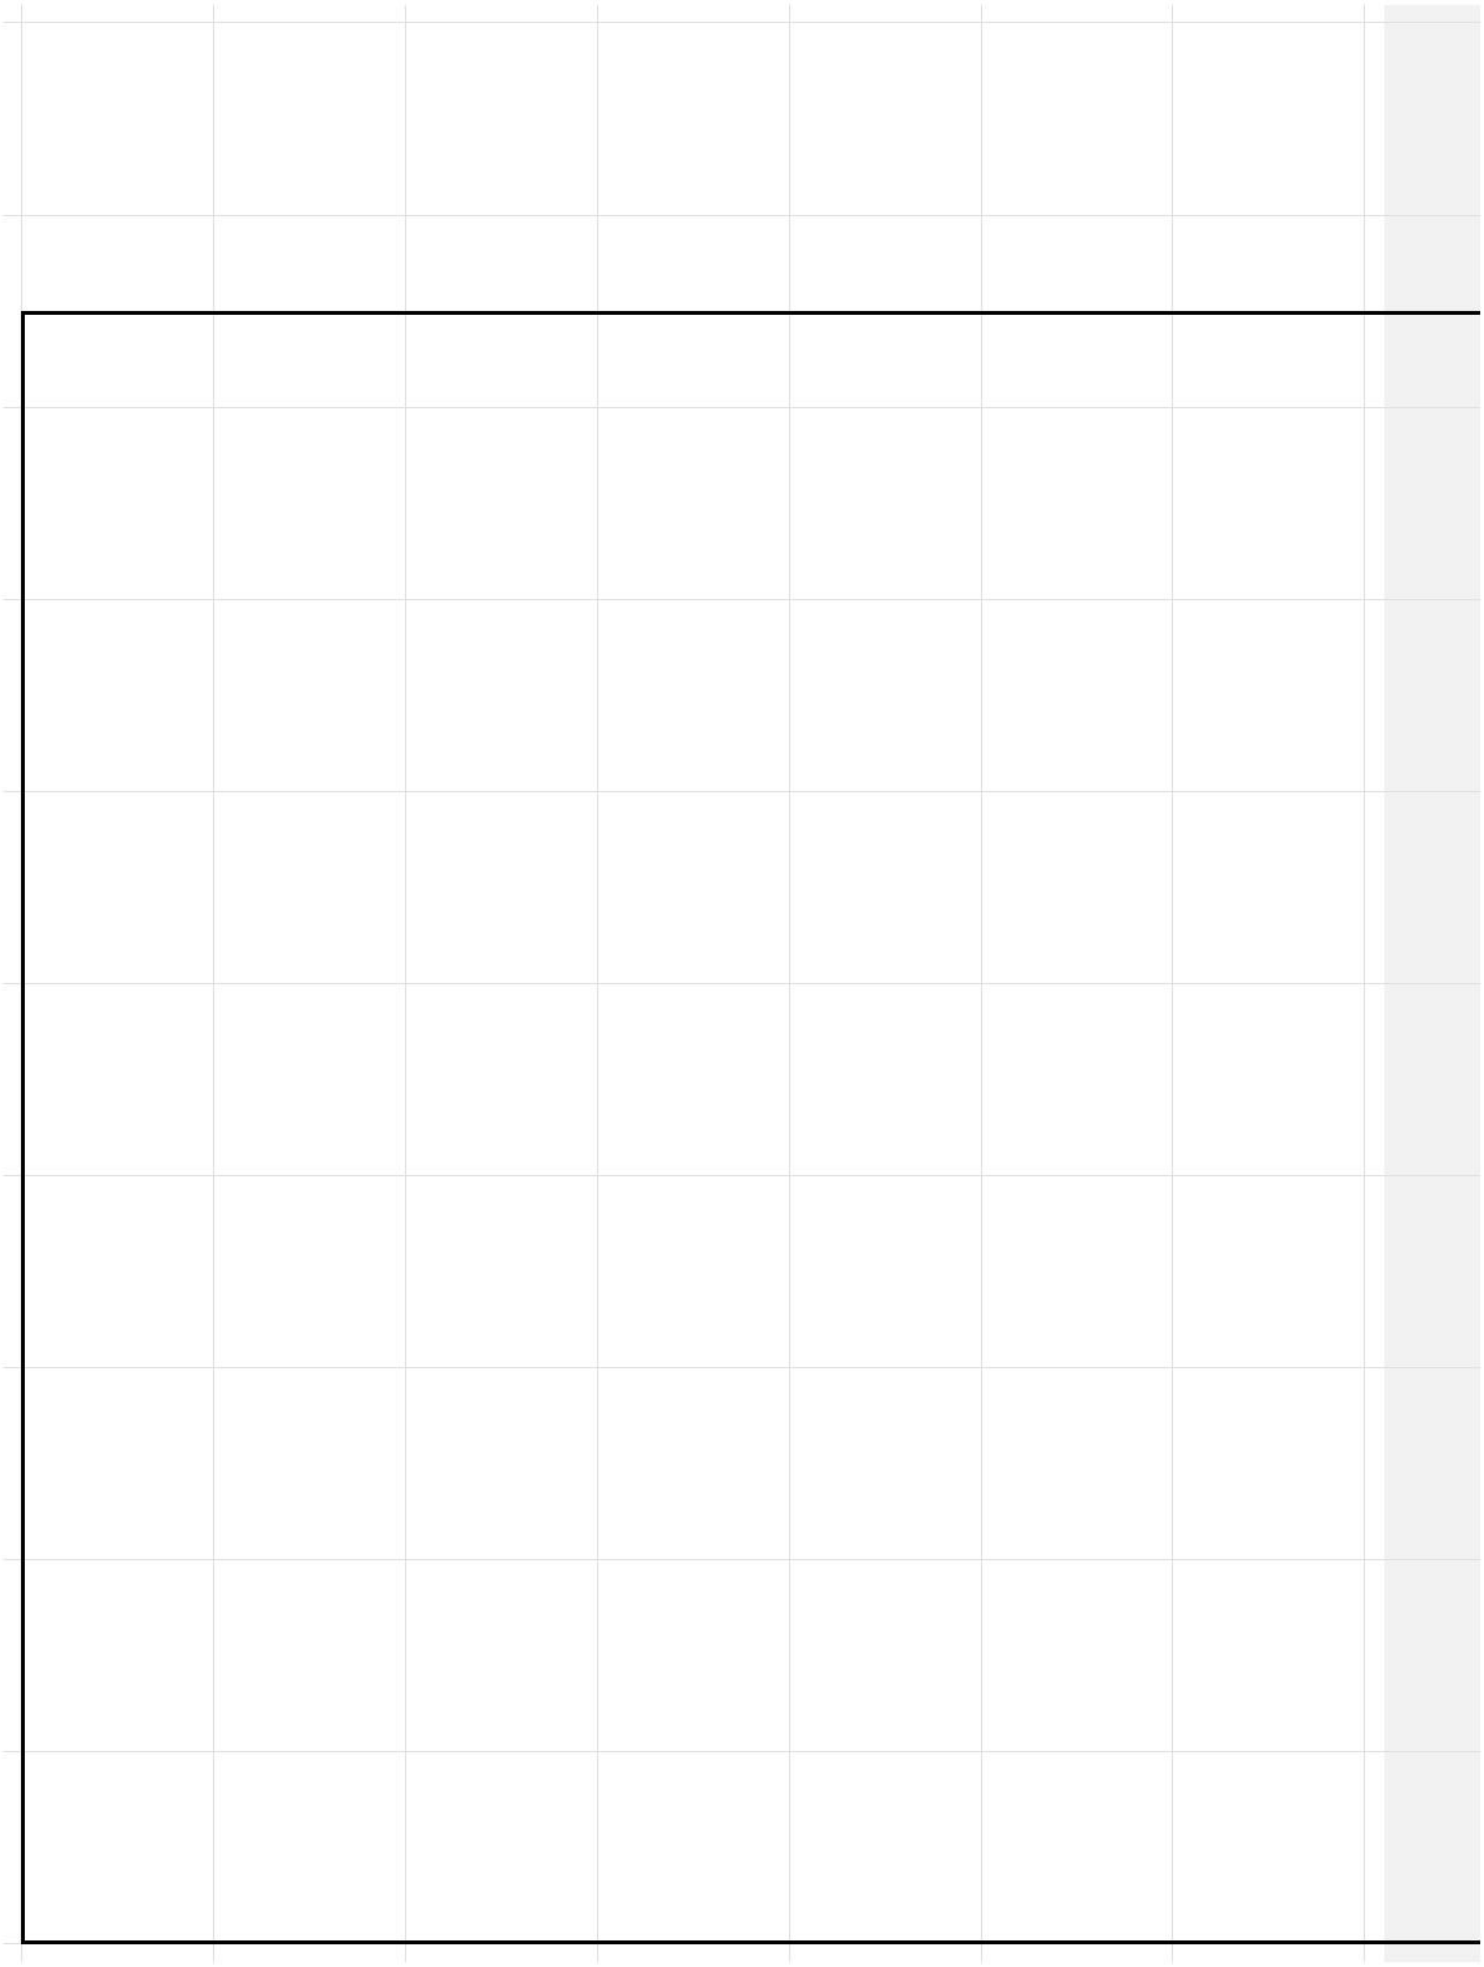

3 in: measure it. If it isn't, print at 100% (no fit to page).

