


120/230V 3WIRE
SOURCE

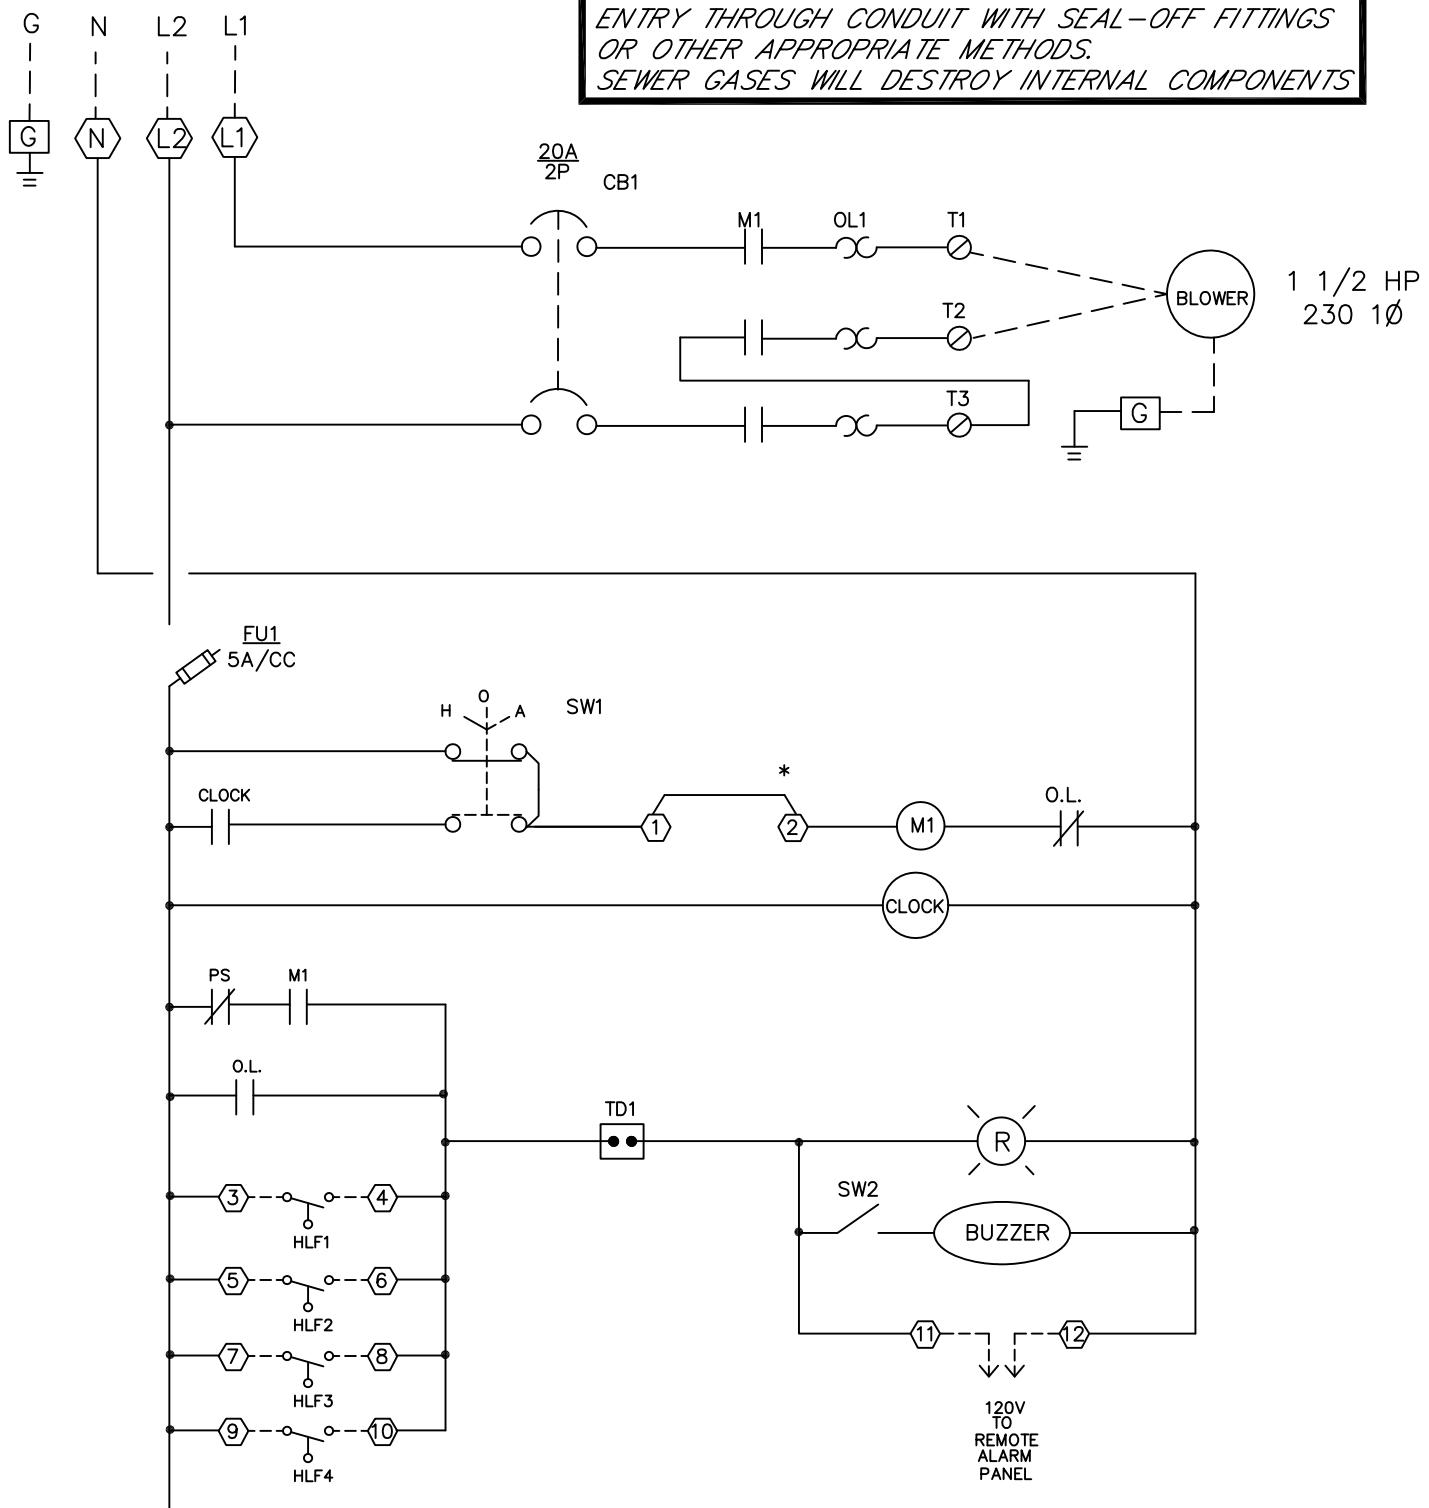

CLOCK - PINS OUT = TIME THAT COMPRESSOR WILL BE ON
PINS IN = TIME THAT COMPRESSOR WILL BE OFF

ON CLOCK MAKE SURE THAT THE MANUAL-AUTO-OFF LEAVER
IS IN THE CENTER POSITION (AUTO).

— DENOTES PANEL TERMINAL

— DENOTES FIELD WIRING