


B E I N S E N

Alaska

Electric heat press with sliding tray

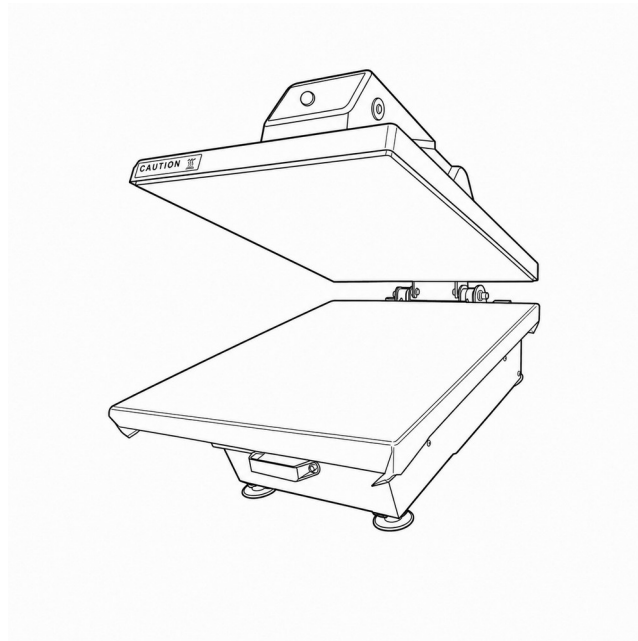

User Manual and Safety Instructions

Empowering Your Personalization Needs.

Index

01	Introduction and equipment description	3
02	Technical specifications	4
03	Critical safety	5
04	Operation guide	7
05	Maintenance and troubleshooting	9
06	Legal notice and trademarks	11

Page numbers are indicative and may vary slightly depending on the specific length of the sections for this model.

01

Introduction and Equipment Description

The Beinsen Alaska is a compact automatic electric heat press that combines the best of a pneumatic press without needing a compressor. Forget about levers, forget about turning knobs: with its lower sliding tray and side buttons, Alaska offers versatility in the most comfortable way. Available in 38 × 38 cm and 40 × 50 cm formats.

Applications

Textile sublimation, HTV vinyl, DTF and transfer on T-shirts, sweatshirts, cushions, tote bags, blankets, sportswear and flat substrates. Designed for entrepreneurs and professionals who want consistent results with intuitive handling and no pneumatic infrastructure.

Main components

- Upper heating plate with advanced high-density heating element
- Lower sliding and adjustable tray
- Automatic opening and closing system via side buttons
- touch screen with 3 programmable memory slots
- Electric system with digital pressure adjustment
- Compact Beinsen orange frame



Fig. 1 · Main components of the Beinsen Alaska.

02

Technical Specifications

Specification	Alaska 38×38	Alaska 40×50
Press type	Sandwich	Sandwich
Operating mode	Automatic with electric power	Automatic with electric power
Pressure	Automatic	Automatic
Display model	touch screen	touch screen
Touch screen	Yes	Yes
Memory slots	3	3
Timer range	0 – 999 sec.	0 – 999 sec.
Number of plates	1	1
Plate size	38 × 38 cm	40 × 50 cm
Interchangeable plates	No	No
Power	1.6 kW	1.8 kW
Max. temperature	230 °C	230 °C
Voltage	120 V / 220 V	120 V / 220 V
Net weight	35 kg	42 kg
Gross weight	46 kg	46 kg
Packaging size	75 × 52 × 50 cm	75 × 52 × 50 cm
Stand	Not included	Not included
Positioning laser	No	No

Technical specifications may vary slightly depending on the manufacturing batch configuration. Refer to the equipment identification label for the exact data of your unit.

03

Critical Safety

Read all warnings carefully before operating the equipment. Failure to follow these instructions may result in serious injury, property damage or void the warranty.

Risk of burns

The heating plate reaches 230 °C. Always use thermal gloves when operating the equipment and keep the work area free of children, pets and flammable materials.

Risk of entrapment

Opening and closing are automatic via side buttons. Always keep your hands out of the upper plate's path during the cycle. The lower sliding tray makes it easier to place the garment away from the hot area: use it whenever possible.

Side buttons

The dual-button system requires both buttons to be pressed simultaneously to start closing. This redundancy is mandatory and must never be bypassed, modified or disabled under any circumstances.

Electrical risk

Connect the equipment only to a grounded socket. Verify the configured voltage (120 V or 220 V) before connecting. Do not handle the equipment with wet hands and disconnect it before any cleaning operation.

Sliding tray

Check that the tray is correctly aligned with its rails before starting the closing cycle. Lubricate the rails periodically to ensure smooth sliding.

04

Operation Guide

The touch screen lets you configure temperature, time and pressure intuitively, with 3 programmable memory slots for different jobs.

Power-on and configuration

- 01 Connect the equipment to the mains and turn on the main switch.
- 02 The display will light up showing the current temperature.
- 03 Touch the screen to enter the configuration menu.
- 04 Adjust the target temperature with the (+) and (–) icons.
- 05 Select the press time and adjust it the same way.
- 06 Adjust the pressure level from the screen.
- 07 Save the configuration to one of the 3 memory slots if desired.
- 08 Wait until the equipment reaches the target temperature before starting.

Pressing process with sliding tray

- 01 Pull out the lower sliding tray towards you.
- 02 Place the garment or substrate on the tray, well stretched.
- 03 Apply the transfer paper with the printed side facing the fabric.
- 04 Cover with a Teflon sheet to protect the garment and the heating element.
- 05 Push the tray back to the final stop position.
- 06 Activate the cycle by pressing both side buttons simultaneously.
- 07 The upper plate will lower automatically and the timer will start.
- 08 When the alarm sounds, the plate rises automatically.
- 09 Pull out the tray and peel off the transfer paper as instructed by the consumable manufacturer (hot peel or cold peel).

OPERATION GUIDE

Setting the parameters and sequences

When switched on, the press takes a few seconds to start and loads the first program with its parameters, ready to press. Below the screen there are three buttons: -, **S** and +. Each program stores a temperature (°C) and a two-stage sequence (s), and each counter has its own «S».

How to change the values

- 01** Press **S**. The value that **flashes** is the one you can change with - and +.
- 02** Each tap of **S** moves to the next parameter (temperature, first counter and second counter). You don't need to hold it down.
- 03** Adjust each value with - / + while it flashes.
- 04** Press **S** again until the °C and s icons stop flashing: the values are saved in the selected program (P0 / 1 / 2 / 3).
- 05** For programs 2 and 3, press the button to enter their settings and repeat the process.

For the touchscreen to work, no value can be flashing: they must all be fixed.

The two sequence times

The two counters are used according to the technique you are pressing (DTG, DTF, screen printing, sublimation, printable textile vinyl, cut vinyl...). For the same press in two equal stages, set the same value in both counters. For a single count, set the first counter to zero: the press will skip the first sequence and run a single countdown.

Important — the touchscreen does not respond

After a press, when the first counter reaches zero and you open the press, the first «S» disappears and that counter stays at 000. In this state the touchscreen does not respond: the press is waiting for you to complete the second count. Once you do the next press and both «S» reappear, you can change the parameters again.

- **How to cancel a count midway:** press the Reset or emergency button during the press; both «S» reappear and you can change values again.
- On electric presses, even if the touchscreen does not respond in this state, the pressure can still be adjusted with - / +.

Tip to avoid it: if you don't need two stages, set the first counter to zero. The press will run a single countdown and you'll avoid the touchscreen locking up.

05

Maintenance and Troubleshooting

Preventive maintenance

- Before each shift, check that the plate and tray are clean and free of residue.
- Clean the plate while warm with a thermal glove using a microfibre cloth. Never use water or abrasive products.
- Periodically check the operation of the side buttons.
- Clean the touch screen with a soft antistatic cloth.
- Lubricate the sliding tray rails with high-temperature grease when you notice resistance to sliding.
- Check the temperature reading with an independent contact thermometer if you notice inconsistency in the results.
- Request a full equipment inspection by an Official Beinsen Technical Service at least once a year.

Troubleshooting

Problem	Probable cause	Solution
Touch screen does not respond	Software freeze or accidental impact	Power off the machine for 30 seconds and restart. If it persists, contact Beinsen Technical Service.
Side buttons do not respond	Safety microswitch failure	Do not bypass the system. Contact Beinsen Technical Service.
The plate does not lower	Lack of simultaneous activation of buttons	Press both side buttons at the same time firmly.
The tray gets stuck	Dry rails or accumulated debris	Clean with a dry cloth and lubricate with high-temperature grease.
Pressure loss during the cycle	Miscalibrated regulator	Readjust the pressure level from the screen. If it persists, contact Technical Service.
Slower heating than usual	Insufficient voltage at the mains	Verify the mains voltage and the equipment's configuration (120 V or 220 V).
Marks or stains on the garment	Dirty plate, excessive pressure or no Teflon	Clean the plate, adjust the pressure and use intermediate Teflon.

To report any issue, request a repair or purchase genuine spare parts, contact exclusively an Official Technical Service authorized by Beinsen.

06

Legal Notice and Trademarks

Copyright

Copyright © 2025 Beinsen. This guide is protected by international copyright laws. No part of this guide may be reproduced, distributed, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or any information storage and retrieval system, without the prior written consent of Beinsen.

Trademarks

Beinsen and the Beinsen logo are registered trademarks. All other trademarks and copyrights mentioned in this document are the property of their respective owners.

Warranty and technical service

To report any issue, request a repair or purchase genuine spare parts, contact exclusively an Official Technical Service authorized by Beinsen. Find the nearest technical service point through the official website.

Contact

Beinsen

Avenida Alto de las Atalayas, 18 · 30110 Cabezo de Torres (Murcia), Spain
+34 968 902 300 · info@beinsen.com · beinsen.com