

USER GUIDE

Contents

Getting Started

- 3 Device Design and Functions
- 4 Safety warnings
- 5 Unique Features of Your Heat Press

Using Your Heat Press

- 6 Meet the touchscreen
- 7 Powering On and Setting Up the Heat Press
- 9 Heat Transfer Process
- 10 Interchangeable Lower Platen
- 11 Manual/Auto Mode Button

Maintaining Your Heat Press

- 12 Maintenance operations


Troubleshooting

- 14 How to Replace the Heating Element
- 15 Most common problems

Getting Started

Device Design and Functions

► Miranda:

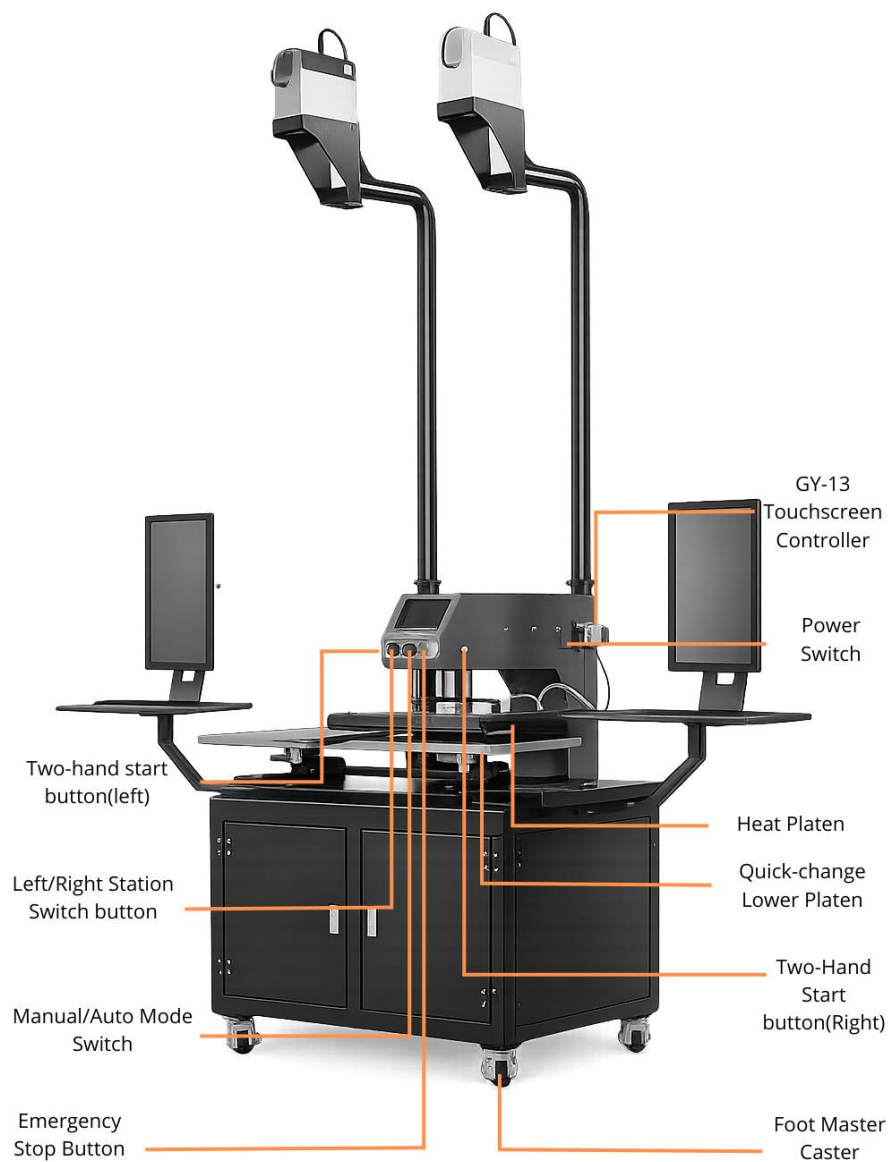



- Please read these instructions carefully before using your heat press for the first time
- Use the heat press only for its intended purpose: pressing materials using heat.
- Avoid electric shocks by avoiding contact with water or liquids.
- Disconnect securely by holding the plug, not the cord, when disconnecting it from the electrical current.
- Keep cords away from hot surfaces and allow the machine to cool completely before storing.
- Do not use the machine if the cord is damaged or if it has been dropped or damaged. If repairs are necessary, take them to a qualified service technician to avoid risks of fire, electric shock, or injury.
- Always turn off the power before cleaning, repairing, or servicing the machine.
- Supervision is required for anyone using the heat press, especially children or those with reduced physical, sensory, or mental capabilities. Never leave the machine unattended while it is connected.
- Avoid burns by not touching hot metal parts or heated plate during use. Wear heat-resistant gloves.
- Do not overload electrical circuits. Avoid using other high-voltage equipment on the same circuit as the heat press.
- If an extension cord is needed, make sure it is rated at least 20 amps to prevent overheating. Position the cord so that it does not trip or pull on it.
- Keep your hands away from the top plate during locking to avoid injury caused by machine pressure.
- Place the heat press on a sturdy and suitable support to ensure stability during operation.
- Keep the work area clean and free of obstructions to avoid accidents.

How to Change the Heating Platen

1.

Remove the plug attachment mechanism from the heating platen. Unplug the plug from the heating platen.

2.


Loosen the four screws that hold the heating platen in place.

3.

Pull the heating platen out to disassemble it. Align the new heating platen with the corresponding holes and tighten the four screws tightly.


4.

Plug in the heating platen power cord and tighten the heating platen plug attachment mechanism.

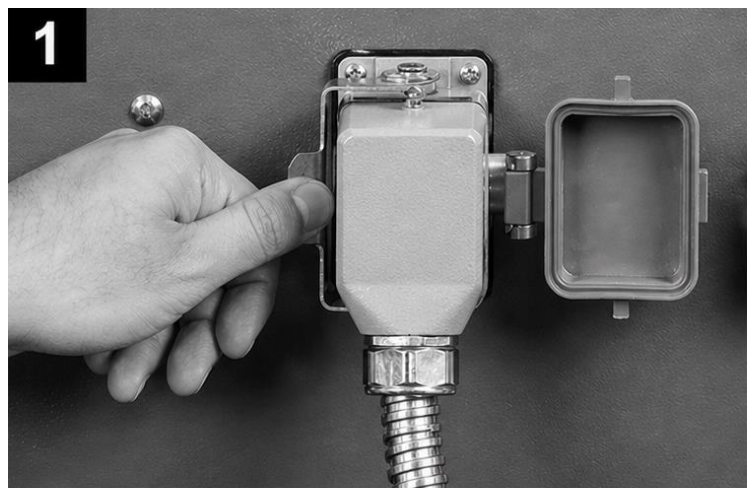

Using Your Heat Press

Meet the touchscreen

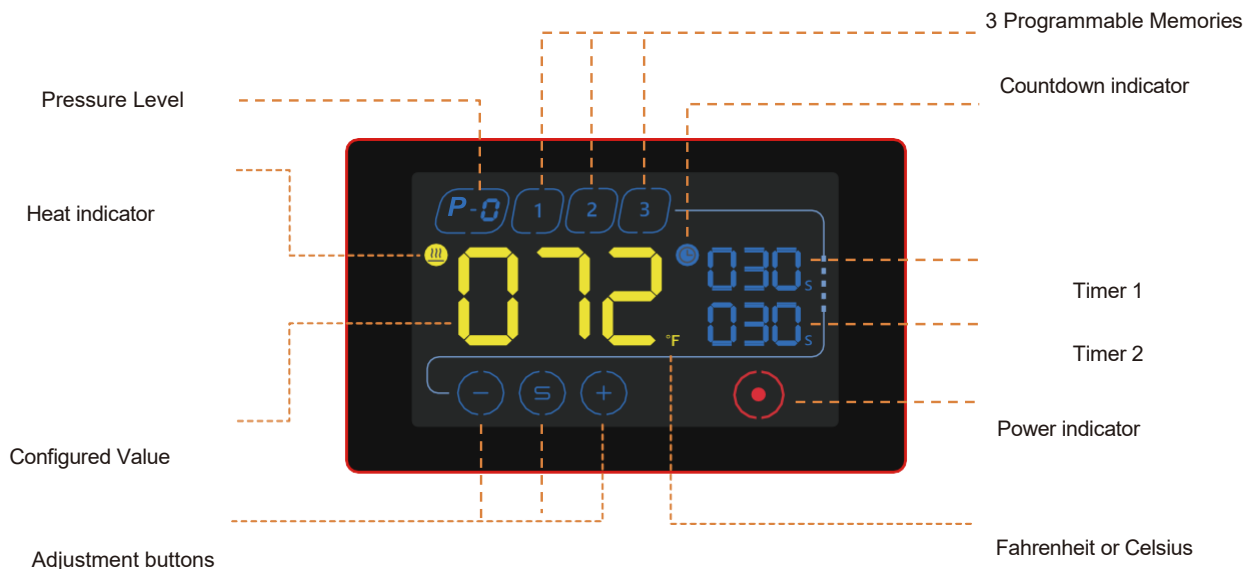


Current temperature

Adjustable between 0 and 230 degrees Celsius



Memories

3 programmable memories



Ignition

Power indicator




Pressure

Current pressure Between 0 and 8



Adjustment buttons

Use the (-) (+) to adjust the desired temperature and time. The (S) button changes the purpose of the adjustment.

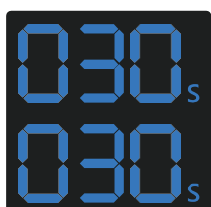

Dual timer


This heat press allows you to set 2 independent timers that work sequentially. When the upper timer countdown ends, the heating platen rises, and the lower timer begins when the platen is lowered again. To reset the timer, wait for the lower timer countdown to end. Set the upper timer to 0 to use only the lower timer.

Powering On and Setting Up the Heat Press



Turn on your heat press

Press the power switch to the "I" position and start working.

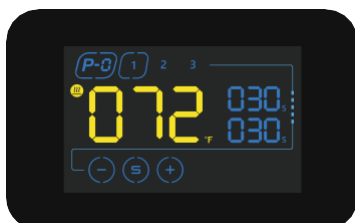

Memory Selection

The memory indicator flashes. Select one to begin your setup.



Adjusting the temperature

Tap the  to begin setting the temperature. Use the   to set the desired temperature in the display.

Tap  to save the setting.



Setting the timers


Use the buttons again   to set the desired time and  to save. The top timer is commonly used for pre-pressing garments, and the bottom timer for the actual transfer.

Always follow the recommendations indicated in the materials used.



Warming Up

The indicator  flashes to indicate that the machine is in warm-up mode. When the temperature reaches the set value, the bell emits an intermittent sound to indicate that the Beinsen Malvinas heat press is ready to press.

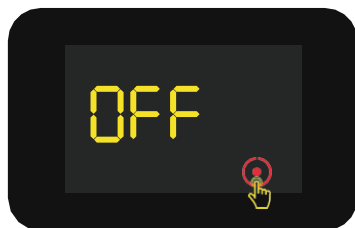

Automatic shutdown

After 150 minutes of inactivity, the machine will automatically enter sleep mode, displaying "OFF" on the screen. Tap any control button to wake it from sleep mode .



Turn off your heat press


Switch the power to "O" to turn off the machine.

Heat Transfer Process



Preparation of materials

Adjust the pressure to the proper level. Place the object on the bottom plate and place the transfer paper, foil, or other materials on top of the object.

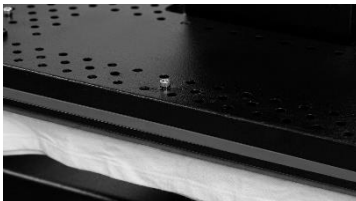


Start the transfer (manual mode)

When the machine reaches the set temperature, press the scroll buttons on the left and right to move the heating platen to the desired position of the transfer station, and then press the "two-handed start button"; The heating platen will automatically press down to initiate the transfer.



Station change (manual mode)

When the timer countdown ends, the heating platen will automatically rise. Press the left and right move buttons to switch to another station and place the material to be transferred on the lower pressure plate before changing. Once the position is reached, press the "two-handed start button" again to start the thermal transfer.

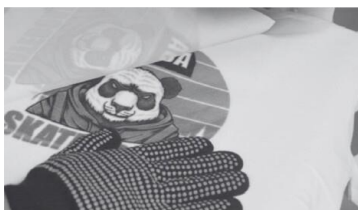

Finalize the transfer

At the destination station, remove the transfer paper or film and the transfer is complete. (Note: Transfer paper may require cold or hot peeling; refer to the instructions on your transfer paper.)



Emergency stop function

In case you need to stop the machine immediately or if a fault occurs, press the emergency stop switch to stop the operation, and the heating platen will rise quickly. This prevents damage or injury. Once it's safe, turn the emergency stop button clockwise to restart it; otherwise, the thermal plate will not be able to go down for the next transfer job.

Interchangeable Lower Platen


How to Change the Lower Platen

1.

In one-handed mode, press the left and right scroll buttons to move the heating platen to the side that doesn't need to be temporarily replaced, and remove the lower platen. Pull the indexing pin and twist it to release the lower platen and remove the next plate.

2.

Insert the new lower platen you want to replace, twist the bottom plate latch, insert and lock it.

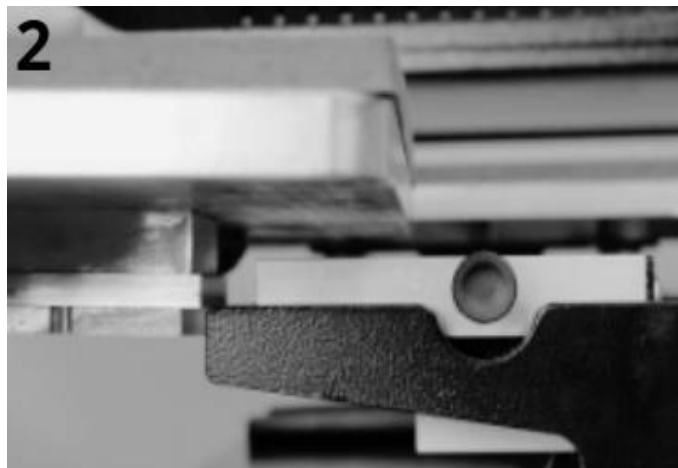

Available Lower Platens

Below we show you the different platens compatible with your Beinsen Miranda heat press. Remember that only plates with a quick exchange system are compatible with your heat press.



18x18cm.



30x36cm.
Small sizes



24cm. in diameter



38x38cm.
visors



18x38cm.
pants



18x46cm.



18x38cm
slippers



40x50
Neck logos



40x50
Double sleeve

Manual/Auto Button

Different modes

1.

Manual mode

The center switch is on the left: press the left/right position change button on the front left to move the heating platen to the left or right, and press the start buttons on both sides with both hands at the same time; The heating platen will be lowered.

Note:

When the heating platen is in the left position, turn on the machine, press the left and right position change button on the front once, and the heating platen will move to the right.

When the heating platen is in the right position, turn on the machine, press the left and right position change button on the front once, and the heating platen will not move. Press it again and it will scroll to the left.

2.

Auto Mode Button

The center switch is on the right: Press the left or right station switch button on the front left and any of the start buttons on both sides with both hands at the same time to move the heating platen to the left or right. When in place, the heating platen will automatically press down.

Maintaining Your Heat Press

To ensure optimal performance and extend the life of your heat press, proper and regular maintenance is essential. A clean, well-maintained machine not only improves print quality but also prevents damage and breakdowns.

This section provides key recommendations for cleaning, inspecting, and caring for the components of your heat press, ensuring efficiency and safety with each use.

Regular cleaning of sublimation plates or surfaces

- **After each use**, make sure that the sublimation plates or surfaces are clean and free of ink, paper, or any other material residue. Use a soft, clean cloth slightly dampened with warm water or a specific cleaner recommended by the manufacturer to remove any residue. Avoid using abrasive products that can damage surfaces.

Replacement of protective films or coatings

- The vast majority of thermal plates incorporate protective films or coatings on the sublimation plates to prevent the ink from adhering directly to the plates. These coatings wear and lose properties over time, which affects the quality of the transfers. That's why you should replace them when they start to show **signs of wear**.

Inspection and cleaning of internal components

- Depending on the model of your heat press, it may need to be disassembled to access internal components such as springs, cables, or electrical connections. Perform a regular visual inspection to ensure that there is no damage or wear to these components and clean them if necessary. Always disconnect the heat press from the power source before performing any internal maintenance.

Temperature Verification and Calibration

- Over time, it is possible that the temperature indicated on the screen of the heating platen may vary slightly from the actual temperature of the surface of the heating platen. To ensure accuracy, use a thermometer or similar tool to check if the heating platen reaches the correct temperature and make adjustments if not.

Lubricate joints and moving parts

- Thermal plate joints are friction points where moving parts interact with each other. Over time, a lack of lubrication can lead to wear, hinder movement, and generate unwanted noise. Applying lubricating oil on a regular basis helps reduce friction, prevent corrosion, and ensure smooth and efficient operation of the machine. It is advisable to use a lubricant suitable for mechanical equipment and clean any excess to avoid accumulation of debris.

Protect the heating platen when not in use

- The heating platen is the key component of the heat press, distributing heat evenly for effective transfers. If not properly protected, it can be damaged by residue buildup, scratches, or bumps, which would affect the quality of the prints. To avoid this, it is recommended to clean it after each use, avoid contact with sharp or abrasive objects and, when not in use, cover it with a protective material to prevent the accumulation of dust and dirt.

Troubleshooting

Before contacting a Beinsen Service Center (SAT) or authorized service center, try the following solutions. Some situations may not apply to your device.

Most common problems

Nothing happens after you turn on the heat press

- Check the condition of the plug. Make sure it is properly connected and not faulty.
- Check the status of the power button and touchscreen.
- Check the fuse. Replace it if it is damaged or blown.
- If nothing appears on the screen but the power light is working, check transformer wire 5. If it is loose, the issue is a poor connection; otherwise, the transformer may be defective.

The screen is working properly, but the heating platen is cold

- Check the connection of the thermal probe. In case of being incorrectly connected or loose, the screen will show "255" and the heat press will beep continuously.
- Check if the solid-state relay light is on. Otherwise, check the status of the relay and the touchscreen.
- If you have replaced the relay but the heating platen still does not heat up, check the condition of the heating platen and the power cord.

The heating platen is working properly but the display shows "255°C"

- Check the connection of the thermal probe.
- If the connection of the thermal probe is correct, it is possible that the fault is caused by the probe.

The heating platen works between 0 and 180°C, but the digits on the screen jump above 200 or 300° suddenly or vary irregularly

- Check the connection of the thermal probe.
- If the thermal probe and probe connection are working properly, the digital controller (IC) program may be damaged and needs to be replaced.

Temperature out of control. It is set at 180° but the actual temperature is

above 200°C

- Check the solid-state relay. It may be broken down and needs to be replaced.
- The digital controller may be faulty and is still supplying electricity to the relay, in which case it needs to be replaced.

Time and temperature settings work abnormally after changing the heating platen

- Reconfigure the time and temperature settings according to the instructions in this manual

The color transferred to the garment is too pale

- Check the heat press temperature; it may be too low.
- Check the pressure, the pressure may be insufficient or the transfer time may be too short.

The transferred color is too brown or the transfer paper ends up burnt

- Check the heat press temperature; it may be too high.

The transferred print is blurry

- Check the transfer time. Excessive press time can cause ghosting or other defects.

The transferred image color or finish is not good enough

- Check the pressure. It may be too low or the transfer time is too short.
- Check the paper used in the transfer. Check the instructions for use provided by the manufacturer or try another paper.

The transfer paper adheres to the garment after transfer

- Check the transfer temperature. It may be too high.
- Check the ink used for printing. Review the instructions for use provided by the printer manufacturer or try different inks

Copyright

Copyright © 2025 Futura Teck de Murcia S.L.U.

This guide is protected by international copyright laws.

You may not reproduce, distribute, translate, or transmit any part of this guide in any way or by any means, whether electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system.

Trademarks

- Beinsen and the Beinsen logo are registered trademarks of Futura Teck de Murcia S.L.U.
- All other trademarks and copyrights are the property of their respective owners.