


USER GUIDE

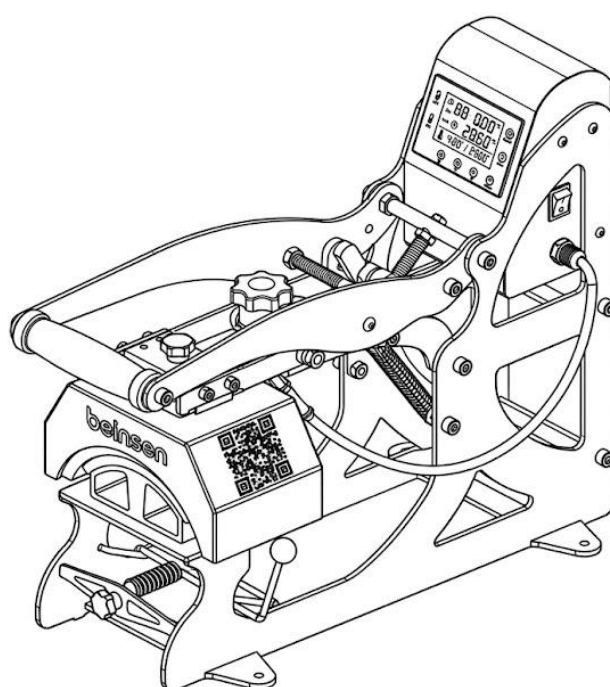

Obrei

Spanish. Rev.1.2.1

beinsen.com

Contents

Getting Started

- 3 Device Design and Functions
- 4 Safety warnings
- 5 Unique features of your iron

Use your iron

- 6 Instructions
- 7 Turning on and setting up your thermal iron

Maintaining Your Iron

- 9 Maintenance operations


Troubleshooting

- 11 Most common problems

Getting Started

Device Design and Functions

► Obrei:

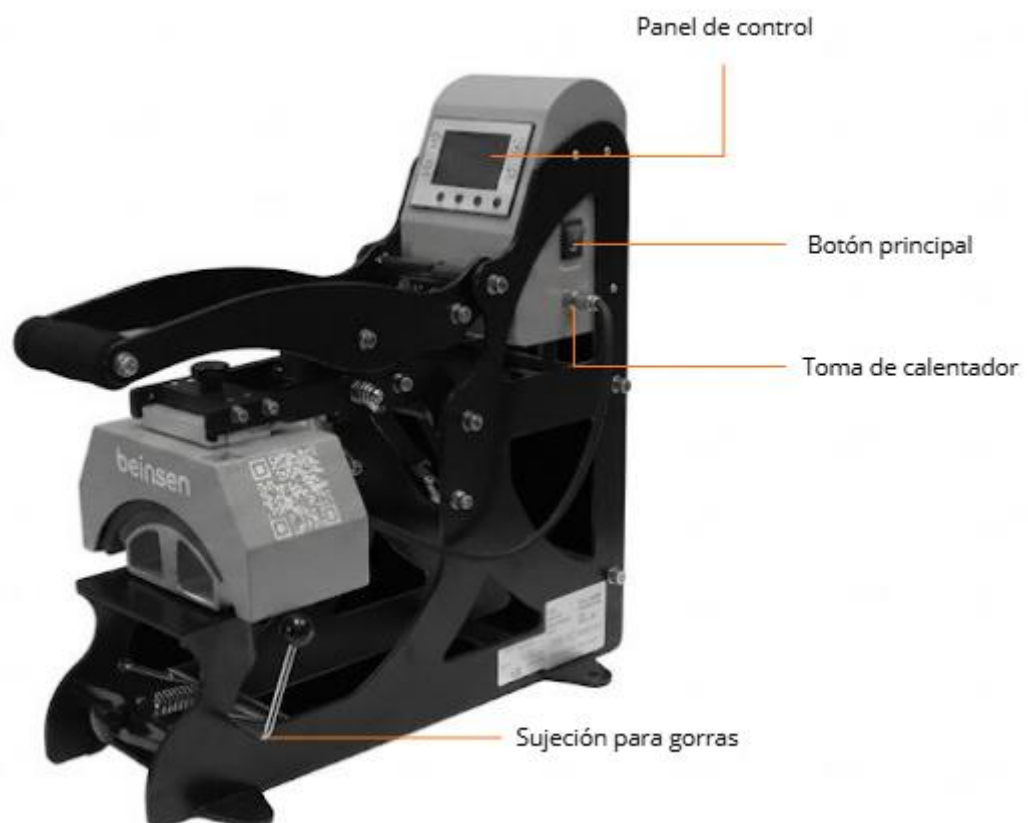



- Please read these instructions carefully before using your iron for the first time
- Use the heat press only for its intended purpose: pressing materials using heat.
- Avoid electric shocks by avoiding contact with water or liquids.
- Disconnect securely by holding the plug, not the cord, when disconnecting it from the electrical current.
- Keep cords away from hot surfaces and allow the machine to cool completely before storing.
- Do not use the machine if the cord is damaged or if it has been dropped or damaged. If repairs are necessary, take them to a qualified service technician to avoid risks of fire, electric shock, or injury.
- Always turn off the power before cleaning, repairing, or servicing the machine.
- Supervision is required for anyone using the heat press, especially children or those with reduced physical, sensory, or mental capabilities. Never leave the machine unattended while it is connected.
- Avoid burns by not touching hot metal parts or heated plate during use. Wear heat-resistant gloves.
- Do not overload electrical circuits. Avoid using other high-voltage equipment on the same circuit as the heat press.
- If an extension cord is needed, make sure it is rated at least 20 amps to prevent overheating. Position the cord so that it does not trip or pull on it.
- Keep your hands away from the top plate during locking to avoid injury caused by machine pressure.
- Place the heat press on a sturdy and suitable support to ensure stability during operation.
- Keep the work area clean and free of obstructions to avoid accidents.

Unique features of your iron

1.

Removable and easy-to-use heating plate



2.

Removable cap plate




3.

15 x 15 cm quick-change bottom plate



4.

Bottom plate for quick-change caps

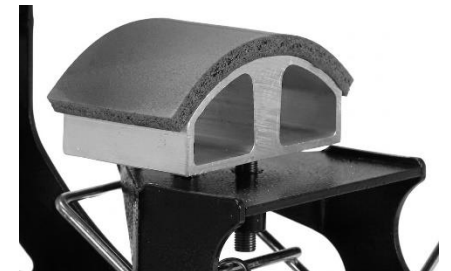

5.

Large quick-release screw



6.

Strong and durable metal machine structure



Use your iron

Instrucciones



Nota: Utiliza la forma similar cuando necesites transferir otros sustratos utilizando la placa de calor lisa.




Pautas de tiempo según papel de transferencia:

Material	Tiempo
Papel de transferencia de tinta (tela)	14-18 segundos
Copiadora láser / papel de transferencia de impresora (tela)	18-25 segundos
Transferencias de sublimación (en telas)	25-30 segundos
Transferencias de sublimación (a FR-Plastic / Woods)	60-70 segundos

Artículo	Tiempo	Temperatura
Cerámica (tazas, platos)	15 segundos	180°C
Camisetas	30-50 segundos (algodón puro) (10-20" para papel de transferencia)	180°C
Llavero de metal (y espejo de metal)	45 segundos	180°C
Llavero de polímero	90 segundos	180°C

Ignition and configuration of your heat press

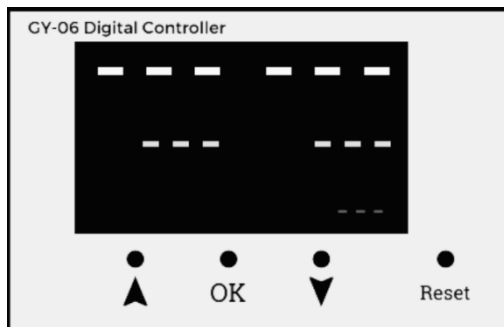

1

Turn on the heat press


Press OK and choose between °C or °F using of the arrows.

Then press OK again. The Temperature button will turn on.

Select the temperature with the arrows desired.

PV: Current Temperature

SV: Set Temperature

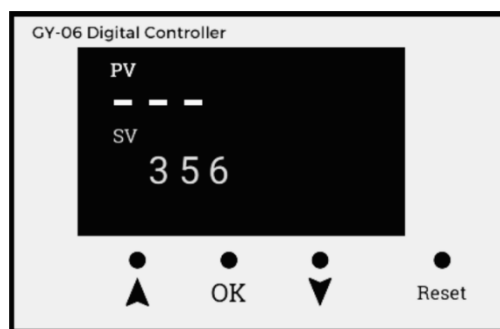


2

Press OK after adjusting the temperature. Then select time.

Press OK for operation mode. The counter is "transfer cycle", from 0-990. Press RESET for 5 seconds for the counter to be 0.


P-1 mode is the calibration model temperature difference.

P-2 mode is the mode setting heating

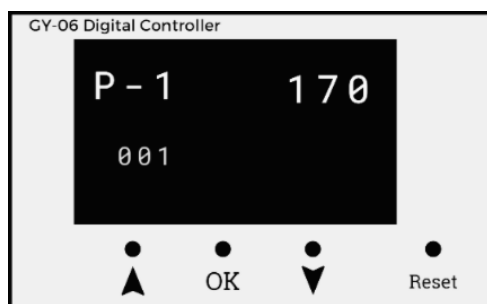

3

When there is a temperature difference between SV (the current temperature of heating is displayed on the display) and the actual temperature of the Heat plate, please hold down button for 5 seconds to enter in P-1 mode to calibrate.

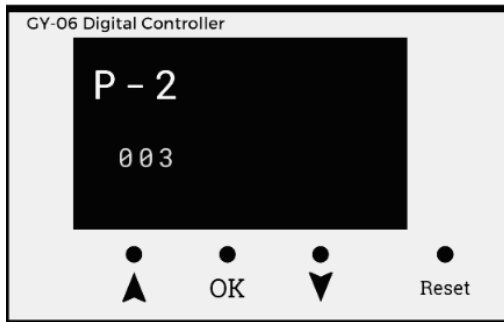

4

It is preset to 003 before shipping. It is that is, if your setting temperature is 200°C, will slow down the heating rate when heated up to 197°C.

The suggested value of the P-2 mode is 3-5 °C.

If you want to reset the value, tap for a long time for 5 seconds until the P-1 mode. Then, press the button to enter the P-2, and set the value.

5

Steps for printing

Make sure the cable is okay

Connected to the wall socket. Place the object on the platform

printing, and transfer the paper with the images down. Adjust the pressure according to your needs and turn on the machine.

Adjust temperature and time required.

When the iron reaches the temperature, a buzzing sound will be emitted.

Then, close the heat plate and will begin to transfer.

Once the counter is finished, the

Top plate will open automatically.

Maintaining Your Press

To ensure optimal performance and extend the life of your thermal iron, proper and regular maintenance is essential. A clean and well-maintained equipment not only improves the quality of the prints, but also prevents damage and breakdowns that can affect their operation.

In this section you will find key recommendations for cleaning, caring for and inspecting the components of your iron, thus ensuring its efficiency and safety with each use.

Regular cleaning of sublimation plates or surfaces

- **After each use**, make sure that the sublimation plates or surfaces are clean and free of ink, paper, or any other material residue. Use a soft, clean cloth slightly dampened with warm water or a specific cleaner recommended by the manufacturer to remove any residue. Avoid using abrasive products that can damage surfaces.

Replacement of protective films or coatings

- The vast majority of thermal plates incorporate protective films or coatings on the sublimation plates to prevent the ink from adhering directly to the plates. These coatings wear and lose properties over time, which affects the quality of the transfers. That's why you should replace them when they start to show **signs of wear**.

Inspection and cleaning of internal components

- Depending on the model of your heat iron, it may need to be disassembled to access internal components such as springs, cables, or electrical connections. Perform a regular visual inspection to ensure that there is no damage or wear to these components and clean them if necessary. Always disconnect the heat iron from the power source before performing any internal maintenance.

Temperature Verification and Calibration

- Over time, it is possible that the temperature indicated on the screen of the heat plate may vary slightly from the actual temperature of the surface of the heating plate. To ensure accuracy, use a thermometer or similar tool to check if the heat plate reaches the correct temperature and make adjustments if not.

Lubricate joints and moving parts

- Thermal plate joints are friction points where moving parts interact with each other. Over time, a lack of lubrication can lead to wear, hinder movement, and generate unwanted noise. Applying lubricating oil on a regular basis helps reduce friction, prevent corrosion, and ensure smooth and efficient operation of the machine. It is advisable to use a lubricant suitable for mechanical equipment and clean any excess to avoid accumulation of debris.

Protect the hot plate when not in use

- The heating plate is the key part of the griddle, as it distributes heat evenly to ensure effective transfer. If not properly protected, it can be damaged by residue buildup, scratches, or bumps, which would affect the quality of the prints. To avoid this, it is recommended to clean it after each use, avoid contact with sharp or abrasive objects and, when not in use, cover it with a protective material to prevent the accumulation of dust and dirt.

Troubleshooting

Before contacting a Beinsen Service Center (SAT) or authorized service center, try the following solutions. Some situations may not apply to your device.

Most common problems

Nothing happens after you turn on the iron

- Check the condition of the plug. Make sure it doesn't connect well and isn't faulty.
- Check the status of the power button and touchscreen.
- Check the fuse. Make sure it is damaged or burned.
- If nothing appears on the screen but the power light is working, check the transformer's wire 5. If it has been loosened the problem is connection, otherwise it is possible that the transformer is defective.

The screen is working properly, but the heating plate is cold

- Check the connection of the thermal probe. In case of being incorrectly connected or loose, the screen will show "255" and the iron will beep continuously.
- Check if the solid-state relay light is on. Otherwise, check the status of the relay and the touchscreen.
- If you have replaced the relay but the heating plate still does not heat up, check the condition of the hob and the power cord.

The heating plate is working properly but the display shows "255°C"

- Check the connection of the thermal probe.
- If the connection of the thermal probe is correct, it is possible that the fault is caused by the probe.

The heating plate works between 0 and 180°C, but the digits on the screen jump above 200 or 300° suddenly or vary irregularly

- Check the connection of the thermal probe.
- If the thermal probe and probe connection are working properly, the digital controller (IC) program may be damaged and needs to be replaced.

Temperature out of control. It is set at 180° but the actual temperature is

above 200°C

- Check the solid-state relay. It may be broken down and needs to be replaced.
- The digital controller may be faulty and is still supplying electricity to the relay, in which case it needs to be replaced.

Time and temperature settings work abnormally after changing the hotplate

- Reconfigure the time and temperature settings according to the instructions in this manual

The color transferred to the garment is too pale

- Check the temperature of the iron, it may be too low.
- Check the pressure, the pressure may be insufficient or the ironing time may be too short.

The transferred color is too brown or the transfer paper ends up burnt

- Check the temperature of the iron, it may be excessively high.

The transferred print is blurry

- Check the transfer time. Excessive ironing time can cause ESE or other effects.

The transferred image color or finish is not good enough

- Check the pressure. It may be too low or the ironing time is too short.
- Check the paper used in the transfer. Check the instructions for use provided by the manufacturer or try another paper.

The transfer paper adheres to the garment after transfer

- Check the transfer temperature. It may be too high.
- Check the ink used for printing. Review the instructions for use provided by the printer manufacturer or try different inks

Copyright

Copyright © 2025 Futura Teck de Murcia S.L.U.

This guide is protected by international copyright laws.

You may not reproduce, distribute, translate, or transmit any part of this guide in any way or by any means, whether electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system.

Trademarks

- Beinsen and the Beinsen logo are registered trademarks of Futura Teck de Murcia S.L.U.
- All other trademarks and copyrights are the property of their respective owners.