

USER GUIDE

Pocola
BSNPOCOLA001

Spanish. 03/2025. Rev.1.0

beinsen.com

Contents

Getting Started

- 3 Device design and functions
- 4 Safety warnings
- 5 Unique features of your iron

Use your iron

- 6 Meet the Digital Controller
- 7 Turning on and setting up your thermal iron
- 9 Ironing process
- 10 Change the chainring kit

Maintaining Your Iron

- 12 Maintenance operations


Troubleshooting

- 14 Most common problems

Getting Started

Device Design and Functions

► Pocola:

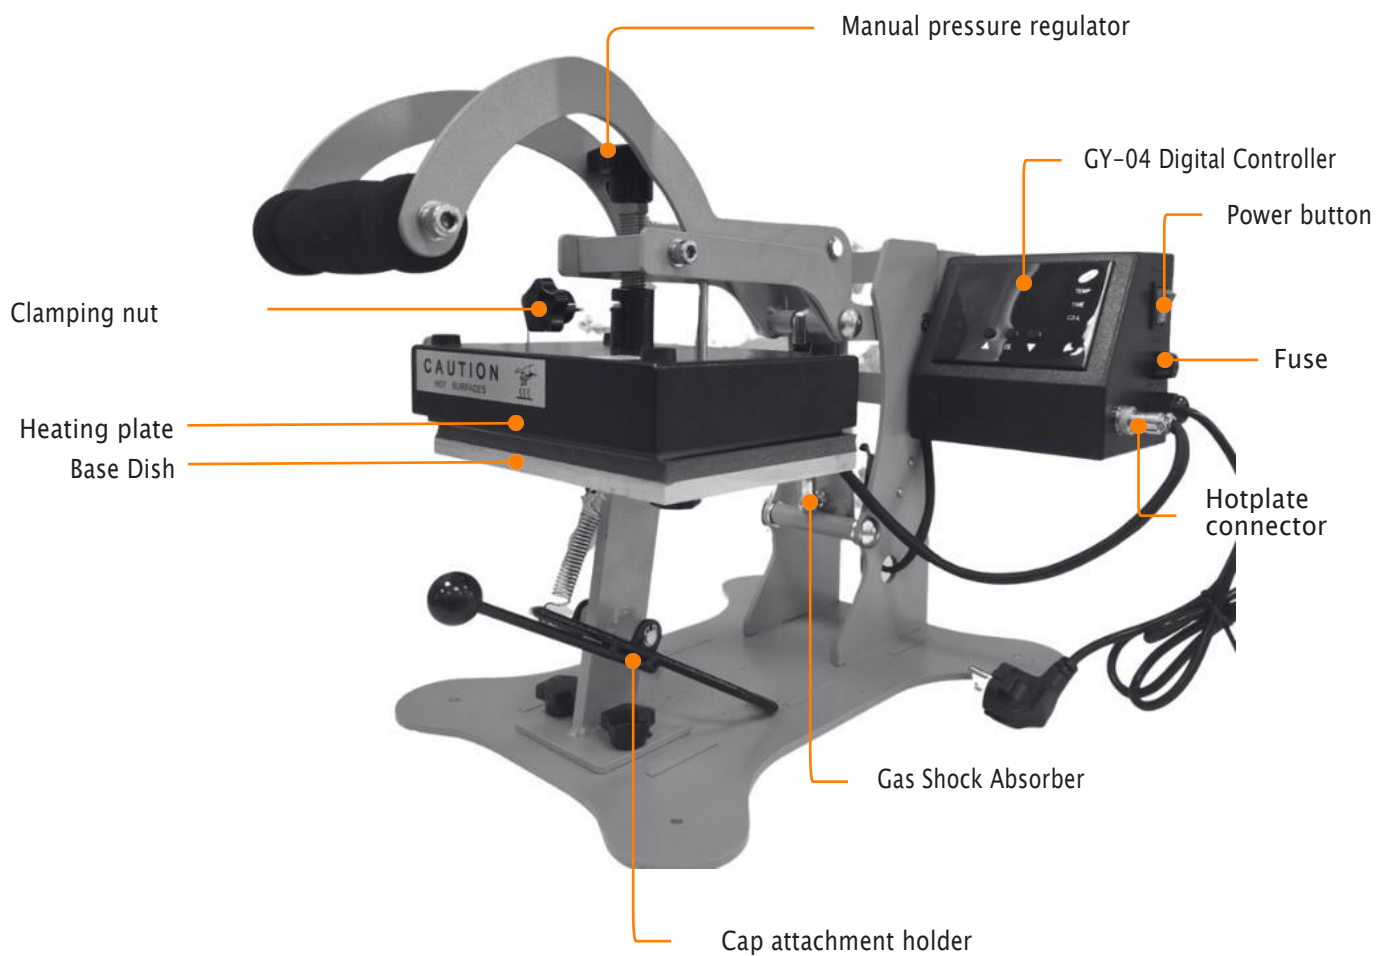



- Please read these instructions carefully before using your iron for the first time
- Use the heat press only for its intended purpose: pressing materials using heat.
- Avoid electric shocks by avoiding contact with water or liquids.
- Disconnect securely by holding the plug, not the cord, when disconnecting it from the electrical current.
- Keep cords away from hot surfaces and allow the machine to cool completely before storing.
- Do not use the machine if the cord is damaged or if it has been dropped or damaged. If repairs are necessary, take them to a qualified service technician to avoid risks of fire, electric shock, or injury.
- Always turn off the power before cleaning, repairing, or servicing the machine.
- Supervision is required for anyone using the heat press, especially children or those with reduced physical, sensory, or mental capabilities. Never leave the machine unattended while it is connected.
- Avoid burns by not touching hot metal parts or heated plate during use. Wear heat-resistant gloves.
- Do not overload electrical circuits. Avoid using other high-voltage equipment on the same circuit as the heat press.
- If an extension cord is needed, make sure it is rated at least 20 amps to prevent overheating. Position the cord so that it does not trip or pull on it.
- Keep your hands away from the top plate during locking to avoid injury caused by machine pressure.
- Place the heat press on a sturdy and suitable support to ensure stability during operation.
- Keep the work area clean and free of obstructions to avoid accidents.

Compact

We have shed the superfluous to achieve a simple, compact and economical yet capable tool to give great results. The versatile flat plate of 15x20cm. allows you to use it



Digital controller


Its plate incorporates the GY-04 digital controller. This controller will allow you to easily control both the time and the desired temperature for the customization process.



Expandable

You can further expand the features of your Beinsen Pocola iron with the cap-customizing kit that you can purchase separately.

This kit consists of a heating plate and a special base plate for caps with which you can get the most out of your Beinsen Pocola.

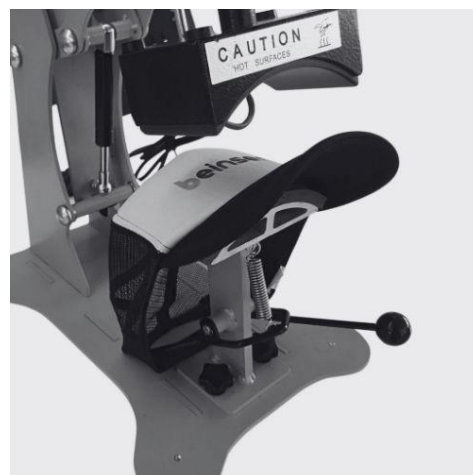

Use your iron

Meet the Digital Controller



Current Value

Displays the current value. The red dot indicates the related setting



Adjustment buttons

Use the adjustment buttons to increase or decrease the value of the current setting. With the OK button, save the setting value and move to the next option.

Turning on and setting up your thermal iron



Turn on your heat iron

Press the power switch to the "I" position and start working.



Activate the iron

Press the switch to turn on the iron, and the temperature indicator light will come on. The digital display indicates OFF.



Celsius or Farenheit

Press the OK button, the display shows "C", this indicates that the temperature will be displayed in Celsius. Press the ▲ and ▼ buttons to switch between "C" (celsius) and "F" (farenheit).



Adjusting the temperature

Press the OK button again to enter temperature mode. Use the ▲ and ▼ buttons to indicate the desired temperature.

Note: The temperature will be indicated on the display only after reaching 100°C. It is normal for the temperature not to be indicated when the iron has just been turned on.



Setting the timer

When you finish adjusting the temperature, press the OK button to move on to setting the timer. Use the ▲ and ▼ buttons to set the ironing time according to the instructions of the product to be customized.



Finalizing the setup

Press the OK button once adjusting the time to finish the setup. On the screen you can see how the temperature increases. Depending on the version of the machine, LO or 0 will appear. The active indicator light will be "CD-L" and indicates the countdown to the Ironing time .



Calibrating Your Iron

If you detect discrepancies between the temperature indicated on the screen and the actual temperature, you can use the P-5 setting mode to calibrate the iron and compensate for this difference. For example, if the actual temperature is 180°C but the display shows 200°C, press and hold the OK button for 5 seconds to activate P5 mode. Once inside, use ▲ to dial up to 20 and press and hold OK again for 5 seconds.

Ironing process



Adjust the pressure

Check that the power is turned off. Place the item to be transferred on the bottom plate and pull the handle down until the iron is completely closed to test the pressure. If the element is secure and the handle has a moderate rebound force, the pressure is correct. If not, use the slider to adjust the pressure to the item thickness.



Turn on the iron

Connect the iron to power and press the power switch. Configure the parameters as explained in the previous section.




Prepare Materials

Place the element to be personalised on the bottom plate and place the transfer paper, film or any other material you need on it. Use heat tape to secure the paper.



Start the transfer

When the iron reaches the desired temperature it will beep in warning, then pull the handle down to close the iron and begin the transfer. Then the timer countdown will begin.

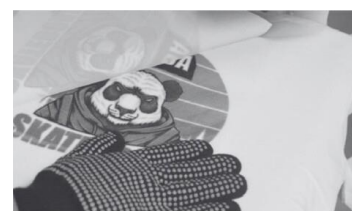

Complete the transfer

When the countdown reaches 0 and the machine makes a sound, pull the handle up to separate the chainrings. Then remove the item to be customized and remove the residue as per the instructions of the manufacturer.

Change Chainring Kit


How to switch between the cap kit and the flat plate kit

The cap kit is purchased independently and allows you to customize caps easily. More information can be found at: beisen.com/kit-para-gorras-pocola



Free Up the Heating Plate

Remove the power connector from the heating plate, then pull the handle down to tighten the heating plate against the base plate and with the other hand unscrew the clamping screw.

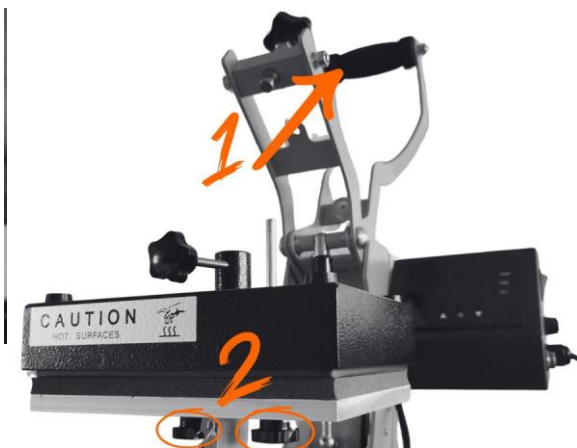

Free the base dish

Release the handle to raise the top of the structure, then release the base plate by turning the nuts located at the bottom




Attach the cap plate

Place the cap base plate on the clamping bracket, then replace the clamping screws and tighten them to secure the plate.



Attach the Cap Heating Plate

Place the cap heating plate over the base plate, pull the handle down again, and align both plates until they fit snugly.

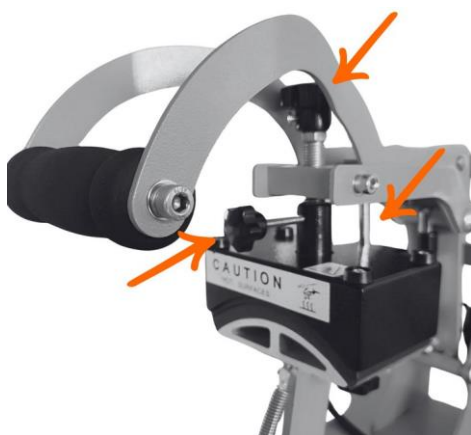

Attach the Cap Heating Plate

Use the nuts to secure the new heating plate, when you are done pull the handle up and check that all components are fixed perfectly.

Maintaining Your Iron

To ensure optimal performance and extend the life of your thermal iron, proper and regular maintenance is essential. A clean and well-maintained equipment not only improves the quality of the prints, but also prevents damage and breakdowns that can affect their operation.

In this section you will find key recommendations for cleaning, caring for and inspecting the components of your iron, thus ensuring its efficiency and safety with each use.

Regular cleaning of sublimation plates or surfaces

- **After each use**, make sure that the sublimation plates or surfaces are clean and free of ink, paper, or any other material residue. Use a soft, clean cloth slightly dampened with warm water or a specific cleaner recommended by the manufacturer to remove any residue. Avoid using abrasive products that can damage surfaces .

Replacement of protective films or coatings

- The vast majority of thermal plates incorporate protective films or coatings on the sublimation plates to prevent the ink from adhering directly to the plates. These coatings wear and lose properties over time, which affects the quality of the transfers. That's why you should replace them when they start to show **signs of wear**.

Pressure Verification and Adjustment

- As the heat plate is used, the pressure required to achieve proper transfers may change slightly. Periodically check the pressure of the heat plate and adjust it according to the manufacturer's recommendations. Some heat plates have pressure settings that can be easily modified, while others may require more complex internal adjustments. Always follow the manufacturer's instructions and consult a technical service in case of doubt.

Inspection and cleaning of internal components

- Depending on the model of your heat iron, it may need to be disassembled to access internal components such as springs, cables, or electrical connections. Perform a regular visual inspection to ensure that there is no damage or wear to these components and clean them if necessary. Always disconnect the heat iron from the power source before performing any internal maintenance.

Temperature Verification and Calibration

- Over time, it is possible that the temperature indicated on the screen of the heat plate may vary slightly from the actual temperature of the surface of the heating plate. To ensure accuracy, use a thermometer or similar tool to check if the heat plate reaches the correct temperature and make adjustments if not.

Lubricate joints and moving parts

- Thermal plate joints are friction points where moving parts interact with each other. Over time, a lack of lubrication can lead to wear, hinder movement, and generate unwanted noise. Applying lubricating oil on a regular basis helps reduce friction, prevent corrosion, and ensure smooth and efficient operation of the machine. It is advisable to use a lubricant suitable for mechanical equipment and clean any excess to avoid accumulation of debris.

Protect the hot plate when not in use

- The heating plate is the key part of the griddle, as it distributes heat evenly to ensure effective transfer. If not properly protected, it can be damaged by residue buildup, scratches, or bumps, which would affect the quality of the prints. To avoid this, it is recommended to clean it after each use, avoid contact with sharp or abrasive objects and, when not in use, cover it with a protective material to prevent the accumulation of dust and dirt.

Troubleshooting

Before contacting a Beinsen Service Center (SAT) or authorized service center, try the following solutions. Some situations may not apply to your device

Most common problems

Nothing happens after you turn on the iron

- Check the condition of the plug. Make sure it doesn't connect well and isn't faulty.
- Check the status of the power button and touchscreen.
- Check the fuse. Make sure it is damaged or burned.
- If nothing appears on the screen but the power light is working, check the transformer's wire 5. If it has been loosened the problem is connection, otherwise it is possible that the transformer is defective.

The screen is working properly, but the heating plate is cold

- Check the connection of the thermal probe. In case of being incorrectly connected or loose, the screen will show "255" and the iron will beep continuously.
- Check if the solid-state relay light is on. Otherwise, check the status of the relay and the touchscreen.
- If you have replaced the relay but the heating plate still does not heat up, check the condition of the hob and the power cord.

The heating plate is working properly but the display shows "255°C"

- Check the connection of the thermal probe.
- If the connection of the thermal probe is correct, it is possible that the fault is caused by the probe.

The heating plate works between 0 and 180°C, but the digits on the screen jump above 200 or 300° suddenly or vary irregularly

- Check the connection of the thermal probe.
- If the thermal probe and probe connection are working properly, the digital controller (IC) program may be damaged and needs to be replaced.

Temperature out of control. It is set at 180° but the actual temperature is above 200°C

- Check the solid-state relay. It may be broken down and needs to be replaced.
- The digital controller may be faulty and is still supplying electricity to the relay, in which case it needs to be replaced.

Time and temperature settings work abnormally after changing the hotplate

- Reconfigure the time and temperature settings according to the instructions in this manual

The color transferred to the garment is too pale

- Check the temperature of the iron, it may be too low.
- Check the pressure, the pressure may be insufficient or the ironing time may be too short.

The transferred color is too brown or the transfer paper ends up burnt

- Check the temperature of the iron, it may be excessively high.

The transferred print is blurry

- Check the transfer time. Excessive ironing time can cause ESE or other effects.

The transferred image color or finish is not good enough

- Check the pressure. It may be too low or the ironing time is too short.
- Check the paper used in the transfer. Check the instructions for use provided by the manufacturer or try another paper.

The transfer paper adheres to the garment after transfer

- Check the transfer temperature. It may be too high.
- Check the ink used for printing. Review the instructions for use provided by the printer manufacturer or try different inks

Copyright

Copyright © 2025 Futura Teck de Murcia S.L.U.

This guide is protected by international copyright laws.

You may not reproduce, distribute, translate, or transmit any part of this guide in any way or by any means, whether electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system.

Trademarks

- Beinsen and the Beinsen logo are registered trademarks of Futura Teck de Murcia S.L.U.
- All other trademarks and copyrights are the property of their respective owners.