


B E I N S E N

Barahona

Plancha para tazas 6 en 1

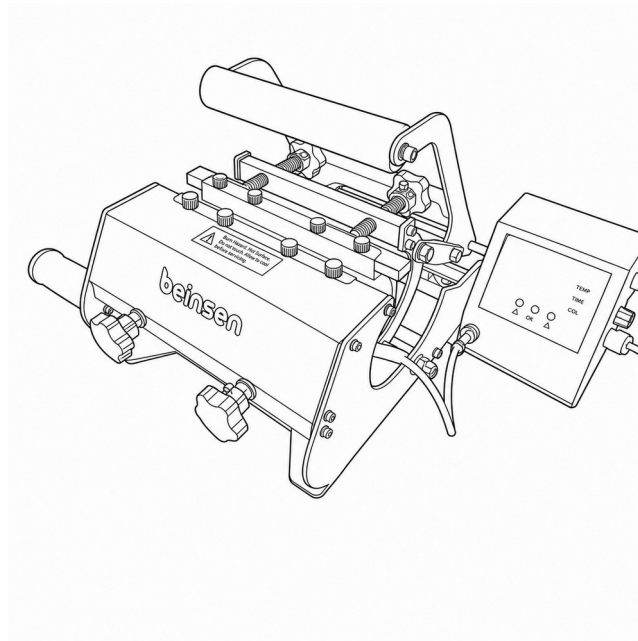

User Manual and Safety Instructions

Empowering Your Personalization Needs.

Index

01	Introduction and equipment description	3
02	Technical specifications	4
03	Critical safety	5
04	Operation guide	7
05	Maintenance and troubleshooting	9
06	Legal notice and trademarks	11

Page numbers are indicative and may vary slightly depending on the specific length of the sections for this model.

01

Introduction and Equipment Description

The Beinsen Barahona is a 6-in-1 mug press: 6 stations let you personalise 6 mugs simultaneously, each with its own controller. The most cost-effective option for workshops with high mug production. Includes interchangeable heating elements for the most common formats.

Applications

Mass production of personalised mugs (6-10 oz, 11-15 oz, 12 oz conical, 17 oz conical) with 6 stations working in parallel. Suitable for souvenir, regional and corporate-gift workshops.

Main components

- Seis resistencias intercambiables para diferentes formatos
- Quick-change system sin herramientas complejas
- digital controller
- Pinza universal ajustable
- Industrial Beinsen orange frame



Fig. 1 · Main components of the Beinsen Barahona.

02

Technical Specifications

Model	Barahona
Press Type	For mugs
Opening Mode	Manual
Closing Mode	Manual
Heating Element Type	Replaceable
Heating Element Size	1,5 oz / 2,5 oz / 6-10 oz / 12 oz / 17 oz / 11-15 oz
Voltage	220 V
Power	130 W / 260 W
Weight	13 kg
Dimensions	60 × 42 × 30 cm
Digital Controller	digital controller
Controller Precision	±0,5 %
Timer	0 – 999 seg.
Temperature Range	0 – 225 °C

Technical specifications may vary slightly depending on the manufacturing batch configuration. Refer to the equipment identification label for the exact data of your unit.

03

Critical Safety

Read all warnings carefully before operating the equipment. Failure to follow these instructions may result in serious injury, property damage or void the warranty.

Risk of burns

The heating elements reach 225 °C. Wait for complete cooling before any change. Thermal gloves mandatory.

Safe heating-element change

Make all changes with the machine cold and disconnected from the mains. Check the fit of the new format before resuming operation.

Storage of heating elements

Store unused heating elements in a dry and clean place. Keep out of reach of children. Label each with its format for easy changeover.

Electrical risk

Connect the equipment only to a grounded socket. Each heating element has its own wiring: check it when changing format.

04

Operation Guide

The digital controller with ± 0.5 % precision lets you configure the press temperature and time for each heating-element format.

Power-on and configuration

- 01 Connect the equipment to the mains and turn on the main switch.
- 02 The controller display will light up showing the temperature reading.
- 03 Press SET to enter the configuration menu.
- 04 Adjust the target temperature with the (+) and (–) buttons.
- 05 Press SET again to move to time setting and configure it the same way.
- 06 Press SET to confirm and exit the menu.
- 07 Wait until the mounted heating element reaches the target temperature.

Heating element change (6 formats available)

- 01 Turn off the equipment and disconnect it from the mains.
- 02 Wait until the heating element and associated components have cooled completely.
- 03 Loosen the screws or fixing clips of the current heating element.
- 04 Disconnect the electrical connection of the current heating element.
- 05 Identify the heating element matching the desired format from the 6 available: 1.5 oz, 2.5 oz, 6-10 oz, 12 oz, 17 oz or 11-15 oz.
- 06 Fit the new heating element and reconnect the power supply.
- 07 Check the correct fit before reconnecting the equipment to the mains.

Pressing process

- 01 Apply the transfer paper to the mug with the printed side facing the ceramic surface.
- 02 Secure the transfer with heat-resistant tape to prevent shifting.
- 03 Place the mug inside the perimeter heating element.
- 04 Firmly close the manual clamp.
- 05 When the programmed time ends, open the clamp and remove the mug with thermal gloves.
- 06 Peel off the transfer paper as instructed by the consumable manufacturer.

05

Maintenance and Troubleshooting

Preventive maintenance

- Before each shift, check that the mounted heating element and base are clean.
- Clean the heating elements with the machine cold using a microfibre cloth. Never use water or abrasive products.
- Periodically check the clamp adjustment and the integrity of the power cable.
- Inspect the electrical connections of each heating element when changing format.
- Request a full inspection of the equipment from an Official Technical Service authorised by Beinsen in case of any persistent anomaly.

Troubleshooting

Problem	Probable cause	Solution
The display does not turn on	Loose power cable	Check the connection and socket. If it persists, contact Beinsen Technical Service.
A specific heating element does not heat up	Faulty electrical connection	With the machine cold and disconnected, check the connector fit. If it persists, contact Technical Service.
Uneven transfer	Insufficient pressure or inadequate time	Adjust the clamp to increase pressure and review the parameters recommended by the transfer manufacturer.
Marks on the mug	Dirt on the heating element or excess pressure	Clean the heating element with the machine cold and adjust the clamp.

To report any issue, request a repair or purchase genuine spare parts, contact exclusively an Official Technical Service authorized by Beinsen.

06

Legal Notice and Trademarks

Copyright

Copyright © 2025 Beinsen. This guide is protected by international copyright laws. No part of this guide may be reproduced, distributed, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or any information storage and retrieval system, without the prior written consent of Beinsen.

Trademarks

Beinsen and the Beinsen logo are registered trademarks. All other trademarks and copyrights mentioned in this document are the property of their respective owners.

Warranty and technical service

To report any issue, request a repair or purchase genuine spare parts, contact exclusively an Official Technical Service authorized by Beinsen. Find the nearest technical service point through the official website.

Contact

Beinsen

Avenida Alto de las Atalayas, 18 · 30110 Cabezo de Torres (Murcia), Spain
+34 968 902 300 · info@beinsen.com · beinsen.com