


B E I N S E N

Belice

Plancha transfer manual de iniciación

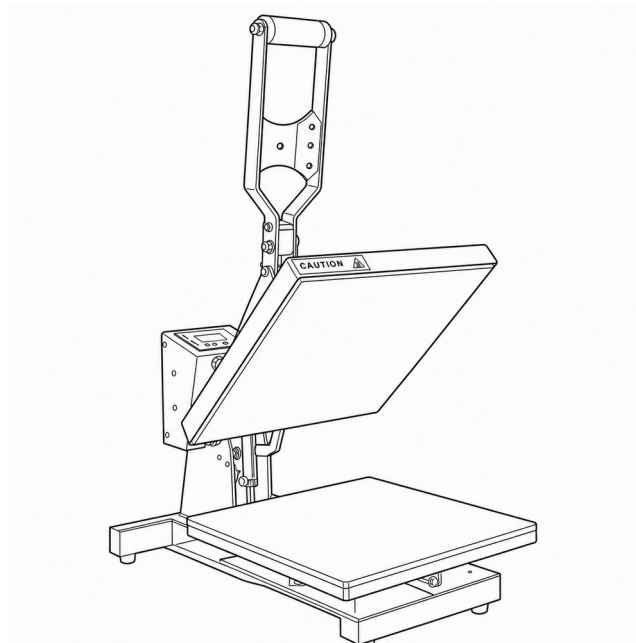

User Manual and Safety Instructions

Empowering Your Personalization Needs.

Index

01	Introduction and equipment description	3
02	Technical specifications	4
03	Critical safety	5
04	Operation guide	7
05	Maintenance and troubleshooting	9
06	Legal notice and trademarks	11

Page numbers are indicative and may vary slightly depending on the specific length of the sections for this model.

01

Introduction and Equipment Description

The Beinsen Belice is an electric heat press with sliding tray, available in two formats (38 × 38 cm and 40 × 50 cm). With touch screen, 3 programmable memory slots, automatic operation and electromagnetic opening: a higher level of automation for professional workshops.

Applications

Professional sublimation, HTV vinyl, DTF and transfer on T-shirts, sweatshirts, cushions, tote bags, blankets, sportswear and flat substrates. Available in two formats. Suitable for workshops seeking high automation in standard formats.

Main components

- Upper heating plate
- Lower plate with pad
- Brazo de palanca para apertura y cierre manual
- digital controller frontal
- Pressure regulator via upper hand wheel
- Industrial metal Beinsen orange frame



Fig. 1 · Main components of the Beinsen Belice.

02

Technical Specifications

	Sandwich
	Manual
	45°
	digital controller
	No
	No
	0 – 999 seg.
	1
	40 × 50 cm
	No
	20 mm
	1,8 kW
	225 °C
	120 V / 220 V
	42 kg
	49 kg
	71 × 40 × 50 cm
	94 × 57 × 57 cm
	Not included

Technical specifications may vary slightly depending on the manufacturing batch configuration. Refer to the equipment identification label for the exact data of your unit.

03

Critical Safety

Read all warnings carefully before operating the equipment. Failure to follow these instructions may result in serious injury, property damage or void the warranty.

Risk of burns

The heating plate reaches 225 °C. Always use thermal gloves when operating the equipment. Keep the work area free of children, pets and flammable materials.

Lever arm

Operate the lever arm firmly but smoothly. Periodically check the integrity of the arm and the closing mechanism. Do not force the system if you notice unusual resistance.

Electrical risk

Connect the equipment only to a grounded socket. Verify the configured voltage (120 V or 220 V) before connecting. Do not handle the equipment with wet hands and disconnect it before any cleaning operation.

Stability

Work on a firm, level, heat-resistant surface. Leave free space around the equipment for proper heat dissipation.

04

Operation Guide

The digital controller lets you configure the press temperature and time. The equipment is operated manually with the lever arm.

Power-on and configuration

- 01 Connect the equipment to the mains and turn on the main switch.
- 02 The controller display will light up showing the temperature reading.
- 03 Press SET to enter the configuration menu.
- 04 Adjust the target temperature with the (+) and (–) buttons.
- 05 Press SET again to move to time setting and configure it the same way.
- 06 Press SET to confirm and exit the menu.
- 07 Wait until the upper plate reaches the target temperature.

Manual pressing process

- 01 Place the garment or substrate on the lower plate, well stretched.
- 02 Apply the transfer paper with the printed side facing the fabric.
- 03 Cover with a Teflon sheet to protect the garment and the plate.
- 04 Close the equipment by lowering the lever arm to its stop.
- 05 The timer will start when closing is detected.
- 06 When the alarm sounds, raise the lever arm to open the equipment.
- 07 Remove the substrate and peel off the transfer paper as instructed by the consumable manufacturer (hot peel or cold peel).

Pressure adjustment

- 01 Locate the pressure regulator at the top of the equipment.
- 02 Turn it clockwise to increase pressure, counterclockwise to reduce it.
- 03 Run a test with a reference substrate before starting production.

05

Maintenance and Troubleshooting

Preventive maintenance

- Before each shift, check that the plates are clean and free of debris.
- Clean the plates while warm using a thermal glove and a microfibre cloth. Never use water or abrasive products.
- Periodically inspect the pressure regulator and the integrity of the lever arm.
- Check the temperature reading with an independent contact thermometer if you notice inconsistency.
- Periodically check the pressure adjustment, especially after periods of intensive use.
- Request a full inspection of the equipment from an Official Technical Service authorised by Beinsen at least once a year.

Troubleshooting

Problem	Probable cause	Solution
The display does not turn on	Loose power cable or no voltage	Check the connection, configured voltage and socket. If it persists, contact Beinsen Technical Service.
The plate does not reach the target temperature	Damaged sensor or partially faulty heating element	Turn off and contact Beinsen Technical Service.
The lever arm is hard to close	Excessive pressure or miscalibrated mechanism	Reduce the pressure with the upper regulator. If it persists, contact Technical Service.
Marks or uneven transfer	Insufficient pressure or missing Teflon	Adjust the pressure regulator and use intermediate Teflon.
Slower heating than usual	Insufficient supply voltage	Check the supply voltage and the equipment configuration (120 V or 220 V).

To report any issue, request a repair or purchase genuine spare parts, contact exclusively an Official Technical Service authorized by Beinsen.

06

Legal Notice and Trademarks

Copyright

Copyright © 2025 Beinsen. This guide is protected by international copyright laws. No part of this guide may be reproduced, distributed, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or any information storage and retrieval system, without the prior written consent of Beinsen.

Trademarks

Beinsen and the Beinsen logo are registered trademarks. All other trademarks and copyrights mentioned in this document are the property of their respective owners.

Warranty and technical service

To report any issue, request a repair or purchase genuine spare parts, contact exclusively an Official Technical Service authorized by Beinsen. Find the nearest technical service point through the official website.

Contact

Beinsen

Avenida Alto de las Atalayas, 18 · 30110 Cabezo de Torres (Murcia), Spain
+34 968 902 300 · info@beinsen.com · beinsen.com