


B E I N S E N

Doha

Plancha transfer gran formato

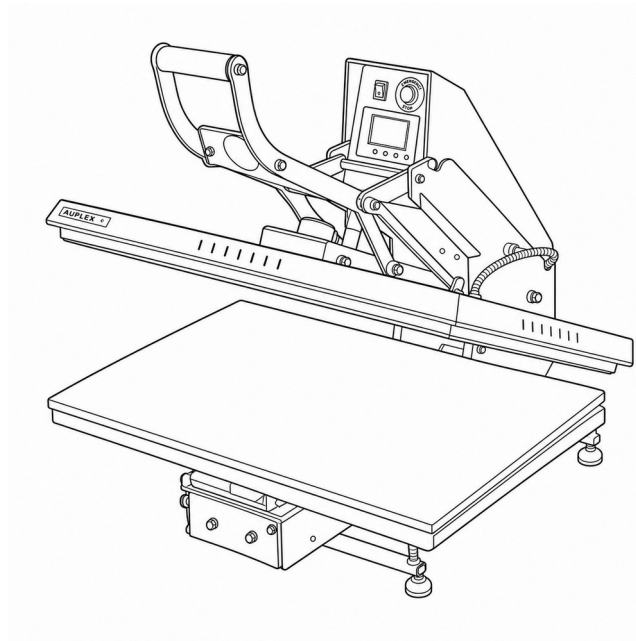

User Manual and Safety Instructions

Empowering Your Personalization Needs.

Index

01	Introduction and equipment description	3
02	Technical specifications	4
03	Critical safety	5
04	Operation guide	7
05	Maintenance and troubleshooting	9
06	Legal notice and trademarks	11

Page numbers are indicative and may vary slightly depending on the specific length of the sections for this model.

01

Introduction and Equipment Description

The Beinsen Doha is a large-format transfer press, available in two formats: 40 × 50 cm and 50 × 80 cm. Designed for large textile substrates that don't fit in standard presses: outdoor flags, blankets, banners, large-format printing on apparel. Sliding lower tray, electromagnetic opening and digital controller.

Applications

Sublimation, HTV vinyl, DTF and transfer on large textile substrates: flags, blankets, banners, oversized garments, advertising textile panels. Two formats (40 × 50 cm and 50 × 80 cm) for different production volumes.

Main components

- Upper heating plate de gran formato
- Reinforced lower plate with pad
- Brazo de palanca con resorte de gas asistido
- digital controller
- Pressure regulator via upper hand wheel
- Industrial Beinsen orange frame reforzada



Fig. 1 · Main components of the Beinsen Doha.

02

Technical Specifications

	Sandwich
	Manual con resorte de gas
	digital controller
	No
	No
	0 – 999 seg.
	1
	50 × 80 cm
	No
	Yes
	8 mm
	2,4 – 3,6 kW
	225 °C
	120 V / 220 V
	110 kg
	163 kg
	105 × 97 × 95 cm
	No

Technical specifications may vary slightly depending on the manufacturing batch configuration. Refer to the equipment identification label for the exact data of your unit.

03

Critical Safety

Read all warnings carefully before operating the equipment. Failure to follow these instructions may result in serious injury, property damage or void the warranty.

Risk of burns (large format)

The heating surface reaches 225 °C and is large. Long-sleeved thermal gloves mandatory when placing the substrate. Keep the area free of children, pets and flammable materials.

Gas spring

The upper plate rises assisted by a gas spring. Do not block or force its travel. If you notice abrupt opening or the plate dropping, stop operation and contact Beinsen Technical Service: the spring needs periodic replacement.

Electrical risk

Connect the equipment only to a grounded socket sized for the model's power (see specifications table). Verify the configured voltage (120 V or 220 V) before connecting.

Stability and handling

With a gross weight of up to 163 kg in the 50 × 80 format, install the equipment on level, sturdy flooring. Handling the large model requires mechanical means.

04

Operation Guide

The digital controller lets you configure the press temperature and time for large-format production. The gas spring system facilitates smooth opening of the upper plate.

Power-on and configuration

- 01 Connect the equipment to the mains and turn on the main switch.
- 02 The controller display will light up showing the temperature reading.
- 03 Press SET to enter the configuration menu.
- 04 Adjust the target temperature with the (+) and (–) buttons.
- 05 Press SET again to move to time setting and configure it the same way.
- 06 Press SET to confirm and exit the menu.
- 07 Wait until the upper plate reaches the target temperature.

Large-format pressing process

- 01 Place the large-format substrate on the lower plate, well stretched and centred.
- 02 Apply the transfer paper with the printed side facing the fabric.
- 03 Cover with a Teflon sheet to protect the substrate and the plate.
- 04 Close the equipment by lowering the lever arm to its stop.
- 05 The timer will start when closing is detected.
- 06 When the alarm sounds, release the lever to open. The gas spring will assist the opening.
- 07 Remove the substrate and peel off the transfer paper as instructed by the manufacturer.

05

Maintenance and Troubleshooting

Preventive maintenance

- Before each shift, check that the plates are clean and free of debris.
- Clean the plates while warm using a thermal glove and a microfibre cloth. Never use water or abrasive products.
- Monthly inspect the gas spring: opening must be smooth and the plate must hold its raised position.
- Periodically inspect the pressure regulator and the integrity of the lever arm.
- Check the temperature reading with an independent contact thermometer if you notice inconsistency.
- Request a full inspection of the equipment from an Official Technical Service authorised by Beinsen at least once a year. The gas spring is a wear part and requires periodic replacement.

Troubleshooting

Problem	Probable cause	Solution
The display does not turn on	Loose power cable or no voltage	Check the connection and the configured voltage. If it persists, contact Beinsen Technical Service.
The upper plate does not stay raised	Worn-out gas spring	Stop operation and contact Beinsen Technical Service for spring replacement.
The plate does not reach the target temperature	Damaged sensor	Turn off and contact Beinsen Technical Service.
Marks or uneven transfer	Insufficient pressure or missing Teflon	Adjust the pressure regulator and use intermediate Teflon.
Slower heating than usual	Insufficient voltage for the model's power	Check that the supply line supports the power (see specifications table).

To report any issue, request a repair or purchase genuine spare parts, contact exclusively an Official Technical Service authorized by Beinsen.

06

Legal Notice and Trademarks

Copyright

Copyright © 2025 Beinsen. This guide is protected by international copyright laws. No part of this guide may be reproduced, distributed, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or any information storage and retrieval system, without the prior written consent of Beinsen.

Trademarks

Beinsen and the Beinsen logo are registered trademarks. All other trademarks and copyrights mentioned in this document are the property of their respective owners.

Warranty and technical service

To report any issue, request a repair or purchase genuine spare parts, contact exclusively an Official Technical Service authorized by Beinsen. Find the nearest technical service point through the official website.

Contact

Beinsen

Avenida Alto de las Atalayas, 18 · 30110 Cabezo de Torres (Murcia), Spain
+34 968 902 300 · info@beinsen.com · beinsen.com