


ONE MEANINGFUL GAME

CONSOLE OPERATIONS

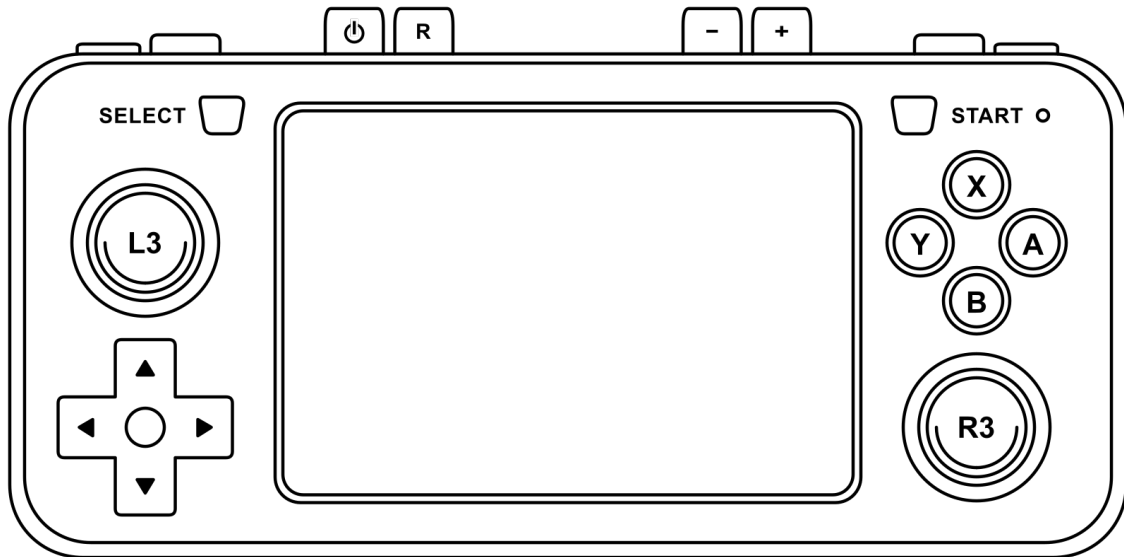

POWER ON	Hold the POWER button until the LED light turns green.
POWER OFF	Press the POWER button and wait until the LED light turns off.
RESET	Press the RESET button to start the next game (the console will reboot).
BATTERY	When the LED light turns red the battery charge is under 30%. Press SELECT + START to enter the Retroarch Quick Menu, the battery level will be on the top right. Press SELECT + START to return to the game.
VOLUME	Press the - / + buttons to decrease or increase the volume. Press and hold the R3 analog stick then press the L3 analog stick to mute the audio.
BRIGHTNESS	Press and hold the R3 analog stick then press UP to increase brightness or DOWN to decrease brightness.
INSERT COIN	Press SELECT to insert a virtual coin.
START	Press START to join the game as Player 1.
PAUSE	Press SELECT + START to pause the game. Press SELECT + START to resume the game.