
ONE MEANINGFUL GAME

CONSOLE OPERATIONS

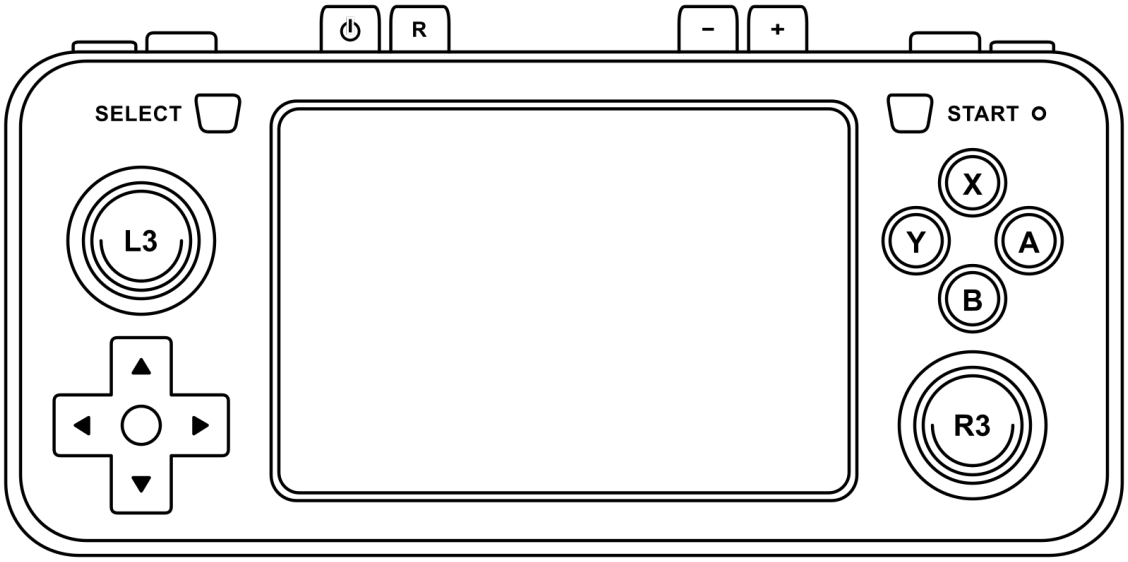

POWER ON	Press and hold the *POWER* button until the *LED* light turns green.
POWER OFF	Press the *POWER* button and wait until the *LED* light turns off. If enabled in *omg.cfg* high scores/data will be automatically saved.
RESET	Press the *RESET* button to reboot the console and play the next game. High Scores/Save Data WILL NOT be saved.
BATTERY	When the *LED* light turns red the battery level is below 20%. Press *SELECT* + *START* to enter the quick menu, the battery level will be on the top right. Press *SELECT* + *START* to return to the game.
VOLUME	Press the - / + buttons to decrease or increase the volume. Press and hold *R3* then press *L3* to mute/unmute the audio.
BRIGHTNESS	Press and hold *R3* then press *UP ARROW* to increase the brightness and *DOWN ARROW* to decrease it. Default is +20 from 0.
CONTRAST	Press and hold *R3* then press *RIGHT ARROW* to increase the contrast and *LEFT ARROW* to decrease it. Default is +6 from 0.
INSERT COIN	Press *SELECT* to insert a virtual coin.
START	Press *START* to start the game.
PAUSE	Press *SELECT* + *START* to pause/resume the game.