


ONE MEANINGFUL GAME

CONSOLE OPERATIONS

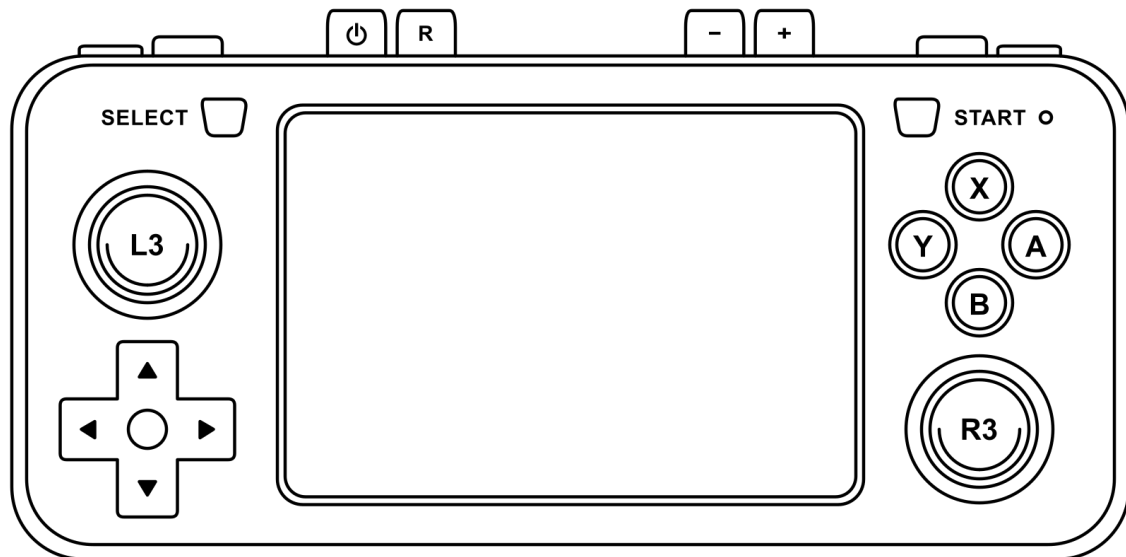

POWER ON	Press and hold the POWER button until the LED light turns green.
POWER OFF	Press the POWER button and wait until the LED light turns off. High Scores/Save Data will be saved.
RESET	Press the RESET button to reboot the console and play the next game. High Scores/Save Data WILL NOT be saved.
BATTERY	When the LED light turns red the battery level is below 30%. Press SELECT + START to enter the Retroarch Quick Menu, the battery level will be on the top right. Press SELECT + START to return to the game.
VOLUME	Press the - / + buttons to decrease or increase the volume. Press and hold R3 then press L3 to mute/unmute the audio.
BRIGHTNESS	Press and hold R3 then press UP ARROW to increase the brightness and DOWN ARROW to decrease the brightness.
INSERT COIN	Press SELECT to insert a virtual coin
START	Press START to start the game
PAUSE	Press SELECT + START to pause/resume the game.