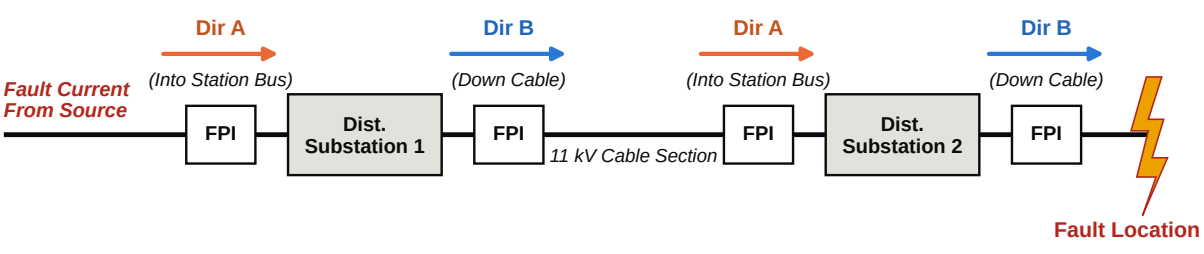
Dir A
Dir B
Dir A
Dir B
(Into Station Bus)
(Down Cable)
(Into Station Bus)
(Down Cable)
Fault Current From Source
FPI
Dist. Substation 1
FPI
11 kV Cable Section
FPI
Dist. Substation 2
FPI
Fault Location