

MULTILASER^{PRO))}

MANUAL DE CONFIGURAÇÃO

Série TITAN – C600, C610, C620 e C650

Caio Barbosa
caio.barbosa@multilaser.com.br

Este documento contém informações confidenciais e sigilosas, sua distribuição não é permitida sem expressa autorização do departamento de pós-vendas da linha Multilaser PRO.

CONTROLE DE VERSÃO

Versão	Data	Responsável	Descrição
1.0	08/12/2021	Caio Barbosa	Criação do documento

SUMÁRIO

1. ATIVAÇÃO OLT	6
1.1. Acesso ao Equipamento	6
1.2. Configurar Data e Hora	6
1.3. Backup.....	7
1.3.1. Backup Manual.....	7
1.3.2. Backup Automático	7
1.4. Alterar Hostname da OLT	7
1.5. Habilitar Acesso Externo	8
1.5.1. Telnet	8
1.5.2. SSH.....	8
1.6. Criação de Usuário	8
1.7. Habilitar Portas PON	9
1.8. Criação de VLAN	10
1.9. Criação de Perfil de VLAN	10
1.10. Habilitar Portas de UPLINK.....	10
1.11. Adicionar VLAN's a UPLINK	11
1.12. Gerência INBAND e OUTBAND	11
2. CONFIGURAÇÃO ONU	12
2.1. Perfil de ONU	12
2.1.1. F601.....	12
2.1.2. F612.....	12
2.1.3. F660.....	13
2.1.4. F670L.....	14
2.1.5. F680.....	15
2.1.6. F6600	16
2.2. Profile TCONT	16
2.3. Profile Download.....	17
2.4. Provisionamento Manual.....	17
2.4.1. Configuração ONU	18
2.4.2. Configuração VPORT	19




2.4.3. Configuração WAN em modo PPPOE.....	19
2.4.4. Configuração WAN em modo DHCP	19
2.4.5. Configuração Bridge.....	19
2.5. Acesso Remoto	20
2.6. WIFI	20
2.7. Provisionamento via PROFILE	20
2.7.1. LINE PROFILE.....	20
2.7.2. SERVICE PROFILE	21
2.7.3. Provisionamento	21
2.8. Cenário VOZ	22
2.8.1. Configurar Servidor VOZ.....	22
2.8.2. Script Dados+VOZ	22
2.9. Cenário AAA.....	24
2.9.1. Script AAA.....	24
2.10. Cenário QINQ.....	26
2.10.1. Script QINQ.....	26
3. Atualização ONU.....	27
3.1. Atualização Manual de forma Local.....	27
3.1.1. Upload firmware para dentro da OLT.....	27
3.1.2. Comando informando a firmware que deseja utilizar no upgrade.	27
3.1.3. Status Update ONU	27
3.2. Atualização via TASK	28
3.2.1. Firmware ONU.....	28
3.2.2. Criação da TASK	29
3.2.3. Status da TASK.....	30
3.2.4. Status Update ONU	30
3.2.5. Status Final da TASK	31
4. COMANDOS PARA TROUBLESHOOTING	31
4.1. ONU	31
4.1.1. Potência ONU	31
4.1.2. Detalhes ONU.....	32
4.1.3. ONUS provisionadas	33
4.1.4. Firmware ONU.....	34

4.1.5. Status da WAN da ONU	34
4.1.6. Temperatura ONU	35
4.1.7. Remover ONU	35
4.1.8. ONUS Não Provisionadas	36
4.1.9. Distância da ONU	36
4.1.10. ONU Retornando Sinal	36
4.1.11. ONU Bridge entregar DHCP	36
4.1.12. ONUS por PON	37
4.1.13. Status das ONUS	37
4.1.14. Firewall ONU	38
4.3. OLT	38
4.3.1. Placas instaladas no Chassi	38
4.3.2. Fonte de alimentação	39
4.3.3. Uptime da OLT	39
4.3.4. Processamento OLT	40
4.3.5. Detalhes do Módulo Óptico	40
4.3.6. Status das FANS	41
4.3.7. Restore OLT	42
4.3.8. Status das Portas de UPLINK	42
4.3.9. MACS atrelados a VLAN	42
4.3.10. Tráfego de mac-address	42
4.3.11. ALLOC ID	43
4.3.12. Remover Criptografia OLT	44
4.4. PON	44
4.4.1. Potência RX da PON	44
4.4.2. Potência TX da PON	45
4.4.3. ONUS Registradas por Porta PON	45
4.4.4. Banda Descontada da Porta	45
4.4.5. Copy PON	46
4.5. Alarmes	46
4.5.1. Alarmes Ativos	46
4.5.2. Histórico	47

1. ATIVAÇÃO OLT

1.1. Acesso ao Equipamento

É necessário utilizar o cabo fornecido junto com o equipamento, pois seu arranje de pinos é diferente do padrão de outros equipamentos. O acesso via cabo console pode ser feito através da porta CLI presente na controladora da OLT. (Speed 115200) através de um software terminal.

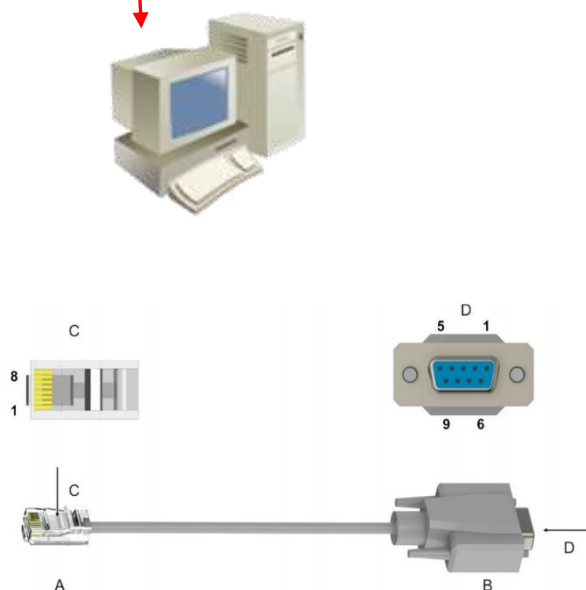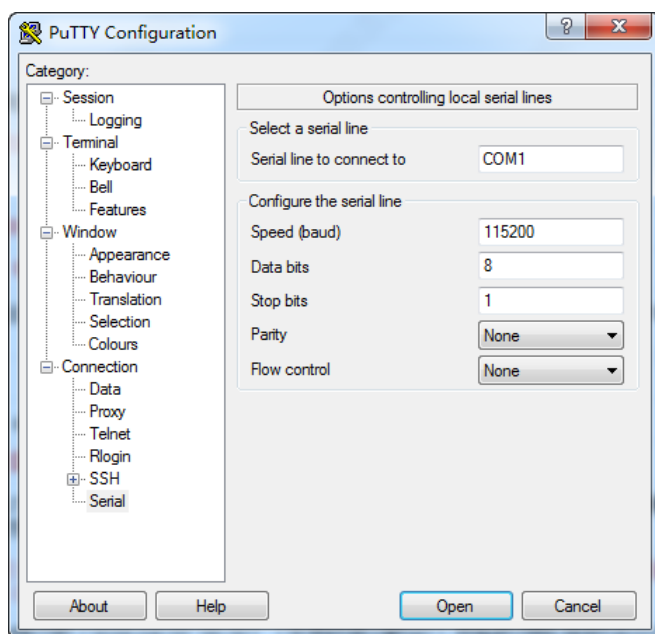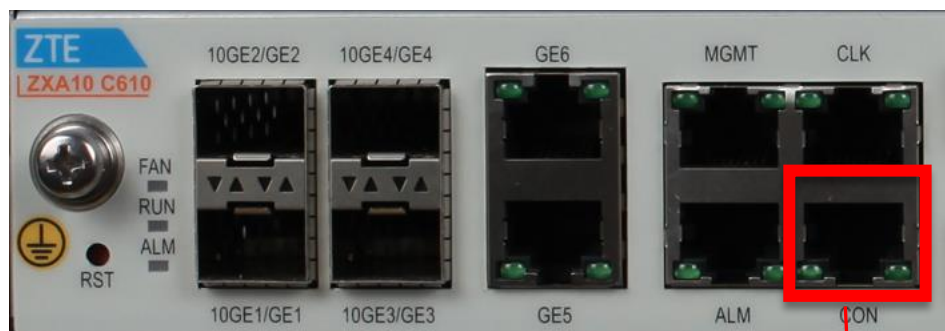

1.2. Configurar Data e Hora

OLT#clock set 09:35:00 12-22-2021

```
OLT#clock set 09:35:00 12-22-2021
OLT#
```

1.3. Backup

1.3.1. Backup Manual

```
OLT#  
OLT#copy ftp root: /datadisk0/DATA0/startrun.dat //10.0.250.253/startrun.dat@zte:zte  
Connect successfully! Start copying file  
100% completed 00:00:00  
Put file successfully! Sent 32065 bytes!  
OLT#
```

```
OLT#copy ftp root: /datadisk0/DATA0/startrun.dat //10.0.250.253/startrun.dat@zte:zte  
Connect successfully! Start copying file  
100% completed 00:00:00  
Put file successfully! Sent 32065 bytes!  
OLT#
```

1.3.2. Backup Automático

```
OLT#conf t  
Enter configuration commands, one per line. End with CTRL/Z.  
OLT(config)#startrun backup-to server 10.0.250.253 transport-type ftp username backup  
password zte path ZTE  
OLT(config)#auto-write everyday 11:10:00  
OLT(config)#
```

```
OLT#conf t  
Enter configuration commands, one per line. End with CTRL/Z.  
OLT(config)#startrun backup-to server 10.0.250.253 transport-type ftp username backup password zte path ZTE  
OLT(config)#auto-write everyday 11:10:00  
OLT(config)#  
OLT#
```

Obs.: Para ter sucesso nos dois cenários de backup, você necessita ter acesso a um Servidor de FTP local ou remoto.

1.4. Alterar Hostname da OLT

```
OLT#conf t  
Enter configuration commands, one per line. End with CTRL/Z.  
OLT(config)#hostname OLT2  
OLT2(config)#
```

```
OLT#conf t  
Enter configuration commands, one per line. End with CTRL/Z.  
OLT(config)#hostname OLT2  
OLT2(config)#
```


1.5. Habilitar Acesso Externo

1.5.1. Telnet

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#line telnet server enable

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#line telnet server enable
```

1.5.2. SSH

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#ssh server enable

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#ssh server enable
```

1.6. Criação de Usuário

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#system-user

ZXAN(config-system-user)#user-name zte

ZXAN(config-system-user-username)#password Abc@101231!

ZXAN(config-system-user-username)#bind authentication-template 1

ZXAN(config-system-user-username)#bind authorization-template 1

ZXAN(config-system-user-username)#exit

ZXAN(config-system-user)#exit

ZXAN(config)#aaa-authentication-template 2001

ZXAN(config-aaa-authen-template)#aaa-authentication-type local

ZXAN(config-aaa-authen-template)#exit

ZXAN(config)#aaa-authorization-template 2001

ZXAN(config-aaa-author-template)#aaa-authorization-type local

ZXAN(config-aaa-author-template)#exit

ZXAN(config)#system-user

ZXAN(config-system-user)#authentication-template 1

ZXAN(config-system-user-authen-temp)#bind aaa-authentication-template 2001

ZXAN(config-system-user-authen-temp)#exit

ZXAN(config-system-user)#authorization-template 1

ZXAN(config-system-user-author-temp)#bind aaa-authorization-template 2001

ZXAN(config-system-user-author-temp)#local-privilege-level 15

ZXAN(config-system-user-author-temp)#exit

ZXAN(config-system-user)#

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#system-user
ZXAN(config-system-user)#user-name zte
ZXAN(config-system-user-username)#password Abc@101231!
ZXAN(config-system-user-username)#bind authentication-template 1
ZXAN(config-system-user-username)#bind authorization-template 1
ZXAN(config-system-user-username)#exit
ZXAN(config-system-user)#exit
ZXAN(config)#aaa-authentication-template 2001
ZXAN(config-aaa-authen-template)#aaa-authentication-type local
ZXAN(config-aaa-authen-template)#exit
ZXAN(config)#aaa-authorization-template 2001
ZXAN(config-aaa-author-template)#aaa-authorization-type local
ZXAN(config-aaa-author-template)#exit
ZXAN(config)#system-user
ZXAN(config-system-user)#authentication-template 1
ZXAN(config-system-user-authen-temp)#bind aaa-authentication-template 2001
ZXAN(config-system-user-authen-temp)#exit
ZXAN(config-system-user)#authorization-template 1
ZXAN(config-system-user-author-temp)#bind aaa-authorization-template 2001
ZXAN(config-system-user-author-temp)#local-privilege-level 15
ZXAN(config-system-user-author-temp)#exit
ZXAN(config-system-user)#
ZXAN#
```

1.7. Habilitar Portas PON

```
interface gpon_olt-1/3/1
no shutdown
exit
```

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#interface gpon_olt-1/3/1
ZXAN(config-if-gpon_olt-1/3/1)#no shutdown
```

Obs.: Não é possível liberar todas as portas de uma só vez como na série anterior.

1.8. Criação de VLAN

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#vlan 999

ZXAN(config-sub-999)#description TREINAMENTO

ZXAN(config-sub-999)#

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#vlan 999
ZXAN(config-sub-999)#description TREINAMENTO
ZXAN(config-sub-999)#
```

1.9. Criação de Perfil de VLAN

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#gpon

ZXAN(config-gpon)#onu profile vlan 999 tag-mode tag cvlan 999

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#gpon
ZXAN(config-gpon)#onu profile vlan 999 tag-mode tag cvlan 999
ZXAN(config-gpon)#
```

1.10. Habilitar Portas de UPLINK

Utilizando o comando [3.3.8](#) você seleciona a porta que deseja utilizar e segue o exemplo abaixo:

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#interface xgei-1/1/1

ZXAN(config-if-xgei-1/1/1)#no shutdown

ZXAN(config-if-xgei-1/1/1)#

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#interface xgei-1/1/1
ZXAN(config-if-xgei-1/1/1)#no shutdown
ZXAN(config-if-xgei-1/1/1)#
```

1.11. Adicionar VLAN's a UPLINK

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#interface xgei-1/1/1

ZXAN(config-if-xgei-1/1/1)#switchport vlan 99 tag

ZXAN(config-if-xgei-1/1/1)#

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#interface xgei-1/1/1
ZXAN(config-if-xgei-1/1/1)#switchport vlan 99 tag
ZXAN(config-if-xgei-1/1/1)#
```

1.12. Gerência INBAND e OUTBAND

INBAND:

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#interface vlan999

ZXAN(config-if-vlan999)#ip address 14.14.14.14 255.255.255.0

ZXAN(config-if-vlan999)#

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#interface vlan999
ZXAN(config-if-vlan999)#ip address 14.14.14.14 255.255.255.0
ZXAN(config-if-vlan999)#
```

OUTBAND:

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#interface mgmt_eth

ZXAN(config-if-mgmt_eth)#ip address 14.14.14.2 255.255.255.0

ZXAN(config-if-mgmt_eth)#exit

ZXAN(config)#ip route vrf mng 0.0.0.0 0.0.0.0 14.14.14.1

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#interface mgmt_eth
ZXAN(config-if-mgmt_eth)#ip address 14.14.14.2 255.255.255.0
ZXAN(config-if-mgmt_eth)#exit
ZXAN(config)#ip route vrf mng 0.0.0.0 0.0.0.0 14.14.14.1
ZXAN(config)#
```

2. CONFIGURAÇÃO ONU

2.1. Perfil de ONU

2.1.1. F601



ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#pon

ZXAN(config-pon)#\$description 1GE_BRIDGE max-tcont 7 max-gemport 32 max-switch-perslot 8 max-flow-perswitch 8 max-veip 4

ZXAN(config-pon)# onu-type-if F601 eth_0/1

ZXAN(config-pon)#

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#pon
ZXAN(config-pon)#$description 1GE_BRIDGE max-tcont 7 max-gemport 32 max-switch-perslot 8 max-flow-perswitch 8 max-veip 4
ZXAN(config-pon)# onu-type-if F601 eth_0/1
ZXAN(config-pon)#
```

2.1.2. F612



ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#pon

```
ZXAN(config-pon)#$oip max-tcont 7 max-gemport 32 max-switch-perslot 8 max-flow-
perswitch 8 max-iphost 5 max-ipv6-host 5
ZXAN(config-pon)# onu-type-if ZTE-F612 eth_0/1
ZXAN(config-pon)# onu-type-if ZTE-F612 eth_0/2
ZXAN(config-pon)# onu-type-if ZTE-F612 pots_0/1
```

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#pon
ZXAN(config-pon)#$oip max-tcont 7 max-gemport 32 max-switch-perslot 8 max-flow-perswitch 8 max-iphost 5 max-ipv6-host 5
ZXAN(config-pon)# onu-type-if ZTE-F612 eth_0/1
ZXAN(config-pon)# onu-type-if ZTE-F612 eth_0/2
ZXAN(config-pon)# onu-type-if ZTE-F612 pots_0/1
```

2.1.3. F660



```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#pon
ZXAN(config-pon)# onu-type ZTE-F660 gpon max-tcont 5 max-gemport 32 max-switch-
perslot 2 max-flow-perswitch 8 max-iphost 5
ZXAN(config-pon)# onu-type-if F660 eth_0/1
ZXAN(config-pon)# onu-type-if F660 eth_0/2
ZXAN(config-pon)# onu-type-if F660 eth_0/3
ZXAN(config-pon)# onu-type-if F660 eth_0/4
ZXAN(config-pon)# onu-type-if F660 pots_0/1
ZXAN(config-pon)# onu-type-if F660 pots_0/2
ZXAN(config-pon)# onu-type-if F660 wifi_0/1
ZXAN(config-pon)# onu-type-if F660 wifi_0/2
ZXAN(config-pon)# onu-type-if F660 wifi_0/3
ZXAN(config-pon)# onu-type-if F660 wifi_0/4
```

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#pon
ZXAN(config-pon)# onu-type ZTE-F660 gpon max-tcont 5 max-gemport 32 max-switch-perslot 2 max-flow-perswitch 8 max-iphost 5
ZXAN(config-pon)# onu-type-if F660 eth_0/1
ZXAN(config-pon)# onu-type-if F660 eth_0/2
ZXAN(config-pon)# onu-type-if F660 eth_0/3
ZXAN(config-pon)# onu-type-if F660 eth_0/4
ZXAN(config-pon)# onu-type-if F660 pots_0/1
ZXAN(config-pon)# onu-type-if F660 pots_0/2
ZXAN(config-pon)# onu-type-if F660 wifi_0/1
ZXAN(config-pon)# onu-type-if F660 wifi_0/2
ZXAN(config-pon)# onu-type-if F660 wifi_0/3
ZXAN(config-pon)# onu-type-if F660 wifi_0/4
ZXAN(config-pon)#
```

2.1.4. F670L



ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#pon

ZXAN(config-pon)#\$,4WiFi5 max-tcont 7 max-gemport 32 max-switch-perslot 8 max-flow-perswitch 8 max-iphost 5 max-ipv6-host 5

ZXAN(config-pon)# onu-type-if F670L eth_0/1

ZXAN(config-pon)# onu-type-if F670L eth_0/2

ZXAN(config-pon)# onu-type-if F670L eth_0/3

ZXAN(config-pon)# onu-type-if F670L eth_0/4

ZXAN(config-pon)# onu-type-if F670L pots_0/1

ZXAN(config-pon)# onu-type-if F670L wifi_0/1

ZXAN(config-pon)# onu-type-if F670L wifi_0/2

ZXAN(config-pon)# onu-type-if F670L wifi_0/3

ZXAN(config-pon)# onu-type-if F670L wifi_0/4

ZXAN(config-pon)# onu-type-if F670L wifi_0/5

ZXAN(config-pon)# onu-type-if F670L wifi_0/6

ZXAN(config-pon)# onu-type-if F670L wifi_0/7

ZXAN(config-pon)# onu-type-if F670L wifi_0/8

ZXAN(config-pon)#

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#pon

ZXAN(config-pon)#\$,4WiFi5 max-tcont 7 max-gemport 32 max-switch-perslot 8 max-flow-perswitch 8 max-iphost 5 max-ipv6-host 5

ZXAN(config-pon)# onu-type-if F670L eth_0/1

ZXAN(config-pon)# onu-type-if F670L eth_0/2

ZXAN(config-pon)# onu-type-if F670L eth_0/3

ZXAN(config-pon)# onu-type-if F670L eth_0/4

ZXAN(config-pon)# onu-type-if F670L pots_0/1

ZXAN(config-pon)# onu-type-if F670L wifi_0/1

ZXAN(config-pon)# onu-type-if F670L wifi_0/2

ZXAN(config-pon)# onu-type-if F670L wifi_0/3

ZXAN(config-pon)# onu-type-if F670L wifi_0/4

ZXAN(config-pon)# onu-type-if F670L wifi_0/5

ZXAN(config-pon)# onu-type-if F670L wifi_0/6

ZXAN(config-pon)# onu-type-if F670L wifi_0/7

ZXAN(config-pon)# onu-type-if F670L wifi_0/8

ZXAN(config-pon)#

2.1.5. F680



ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#pon

ZXAN(config-pon)#\$4WiFi5 max-tcont 7 max-gemport 32 max-switch-perslot 8 max-flow-perswitch 8 max-iphost 5 max-ipv6-host 5

ZXAN(config-pon)# onu-type-if F680 eth_0/1

ZXAN(config-pon)# onu-type-if F680 eth_0/2

ZXAN(config-pon)# onu-type-if F680 eth_0/3

ZXAN(config-pon)# onu-type-if F680 eth_0/4

ZXAN(config-pon)# onu-type-if F680 pots_0/2

ZXAN(config-pon)# onu-type-if F680 wifi_0/1

ZXAN(config-pon)# onu-type-if F680 wifi_0/2

ZXAN(config-pon)# onu-type-if F680 wifi_0/3

ZXAN(config-pon)# onu-type-if F680 wifi_0/4

ZXAN(config-pon)# onu-type-if F680 wifi_0/5

ZXAN(config-pon)# onu-type-if F680 wifi_0/6

ZXAN(config-pon)# onu-type-if F680 wifi_0/7

ZXAN(config-pon)# onu-type-if F680 wifi_0/8

ZXAN(config-pon)# onu-type-if F680 pots_0/1

ZXAN(config-pon)# onu-type-if F680 pots_0/2

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#pon

ZXAN(config-pon)#\$4WiFi5 max-tcont 7 max-gemport 32 max-switch-perslot 8 max-flow-perswitch 8 max-iphost 5 max-ipv6-host 5

ZXAN(config-pon)# onu-type-if F680 eth_0/1

ZXAN(config-pon)# onu-type-if F680 eth_0/2

ZXAN(config-pon)# onu-type-if F680 eth_0/3

ZXAN(config-pon)# onu-type-if F680 eth_0/4

ZXAN(config-pon)# onu-type-if F680 pots_0/2

ZXAN(config-pon)# onu-type-if F680 wifi_0/1

ZXAN(config-pon)# onu-type-if F680 wifi_0/2

ZXAN(config-pon)# onu-type-if F680 wifi_0/3

ZXAN(config-pon)# onu-type-if F680 wifi_0/4

ZXAN(config-pon)# onu-type-if F680 wifi_0/5

ZXAN(config-pon)# onu-type-if F680 wifi_0/6

ZXAN(config-pon)# onu-type-if F680 wifi_0/7

ZXAN(config-pon)# onu-type-if F680 wifi_0/8

ZXAN(config-pon)# onu-type-if F680 pots_0/1

ZXAN(config-pon)# onu-type-if F680 pots_0/2

ZXAN(config-pon)#

2.1.6. F6600



ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#pon

ZXAN(config-pon)#\$ax-tcont 7 max-gemport 32 max-switch-perslot 8 max-flow-perswitch 8 max-iphost 5 max-ipv6-host 5

ZXAN(config-pon)# onu-type-if F6600 eth_0/1

ZXAN(config-pon)# onu-type-if F6600 eth_0/2

ZXAN(config-pon)# onu-type-if F6600 eth_0/3

ZXAN(config-pon)# onu-type-if F6600 eth_0/4

ZXAN(config-pon)# onu-type-if F6600 pots_0/1

ZXAN(config-pon)# onu-type-if F6600 pots_0/2

ZXAN(config-pon)# onu-type-if F6600 wifi_0/1

ZXAN(config-pon)# onu-type-if F6600 wifi_0/2

ZXAN(config-pon)# onu-type-if F6600 wifi_0/3

ZXAN(config-pon)# onu-type-if F6600 wifi_0/4

ZXAN(config-pon)# onu-type-if F6600 wifi_0/5

ZXAN(config-pon)# onu-type-if F6600 wifi_0/6

ZXAN(config-pon)# onu-type-if F6600 wifi_0/7

ZXAN(config-pon)# onu-type-if F6600 wifi_0/8

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#pon

ZXAN(config-pon)#\$ax-tcont 7 max-gemport 32 max-switch-perslot 8 max-flow-perswitch 8 max-iphost 5 max-ipv6-host 5

ZXAN(config-pon)# onu-type-if F6600 eth_0/1

ZXAN(config-pon)# onu-type-if F6600 eth_0/2

ZXAN(config-pon)# onu-type-if F6600 eth_0/3

ZXAN(config-pon)# onu-type-if F6600 eth_0/4

ZXAN(config-pon)# onu-type-if F6600 pots_0/1

ZXAN(config-pon)# onu-type-if F6600 pots_0/2

ZXAN(config-pon)# onu-type-if F6600 wifi_0/1

ZXAN(config-pon)# onu-type-if F6600 wifi_0/2

ZXAN(config-pon)# onu-type-if F6600 wifi_0/3

ZXAN(config-pon)# onu-type-if F6600 wifi_0/4

ZXAN(config-pon)# onu-type-if F6600 wifi_0/5

ZXAN(config-pon)# onu-type-if F6600 wifi_0/6

ZXAN(config-pon)# onu-type-if F6600 wifi_0/7

ZXAN(config-pon)# onu-type-if F6600 wifi_0/8

ZXAN(config-pon)#

2.2. Profile TCONT

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#gpon

ZXAN(config-gpon)#profile tcont 1G type 4 maximum 1024000

```

ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#
ZXAN(config)#gpon
ZXAN(config-gpon)#profile tcont 1G type 4 maximum 1024000
ZXAN(config-gpon)#
ZXAN#

```

2.3. Profile Download

```
ZXAN#conf t
```

Enter configuration commands, one per line. End with CTRL/Z.

```
ZXAN(config)#$ traffic-profile 1G cir 1024000 cbs 1024 pir 1024000 pbs 1024 color-mode
blind policer-type enhanced_mef coupling-flag enable
```

```
ZXAN(config)#
```

```

ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#$r 1024000 cbs 1024 pir 1024000 pbs 1024 color-mode blind policer-type enhanced_mef coupling-flag enable
ZXAN(config)#

```

2.4. Provisionamento Manual

Se inicia pelo commando que pesquisa das onus não Provisionadas.

```
OLT#show pon onu unc
```

```

OLT#show pon onu unc
oltIndex      Model          SN              PW
-----
gpon_olt-1/1/1  F670LV9.0     ZTEGC4A8494B   GC4A8494B

```

Depois, acessar a interface da PON e Pesquisar qual ID está disponível para configurar.

```
OLT#conf t
```

Enter configuration commands, one per line. End with CTRL/Z.

```
OLT(config)#interface gpon_olt-1/1/1
```

```
OLT(config-if-gpon_olt-1/1/1)#show this
```

```
OLT#conf t
Enter configuration commands, one per line. End with CTRL/Z.
OLT(config)#inter
OLT(config)#interface gpo
OLT(config)#interface gpon_olt-1/1/1
OLT(config-if-gpon_olt-1/1/1)#show this
!<xpon>
onu 1 type F601 sn ZTEGCD7FF81F
onu 2 type F6600 sn ZTEGC7879B73
onu 11 type F670L sn ZTEGC4BA5555
onu 12 type F670L sn ZTEGC4BAE7A2
onu 20 type F660 sn ZTEGCB01EE7
onu 100 type F670L sn ZTEGCB01EE8
onu 101 type F670L sn ZTEGCB01EE9
bind-onu 12 profile line internet
!</xpon>
!<MSAN>
no shutdown
!</MSAN>
```

Com essas informações, adicionar a ONU.

OLT(config-if-gpon_olt-1/1/1)#onu 102 type F670L sn ZTEGC4A8494B

```
OLT(config-if-gpon_olt-1/1/1)#onu 102 ty
OLT(config-if-gpon_olt-1/1/1)#onu 102 type F670L sn
OLT(config-if-gpon_olt-1/1/1)#onu 102 type F670L sn ZTEGC4A8494B
OLT(config-if-gpon_olt-1/1/1)#
```

2.4.1. Configuração ONU

```
OLT(config)#interface gpon_onu-1/1/1:102
OLT(config-if-gpon_onu-1/1/1:102)#vport-mode manual
OLT(config-if-gpon_onu-1/1/1:102)#tcont 1 profile 1G
OLT(config-if-gpon_onu-1/1/1:102)#gemport 1 tcont 1
OLT(config-if-gpon_onu-1/1/1:102)#vport 1 map-type vlan
OLT(config-if-gpon_onu-1/1/1:102)#vport-map 1 1 vlan 1000
OLT(config-if-gpon_onu-1/1/1:102)#exit
```

```
OLT(config)#interface gpon_onu-1/1/1:102
OLT(config-if-gpon_onu-1/1/1:102)#show this
!<xpon>
vport-mode manual
tcont 1 profile 1G
gemport 1 tcont 1
vport 1 map-type vlan
vport-map 1 1 vlan 1000
!</xpon>
```

2.4.2. Configuração VPORT

OLT#conf t

Enter configuration commands, one per line. End with CTRL/Z.

OLT(config)#interface vport-1/1/1.102:1

OLT(config-if-vport-1/1/1.102:1)#service-port 1 user-vlan 1000 vlan 1000 ingress 1G egress 1G

OLT(config-if-vport-1/1/1.102:1)#

```
OLT#conf t
Enter configuration commands, one per line. End with CTRL/Z.
OLT(config)#interface vport-1/1/1.102:1
OLT(config-if-vport-1/1/1.102:1)#service-port 1 user-vlan 1000 vlan 1000 ingress 1G egress 1G
OLT(config-if-vport-1/1/1.102:1)#
```

Obs.: Caso não queira regular a sua conexão apenas pelo TCONT, não precisa informar o ingress e egress.

2.4.3. Configuração WAN em modo PPPOE

OLT(config)#pon-onu-mng gpon_onu-1/1/1:102

OLT(config-gpon-onu-mng)#service 1 gempport 1 vlan 1000

OLT(config-gpon-onu-mng)#wan-ip ipv4 mode pppoe username f601 password f601 vlan-profile 1000 host 1

OLT(config-if-vport-1/1/1.102:1)#exit

```
OLT(config)#pon-onu-mng gpon_onu-1/1/1:102
OLT(config-gpon-onu-mng)#show this
!<xpon>
  service 1 gempport 1 vlan 1000
  wan-ip ipv4 mode pppoe username f601 password ***** vlan-profile 1000 host 1
!</xpon>
```

2.4.4. Configuração WAN em modo DHCP

OLT(config)#pon-onu-mng gpon_onu-1/1/1:102

OLT(config-gpon-onu-mng)#service 1 gempport 1 vlan 1000

OLT(config-gpon-onu-mng)#wan-ip 1 ipv4 mode dhcp vlan-profile 1000 host 1

OLT(config-if-vport-1/1/1.102:1)#exit

```
OLT(config)#pon-onu-mng gpon_onu-1/1/1:102
OLT(config-gpon-onu-mng)#show this
!<xpon>
  service 1 gempport 1 vlan 1000
  wan-ip ipv4 mode dhcp vlan-profile 1000 host 1
!</xpon>
```

2.4.5. Configuração Bridge

OLT(config)#pon-onu-mng gpon_onu-1/1/1:102

OLT(config-gpon-onu-mng)#vlan port eth_0/1 mode tag vlan 1000

OLT(config-if-vport-1/1/1.102:1)#exit

```
OLT(config)#pon-onu-mng gpon_onu-1/1/1:102
OLT(config-gpon-onu-mng)#show this
!<xpon>
  service 1 gport 1 vlan 1000
  vlan port eth_0/1 mode tag vlan 1000
```

2.5. Acesso Remoto

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#pon-onu-mng gpon_onu-1/13/1:4

ZXAN(config-gpon-onu-mng)#security-mgmt 1 state enable mode forward ingress-type
iphost 1 protocol web

ZXAN(config-gpon-onu-mng)#

```
ZXAN(config)#
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#pon-onu-mng gpon_onu-1/13/1:4
ZXAN(config-gpon-onu-mng)#security-mgmt 1 state enable mode forward ingress-type iphost 1 protocol web
ZXAN(config-gpon-onu-mng)#
ZXAN#
```

2.6. WIFI

OLT#conf t

Enter configuration commands, one per line. End with CTRL/Z.

OLT(config)#pon-onu-mng gpon_onu-1/1/1:1

OLT(config-gpon-onu-mng)#ssid ctrl wifi_0/1 name TREINAMENTO

OLT(config-gpon-onu-mng)#ssid auth wpa wifi_0/1 key 12345678

OLT(config-gpon-onu-mng)#ssid ctrl wifi_0/5 name TREINAMENTO5

OLT(config-gpon-onu-mng)#ssid auth wpa wifi_0/5 key 87654321

```
OLT#conf t
Enter configuration commands, one per line. End with CTRL/Z.
OLT(config)#pon-onu-mng gpon_onu-1/1/1:1
OLT(config-gpon-onu-mng)#ssid ctrl wifi_0/1 name TREINAMENTO
OLT(config-gpon-onu-mng)#ssid auth wpa wifi_0/1 key 12345678
OLT(config-gpon-onu-mng)#ssid ctrl wifi_0/5 name TREINAMENTO5
OLT(config-gpon-onu-mng)#ssid auth wpa wifi_0/5 key 87654321
OLT(config-gpon-onu-mng)#
```

2.7. Provisionamento via PROFILE

2.7.1. LINE PROFILE

OLT#conf t

Enter configuration commands, one per line. End with CTRL/Z.

OLT(config)#pon

OLT(config-pon)#onu-profile gpon line TREINAMENTO

OLT(config-pon-gpon-line-TREINAMENTO)# vport-mode manual

OLT(config-pon-gpon-line-TREINAMENTO)# tcont 1 profile 1G

```
OLT(config-pon-gpon-line-TREINAMENTO)# gemport 1 tcont 1
OLT(config-pon-gpon-line-TREINAMENTO)# service 1 gemport 1 vlan 1000
OLT(config-pon-gpon-line-TREINAMENTO)# vport 1 map-type vlan
OLT(config-pon-gpon-line-TREINAMENTO)#
```

```
OLT#conf t
Enter configuration commands, one per line. End with CTRL/Z.
OLT(config)#pon
OLT(config-pon)#onu-profile gpon line TREINAMENTO
OLT(config-pon-gpon-line-TREINAMENTO)# vport-mode manual
OLT(config-pon-gpon-line-TREINAMENTO)# tcont 1 profile 1G
OLT(config-pon-gpon-line-TREINAMENTO)# gemport 1 tcont 1
OLT(config-pon-gpon-line-TREINAMENTO)# service 1 gemport 1 vlan 1000
OLT(config-pon-gpon-line-TREINAMENTO)# vport 1 map-type vlan
OLT(config-pon-gpon-line-TREINAMENTO)#
OLT(config-pon-gpon-line-TREINAMENTO)#
OLT#
```

2.7.2. SERVICE PROFILE

```
OLT#conf t
Enter configuration commands, one per line. End with CTRL/Z.
OLT(config)#pon
OLT(config-pon)#onu-profile gpon service PPPOE
OLT(config-pon-gpon-service-PPPOE)#wan-ip ipv4 mode pppoe username zte password zte
vlan-profile 1000 host 1
OLT(config-pon-gpon-service-PPPOE)#
```

```
OLT#conf t
Enter configuration commands, one per line. End with CTRL/Z.
OLT(config)#pon
OLT(config-pon)#onu-profile gpon service PPPOE
OLT(config-pon-gpon-service-PPPOE)#wan-ip ipv4 mode pppoe username zte password zte vlan-profile 1000 host 1
OLT(config-pon-gpon-service-PPPOE)#
```

2.7.3. Provisionamento

```
OLT(config)#interface gpon_olt-1/1/1
OLT(config-if-gpon_olt-1/1/1)#onu 1 type F6600 sn ZTEGC7879B73
OLT(config-if-gpon_olt-1/1/1)#bind-onu 1 profile line TREINAMENTO
OLT(config-if-gpon_olt-1/1/1)#bind-onu 1 profile service PPPOE
OLT(config-if-gpon_olt-1/1/1)#exit
OLT(config)#interface vport-1/1/1.1:1
OLT(config-if-vport-1/1/1.1:1)#service-port 1 user-vlan 1000 vlan 1000
OLT(config-if-vport-1/1/1.1:1)#
```



```
OLT#conf t
Enter configuration commands, one per line. End with CTRL/Z.
OLT(config)#interface gpon_olt-1/1/1
OLT(config-if-gpon_olt-1/1/1)#onu 1 type F6600 sn ZTEGC7879B73
OLT(config-if-gpon_olt-1/1/1)#bind-onu 1 profile line TREINAMENTO
OLT(config-if-gpon_olt-1/1/1)#bind-onu 1 profile service PPP0E
OLT(config-if-gpon_olt-1/1/1)#
OLT#conf t
Enter configuration commands, one per line. End with CTRL/Z.
OLT(config)#inter
OLT(config)#interface vp
OLT(config)#interface vport-1/1/1.1:1
OLT(config-if-vport-1/1/1.1:1)#ser
OLT(config-if-vport-1/1/1.1:1)#service-port 1 user-vl
OLT(config-if-vport-1/1/1.1:1)#service-port 1 user-vlan 1000 vl
OLT(config-if-vport-1/1/1.1:1)#service-port 1 user-vlan 1000 vlan 1000
OLT(config-if-vport-1/1/1.1:1)#
```

2.8. Cenário VOZ

2.8.1. Configurar Servidor VOZ

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#gpon
ZXAN(config-gpon)# onu profile voip-appsrv SIP-VOIP call-waiting enable
ZXAN(config-gpon)# onu profile voip-appsrv SIP-VOIP call-transfer enable call-hold enable
ZXAN(config-gpon)# onu profile voip-media mediaprofile encoding fax-mode t38
ZXAN(config-gpon)# onu profile sip SIP-VOIP proxy 10.10.88.208 outbound 10.10.88.208 registrar 10.10.88.208
ZXAN(config-gpon)# onu profile sip SIP-VOIP rereg-time 300
```

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#gpon
ZXAN(config-gpon)# onu profile voip-appsrv SIP-VOIP call-waiting enable
ZXAN(config-gpon)# onu profile voip-appsrv SIP-VOIP call-transfer enable call-hold enable
ZXAN(config-gpon)# onu profile voip-media mediaprofile encoding fax-mode t38
ZXAN(config-gpon)# onu profile sip SIP-VOIP proxy 10.10.88.208 outbound 10.10.88.208 registrar 10.10.88.208
ZXAN(config-gpon)# onu profile sip SIP-VOIP rereg-time 300
ZXAN#
```

2.8.2. Script Dados+VOZ

```
OLT#conf t
Enter configuration commands, one per line. End with CTRL/Z.
OLT(config)#interface gpon_olt-1/1/1
OLT(config-if-gpon_olt-1/1/1)#onu 1 type F6600 sn ZTEGC7879B73
OLT(config-if-gpon_olt-1/1/1)#
```

```
OLT#conf t
Enter configuration commands, one per line. End with CTRL/Z.
OLT(config)#interface gpon_olt-1/1/1
OLT(config-if-gpon_olt-1/1/1)#onu 1 type F6600 sn ZTEGC7879B73
OLT(config-if-gpon_olt-1/1/1)#
OLT#
```

```
OLT(config)#interface gpon_onu-1/1/1:1
OLT(config-if-gpon_onu-1/1/1:1)#tcont 1 profile 1G
OLT(config-if-gpon_onu-1/1/1:1)#tcont 2 profile 1G
OLT(config-if-gpon_onu-1/1/1:1)#name TREINAMENTO
OLT(config-if-gpon_onu-1/1/1:1)#vport-mode manual
OLT(config-if-gpon_onu-1/1/1:1)#gemport 1 tcont 1
OLT(config-if-gpon_onu-1/1/1:1)#gemport 2 tcont 2
OLT(config-if-gpon_onu-1/1/1:1)#vport 1 map-type vlan
OLT(config-if-gpon_onu-1/1/1:1)#vport-map 1 1 vlan 1000
OLT(config-if-gpon_onu-1/1/1:1)#vport-map 1 2 vlan 50
OLT(config-if-gpon_onu-1/1/1:1)#
```

```
OLT(config)#interface gpon_onu-1/1/1:1
OLT(config-if-gpon_onu-1/1/1:1)#tcont 1 profile 1G
OLT(config-if-gpon_onu-1/1/1:1)#tcont 2 profile 1G
OLT(config-if-gpon_onu-1/1/1:1)#name TREINAMENTO
OLT(config-if-gpon_onu-1/1/1:1)#vport-mode manual
OLT(config-if-gpon_onu-1/1/1:1)#gemport 1 tcont 1
OLT(config-if-gpon_onu-1/1/1:1)#gemport 2 tcont 2
OLT(config-if-gpon_onu-1/1/1:1)#vport 1 map-type vlan
OLT(config-if-gpon_onu-1/1/1:1)#vport-map 1 1 vlan 1000
OLT(config-if-gpon_onu-1/1/1:1)#vport-map 1 2 vlan 50
OLT(config-if-gpon_onu-1/1/1:1)#
```

```
OLT(config)#interface vport-1/1/1.1:1
OLT(config-if-vport-1/1/1.1:1)#service-port 1 user-vlan 1000 vlan 1000
OLT(config-if-vport-1/1/1.1:1)#service-port 2 user-vlan 50 vlan 50
OLT(config-if-vport-1/1/1.1:1)#
```

```
OLT(config)#interface vport-1/1/1.1:1
OLT(config-if-vport-1/1/1.1:1)#service-port 1 user-vlan 1000 vlan 1000
OLT(config-if-vport-1/1/1.1:1)#service-port 2 user-vlan 50 vlan 50
```

```
OLT(config)#pon-onu-mng gpon_onu-1/1/1:1
OLT(config-gpon-onu-mng)#service 1 gemport 1 vlan 1000
OLT(config-gpon-onu-mng)#service 2 gemport 2 vlan 50
OLT(config-gpon-onu-mng)#wan-ip ipv4 mode pppoe username f601 password f601 vlan-
profile 1000 host 1
OLT(config-gpon-onu-mng)#
OLT(config-gpon-onu-mng)#voip protocol sip
OLT(config-gpon-onu-mng)#voip-ip ipv4 mode dhcp vlan-profile 50
OLT(config-gpon-onu-mng)#sip-service pots_0/1 profile SIP-VOIP userid 200 username 200
password 200
```



```
OLT(config)#pon-onu-mng gpon_onu-1/1/1:1
OLT(config-gpon-onu-mng)#service 1 gemport 1 vlan 1000
OLT(config-gpon-onu-mng)#service 2 gemport 2 vlan 50
OLT(config-gpon-onu-mng)#wan-ip ipv4 mode pppoe username f601 password f601 vlan-profile 1000 host 1
OLT(config-gpon-onu-mng)#
OLT(config-gpon-onu-mng)#voip protocol sip
OLT(config-gpon-onu-mng)#voip-ip ipv4 mode dhcp vlan-profile 50
OLT(config-gpon-onu-mng)#sip-service pots_0/1 profile SIP-V0IP userid 200 username 200 password 200
OLT(config-gpon-onu-mng)#
```

2.9. Cenário AAA

2.9.1. Script AAA

OLT#conf t

Enter configuration commands, one per line. End with CTRL/Z.

OLT(config)#interface gpon_olt-1/1/1

OLT(config-if-gpon_olt-1/1/1)#onu 1 type F6600 sn ZTEGC7879B73

OLT(config-if-gpon_olt-1/1/1)#

```
OLT#conf t
Enter configuration commands, one per line. End with CTRL/Z.
OLT(config)#interface gpon_olt-1/1/1
OLT(config-if-gpon_olt-1/1/1)#onu 1 type F6600 sn ZTEGC7879B73
OLT(config-if-gpon_olt-1/1/1)#
OLT#
```

OLT(config)#interface gpon_onu-1/1/1:1

OLT(config-if-gpon_onu-1/1/1:1)#name TREINAMENTO

OLT(config-if-gpon_onu-1/1/1:1)#vport-mode manual

OLT(config-if-gpon_onu-1/1/1:1)#

OLT(config-if-gpon_onu-1/1/1:1)#tcont 1 profile 1G

OLT(config-if-gpon_onu-1/1/1:1)#tcont 2 profile 1G

OLT(config-if-gpon_onu-1/1/1:1)#tcont 3 profile 1G

OLT(config-if-gpon_onu-1/1/1:1)#

OLT(config-if-gpon_onu-1/1/1:1)#gemport 1 tcont 1

OLT(config-if-gpon_onu-1/1/1:1)#gemport 2 tcont 2

OLT(config-if-gpon_onu-1/1/1:1)#gemport 3 tcont 3

OLT(config-if-gpon_onu-1/1/1:1)#

OLT(config-if-gpon_onu-1/1/1:1)#vport 1 map-type vlan

OLT(config-if-gpon_onu-1/1/1:1)#vport-map 1 1 vlan 1000

OLT(config-if-gpon_onu-1/1/1:1)#vport-map 1 2 vlan 50

OLT(config-if-gpon_onu-1/1/1:1)#vport-map 1 2 vlan 1005

```
OLT(config)#interface gpon_onu-1/1/1:1
OLT(config-if-gpon_onu-1/1/1:1)#name TREINAMENTO
OLT(config-if-gpon_onu-1/1/1:1)#vport-mode manual
OLT(config-if-gpon_onu-1/1/1:1)#
OLT(config-if-gpon_onu-1/1/1:1)#tcont 1 profile 1G
OLT(config-if-gpon_onu-1/1/1:1)#tcont 2 profile 1G
OLT(config-if-gpon_onu-1/1/1:1)#tcont 3 profile 1G
OLT(config-if-gpon_onu-1/1/1:1)#
OLT(config-if-gpon_onu-1/1/1:1)#gemport 1 tcont 1
OLT(config-if-gpon_onu-1/1/1:1)#gemport 2 tcont 2
OLT(config-if-gpon_onu-1/1/1:1)#gemport 3 tcont 3
OLT(config-if-gpon_onu-1/1/1:1)#
OLT(config-if-gpon_onu-1/1/1:1)#vport 1 map-type vlan
OLT(config-if-gpon_onu-1/1/1:1)#vport-map 1 1 vlan 1000
OLT(config-if-gpon_onu-1/1/1:1)#vport-map 1 2 vlan 50
OLT(config-if-gpon_onu-1/1/1:1)#vport-map 1 2 vlan 1005
OLT(config-if-gpon_onu-1/1/1:1)#
OLT(config-if-gpon_onu-1/1/1:1)#
```

```
OLT(config)#interface vport-1/1/1.1:1
OLT(config-if-vport-1/1/1.1:1)#service-port 1 user-vlan 1000 vlan 1000
OLT(config-if-vport-1/1/1.1:1)#service-port 2 user-vlan 50 vlan 50
OLT(config-if-vport-1/1/1.1:1)#service-port 3 user-vlan 1005 vlan 1005
OLT(config-if-vport-1/1/1.1:1)#igmp fast-leave enable
```

```
OLT(config)#interface vport-1/1/1.1:1
OLT(config-if-vport-1/1/1.1:1)#service-port 1 user-vlan 1000 vlan 1000
OLT(config-if-vport-1/1/1.1:1)#service-port 2 user-vlan 50 vlan 50
OLT(config-if-vport-1/1/1.1:1)#service-port 3 user-vlan 1005 vlan 1005
OLT(config-if-vport-1/1/1.1:1)#igmp fast-leave enable
```

```
OLT(config)#pon-onu-mng gpon_onu-1/1/1:1
OLT(config-gpon-onu-mng)#service 1 gemport 1 vlan 1000
OLT(config-gpon-onu-mng)#service 2 gemport 2 vlan 50
OLT(config-gpon-onu-mng)#service 3 gemport 3 vlan 1005
OLT(config-gpon-onu-mng)#wan-ip ipv4 mode pppoe username f601 password f601 vlan-
profile 1000 host 1
OLT(config-gpon-onu-mng)#
OLT(config-gpon-onu-mng)#voip protocol sip
OLT(config-gpon-onu-mng)#voip-ip ipv4 mode dhcp vlan-profile 50
OLT(config-gpon-onu-mng)#sip-service pots_0/1 profile SIP-VOIP userid 200 username 200
password 200
OLT(config-gpon-onu-mng)#
OLT(config-gpon-onu-mng)#vlan port eth_0/4 mode tag vlan 1005
OLT(config-gpon-onu-mng)#mvlan tag eth_0/4 strip
```

```
OLT(config)#pon-onu-mng gpon_onu-1/1/1:1
OLT(config-gpon-onu-mng)#service 1 gempport 1 vlan 1000
OLT(config-gpon-onu-mng)#service 2 gempport 2 vlan 50
OLT(config-gpon-onu-mng)#service 3 gempport 3 vlan 1005
OLT(config-gpon-onu-mng)#wan-ip ipv4 mode pppoe username f601 password f601 vlan-profile 1000 host 1
OLT(config-gpon-onu-mng)#
OLT(config-gpon-onu-mng)#voip protocol sip
OLT(config-gpon-onu-mng)#voip-ip ipv4 mode dhcp vlan-profile 50
OLT(config-gpon-onu-mng)#sip-service pots_0/1 profile SIP-VOIP userid 200 username 200 password 200
OLT(config-gpon-onu-mng)#
OLT(config-gpon-onu-mng)#vlan port eth_0/4 mode tag vlan 1005
OLT(config-gpon-onu-mng)#mvlan tag eth_0/4 strip
OLT(config-gpon-onu-mng)#
```

2.10. Cenário QINQ

2.10.1. Script QINQ

```
ZXAN(config)#interface gpon_onu-1/1/3:1
ZXAN(config-if-gpon_onu-1/1/3:1)# name TESTE-ONU
ZXAN(config-if-gpon_onu-1/1/3:1)# description TESTE-ONU
ZXAN(config-if-gpon_onu-1/1/3:1)# vport-mode manual
ZXAN(config-if-gpon_onu-1/1/3:1)# tcont 1 profile 1G
ZXAN(config-if-gpon_onu-1/1/3:1)# tcont 2 profile "VoIP"
ZXAN(config-if-gpon_onu-1/1/3:1)# gempport 1 tcont 1
ZXAN(config-if-gpon_onu-1/1/3:1)# gempport 2 tcont 2
ZXAN(config-if-gpon_onu-1/1/3:1)# vport 1 map-type vlan
ZXAN(config-if-gpon_onu-1/1/3:1)# vport-map 1 1 vlan 1956
ZXAN(config-if-gpon_onu-1/1/3:1)# vport-map 1 2 vlan 3779
```

```
ZXAN(config)#interface gpon_onu-1/1/3:1
ZXAN(config-if-gpon_onu-1/1/3:1)# name TESTE-ONU
ZXAN(config-if-gpon_onu-1/1/3:1)# description TESTE-ONU
ZXAN(config-if-gpon_onu-1/1/3:1)# vport-mode manual
ZXAN(config-if-gpon_onu-1/1/3:1)# tcont 1 profile 1G
ZXAN(config-if-gpon_onu-1/1/3:1)# tcont 2 profile "VoIP"
ZXAN(config-if-gpon_onu-1/1/3:1)# gempport 1 tcont 1
ZXAN(config-if-gpon_onu-1/1/3:1)# gempport 2 tcont 2
ZXAN(config-if-gpon_onu-1/1/3:1)# vport 1 map-type vlan
ZXAN(config-if-gpon_onu-1/1/3:1)# vport-map 1 1 vlan 1956
ZXAN(config-if-gpon_onu-1/1/3:1)# vport-map 1 2 vlan 3779
ZXAN(config-if-gpon_onu-1/1/3:1)#
```

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

```
ZXAN(config)#interface vport-1/1/3.1:1
ZXAN(config-if-vport-1/1/3.1:1)#service-port 1 user-vlan 1956 vlan 1956 svlan 1047
ZXAN(config-if-vport-1/1/3.1:1)#service-port 2 user-vlan 3779 vlan 3779
```

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#interface vport-1/1/3.1:1
ZXAN(config-if-vport-1/1/3.1:1)#service-port 1 user-vlan 1956 vlan 1956 svlan 1047
ZXAN(config-if-vport-1/1/3.1:1)#service-port 2 user-vlan 3779 vlan 3779
ZXAN(config-if-vport-1/1/3.1:1)#
```

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#pon-onu-mng gpon_onu-1/1/3:1
ZXAN(config-gpon-onu-mng)# service 1 gempport 1 vlan 1956
ZXAN(config-gpon-onu-mng)# service 2 gempport 2 vlan 3779
ZXAN(config-gpon-onu-mng)# voip protocol sip
ZXAN(config-gpon-onu-mng)# voip-ip ipv4 mode dhcp vlan-profile VOIP host 2
ZXAN(config-gpon-onu-mng)# wan-ip ipv4 mode pppoe username teste@teste password
algar vlan-profile 1956 host 1
ZXAN(config-gpon-onu-mng)#
```

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#pon-onu-mng gpon_onu-1/1/3:1
ZXAN(config-gpon-onu-mng)# service 1 gempport 1 vlan 1956
ZXAN(config-gpon-onu-mng)# service 2 gempport 2 vlan 3779
ZXAN(config-gpon-onu-mng)# voip protocol sip
ZXAN(config-gpon-onu-mng)# voip-ip ipv4 mode dhcp vlan-profile VOIP host 2
ZXAN(config-gpon-onu-mng)# wan-ip ipv4 mode pppoe username teste@teste password algar vlan-profile 1956 host 1
ZXAN(config-gpon-onu-mng)#
```

3. Atualização ONU

3.1. Atualização Manual de forma Local

3.1.1. Upload firmware para dentro da OLT

No exemplo, vamos fazer um upgrade para a versão P1T18.

```
OLT#copy ftp
//10.0.250.253/multilaser_F670L_V1.1.20P1T18_UPGRADE_BOOTLDR.bin@zte:zte root:
/datadisk0/LR0/onuver/multilaser_F670L_V1.1.20P1T18_UPGRADE_BOOTLDR.bin
```

```
OLT#copy ftp //10.0.250.253/multilaser_F670L_V1.1.20P1T18_UPGRADE_BOOTLDR.bin@zte:zte root: /datadisk0/LR0/onuver/multilaser_F670L_V1.1.20P1T18_UPGRADE_BOOTLDR.bin
Connect successfully! Start copying file
100% completed 00:00:06
Got file successfully! Received 18514076 bytes!
OLT#
```

3.1.2. Comando informando a firmware que deseja utilizar no upgrade.

```
OLT#remote-unit update-and-reboot
multilaser_F670L_V1.1.20P1T18_UPGRADE_BOOTLDR.bin gpon_olt-1/1/1 1 local
```

3.1.3. Status Update ONU

```
OLT#show remote-unit update-status gpon_olt-1/1/1 1
```

```
OLT#show remote-unit update-status gpon_olt-1/1/1 1
gpon-onu_1/1/1: 1
Taskname      : Manual
Action        : Update-and-reboot
Status        : In-progress
Progress      : 4%
Failreason    : None
Committime    :
```

Após o reboot:

```
OLT#show remote-unit update-status gpon_olt-1/1/1 1
gpon-onu_1/1/1: 1
Taskname      : Manual
Action        : Update-and-reboot
Status        : Success
Progress      : 100%
Failreason    : None
Committime    : 2021-12-28 03:52:20
```

```
OLT#show remote-unit information gpon_olt-1/1/1 1
gpon-onu_1/1/1: 1
RuVendorName  : ZTEG
RuType        : F670LV1.1.01
Region 1
Veritag       : V1.1.20P1T18
Committed     : Yes
Activated     : Yes
Valid         : Yes
Region 2
Veritag       : V1.1.20P3N4D
Committed     : No
Activated     : No
Valid         : Yes
```

3.2. Atualização via TASK

3.2.1. Firmware ONU

```
OLT#show remote-unit information gpon_olt-1/1/1 1
gpon-onu_1/1/1: 1
RuVendorName  : ZTEG
RuType        : F670LV1.1.01
Region 1
Veritag       : V1.1.20P3N4D
Committed     : Yes
Activated     : Yes
Valid         : Yes
Region 2
Veritag       : V1.1.20P3N4D
Committed     : No
Activated     : No
Valid         : Yes
```

```
OLT#show remote-unit information gpon_olt-1/1/1 2
gpon-onu_1/1/1: 2
RuVendorName : ZTEG
RuType       : F670LV1.1.01
Region 1
VerTag       : V1.1.20P1T18
Committed    : No
Activated    : No
Valid        : Yes
Region 2
VerTag       : V1.1.20P3N4D
Committed    : Yes
Activated    : Yes
Valid        : Yes
```

3.2.2. Criação da TASK

OLT#conf t

Enter configuration commands, one per line. End with CTRL/Z.

OLT(config-ru-task)# action update-and-reboot

OLT(config-ru-task)# equipment-type F670LV1.1.01

OLT(config-ru-task)# match-vertag equal V1.1.20P3N4D

OLT(config-ru-task)# mode both

OLT(config-ru-task)# location remote

OLT(config-ru-task)# parallel-limitation 10

OLT(config-ru-task)# range ne

OLT(config-ru-task)# vendor-name ZTEG

OLT(config-ru-task)# version-file

multilaser_F670L_V1.1.20P1T18_UPGRADE_BOOTLDR.bin

OLT(config-ru-task)# ipaddress 192.168.86.77 ftp

OLT(config-ru-task)# path ftp

OLT(config-ru-task)# user zte

OLT(config-ru-task)# password zte

OLT(config-ru-task)# task add


```
OLT(config)# remote-unit task F670L-T18
OLT(config-ru-task)# action update-and-reboot
OLT(config-ru-task)# equipment-type F670LV1.1.01
OLT(config-ru-task)# match-vertag equal V1.1.20P3N4D
OLT(config-ru-task)# mode both
OLT(config-ru-task)# location remote
OLT(config-ru-task)# parallel-limitation 10
OLT(config-ru-task)# range ne
OLT(config-ru-task)# vendor-name ZTEG
OLT(config-ru-task)# version-file multilaser_F670L_V1.1.20P1T18_UPGRADE_BOOTLDR.bin
OLT(config-ru-task)# ipaddress 192.168.86.77 ftp
OLT(config-ru-task)# path ftp
OLT(config-ru-task)# user zte
OLT(config-ru-task)# password zte
OLT(config-ru-task)# task add
OLT(config-ru-task)#
```

3.2.3. Status da TASK

```
OLT#show remote-unit summary-of task F670L-T18
Download:
file multilaser_F670L_V1.1.20P1T18_UPGRADE_BOOTLDR.bin download successful from remote server

Operating:

Waiting:
gpon-onu_1/1/1: 1-2

Fail:

Success:
```

3.2.4. Status Update ONU

```
OLT#show remote-unit update-status gpon_olt-1/1/1 1
gpon-onu_1/1/1: 1
Taskname      : F670L-T18
Action        : Update-and-reboot
Status        : Success
Progress      : 100%
Failreason    : None
Committime    : 2021-12-28 08:01:22

OLT#show remote-unit update-status gpon_olt-1/1/1 2
gpon-onu_1/1/1: 2
Taskname      : F670L-T18
Action        : Update-and-reboot
Status        : Success
Progress      : 100%
Failreason    : None
Committime    : 2021-12-28 08:01:12
```

```
OLT#show remote-unit information gpon_olt-1/1/1 1
gpon-onu_1/1/1: 1
RuVendorName : ZTEG
RuType       : F670LV1.1.01
Region 1
Veritag      : V1.1.20P3N4D
Committed    : No
Activated    : No
Valid        : Yes
Region 2
Veritag      : V1.1.20P1T18
Committed    : Yes
Activated    : Yes
Valid        : Yes

OLT#show remote-unit information gpon_olt-1/1/1 2
gpon-onu_1/1/1: 2
RuVendorName : ZTEG
RuType       : F670LV1.1.01
Region 1
Veritag      : V1.1.20P1T18
Committed    : Yes
Activated    : Yes
Valid        : Yes
Region 2
Veritag      : V1.1.20P3N4D
Committed    : No
Activated    : No
Valid        : Yes
```

3.2.5. Status Final da TASK

```
OLT#show remote-unit summary-of task F670L-T18
Download:
file multilaser_F670L_V1.1.20P1T18_UPGRADE_BOOTLDR.bin download successful from remote server

Operating:

Waiting:

Fail:

Success:
gpon-onu_1/1/1: 1-2
```

4. COMANDOS PARA TROUBLESHOOTING

4.1. ONU

4.1.1. Potência ONU

OLT#show pon power attenuation gpon_onu-1/1/1:102


```
OLT#show pon power attenuation gpon_onu-1/1/1:102
      OLT              ONU              Attenuation
-----
up    Rx :-9.264(dbm)   Tx:2.496(dbm)   11.760(dB)
down  Tx :5.130(dbm)   Rx:-8.001(dbm)   13.131(dB)
```

4.1.2. Detalhes ONU

OLT#show gpon onu detail-info gpon_onu-1/1/1:102

```
OLT#show gpon onu detail-info gpon_onu-1/1/1:102
```

```
ONU interface:          gpon_onu-1/1/1:102
Name:
Splitter:
Type:                   F670LV9
Configured speed mode: auto
Current speed mode:     GPON
Admin state:            enable
Phase state:            working
Config state:           success
Authentication mode:    sn
SN Bind:                enable with SN check
Serial number:          ZTEGC4A8494B
Password:
Description:
Vport mode:             gempport
DBA Mode:               Hybrid
ONU Status:             enable
OMCI BW Profile:        704kbps
OMCC Encrypt:           disable
Line Profile:           N/A
Service Profile:        N/A
ONU Distance:           170m
Online Duration:        47h 34m 09s
FEC:                    disable
FEC actual mode:        disable
1PPS+ToD:              disable
Auto replace:           disable
Multicast encryption:   disable
Multicast encryption current state: N/A
```

	Authpass Time	OfflineTime	Cause
1	2021-12-10 11:28:57	0000-00-00 00:00:00	
2	0000-00-00 00:00:00	0000-00-00 00:00:00	
3	0000-00-00 00:00:00	0000-00-00 00:00:00	
4	0000-00-00 00:00:00	0000-00-00 00:00:00	
5	0000-00-00 00:00:00	0000-00-00 00:00:00	
6	0000-00-00 00:00:00	0000-00-00 00:00:00	
7	0000-00-00 00:00:00	0000-00-00 00:00:00	
8	0000-00-00 00:00:00	0000-00-00 00:00:00	
9	0000-00-00 00:00:00	0000-00-00 00:00:00	
10	0000-00-00 00:00:00	0000-00-00 00:00:00	

4.1.3. ONUS provisionadas

```
OLT#show gpon onu state
```

```
OLT#show gpon onu state
OnuIndex      Admin state  OMCC state  Phase state  Speed mode
-----
1/1/1:1       enable      enable      working      GPON
1/1/1:2       enable      disable     DyingGasp    GPON
1/1/1:11      enable      disable     OffLine      N/A
1/1/1:12      enable      enable      working      GPON
1/1/1:20      enable      disable     LOS          GPON
1/1/1:100     enable      disable     OffLine      N/A
1/1/1:101     enable      disable     OffLine      N/A
1/1/1:102     enable      enable      working      GPON
ONU Number: 3/8
```

4.1.4. Firmware ONU

OLT#show remote-unit information gpon_olt-1/1/1 102

```
OLT#show remote-unit information gpon_olt-1/1/1 102
gpon-onu_1/1/1: 102
RuVendorName : ZTEG
RuType       : F670LV9.0
Region 1
VerTag       : V9.0.10P1N8
Committed    : No
Activated    : No
Valid        : Yes
Region 2
VerTag       : V9.0.11P1N9
Committed    : Yes
Activated    : Yes
Valid        : Yes
```

4.1.5. Status da WAN da ONU

OLT#show gpon remote-onu wan-ip gpon_onu-1/1/1:102

```
OLT#show gpon remote-onu wan-ip gpon_onu-1/1/1:102
WAN index:                1
Mode:                     DHCP
ONU identifier:
Ping response:            enable
Traceroute response:     disable
VLAN tag mode:            tag
CVLAN:                   1005
CVLAN priority:          0
SVLAN:                   0
Current IP:               192.168.83.238
Current mask:             255.255.255.0
Current gateway:          192.168.83.1
Current primary DNS:      8.8.4.4
Current secondary DNS:    0.0.0.0
Domain name:
Host name:                omci_ipv4_dhcp_1
MAC address:              5c3a.3dd1.eb63
IP host ID:               1
```

4.1.6. Temperatura ONU

OLT#show gpon remote-onu interface pon gpon_onu-1/1/1:102

```
OLT#show gpon remote-onu interface pon gpon_onu-1/1/1:102
Interface:                pon_0/1
GEM blocklen:             48 (bytes)
SF threshold:             5
SD threshold:             9
Alarm:                    enable
Alarm disable interval:   0
Total T-CONT number:      8
Piggyback DBA rpt mode:   mode0 only
Rx optical level:         -7.102(dBm)
Lower rx optical threshold: ont internal policy
Upper rx optical threshold: ont internal policy
Tx optical level:         2.496(dBm)
Lower tx optical threshold: ont internal policy
Upper tx optical threshold: ont internal policy
ONU response time:        0(ns)
Power feed voltage:       3.24(V)
Laser bias current:       10.450(mA)
Temperature:              35.418(C)
```

4.1.7. Remover ONU

OLT#conf t

Enter configuration commands, one per line. End with CTRL/Z.

```
OLT(config)#interface gpon_olt-1/1/1
```

```
OLT(config-if-gpon_olt-1/1/1)#no onu 102
```

```
OLT#conf t
Enter configuration commands, one per line. End with CTRL/Z.
OLT(config)#inter
OLT(config)#interface gpo
OLT(config)#interface gpon_olt-1/1/1
OLT(config-if-gpon_olt-1/1/1)#no onu 102
OLT(config-if-gpon_olt-1/1/1)#
```

4.1.8. ONUS Não Provisionadas

```
OLT#show pon onu unc
```

```
OLT#show pon onu unc
OltIndex      Model      SN          PW
-----
gpon_olt-1/1/1  F670LV9.0 ZTEGC4A8494B GC4A8494B
```

4.1.9. Distância da ONU

```
ZXAN#show gpon onu distance gpon_onu-1/13/1:3
```

```
ZXAN#show gpon onu distance gpon_onu-1/13/1:3
Eqd (bit)      Distance(m)
.....
533590         57
```

4.1.10. ONU Retornando Sinal

```
ZXAN#conf t
```

Enter configuration commands, one per line. End with CTRL/Z.

```
ZXAN(config)#security mac-anti-spoofing enable
```

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#security mac-anti-spoofing enable
ZXAN(config)#
```

4.1.11. ONU Bridge entregar DHCP

```
ZXAN#conf t
```

Enter configuration commands, one per line. End with CTRL/Z.

```
ZXAN(config)#pon-onu-mng gpon_onu-1/13/1:3
```

ZXAN(config-gpon-onu-mng)#dhcp-ip ethuni eth_0/1 from-internet

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#pon-onu-mng gpon_onu-1/13/1:3
ZXAN(config-gpon-onu-mng)#dhcp-ip ethuni eth_0/1 from-internet
ZXAN(config-gpon-onu-mng)#
```

4.1.12. ONUS por PON

ZXAN#show gpon onu baseinfo gpon_olt-1/13/1

```
ZXAN#show gpon onu baseinfo gpon_olt-1/13/1
OnuIndex          Type          Mode          AuthInfo          State
-----
gpon_onu-1/13/1:3  F8648P        sn            SN:ZTEGCCDBECB8   ready
gpon_onu-1/13/1:4  F2801S        sn            SN:ZTEGCDC7242A   ready
ZXAN#
```

4.1.13. Status das ONUS

Working: A sincronização de dados está concluída. Sendo possível configurar os serviços.

```
ZTE-C620#show gpon onu state
OnuIndex          Admin state  OMCC state  Phase state  Speed mode
-----
1/1/1:1           enable      enable      working      GPON
```

Dying Gasp - A ONU está desligada e enviou o aviso antes de desligar completamente.

```
ZTE-C620#show gpon onu state
OnuIndex          Admin state  OMCC state  Phase state  Speed mode
-----
1/1/1:1           enable      disable     DyingGasp    GPON
```

LOS: A ligação entre fibra e OLT está com algum defeito.

```
ZTE-C620#show gpon onu state
OnuIndex          Admin state  OMCC state  Phase state  Speed mode
-----
1/1/1:1           enable      disable     LOS          GPON
```

Logging: A OLT encontrou a ONU e está medindo a distância.

```
ZTE-C620#show gpon onu state
OnuIndex          Admin state  OMCC state  Phase state  Speed mode
-----
1/1/1:1           enable      disable     Logging      GPON
```

SyncMib: A OLT mediu a distância até a ONU e está sincronizando os dados.


```
ZTE-C620#show gpon onu state
OnuIndex      Admin state  OMCC state  Phase state  Speed mode
-----
1/1/1:1       enable      disable     syncMib      GPON
```

Offline: A OLT não encontrou a ONU.

```
ZTE-C620#show gpon onu state
OnuIndex      Admin state  OMCC state  Phase state  Speed mode
-----
1/1/1:1       enable      disable     OffLine      N/A
```

4.1.14. Firewall ONU

ZXAN #conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN (config)#pon-onu-mng gpon_onu-1/2/1:4

ZXAN (config-gpon-onu-mng)#firewall enable level ?

high High

low Low

medium Medium

ZXAN (config-gpon-onu-mng)#firewall enable level

```
TREINAMENTO0#conf t
Enter configuration commands, one per line. End with CTRL/Z.
TREINAMENTO0(config)#pon-onu-mng gpon_onu-1/2/1:4
TREINAMENTO0(config-gpon-onu-mng)#fire
TREINAMENTO0(config-gpon-onu-mng)#firewall ?
  disable      Disable firewall function
  enable       Enable firewall function
  ip-filter     Configure parameters of IP filter
TREINAMENTO0(config-gpon-onu-mng)#firewall enable level ?
  high      High
  low       Low
  medium    Medium
TREINAMENTO0(config-gpon-onu-mng)#firewall enable level
```

4.3. OLT

4.3.1. Placas instaladas no Chassi

OLT#show card


```
OLT#show card
Shelf Slot CfgType CardName      Port HardVer Status
-----
1      1      GFGH      GFGH          13    V1.0.0  INSERVICE
1      2      HFTH          16          OFFLINE
1      3      FCSDA      FCSDA         0      V1.0.0  INSERVICE
1      4      SPUF      SPUF          3      V1.0.0  INSERVICE
1      5      SPUF      SPUF          4      V1.0.0  STANDBY
1      6      PRSF      PRSF          0      V1.0.0  INSERVICE
1      7      PRSF      PRSF          0      V1.0.0  INSERVICE
```

4.3.2. Fonte de alimentação

OLT#show power

```
OLT#show power
[shelf 1 LCC]:
Total power capacity : 3176.40W   Total used power      : 122.82W
Power type           : DC          Power group numbers   : 1
Power modules per group: 2         Division numbers      : 1
Redundancy type      : 1+1

Group 0 (N) power capacity : 0.00W
Group 0 (1) power capacity : 3176.40W
Used power             : 122.82W

Supply Power Power Power Phy Power Com Run
Division Module Name Vendor Status Status Status Status
0      0      PD700-D48A N/A  online normal normal normal
0      1      PD700-D48A N/A  online abnormal normal abnormal

Power Power Power Output Output Power Power Software
Module Temperature Capacity Voltage Current Allotted Available Version
0      32C      3176.40W 52.94V 2.32A 122.82W 3053.58W V1.3
1      31C      0.00W 0.00V 0.00A 0.00W 0.00W V1.3
```

4.3.3. Uptime da OLT

OLT#show software

```

OLT#show software
ZXA10 C620
ZTE ZXA10 Software, Version: V1.2.1, Release software
Copyright (c) 2020 by ZTE Corporation
Build on 2020/09/16 17:24:09
System image file is <sysdisk0: verset/C620V1.2.1.set>, file size is 346,099,451 Bytes
System image is loaded from local
System uptime is 31 day(s), 12 hour(s), 25 minute(s)

[GFGH, shelf 1, slot 1]:
  Active Packages on Node PFU-1/1/0:
    Base-1.2.1:
      Package: Base
      Version: V1.2.1

[SPUF, shelf 1, slot 4]:
  Active Packages on Node MPU-1/4/0:
    Base-1.2.1:
      Package: Base
      Version: V1.2.1

[SPUF, shelf 1, slot 5]:
  Active Packages on Node MPU-1/5/0:
    Base-1.2.1:
      Package: Base
      Version: V1.2.1

```

4.3.4. Processamento OLT

OLT#show processor

```

OLT#show processor
=====
Character: CPU current character in system
MSC      : Master-SC in Cluster System
SSC      : Slave-SC in Cluster System
N/A      : None-SC in Cluster System
CPU(5s)  : CPU usage ratio measured in 5 seconds
CPU(1m)  : CPU usage ratio measured in 1 minute
CPU(5m)  : CPU usage ratio measured in 5 minutes
Peak     : CPU peak usage ratio measured in 1 minute
PhyMem   : Physical memory (megabyte)
FreeMem  : Free memory (megabyte)
Mem      : Memory usage ratio
=====
=====

```

	Character	CPU(5s)	CPU(1m)	CPU(5m)	Peak	PhyMem	FreeMem	Mem
PFU-1/1/0	N/A	33%	33%	33%	33%	2048	742	63.770%
MPU-1/4/0	MSC	27%	27%	27%	29%	4096	2466	39.795%
MPU-1/5/0	SSC	22%	22%	22%	23%	4096	2784	32.031%

4.3.5. Detalhes do Módulo Óptico

OLT#show optical-module-info gpon_olt-1/1/1

```

OLT#show optical-module-info gpon_olt-1/1/1
Optical Module Position      : gpon_olt-1/1/1
Optical Module Power State   : on(No support modify)
Optical Module State         : online
-----
Optical Module Manufacture Information:
-----
Vendor-Name      : Hisense                      Product-Name      : LTE3680P-BC+1DM
Sequence-Number  : U55AB006731                 Version-Level     : 1.0
Product-Date     : 201114
Part-Number      :
Material-Number  : 5a 54 45 20 30 33 33 30 33 30
                  31 30 30 31 36 30 00 00 00 00
Register-Data    : 03 04 01 00 14 00 00 00 00 00 00 03 19 00 3c ff
                  00 00 00 00 48 69 73 65 6e 73 65 20 20 20 20 20
                  20 20 20 20 00 00 1a 95 4c 54 45 33 36 38 30 50
                  2d 42 43 2b 31 44 4d 20 31 2e 30 20 05 d2 00 5c
                  00 1c 14 14 55 35 35 41 42 30 30 36 37 33 31 20
                  20 20 20 20 32 30 31 31 31 34 20 20 58 e0 01 f9
                  5a 54 45 20 30 33 33 30 33 30 31 30 30 31 36 30
                  56 31 2e 30 00 00 00 00 00 00 00 00 00 00 49
-----
Optical Module Information:
-----
Module-Type      : SFP/SFP+                      Supply-Vol       : 3.256(v)
Connector        : SC                           Temperature      : 28.054(c)
Fiber-Type       : SM
OTDR              : NON-OTDR                     OTDR-Version     :
Module-Class     : GPON/C+

```

```

-----
Optical Transmitter Information:
-----
Laser-Rate       : 25 (100Mb/s)                 TxPower          : 5.131(dbm)
Wavelength       : 1490 (nm)                   TxBias-Current   : 6.640(mA)
-----
Optical Module Alarm Threshold:
-----
RxPower-Upper    : 3 (dbm)                      RxPower-Lower    : -20(dbm)
TxPower-Upper    : 9.000 (dbm)                  TxPower-Lower    : 1.000 (dbm)
Bias-Upper       : 131(mA)                      Bias-Lower        : 0(mA)
Voltage-Upper    : 7 (v)                       Voltage-Lower     : 0(v)
Temperature-Upper : 90 (c)                      Temperature-Lower : -45(c)
Module-Class     : default

```

4.3.6. Status das FANS

```

ZXAN#
ZXAN#show fan

```

```

ZXAN#show fan
[shelf 1 LCC]:
Fan speed mini level: 1
Group 0: online
Fan speed mode: auto
Fan      name: FAN
Index    Status      Speed
  0      work normally 28%
  1      work normally 28%
  2      work normally 28%
  3      work normally 28%

```

4.3.7. Restore OLT

OLT#copy ftp //10.0.250.253/startrun.dat@f601:f601 root: /datadisk0/DATA0/startrun.dat

```
OLT#copy ftp //10.0.250.253/startrun.dat@f601:f601 root: /datadisk0/DATA0/startrun.dat
Connect successfully! Start copying file
100% completed 00:00:00
Got file successfully! Received 35134 bytes!
```

4.3.8. Status das Portas de UPLINK

OLT#show interface brief

```
OLT#show interface brief
Interface      Portattribute Mode BW(Mbps) Admin Phy Prot Description
xgei-1/4/3     optical      Duplex/full 10000 up   up   up
xgei-1/5/1     optical      Duplex/full 10000 down down down
xgei-1/5/2     optical      Duplex/full 10000 down down down
xgei-1/5/3     optical      Duplex/full 10000 down down down
xgei-1/5/4     optical      Duplex/full 1000  down down down
smartgroup5    N/A          N/A          down up   down
```

4.3.9. MACS atrelados a VLAN

OLT#show mac vlan 1000

```
OLT#show mac vlan 1000
Total mac address : 3

Mac address    Vlan  Type      Port                      Vc
-----
c0b1.0137.edae 1000   Dynamic   vport-1/1/1.1:1
5c3a.3d8a.92c1 1000   Dynamic   vport-1/1/1.12:1
cc2d.e0c2.5158 1000   Dynamic   xgei-1/4/3
```

4.3.10. Trafego de mac-address

ZXAN#show performance pon-onu mac gpon_onu-1/13/1:3 current

```

ZXAN#show performance pon-onu mac gpon_onu-1/13/1:3 current
PON-MAC-ONU gpon-onu_1/13/1:3 current performance data:
-----
PHY PM:
Rx corrected FEC bytes                :491;
Rx corrected FEC codewords            :74;
Rx uncorrectable FEC codewords        :193;
Rx total FEC codewords                :1622313892083;
Rx FS/XGTC HEC error count            :N/A;
Rx Lost Bursts                        :3623;
Rx CRC errored packets                :N/A;
Rx total bits protected by BIP        :266847387214560;
Rx BIP error count(ERRi)              :20;
Rx BER(e-9)                          :0;
DOWi count                           :N/A;

XGEM PM:
Rx XGEM frames                       :3373651672385;
Rx bytes in non-idle XGEM frames      :4046304;
Rx XGEM HEC error count              :39153;
Rx FS/XGTC words lost due to XGEM HEC error :N/A;
Rx XGEM key error count               :0;
Tx XGEM frames                       :114185;
Tx bytes in non-idle XGEM frames      :12898490;

PLOAM PM:
Us PLOAM message count               :406;
Us PLOAM MIC error count              :0;
Us DG count                          :0;
Us Serial_Number_ONU message count    :393;
Us Registration message count         :8;
Us Key_Report message count           :8;
Us Acknowledgement message count      :5;
Us Sleep_Request message count        :0;
Ds PLOAM message count               :19;
Ds Ranging_Time message count         :4;
Ds Request_Registration message count  :0;
Ds Assign_Alloc-ID message count      :1;
Ds Key_Control message count          :8;
Ds Sleep_Allow message count          :0;

OMCI PM:
Us OMCI baseline message count        :1405;
Us OMCI extended message count        :0;
Us OMCI autonomous messages          :171;
Us OMCI MIC error count               :N/A;
Ds OMCI baseline message count        :1405;
Ds OMCI extended message count        :0;

ETH PM:
Rx Ethernet frames                   :24462;
Rx errored Ethernet frames            :0;
ZXAN#

```

4.3.11. ALLOC ID

ZXAN#show gpon onu tcont gpon_olt-1/13/1

```
ZXAN#show gpon onu tcont gpon_olt-1/13/1
Name:
OLT:      gpon_olt-1/13/1
ONU:      3
T-CONT:   1
Alloc ID: 1024
DBA gap mode: mode2
Using following bandwidth profile:
  Profile name: 10G

Name:
OLT:      gpon_olt-1/13/1
ONU:      4
T-CONT:   1
Alloc ID: 1025
DBA gap mode: mode2
Using following bandwidth profile:
  Profile name: 10G
```

4.3.12. Remover Criptografia OLT

OLT#conf t

Enter configuration commands, one per line. End with CTRL/Z.

OLT(config)#pon

OLT(config-pon)#user-info-security disable

The configuration needs to be saved, otherwise the configuration may be lost, confirm to modify?[yes/no]:yes

OLT(config-pon)#

```
OLT#conf t
Enter configuration commands, one per line. End with CTRL/Z.
OLT(config)#pon
OLT(config-pon)#user-info-security disable
The configuration needs to be saved, otherwise the configuration may be lost, confirm to modify?[yes/no]:yes
OLT(config-pon)#
```

4.4. PON

4.4.1. Potência RX da PON

OLT#show pon power olt-rx gpon_olt-1/1/1


```
OLT#show pon power olt-rx gpon_olt-1/1/1
Onu
Rx power
-----
gpon_onu-1/1/1:1      -9.211(dbm)
gpon_onu-1/1/1:2      no signal
gpon_onu-1/1/1:11     no signal
gpon_onu-1/1/1:12     -9.354(dbm)
gpon_onu-1/1/1:20     no signal
gpon_onu-1/1/1:100    no signal
gpon_onu-1/1/1:101    no signal
gpon_onu-1/1/1:102    -9.264(dbm)
```

4.4.2. Potência TX da PON

```
OLT#show pon power olt-tx gpon_olt-1/1/1
```

```
OLT#show pon power olt-tx gpon_olt-1/1/1
Channel
Tx power
-----
1(GPON)      5.159(dbm)
```

4.4.3. ONUS Registradas por Porta PON

```
OLT#show gpon onu baseinfo gpon_olt-1/1/1
```

```
OLT#show gpon onu baseinfo gpon_olt-1/1/1
OnuIndex      Type      Mode      AuthInfo      State
-----
gpon_onu-1/1/1:1  F601      sn        SN:ZTEGCD7FF81F  ready
gpon_onu-1/1/1:2  F6600     sn        SN:ZTEGC7879B73  ready
gpon_onu-1/1/1:11 F670L     sn        SN:ZTEGC4BA5555  ready
gpon_onu-1/1/1:12 F670L     sn        SN:ZTEGC4BAE7A2  ready
gpon_onu-1/1/1:20 F660      sn        SN:ZTEGCB001EE7  ready
gpon_onu-1/1/1:100 F670L     sn        SN:ZTEGCB001EE8  ready
gpon_onu-1/1/1:101 F670L     sn        SN:ZTEGCB001EE9  ready
gpon_onu-1/1/1:102 F670LV9   sn        SN:ZTEGC4A8494B  ready
```

4.4.4. Banda Descontada da Porta

```
ZXAN#show pon bandwidth dba interface gpon_olt-1/13/1
```

```
ZXAN#show pon bandwidth dba interface gpon_olt-1/13/1
NOTICE: If overflowflag is TRUE, it means the actual bandwidth is not enough. Please CHECK and REVISE the configuration of bandwidth!
interface      channel  configured(kbps)  free(kbps)  overflowflag  rate(x.%)
-----
gpon_olt-1/13/1  1(XGS-PON)  0                8000000    FALSE        0.0
gpon_olt-1/13/1  1(XG-PON)   0                2000000    FALSE        0.0
gpon_olt-1/13/1  2(GPON)     0                1000000    FALSE        0.0
```

Obs.: Utilizando o comando show PON BANDWIDTH DBA INTERFACE all, é possível visualizar todas as portas de uma unica vez.

4.4.5. Copy PON

ZXAN#conf t

Enter configuration commands, one per line. End with CTRL/Z.

ZXAN(config)#pon-copy gpon olt interface gpon_olt-1/1/2 gpon_olt-1/1/3

Please make sure to write before the operating?[yes/no]:yes

Start copy config from gpon_olt-1/1/2 to gpon_olt-1/1/3..

Copy config success!

[OK]

```
ZXAN#conf t
Enter configuration commands, one per line. End with CTRL/Z.
ZXAN(config)#pon-copy gpon olt interface gpon_olt-1/1/2 gpon_olt-1/1/3
Please make sure to write before the operating?[yes/no]:yes
Start copy config from gpon_olt-1/1/2 to gpon_olt-1/1/3..

Copy config success!
...[OK]
```

4.5. Alarmes

4.5.1. Alarmes Ativos

OLT#show alarm current

```
OLT#show alarm current
An alarm 400152 ID 24372 level 5 occurred at 09:41:29 12-14-2021 sent by OLT MPU-1/5/0
%PORT% Physical connector works in wrong mode! Interface = xgei-1/5/3, Current work mode = media-fiber, Configured mode = media-copper
An alarm 400152 ID 24370 level 5 occurred at 09:41:10 12-14-2021 sent by OLT MPU-1/5/0
%PORT% Physical connector works in wrong mode! Interface = xgei-1/5/1, Current work mode = media-fiber, Configured mode = media-copper
An alarm 728048-(40716) ID 24368 level 2 occurred at 09:37:50 12-14-2021 sent by OLT MPU-1/4/0
%OPTICAL% Port optical module offline alarm(port:xgei-1/4/1)
An alarm 728048-(40716) ID 24367 level 2 occurred at 09:25:40 12-14-2021 sent by OLT MPU-1/4/0
%OPTICAL% Port optical module offline alarm(port:xgei-1/4/4)
An alarm 400152 ID 24302 level 5 occurred at 10:26:43 12-08-2021 sent by OLT MPU-1/4/0
%PORT% Physical connector works in wrong mode! Interface = xgei-1/4/4, Current work mode = media-fiber, Configured mode = media-copper, due to admin no shutdown
An alarm 400315 ID 33 level 3 occurred at 22:46:05 11-10-2021 sent by OLT MPU-1/4/0
%POWER% Power voltage fault! Shelf = 1, Group = A, Power-Module = 7 DC Power voltage fault alarm
An alarm 400335-(50954) ID 24 level 3 occurred at 22:45:25 11-10-2021 sent by OLT MPU-1/4/0
%POWER% Power status abnormal! Shelf = 1, Group = A, Power-Module = 7 Power status is abnormal
An alarm 400123-(33066) ID 2 level 2 occurred at 22:43:08 11-10-2021 sent by OLT MPU-1/4/0
%BOARD% Slot offline The slot = 2 in shelf = 1 is offline, boardtype is HFTH
```

4.5.2. Histórico

OLT#show alarm history

```
OLT#show alarm history
An alarm 400141-(33035) ID 24516 level 3 occurred at 18:30:46 12-23-2021, cleared at 18:31:16 12-23-2021 sent by OLT MPU-1/4/0
%BOARD% The CPU utilization exceeded the prealarm threshold! (Entity = CPU, Usage = 100%, Threshold = 95%, ROUTE_MPLS[17326]:
10%,ADM[1366]:5%,FTMETHRP[1702]:5%)
An alarm 730407-(43075) ID 24502 level 5 occurred at 12:56:50 12-23-2021, cleared at 12:57:00 12-23-2021 sent by OLT PFU-1/1/0
%PON% PON alarm pon los (rack 1 shelf 1 slot 1 port 1 Probable Cause : AllOnusNeverOnline)
An alarm 730407-(43075) ID 24486 level 5 occurred at 12:55:46 12-23-2021, cleared at 12:55:54 12-23-2021 sent by OLT PFU-1/1/0
%PON% PON alarm pon los (rack 1 shelf 1 slot 1 port 1 Probable Cause : AllOnusNeverOnline)
An alarm 722445-(35113) ID 24482 level 2 occurred at 11:56:20 12-23-2021, cleared at 12:55:47 12-23-2021 sent by OLT PFU-1/1/0
%GPON% GPON alarm link olt losi(lobi) (rack 1 shelf 1 slot 1 port 1 onu 50)
An alarm 722445-(35113) ID 24481 level 2 occurred at 11:56:20 12-23-2021, cleared at 12:55:37 12-23-2021 sent by OLT PFU-1/1/0
%GPON% GPON alarm link olt losi(lobi) (rack 1 shelf 1 slot 1 port 1 onu 20)
An alarm 730408-(43076) ID 24480 level 2 occurred at 11:21:04 12-23-2021, cleared at 11:56:19 12-23-2021 sent by OLT PFU-1/1/0
%PON% PON alarm pon los (rack 1 shelf 1 slot 1 port 1 Probable Cause : LastOnuLos)
An alarm 722445-(35113) ID 24478 level 2 occurred at 11:20:25 12-23-2021, cleared at 11:21:05 12-23-2021 sent by OLT PFU-1/1/0
%GPON% GPON alarm link olt losi(lobi) (rack 1 shelf 1 slot 1 port 1 onu 50)
An alarm 722445-(35113) ID 24477 level 2 occurred at 11:20:25 12-23-2021, cleared at 11:21:05 12-23-2021 sent by OLT PFU-1/1/0
%GPON% GPON alarm link olt losi(lobi) (rack 1 shelf 1 slot 1 port 1 onu 20)
An alarm 730408-(43076) ID 24475 level 2 occurred at 11:20:06 12-23-2021, cleared at 11:20:21 12-23-2021 sent by OLT PFU-1/1/0
%PON% PON alarm pon los (rack 1 shelf 1 slot 1 port 1 Probable Cause : LastOnuLos)
An alarm 722445-(35113) ID 24473 level 2 occurred at 11:20:04 12-23-2021, cleared at 11:20:10 12-23-2021 sent by OLT PFU-1/1/0
%GPON% GPON alarm link olt losi(lobi) (rack 1 shelf 1 slot 1 port 1 onu 40)
An alarm 730407-(43075) ID 24635 level 5 occurred at 10:16:33 12-22-2021, cleared at 10:16:39 12-22-2021 sent by OLT PFU-1/1/0
%PON% PON alarm pon los (rack 1 shelf 1 slot 1 port 1 Probable Cause : AllOnusNeverOnline)
```