USB-C

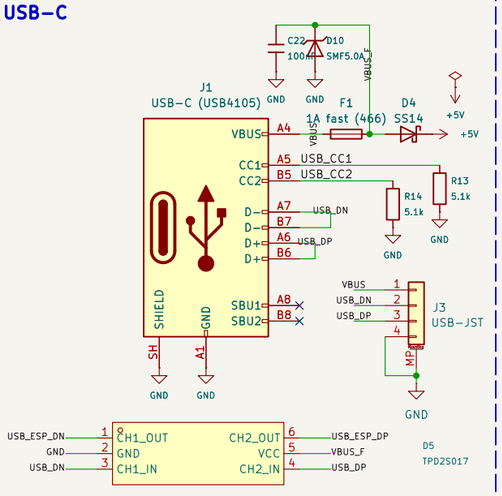

ESP32-S3 MCU

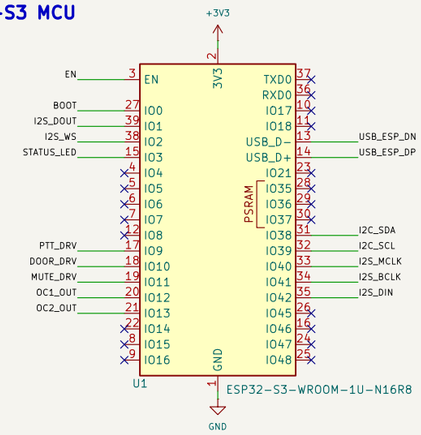

POWER

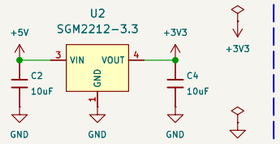

STATUS LED

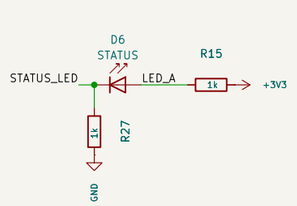

BUS SWITCHES (PhotoMOS SSRs)

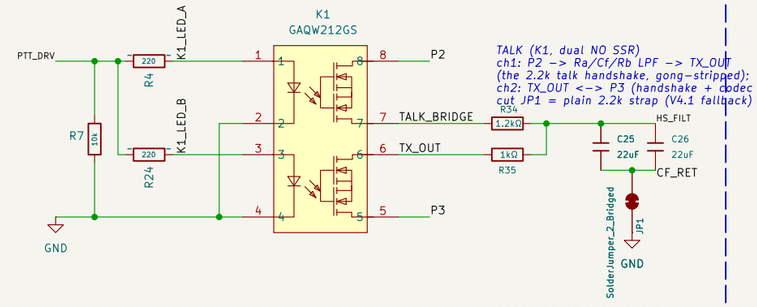

TALK (K1, dual NO SSR)
ch1: P2 –> Ra/Cf/Rb LPF –> TX_OUT
(the 2.2k talk handshake, gong-stripped);
ch2: TX_OUT <–> P3 (handshake + codec TX via C14);
cut JP1 = plain 2.2k strap (V4.1 fallback)

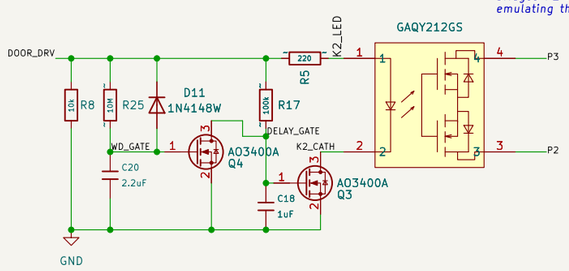

DOOR OPENER (K2, NO SSR)
bridges P2<–>P3 directly (dead short),
emulating the WF26 OT button (S1)

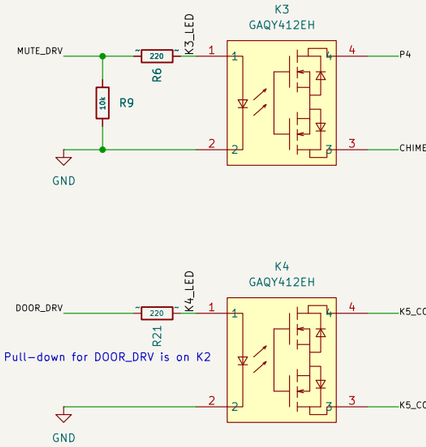

CHIME SUPPRESS (K3, NC SSR)
opens the C1 path (P4<–>CHIME_C1);
mutes gong; line 4 + latch intact

UNLATCH K5 (K4, NC SRR)

TEST POINTS

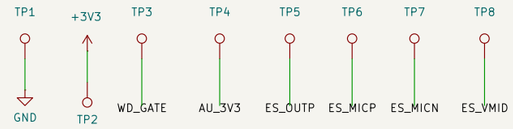

BELL SENSE

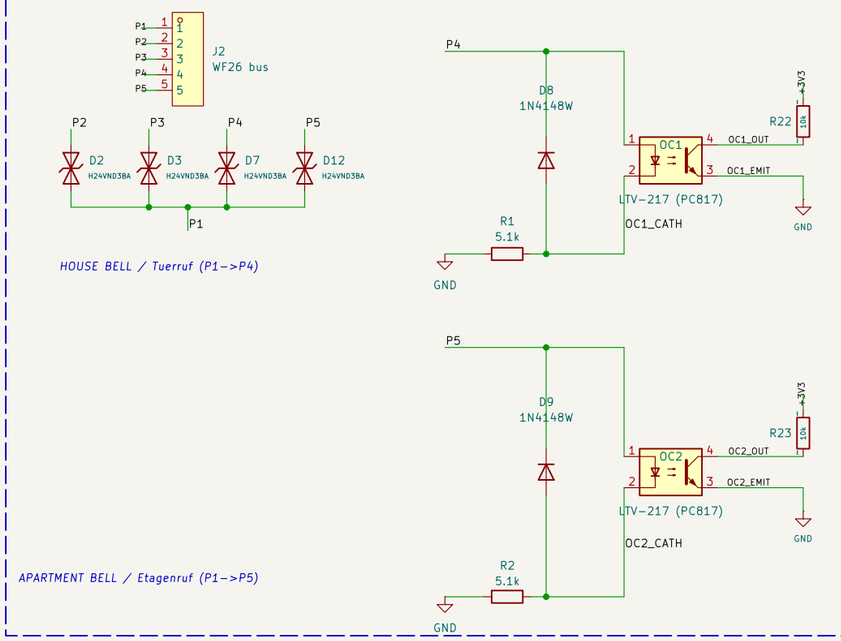

RESET / BOOT

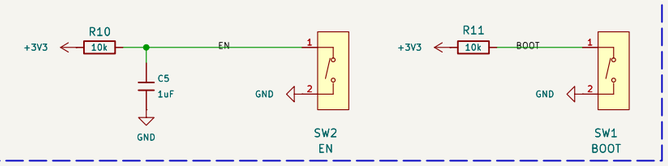

AUDIO ES8311 + LINE XFMR

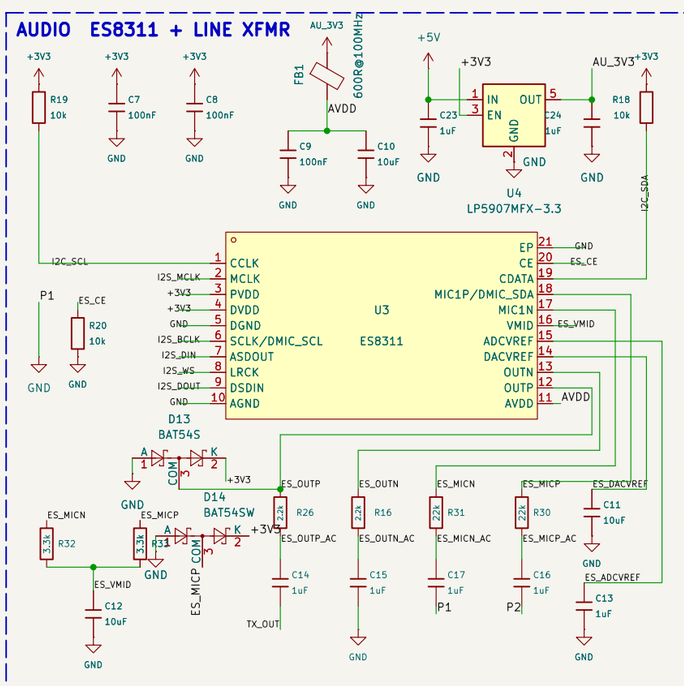

WF 26/G

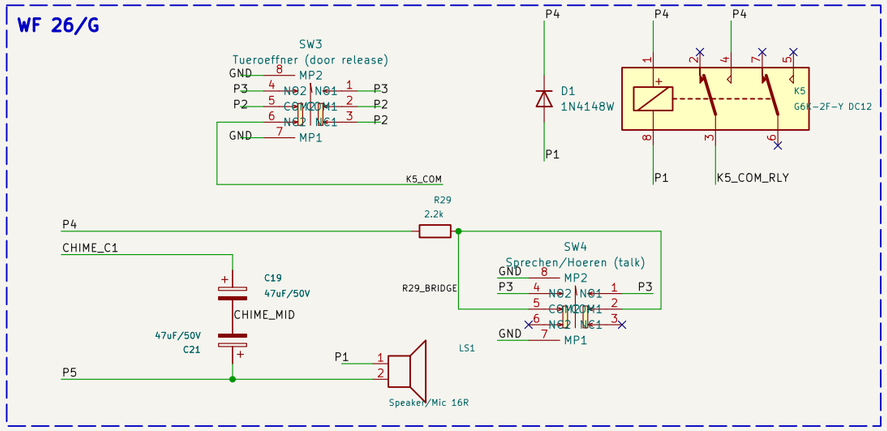

H1 MountingHole
H2 MountingHole
H3
H4
H5

Gunnar Beutner
Sheet: /
File: doorbell.kicad_sch

Title: Doorbell controller (Klingel V4)

Size: A3	Date: 2026-07-02	Rev: V4.2
KiCad E.D.A. 10.0.4		Id: 1/1