
Spare parts photograph

No.	Parts No.	Parts Name	Applied to
1	1071000252C	Chassis (FC− <i>i</i>)	FC series
	1063005819-1B	Leveling foot (M8x20) Prepa	ring
2	1063005819-1A	Leveling foot (M8x20) Prepa	ring
	1063005819-1	Leveling foot (M8x20)	
3	1031000253D	Base plate	
	1031000253C	Base plate	
4	1072000762A	Battery holder	
	1KO2246	Battery connector cable	
	105B43428A	Lock pin	
5	1074012471C	Battery holder panel	
	1044012473B	Battery guide lock plate	
	1044012473A	Battery guide lock plate	
	1043005803	Battery guide plate	
6	100B42655A	Spring	
7	1043005804B	Rear panel	
8	1044012476B	CAL switch cover	
9	105A42208	Drilled retaining screw	
	104A36382A	FC Weighing pan (S)	FC500i,FC1000i
10	1042000257A	Weighing pan (L)	FC2000i
	1042000257A	Weighing pan (L)	FC5000i,FC10Ki,FC20Ki,50Ki
11	107C41320A	Key top	
12	1073005802A	Display filter (FC- <i>i</i>)	
13	1082000776A	Key sheet(EX)	EX
. •	1082000777A	Key sheet(JA)	JA
	1084012546-5	Model label kg (FC-500I)	FC500I
	1084013035-5	Model label lb/kg (FC-500I LB)	FC500I
	1084012546-6	Model label kg (FC-1000I)	FC1000I
	1084013035-6	Model label lb/kg (FC-1000I LB)	
	1084012546-7	Model label kg (FC-2000I)	FC2000I
	1084013035-7	Model label lb/kg (FC-2000I LB	
	1084012546-1	Model label kg (FC-5000I)	FC5000I
14	1084013035-1	Model label lb/kg (FC-5000I LB)	FC5000I
	1084012546-2	Model label kg (FC-10KI)	FC10KI
	1084013035-2	Model label lb/kg (FC-10KI LB)	FC10KI
	1084012546-3	Model label kg (FC-20KI)	FC20KI
	1084013035-3	Model label lb/kg (FC-20KI LB)	FC20KI
	1084012546-4	Model label kg (FC-50KI)	FC50KI
	1084013035-4	Model label lb/kg (FC-50KI LB)	FC50KI
	1084012546-8	Model label kg (FC-30KI)	FC30KI
4-	1084013035-8	Model label lb/kg (FC-30KI LB)	FC30KI
15	1073006039	Bottom cover	
16	7PZ-3822	Display board	
41	1EDCN1932G	VFD	\
4 0	1SKEVQ21407K	Switch PZ3822 (PC3822D~	')

Page 1 FC-Si series

40	1SKEVQPAD07K	Switch PZ3822 (~PC3822A)		
17	7PZ-3821	Main board (FC− <i>i</i>)		
18	7PZ-3823	DC/IO board		
4.0	1071000251D	Upper case (FC− <i>i</i>)	FC500i,1000i,2000i,50001	
19	1073005799B	Upper case (FC-30Ki / 50i)	FC-50Ki	
20	1044012480	Upper case cover	FC2000i,FC5000i,FC10Ki,FC20Ki	
21	1074012472A	Grommet (glued)	FC50Ki	
	104A36384B	Pan support (S)	FC500i,FC1000i	
22	1031000043	Pan support (2000/5000/10K/20K)	FC2000i,FC5000i,FC10Ki,FC20Ki	
	1031000254B	Pan support (FC50Ki)	FC50Ki	
	106B42074A	Center cushion (FC500i,FC1000i)	FC500i,FC1000i	
23	1063005801A	Center cushion (FC50Ki)	FC50Ki	
24	106B42075A	Side cushion	FC500i,FC1000i	
25	106A400-1003	Rubber packing	FC2000i,FC5000i,FC10Ki,FC20Ki	
26	1063005800A	Corner cushion	FC50Ki	
27	1044006922	Plate (M)	FC50Ki	
_,	104B49109	Earth spring	FC500i,FC1000i,	
28	1154005252	Earth spring	FC2000i,FC5000i,FC10Ki,FC20Ki	
20	100C40145	Earth spring	FC50Ki	
	7LC-151-500	Load cell FC500/	FC500i	
	7LC-151-1000	Load cell FC1000 <i>i</i>	FC1000i	
	7LC-152-2000	Load cell FC2000 <i>i</i>	FC2000i	
29	7LC-144-5000	Load cell FC5000 <i>i</i>	FC5000i	
20	7LC-144-10K	Load cell FC10K <i>i</i>	FC10Ki	
	7LC-144-20K	Load cell FC20K <i>i</i>	FC20Ki	
	7LC-145-50K	Load cell FC-30Ki / 50Ki	FC50Ki	
	1043006699	Load angle (FC-j)	FC500i,FC1000i,	
	1043006700A	Load angle (FC-2001i)	FC2000i	
30	1043006700	Load angle (FC-2000i)	FC2000i	
	1043005805A	Load angle (FC-j)	FC5000i,FC10Ki,FC20Ki	
31	1044014045	L angle	FC2000i	
	1043006701	Stopper plate	FC500i,FC1000i,	
32	1044014046	Stopper plate	FC2000i	
	1054014048	Cell spacer	FC500i,FC1000i,	
33	1054014049	Cell spacer	FC2000i	
34	105A40481	11.5 mm spacer	FC500i,FC1000i,FC2000i	
35	1044006924	Fixing plate A	FC5000i,FC10Ki,FC20Ki	
36	1044006925	Fixing plate B	FC5000i,FC10Ki,FC20Ki	
	1154008828	Leaf spring	FC5000i	
37	1154006926A	Leaf spring HVW-WP	FC10Ki,FC20Ki	
38	7PZ-4153	Junction board		
	110MR16	Level vial		
	1044012474A	Option slot cover A		
	1044012475A	Option slot cover B		
	1054014047	18.4 mm Spacer bolt		
	1054012477	20mm Spacer bolt	FC5000i,FC10Ki,FC20Ki	
	1054012478B	Washer (H=2.4)		
	1054012478A	Washer (H=2.4)	FC5000i,FC10Ki,FC20Ki	
39	1EJ0470-01-230	DC Jack	(7PZ-3823)	

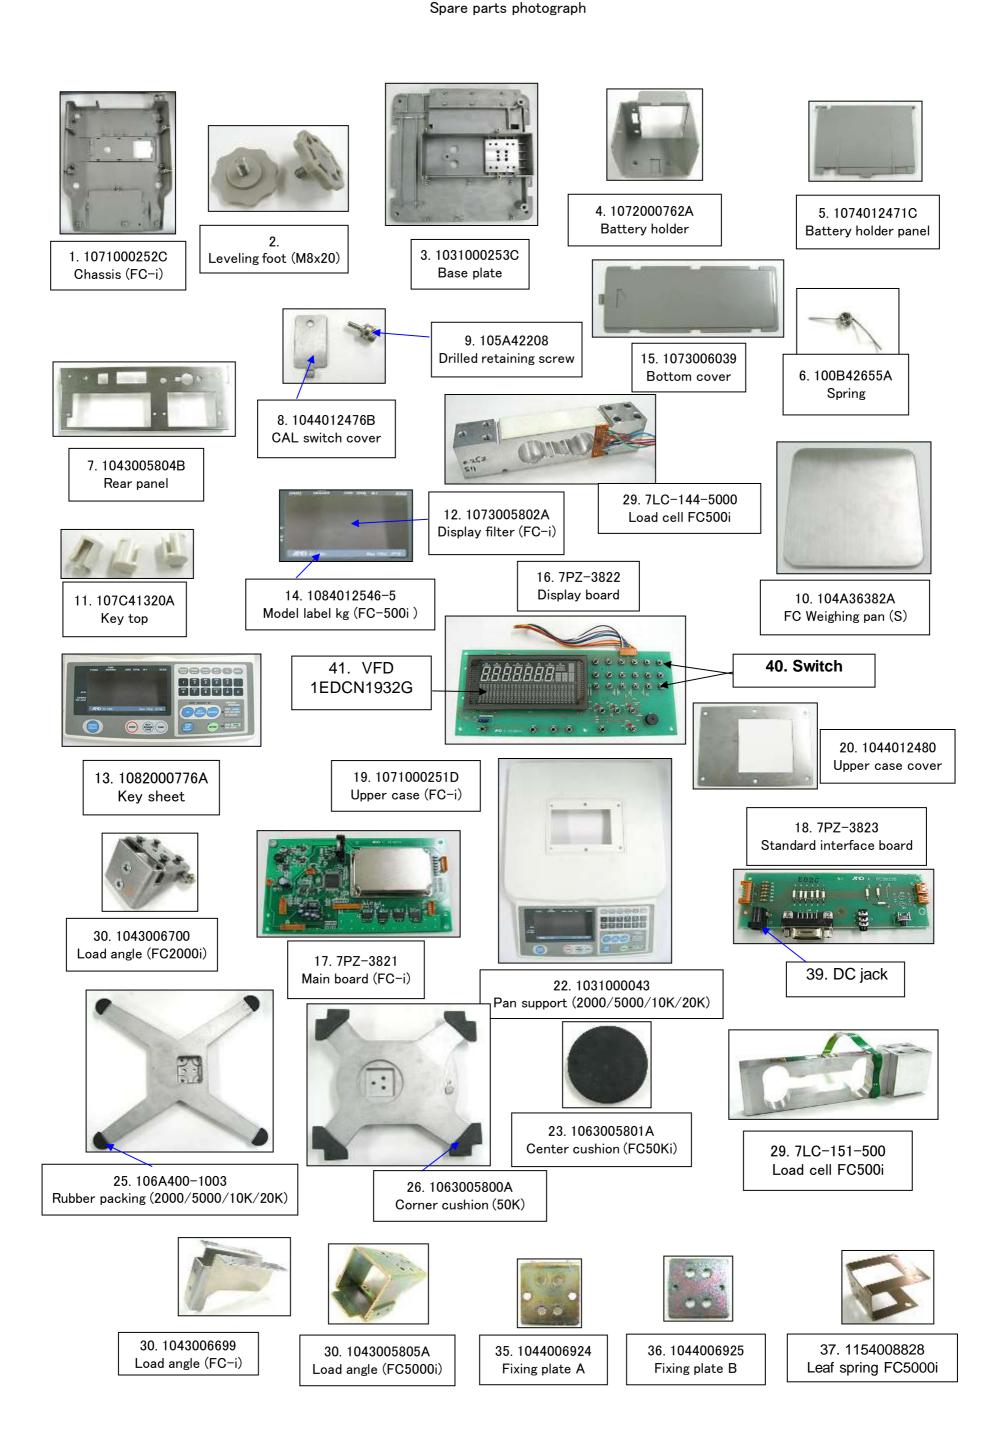



FC-Si series Page 3

Ver 2.0

No.	Parts No.	Parts Name		Applied to
1	1071000252C	Chassis (FC− <i>i</i>)		
	1063005819-1B	Leveling foot (M8x20) Prep	paring	
2	1063005819-1A		paring	
	1063005819-1	Leveling foot (M8x20)		
3	1031000276	Base	FC500si	
4	1072000762A	Battery holder		
5	1074012471C	Battery holder panel		
6	100B42655A	Spring		
7	1043005804B	Rear panel		
8	1044012476B	CAL switch cover		
9	105A42208	Drilled retaining screw		
10	107C41320A	Key top		
11	1073005802A	Display filter (FC- <i>i</i>)		
12	1082000776A	Key sheet		
12	1082000777A	Key sheet (JPN)		
	1084013186-1	Model label g (FC-500S/)	FC500si	
	1084013187-1	Model label lb/g (FC-500S <i>i</i>)	FC500si	
13	1084013186-2	Model labe gl (FC-5000Si)	FC5000si	
	1084013187-2	Model label lb/g (FC-5000Si)	FC5000si	
	1084013186-3	Model labe gl (FC-2000Si)	FC2000si	
	1084013187-3	Model label lb/g (FC-2000Si)	FC2000si	
14	1073006039	Bottom cover		
15	7PZ-3822	Display board		
28	1EDCN1932G	VFD		
27	1SKEVQ21407K	Switch PZ3822 (PC3822D	•	
	1SKEVQPAD07K	Switch PZ3822 (~PC3822	·	
16	7PZ-3820C	Main board (FC-S <i>i</i>)	FC500si	
17	7PZ-3820D	Main board (FC-Si)	FC5000si	
17	7PZ-3823	Standard interface board	F0500-:	
18	1071000249D	Upper case (FC-500S <i>i</i>)	FC500si	
	1071000250D 1043003604	Upper case (FC-5000S <i>i</i>)	FC5000si	
19	1043003603	Weighing pan 500SI Weighing pan 2000SI/5000SI		
	1064007987C	Pan support receptor	FC500si,FC5000si	
20	1064007987B	Pan support receptor	FC500si,FC5000si	
	1043006265	Dust plate	FC500si	
21	1043006266	Dust plate	FC500si,FC5000si	
22	1044013204	Spacer plate (t=2.5)	FC5000si	
23	1044013205	Spacer plate (t=1.0)	FC5000si	
0.4	1032000467A	Pan support arm GX200/400/6	00 FC500si	
24	1032000466A	Pan support arm GX6000/4000	/2000 FC5000si	
	1043003606B	Shock absorber spring	FC500si	
25	1043003606A	Shock absorber spring	FC500si	
	1043006267	Shock absorber spring	FC5000si	
	705-3009559	ROBERVAL GX600	FC500si	
	1044008310A-1	FLEXURE(T)	FC500si	
	1044008312	FLEXURE(S)	FC500si	
	705-3009557	ROBERVAL GX6000	FC2000si/5000si	
	1044008310A-2	FLEXURE(T)	FC2000si/5000si	
	1044008758A 110MR16	FLEXURE(S) Level vial	FC2000si/5000si	
	105B43428A	Lock pin		
	1043005803	Battery guide plate		
	1044012473B	Battery guide lock plate		
	1044012473A	Battery guide lock plate		
	1044012474A	Option slot cover A		
	1044012475A	Option slot cover B		
	1054012478B	Washer (H=2.4)		
	1054012478A	Washer (H=2.4)		
	1KO2246	Battery connector cable		
	1044013203	Reinforcing plate	FC500si	
26	1EJ0470-01-230	DC Jack	(7PZ-3823)	

FC-Si series Page 4

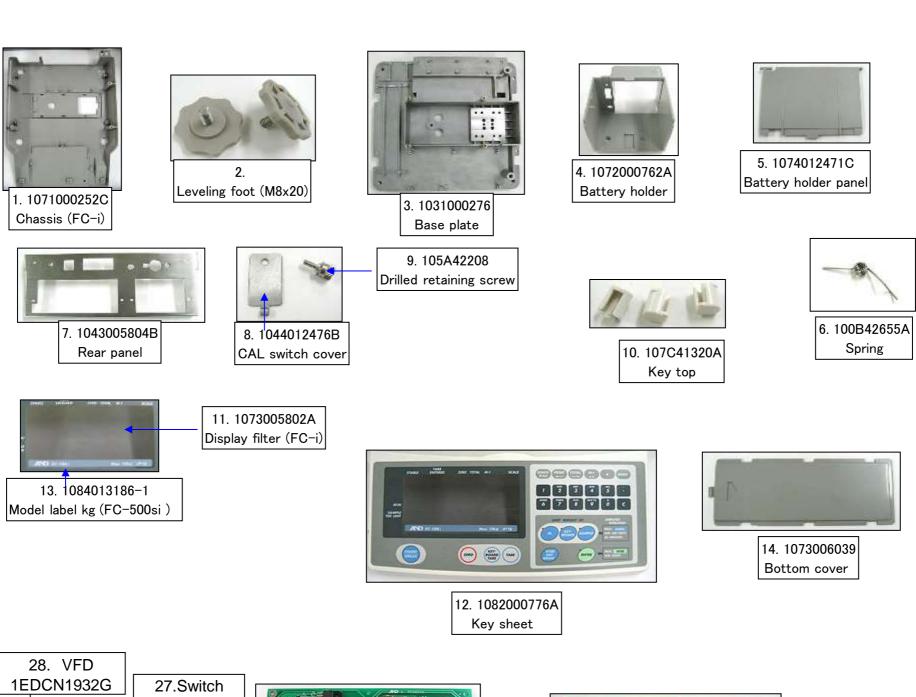

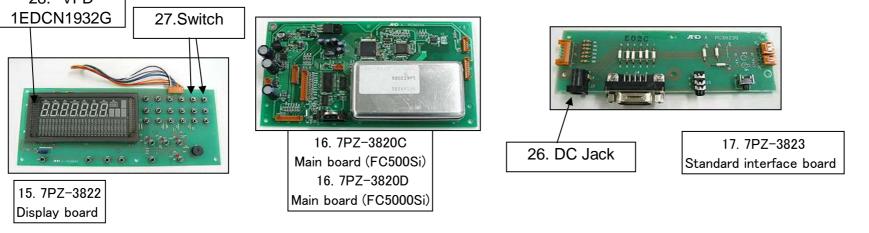



18. 1071000249D Upper case (FC500si)



18. 1071000250D Upper case (FC5000si)



19. 1043003604 Weighing Pan (FC500si) 19. 1043003603 Weighing Pan (FC5000si)



20. 1064007987B Pan support receptor



21. 1044013204 Spacer plate (t=2.5)



22. 1043006265 Dust plate (FC500si) 22. 1043006266 Dust plate (FC5000si)



33. 1032000467A Pan support (FC500si) 33. 1032000466A Pan support (FC5000si)



34. 1043003606A Shock absorber spring GX600/400/200 (FC500si) 34. 1043006267 Shock absorber spring GX8000/6000/6100 /4000/2000 (FC5000si)

Spare parts photograph

FC-Si series Page 6