

EJ series SPARE PARTS Price List

No.	Parts No.	Discription	Applied to
1	1071000844B	Lower Case (Metal Foot)	
	1071000844	Lower Case (Resin Foot)	
3	1071000843 1074023572	Upper Case CAL Cover	
4	1074023572	Battery Cover	
5	1074023574	Blank Cover (Rear)	
6	1074023584	Foot Holder A	
7	1074023585	Foot Holder B	
8-2	1064011084B-2	LEVEL FOOT (BK)	
	1064011084A-2	LEVEL FOOT(BK)(Metal Foot)	
8-1 9	1074023586 1074023587	Foot M6 (Resin) Foot Ruber	
9	707-4023586	Leveling Foot Unit EJ (No.6/7/8-1/9)	
10	1073011603	Pan Guide	
11	1073011604	Cell Cover	
12	1074023580	Key Top A (UNIT)	
13	1074023581	Key Top B (ON/OFF)	
14	1074023582	Key Top C (RE-ZERO)	
15	1074023583	Key Top D (SAMPLE & PRINT)	
16	1074023576A 1044023594	Spring Guide Battery Spring	
18	1044023592	Shield Case (A)	
19	1044023593	Shield Case (A)	
20	110MR14	Level Viail	
21	1074015870	Cap	
22	1154011703C	Earth Spring	
23	1083011719	Key Sheet EJ-EX	
	1083011721-1	Model Seal EJ-120EX	
	1083011721-2	Model Seal EJ-200EX	
	1083011721-3 1083011721-4	Model Seal EJ-300EX Model Seal EJ-410EX	
	1083011721-4	Model Seal EJ-610EX	
24	1083011721-6	Model Seal EJ-1500EX	
	1083011721-7	Model Seal EJ-2000EX	
	1083011721-8	Model Seal EJ-3000EX	
	1083011721-9	Model Seal EJ-4100EX	
	1083011721-10	Model Seal EJ-6100EX	
25	1044023588	Chassis 200	120/200/1500/2000
25	1044023589 1044023590	Chassis 300 Chassis 3000	300/410/610 3000/4100/6100
26	1044015279	110 Pan	120/200/300/410/610
20	1043011611	Pan M	1500/2000/3000/4100/6100
27	1073011608	Pan Support S	120/200/300/410/610
	1043011612	Pan Support M	1500/2000/3000/4100/6100
	1073011609	Support Base 200	120/200
28	1074023577	Support Base 300	300/410/610
	1073011610	Support Base 2000	1500/2000
	1044011697 1044023578	LC Angle 200	3000/4100/6100 300/410/610
29	1074023578	LC Angle 300 Cell Stooper 200	120/200/1500/2000
	1073011605	Pan Cover S	120/200/300/410/610
31	1084024143	Blank Seal	
32	1084024142	Spacer Seal	120/200
33	1072001370	Battery Box	
34	1154020628	Battery Spring -	
35	1044020629	Spring Support	
36	1154020627 7LC-168-200-FE	Battery Spring +- Load Cell 120/200	
37	7LC-168-200-FE	Load Cell 120/200	
	7LC-168-2000-FE	Load Cell 1500/2000	
	7LC-168-2000	Load Cell 1500/2000	
	7LC-169-610-FE	Load Cell 300/410/610	
	7LC-169-610	Load Cell 300/410/610	
	7LC-170-6100-FE	Load Cell 3000/4000/4100/6100	
	7LC-170-6100	Load Cell 3000/4000/6100	
Important		Required resistance when exchanging load cells	
38	7PZ-5228 1EDSL-3108	Main Board LCD (PZ5228)	
	1EDSL-3108	LCD BACK LIGHT (PZ5228)	
	1UCMN101E31DE	CPU	
	1UCMN101EF31D	CPU	•
40	1SKSKHHAK	SWITCH (PZ5228)	
41	1EJ0470-01-230	DC JACK	

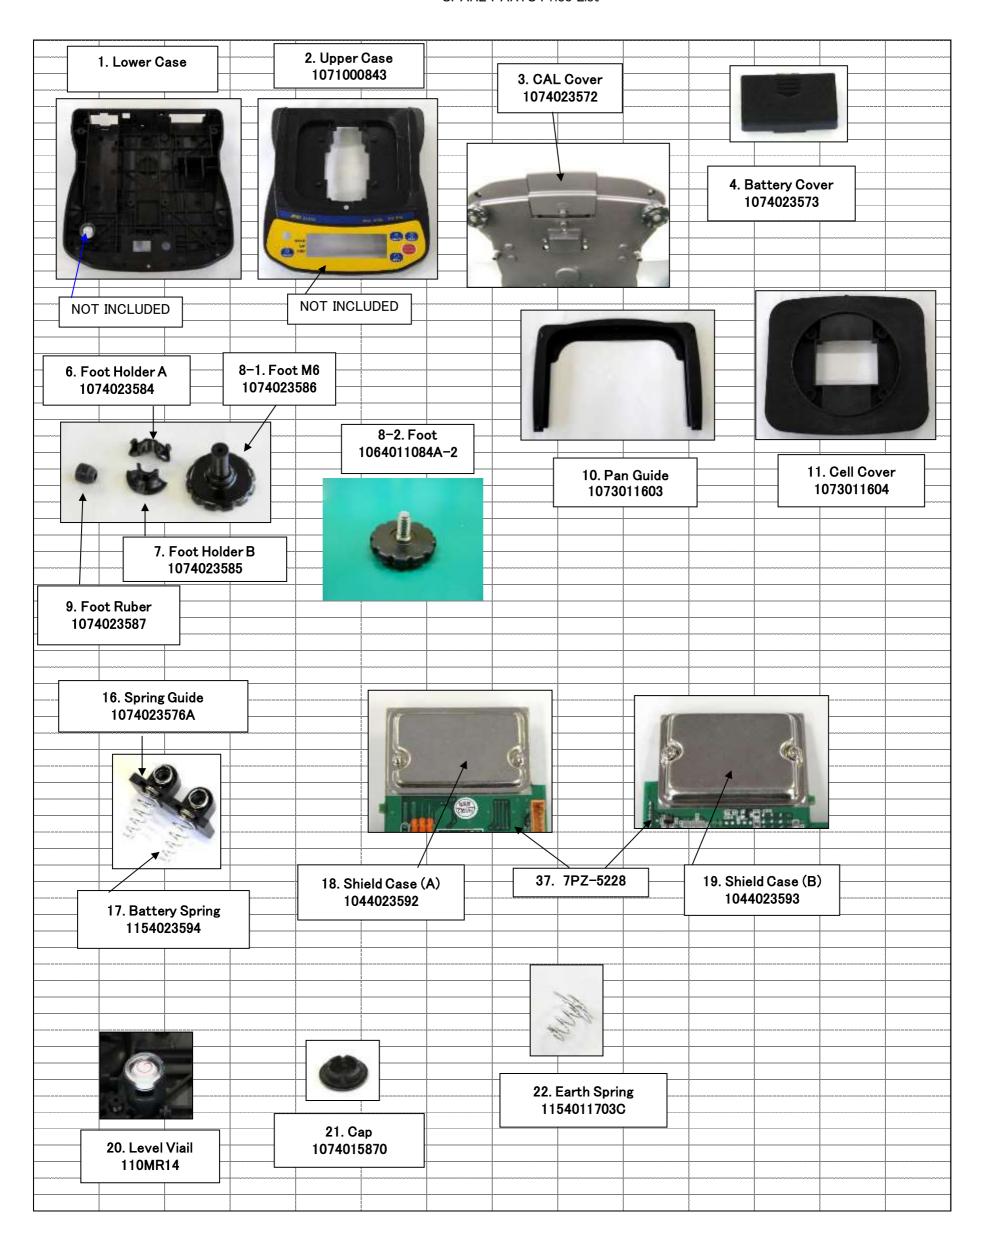

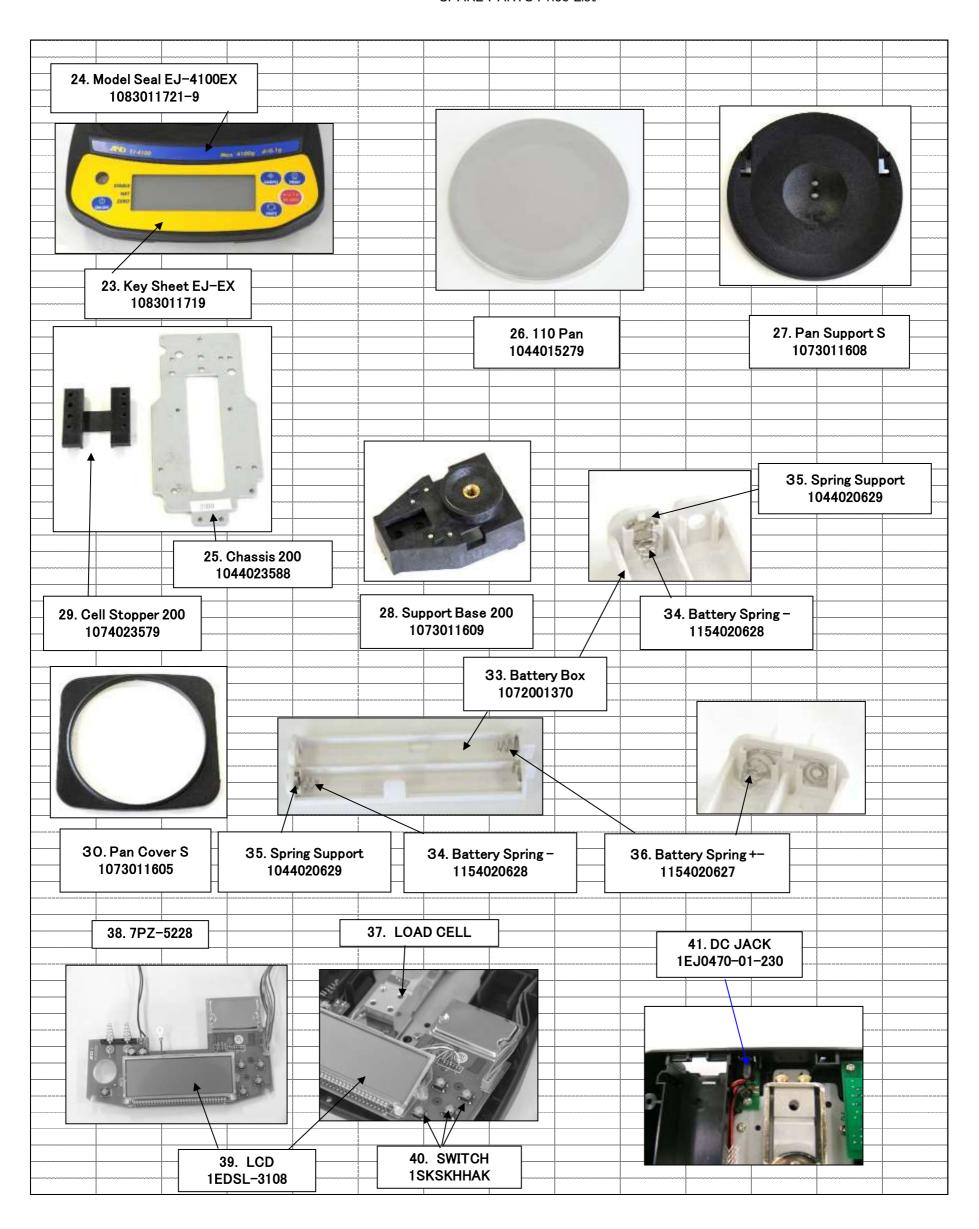

EJ series SPARE PARTS Price List

Important notice in case of exchanging of load cell


10/2011 A&D FE

(7LC-168-200-FE / 7LC-168-2000-FE / 7LC-169-610-FE / 7LC-170-6100-FE)

Please mount $10K\Omega$ resistor between RT+ and RT- when you change load cell.


Accuracy and size of the resistor are not considered.

But we recommend you to use 2012 size. (Registration number of A&D: 1RC1/10W103J)

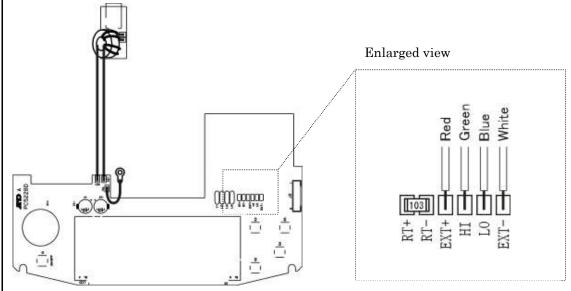

Reference drawing of the mounting

7PZ-5228

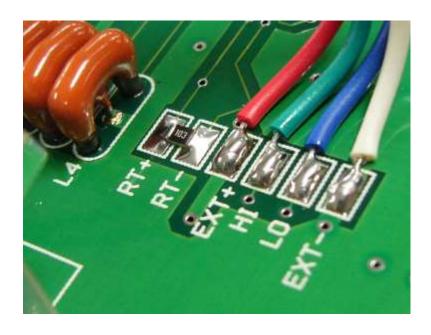

EJ series SPARE PARTS Price List

No.	Parts No.	Discription
23	1083011720	Key Sheet EJ-JA
	1083011722-1	Model Seal EJ-120JA
	1083011722-2	Model Seal EJ-200JA
	1083011722-3	Model Seal EJ-300JA
	1083011722-4	Model Seal EJ-410JA
24	1083011722-5	Model Seal EJ-610JA
	1083011722-6	Model Seal EJ-1500JA
	1083011722-7	Model Seal EJ-2000JA
	1083011722-8	Model Seal EJ-3000JA
	1083011722-9	Model Seal EJ-4100JA
	1083011722-10	Model Seal EJ-6100JA