

# Quick Calibration Guide

For Weighing Products



**AND**  
A&D Weighing

## Balances

AD-4212A/B Series.....	Page 4
AD-4212C Series.....	Page 5
EK Series.....	Page 6
EK-G/EW-G Series.....	Page 7
EK-H Series.....	Page 8
EK-i/EW-i Series.....	Page 9
EP-A Series.....	Page 10
EP-B Series.....	Page 11
ER Series.....	Page 12
EW Series.....	Page 13
FA/FX/FY Series.....	Page 14
FP Series.....	Page 15
FR Series.....	Page 16
FZ-CT/FX-CT Series.....	Page 17
FZ-i/FX-i Series.....	Page 18
FZ-iWP/FX-iWP Series.....	Page 19
GF Series.....	Page 20
GF-K Series.....	Page 21
GH Series.....	Page 22
GP Series.....	Page 23
GR Series.....	Page 24
GX Series.....	Page 25
GX-K Series.....	Page 26
HA Series.....	Page 27
HF/HF-G/HP Series.....	Page 28
HM Series.....	Page 29
HR Series.....	Page 30
HX Series.....	Page 31

## Scales

FC Series.....	Page 32
FC-i Series.....	Page 33
New FG Series.....	Page 34
FG Series.....	Page 35

FG-D Series.....	Page 36
FJ Series.....	Page 37
FS-i Series.....	Page 38
FS/FS-KL Series.....	Page 39
FV/FW Series.....	Page 40
HC-i Series.....	Page 41
HC/HD Series.....	Page 42
HJ-150.....	Page 43
HL Series.....	Page 44
HL-i Series.....	Page 45
HL-WP Series.....	Page 46
HT Series.....	Page 47
HV/HW Series.....	Page 48
HV-G Series.....	Page 49
HVG-WP Series.....	Page 50
HW-D Series.....	Page 51
HW-G Series.....	Page 52
SF/SG Series.....	Page 53
SJ-H Series.....	Page 54
SK Series.....	Page 55
SK-WP Series.....	Page 56

## Indicators

AD-4316.....	Page 57
AD-4321.....	Page 58
AD-4322.....	Page 59
AD-4323.....	Page 60
AD-4324.....	Page 61
AD-4325.....	Page 62
AD-4326/7.....	Page 63
AD-4328.....	Page 64
AD-4329.....	Page 65
AD-4335/35C.....	Page 66
AD-4401.....	Page 67
AD-4402.....	Page 68

AD-4404.....	Page 70
AD-4405.....	Page 71
AD-4406.....	Page 72
AD-4407.....	Page 73
AD-4408A/C.....	Page 74
AD-4531/2.....	Page 75
AD-4532B.....	Page 76


### **Others**

M Series Moisture Analyzers.....	Page 77
AD-4712.....	Page 78
AD-4713.....	Page 79
AD-4714.....	Page 80
AD-4715.....	Page 81
SV/SV-A Series.....	Page 82
SV-10/1A/10A .....	Page 83

### **Australian Specific Products**


211DA.....	Page 84
522PI.....	Page 85
522P II.....	Page 86
A&D-150.....	Page 87
AP SERIES.....	Page 88
AP MKII.....	Page 89
AP MKII/III.....	Page 90
CH150K/KP.....	Page 91
HW-WP.....	Page 92
MC-2000A.....	Page 93
SA-15.....	Page 94
UC300/301.....	Page 95
UC321.....	Page 96
Vet Weigher.....	Page 97
Wheel Chair Weigher.....	Page 98

## Simple Calibration Flow Chart

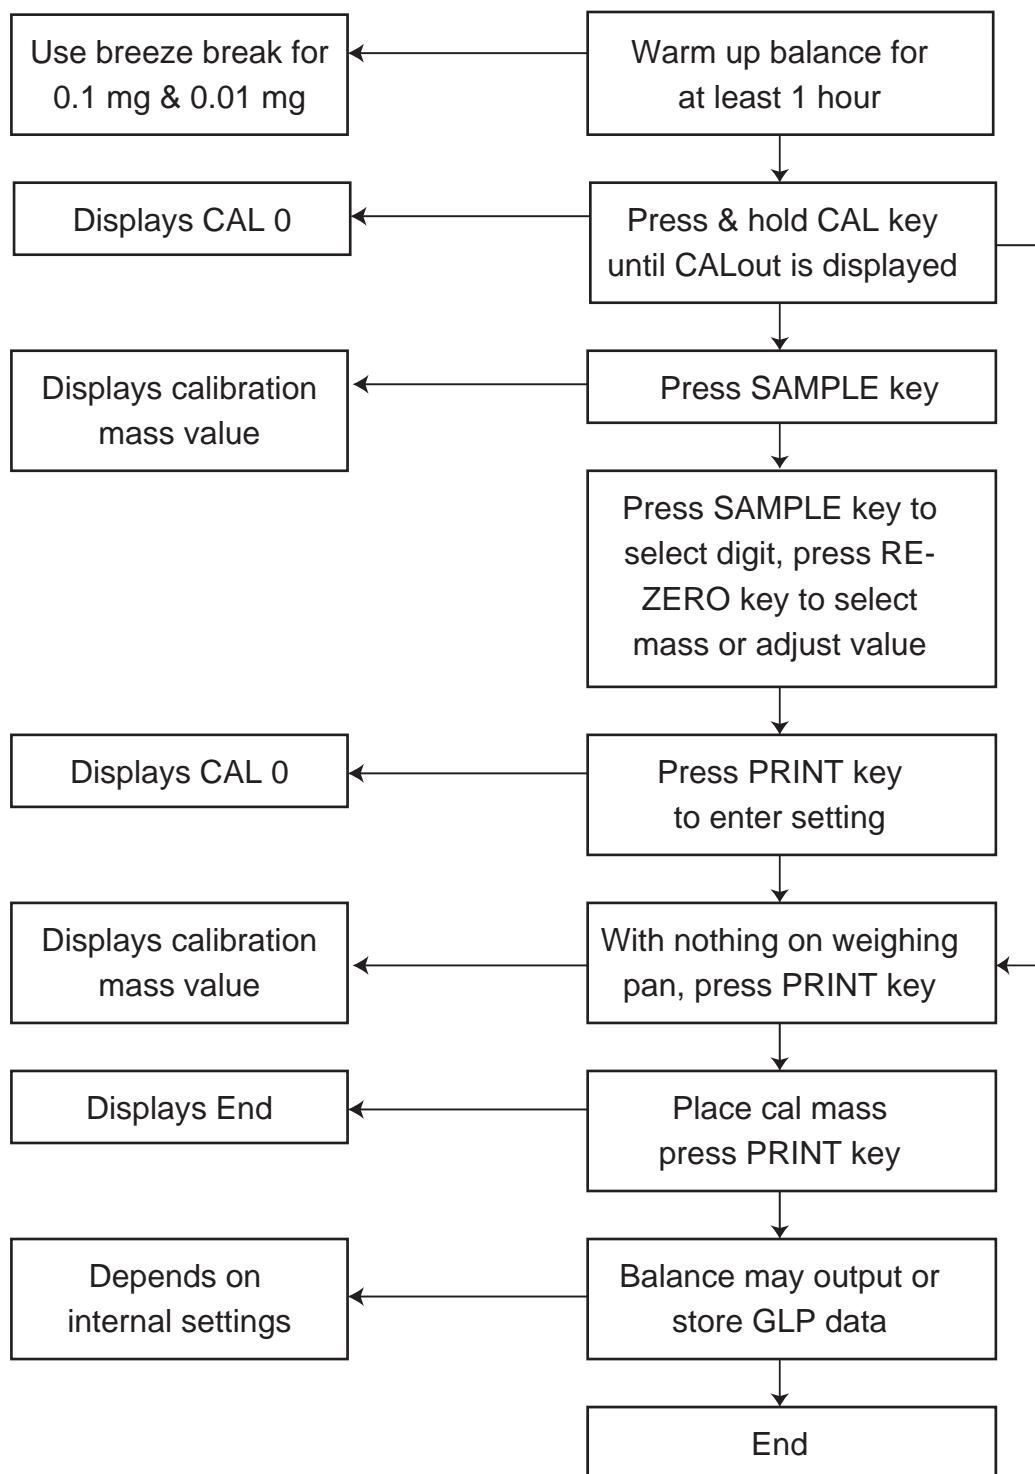


**AD-4212A/B Series**

## Simple Calibration Flow Chart

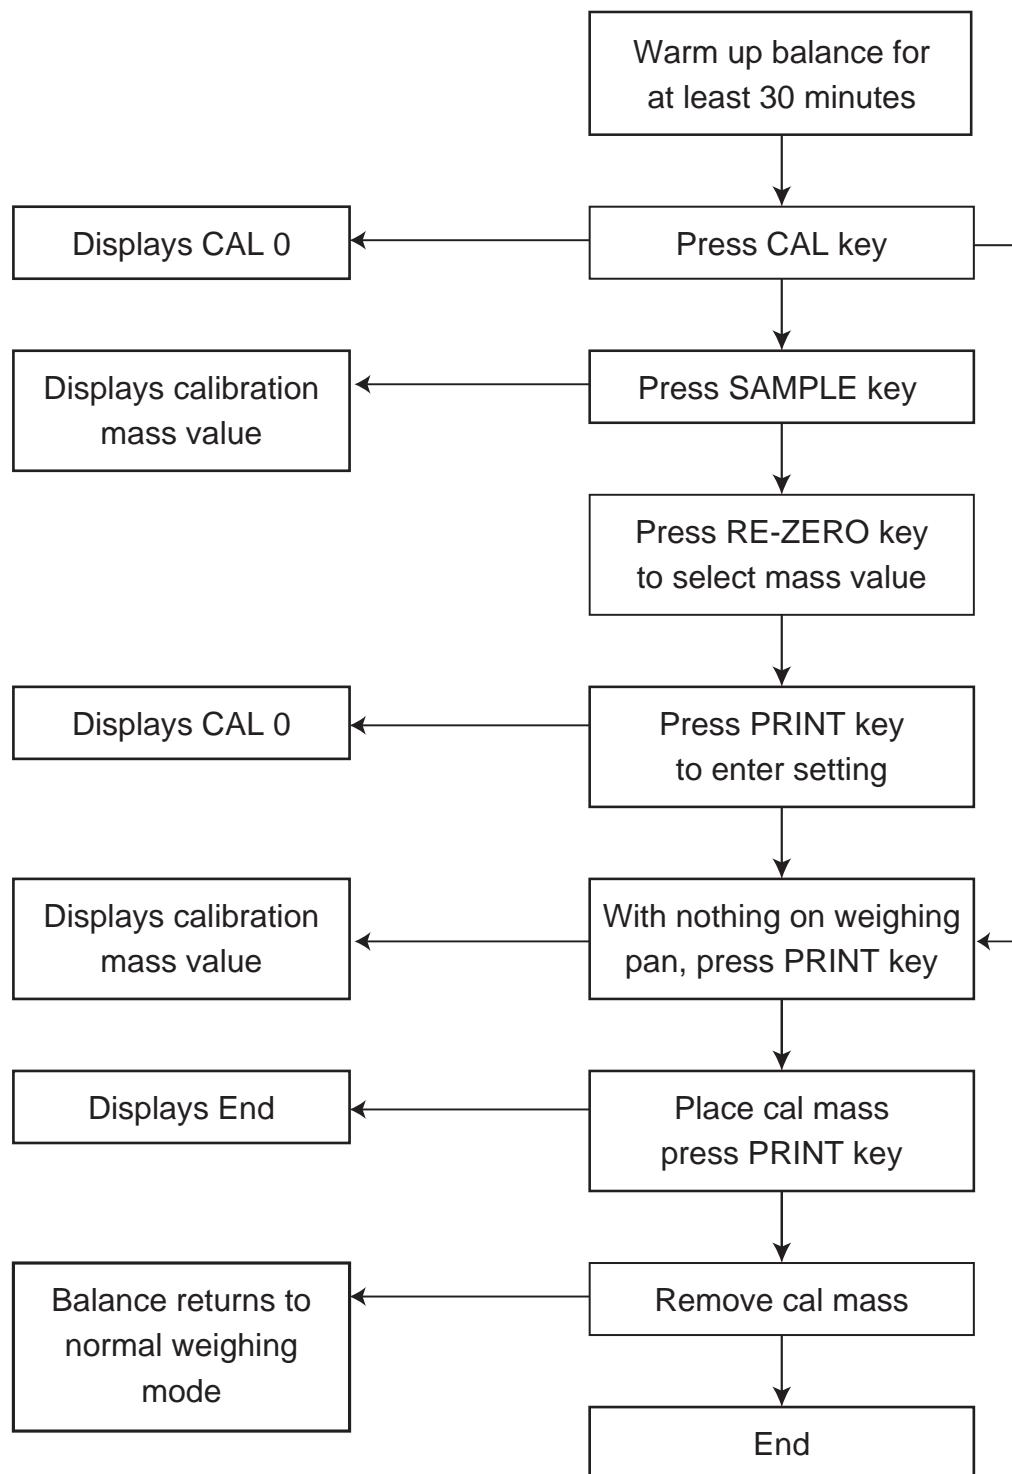


**AD-4212C Series**

## Simple Calibration Flow Chart

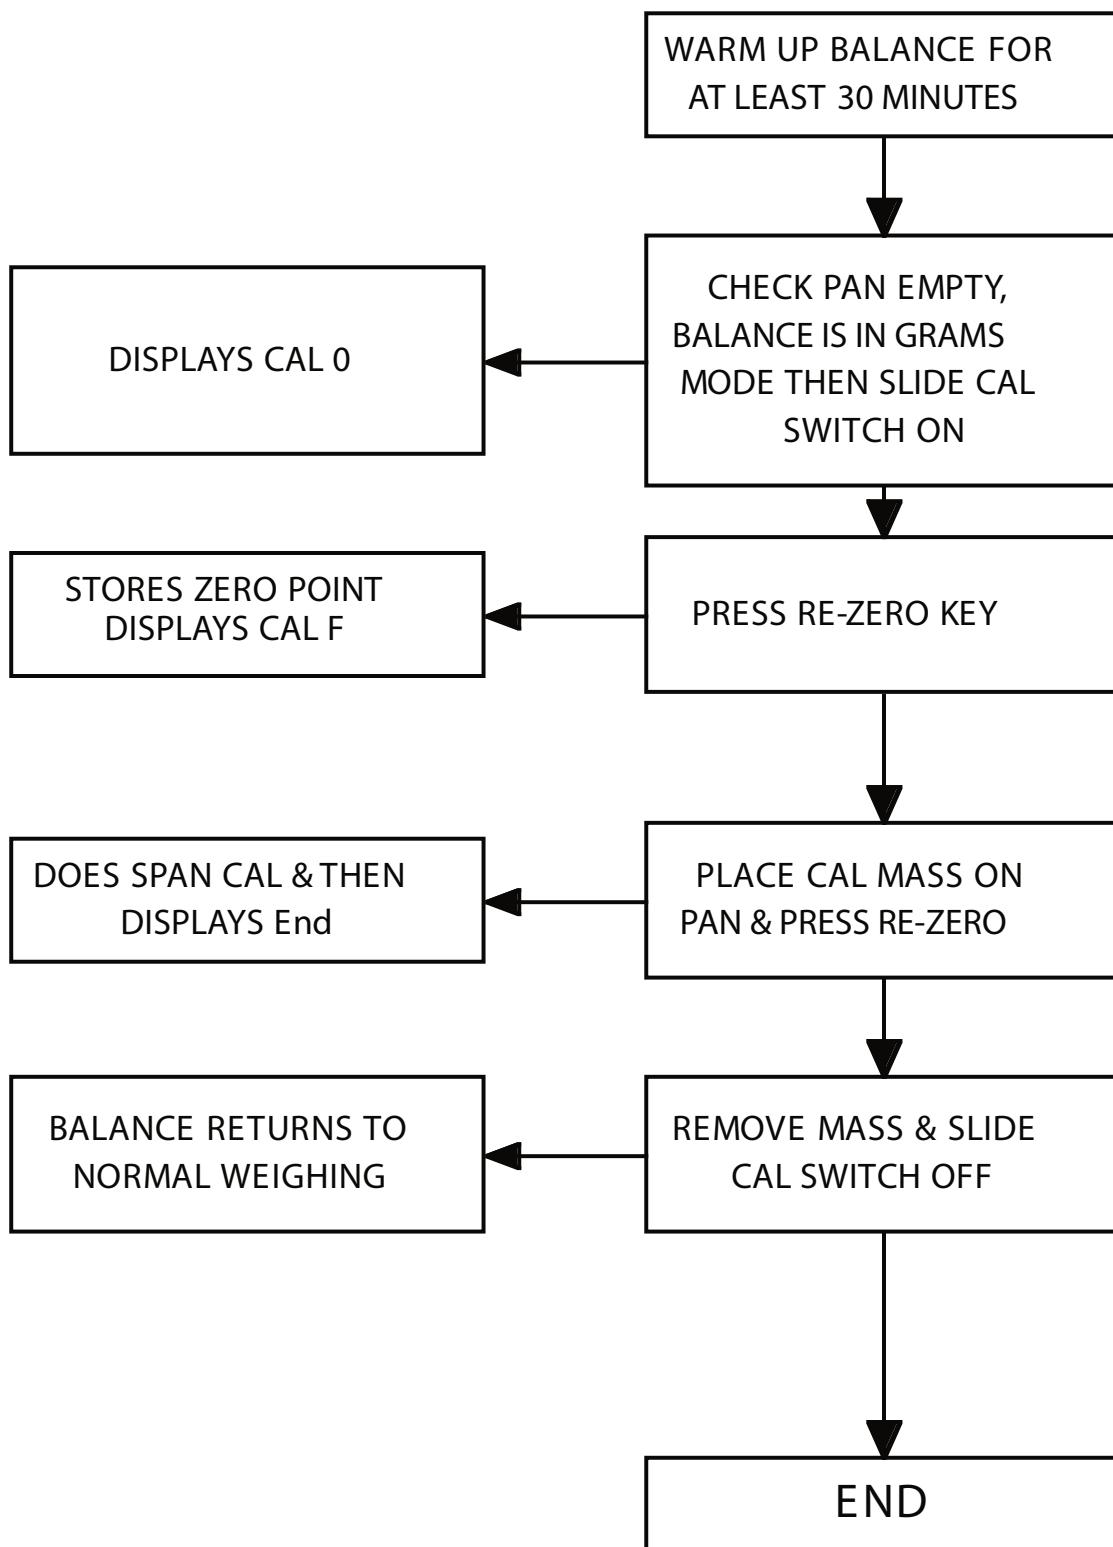


EK Series

## Simple Calibration Flow Chart

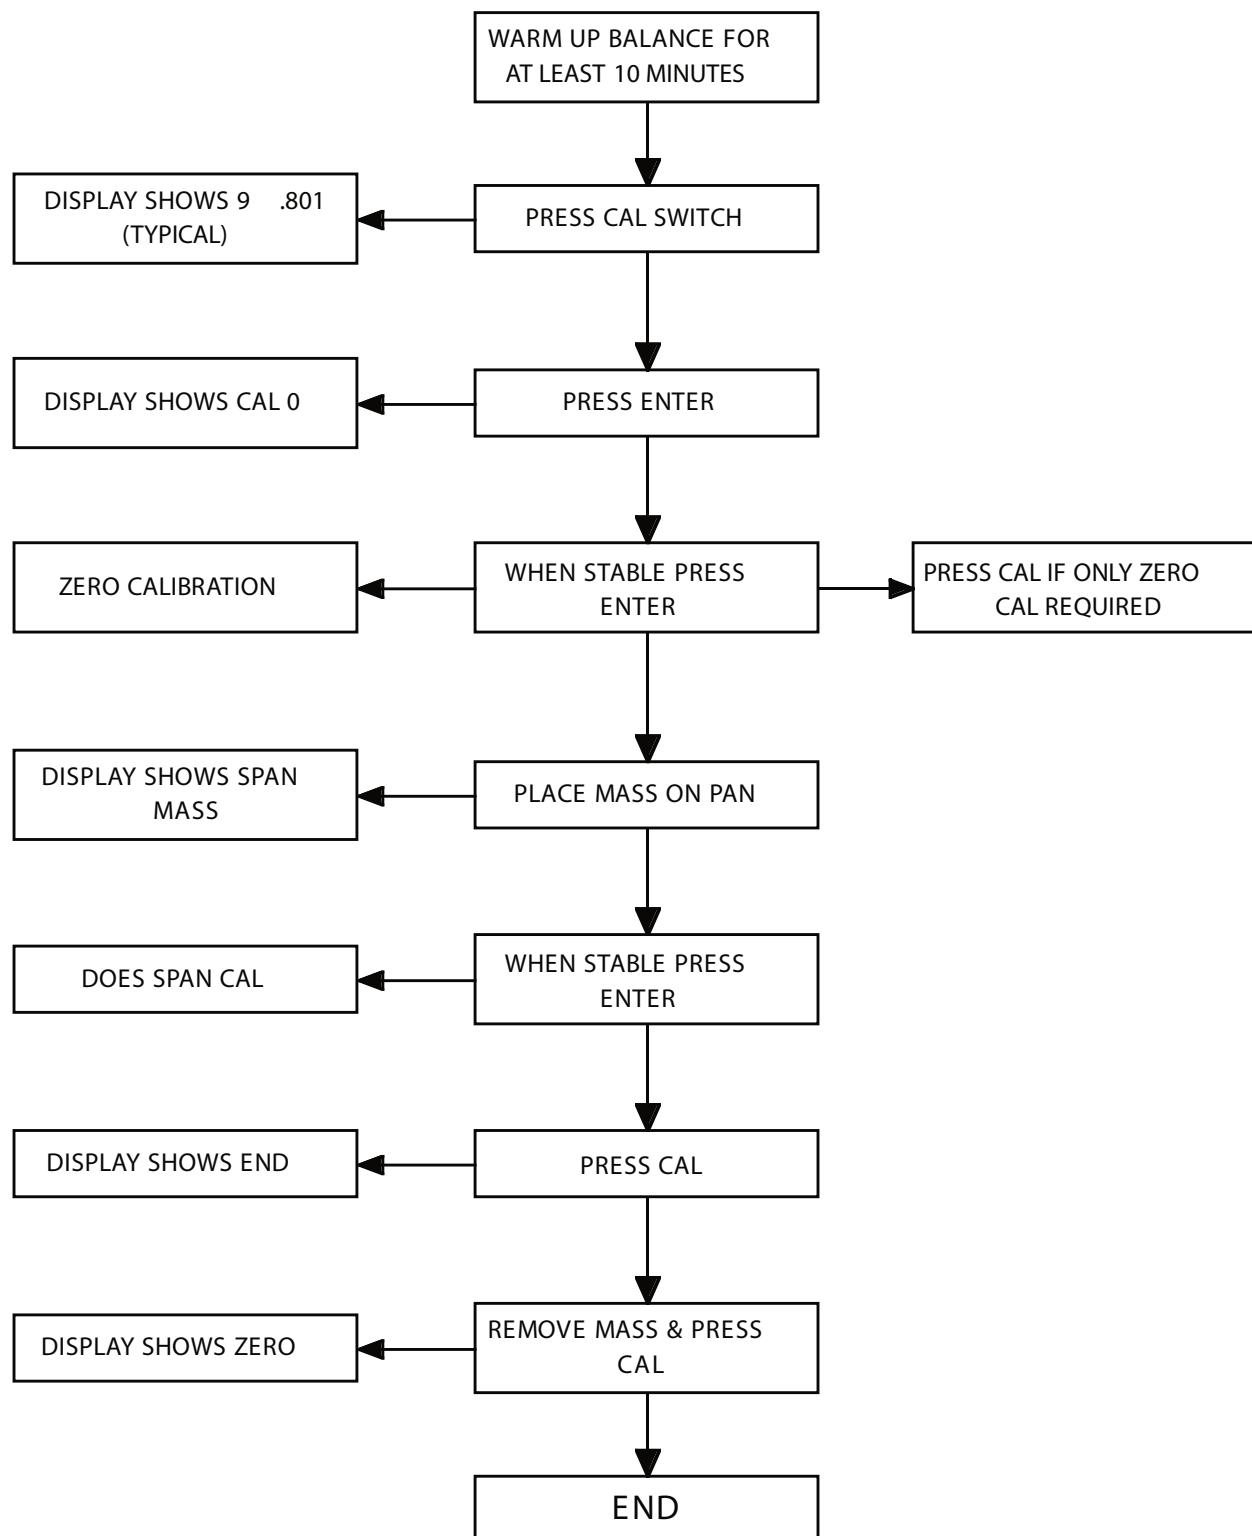


EK-G/EW-G Series

## Simple Calibration Flow Chart

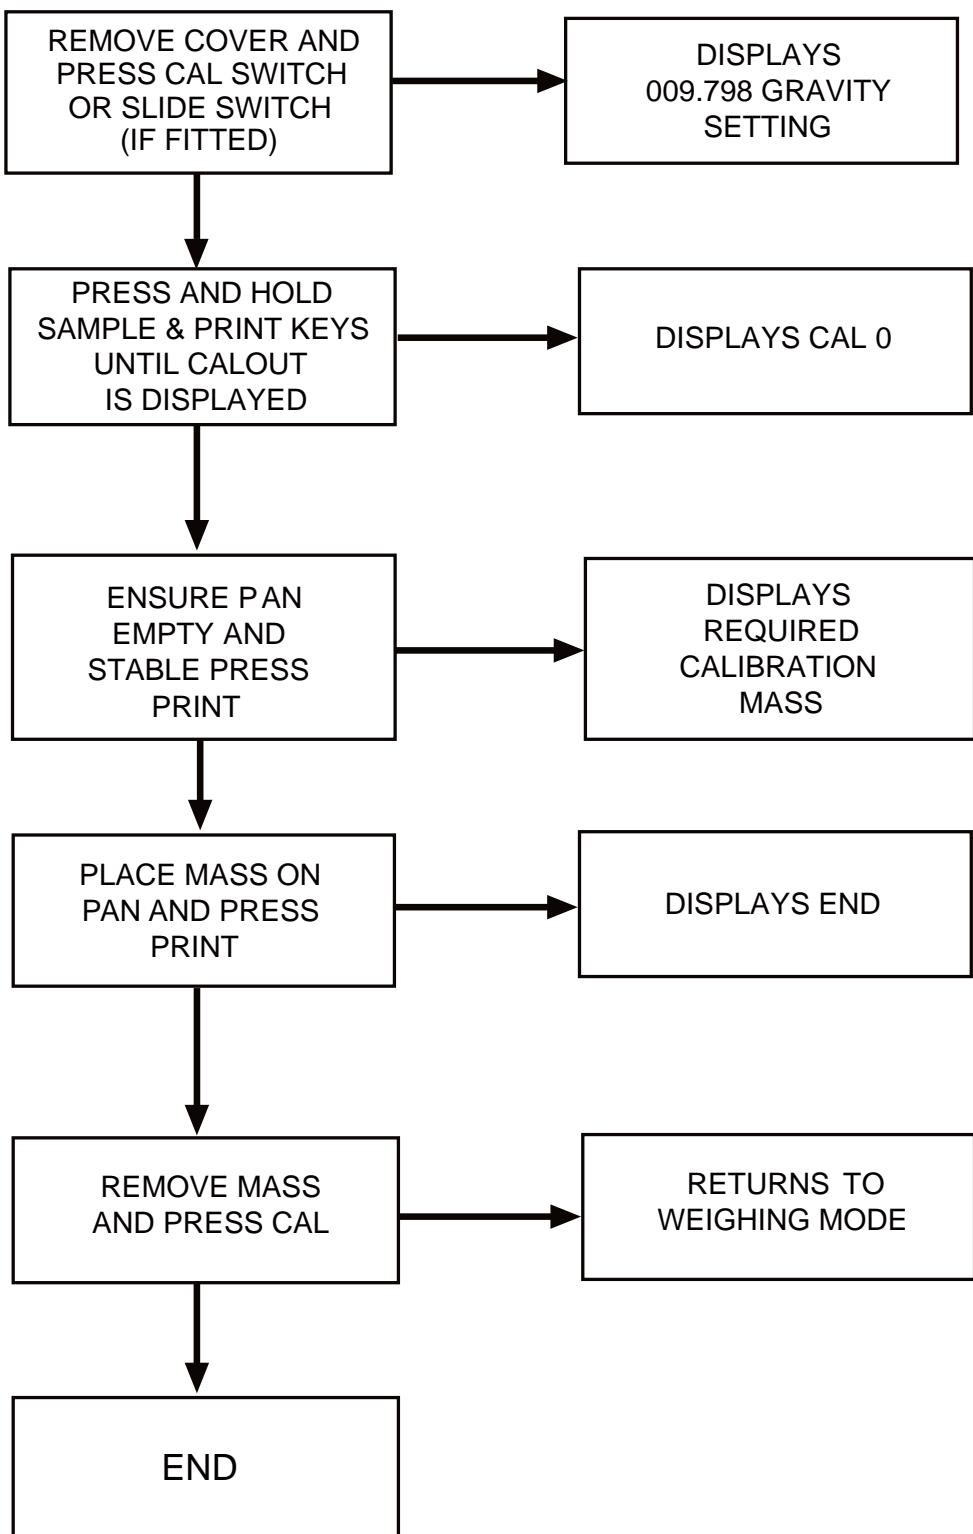


**EK-H Series**

## Simple Calibration Flow Chart

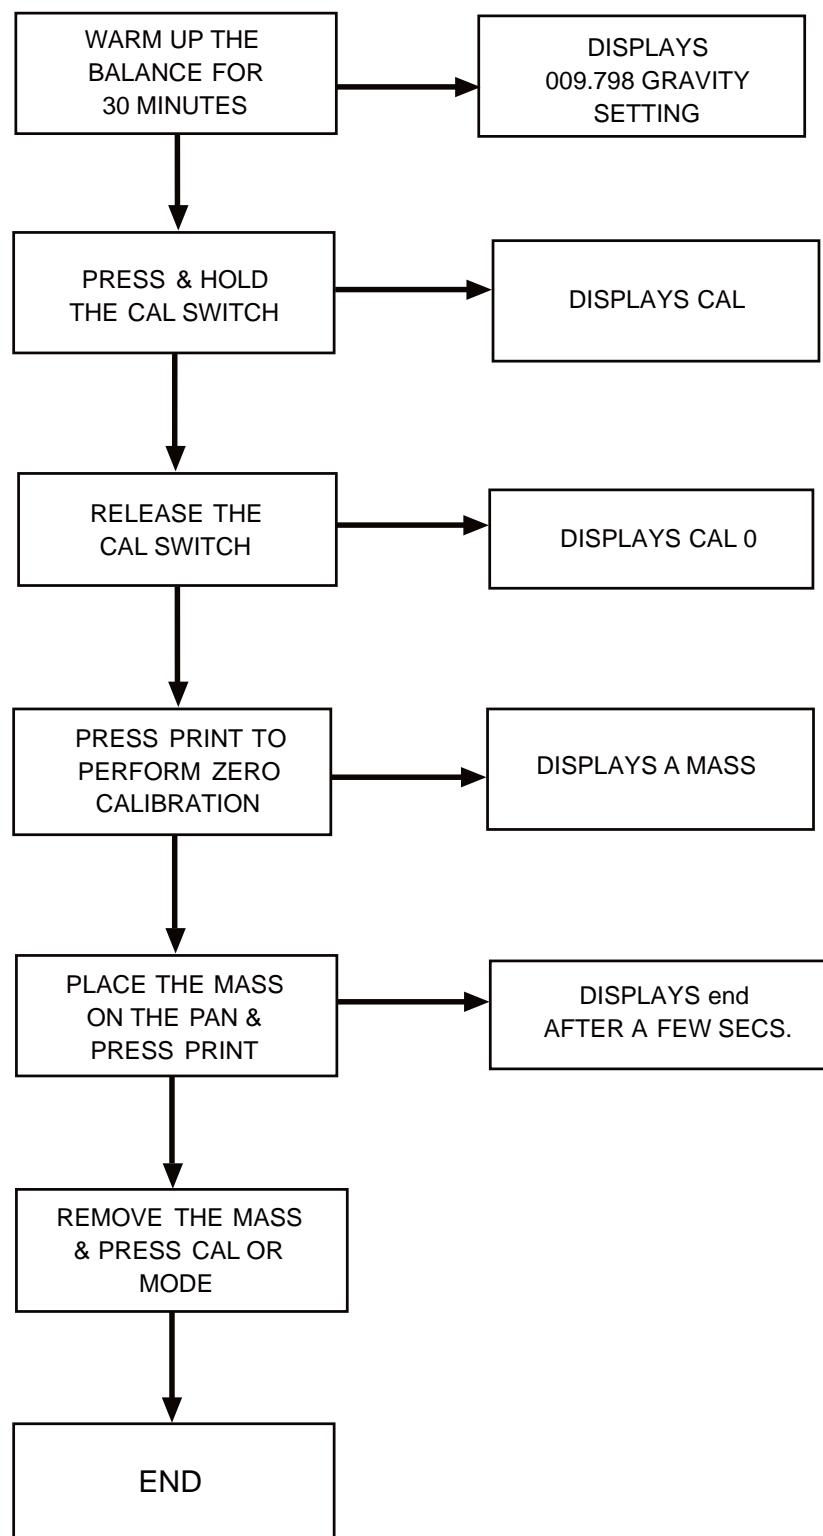


**EK-i/EW-i Series**

## Simple Calibration Flow Chart

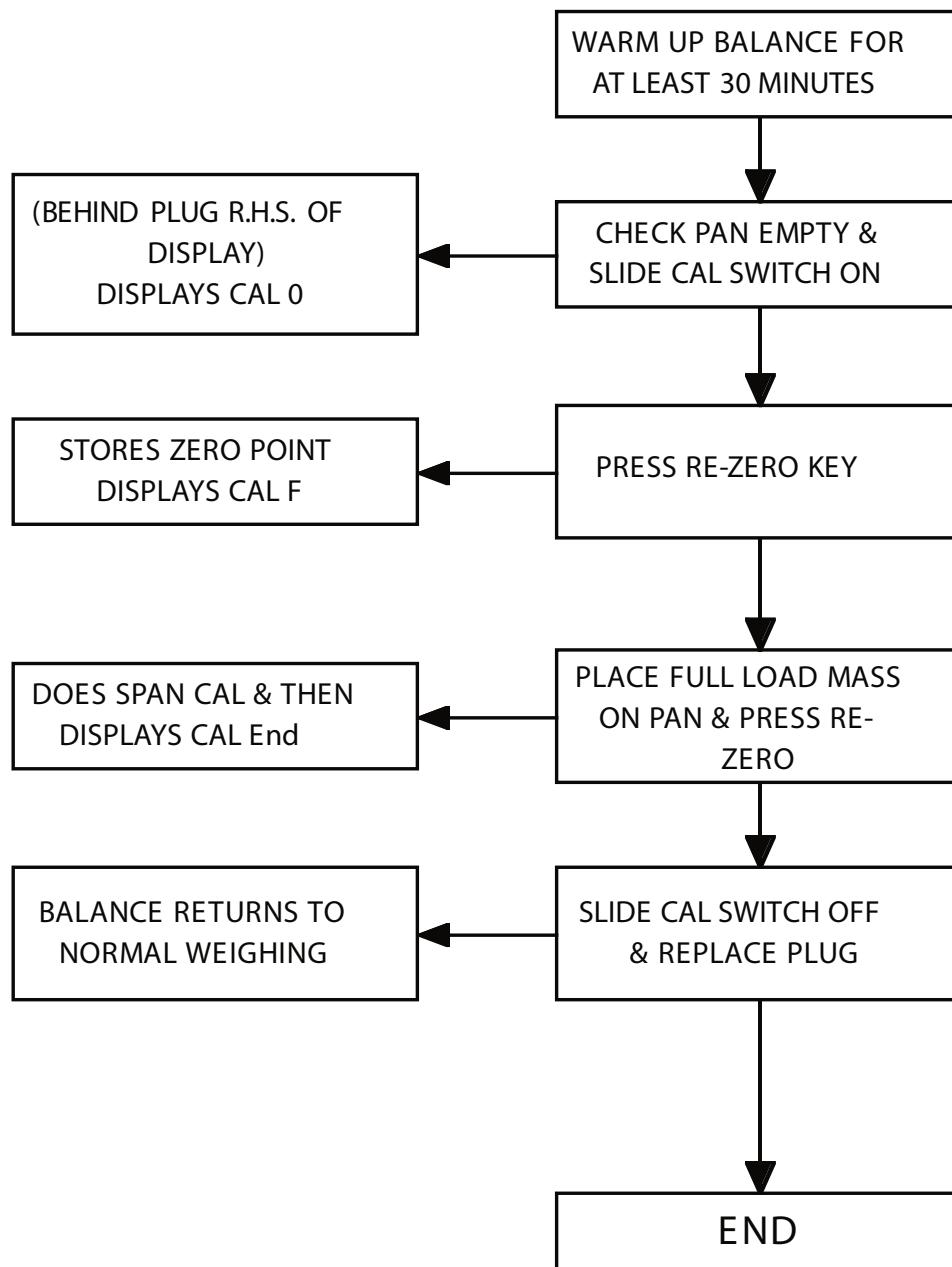


EP-A Series

## Simple Calibration Flow Chart

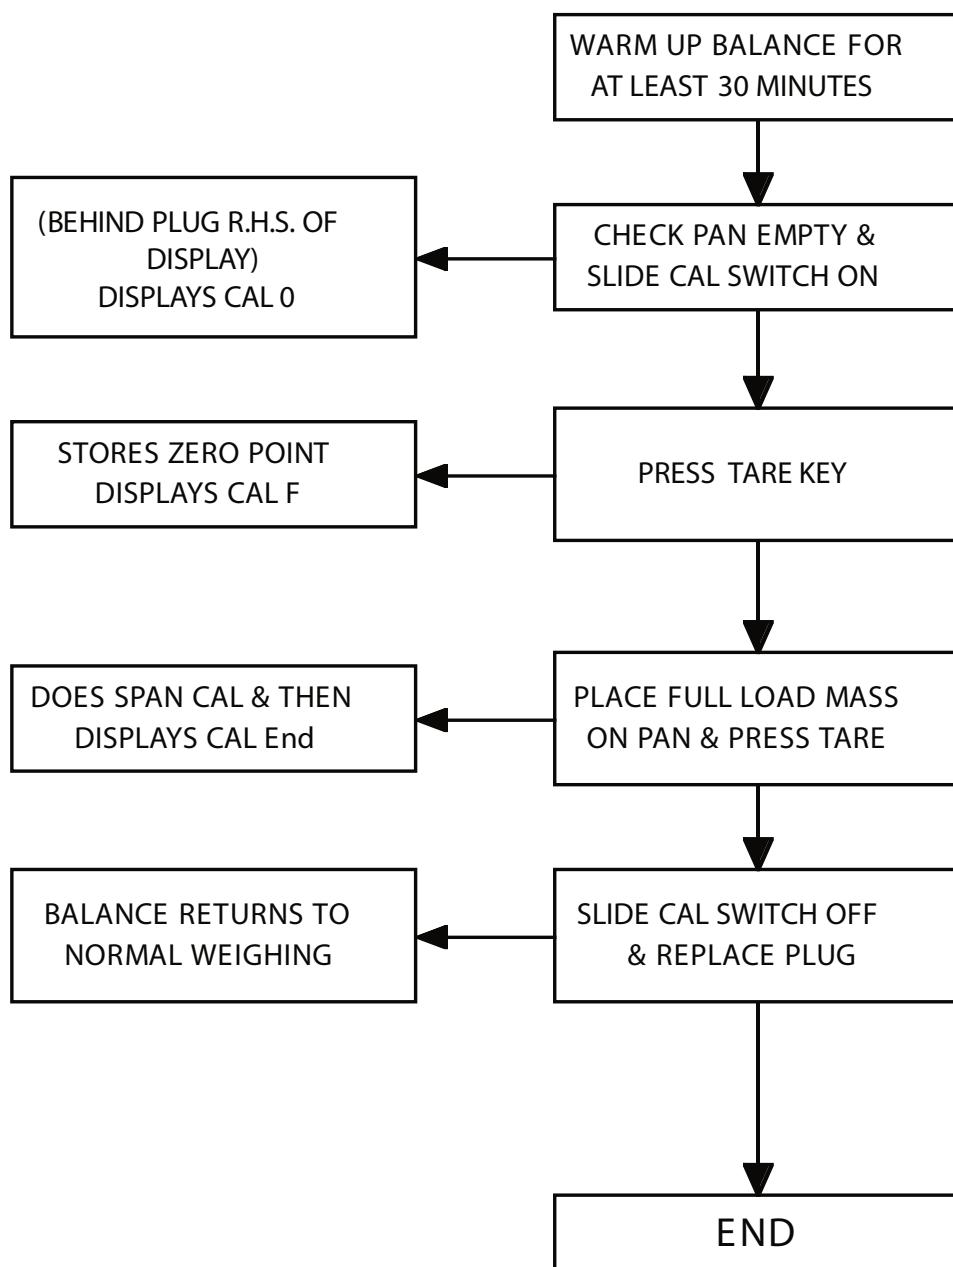


EP-B Series

## Simple Calibration Flow Chart

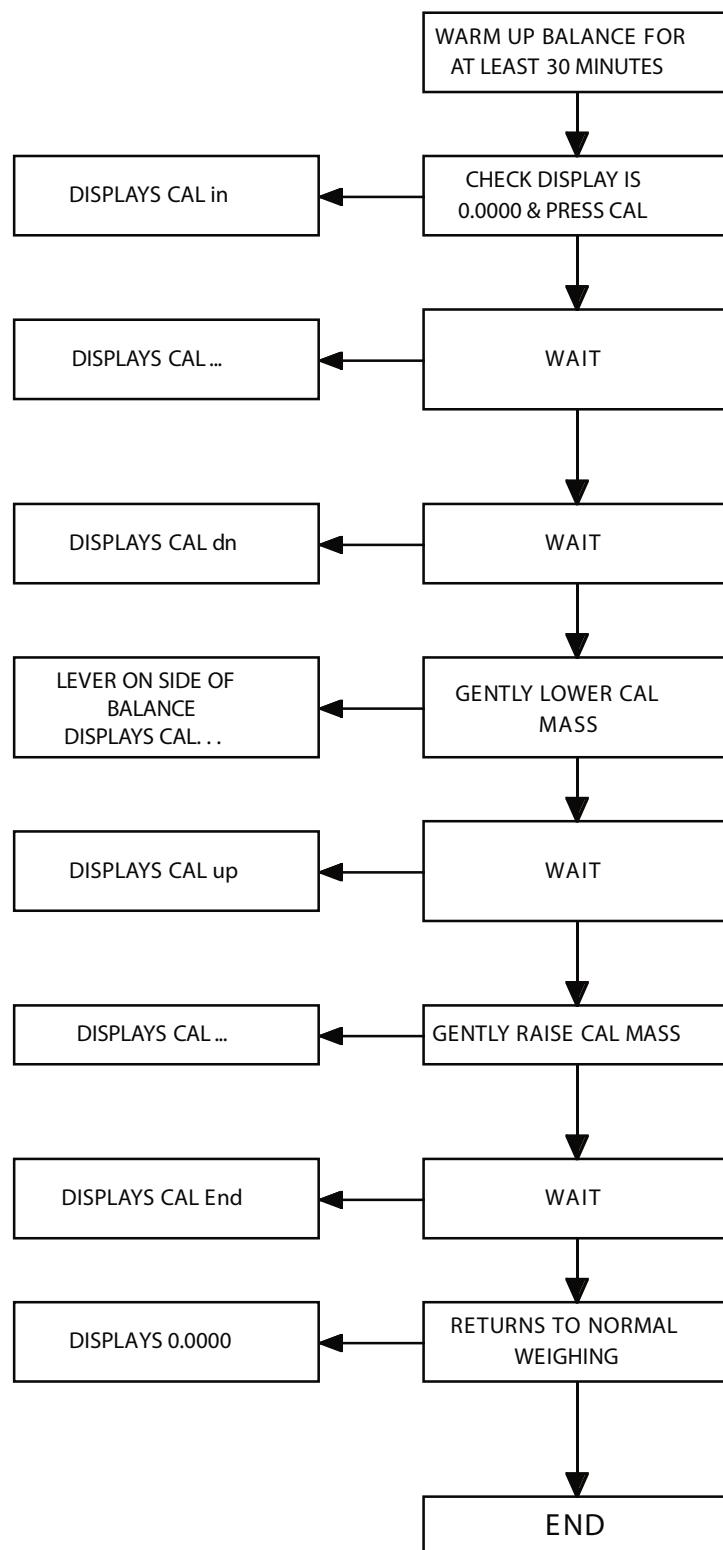


ER Series

## Simple Calibration Flow Chart

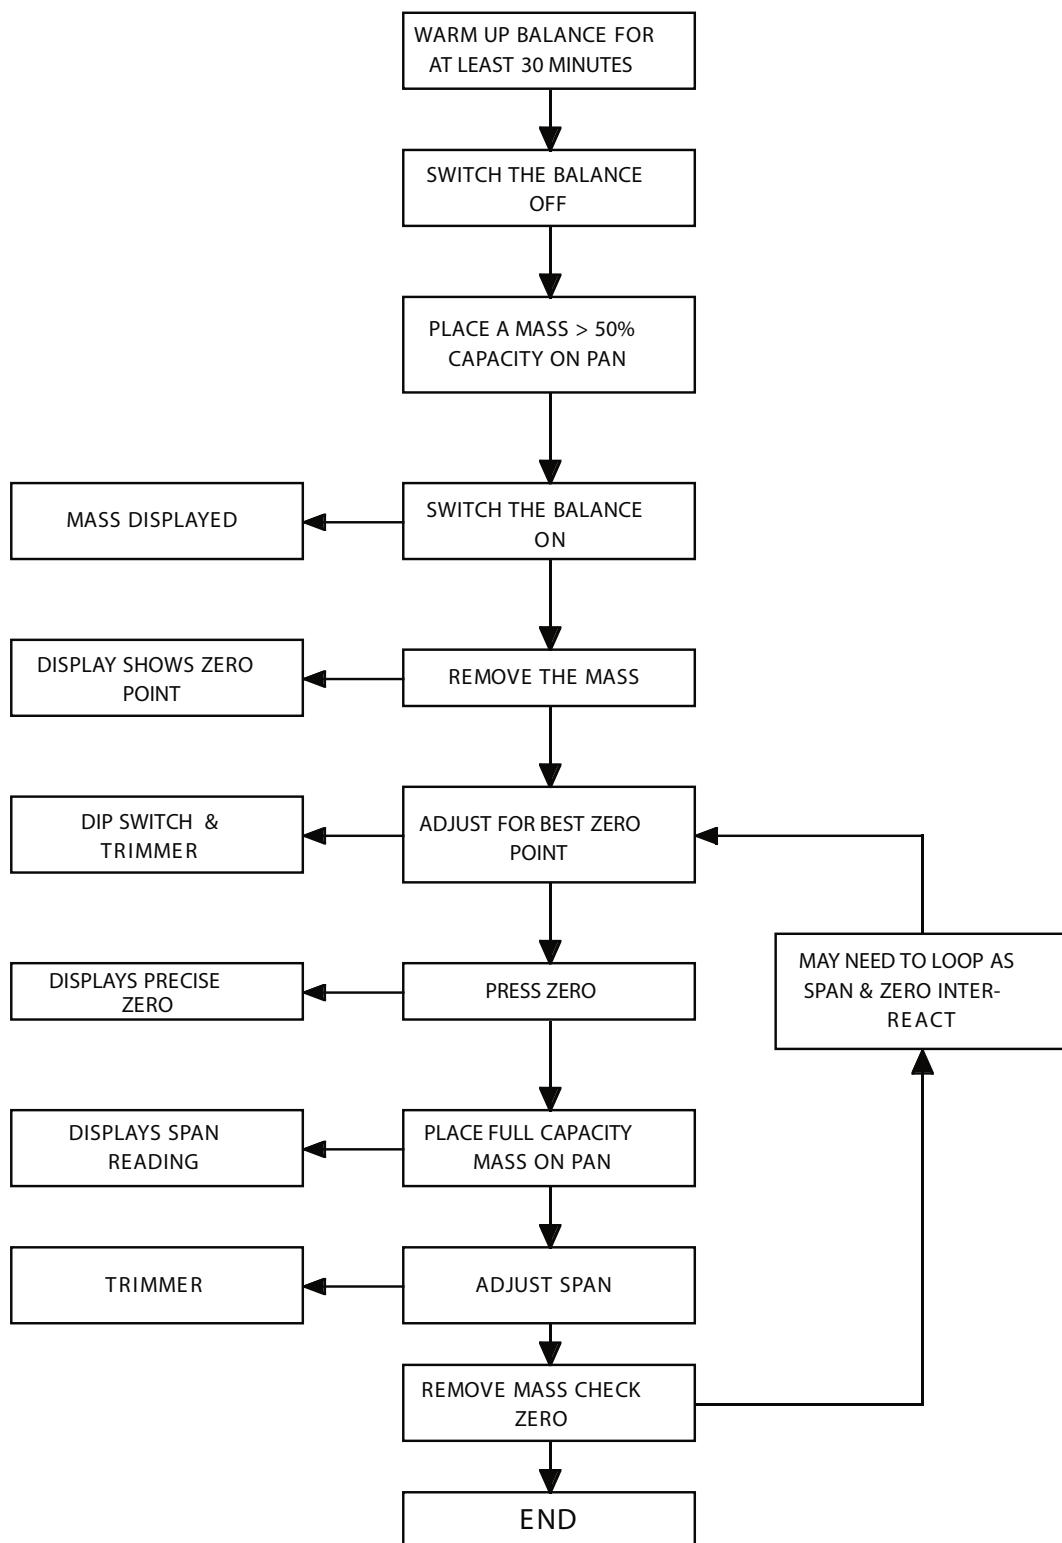


EW Series

## Simple Calibration Flow Chart

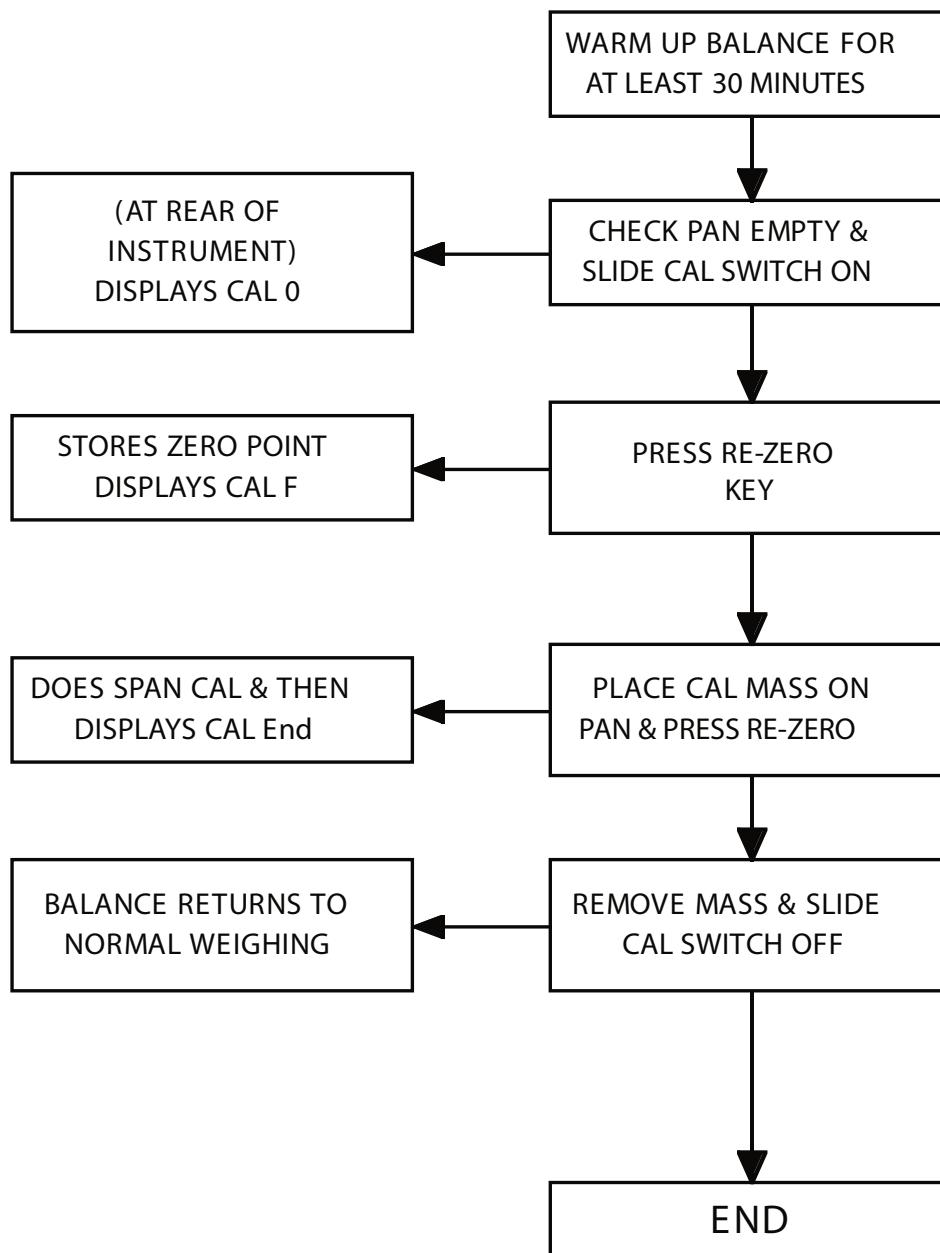


FA/FX/FY Series

## Simple Calibration Flow Chart

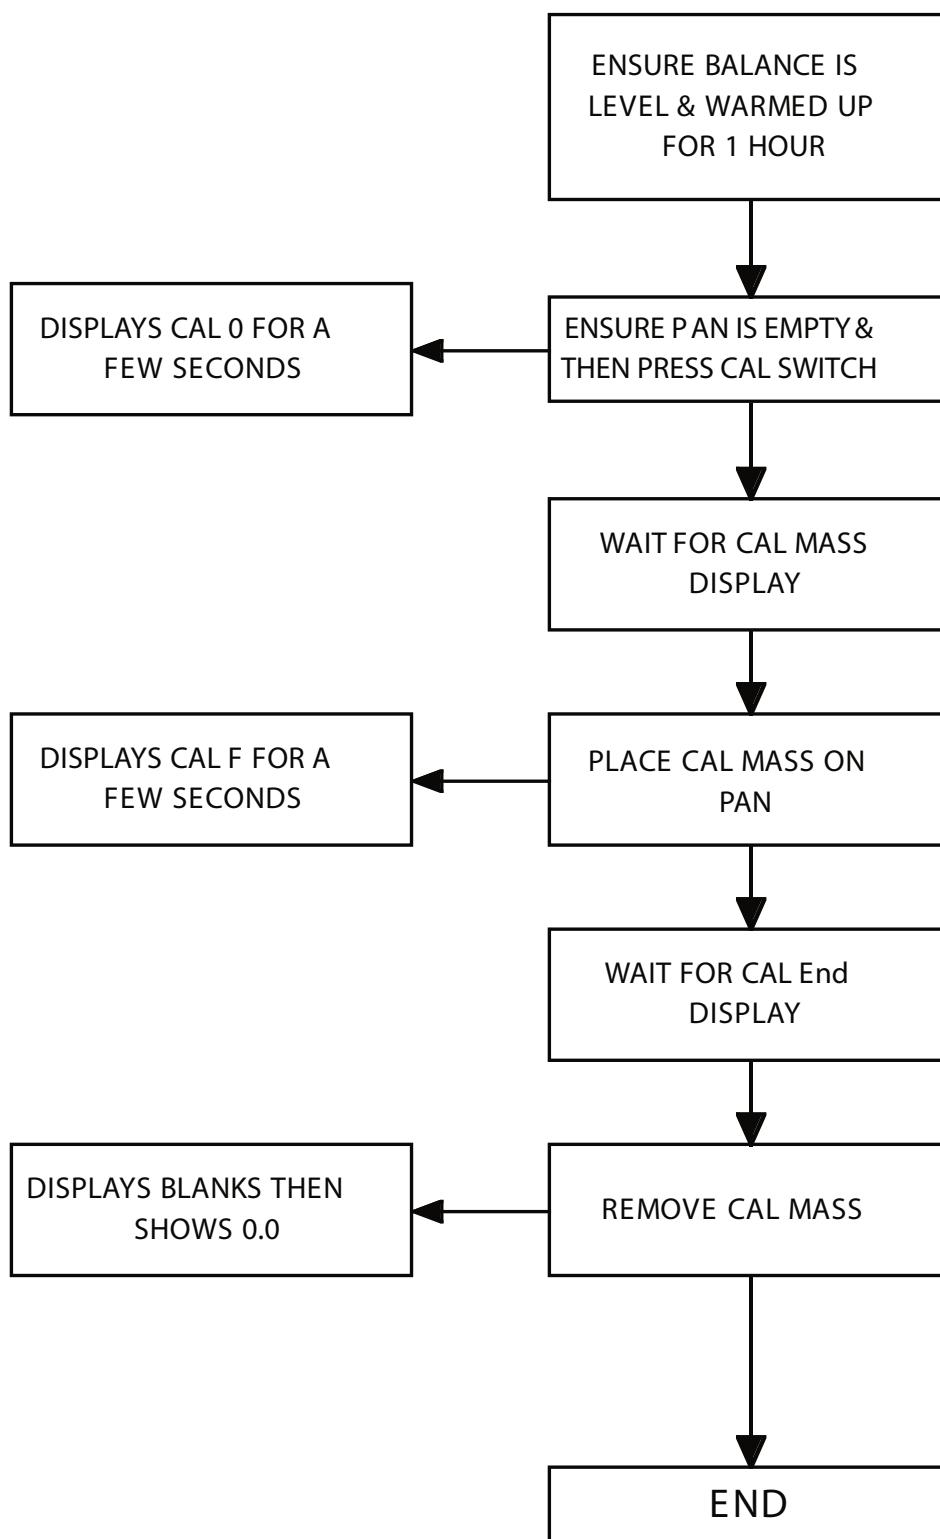


FP Series

## Simple Calibration Flow Chart

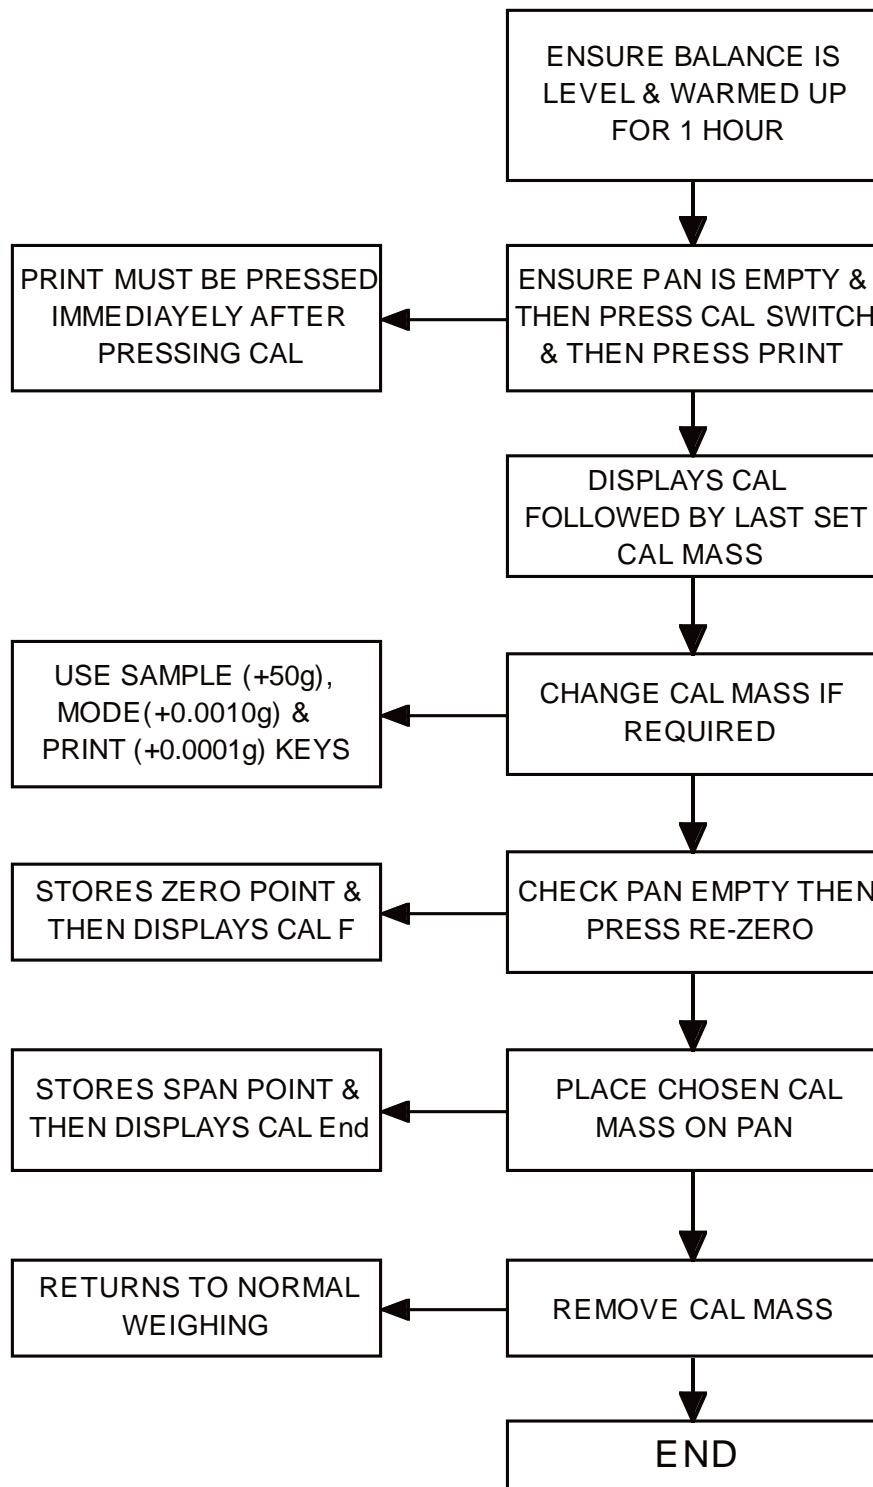


**FR Series**

## Simple Calibration Flow Chart

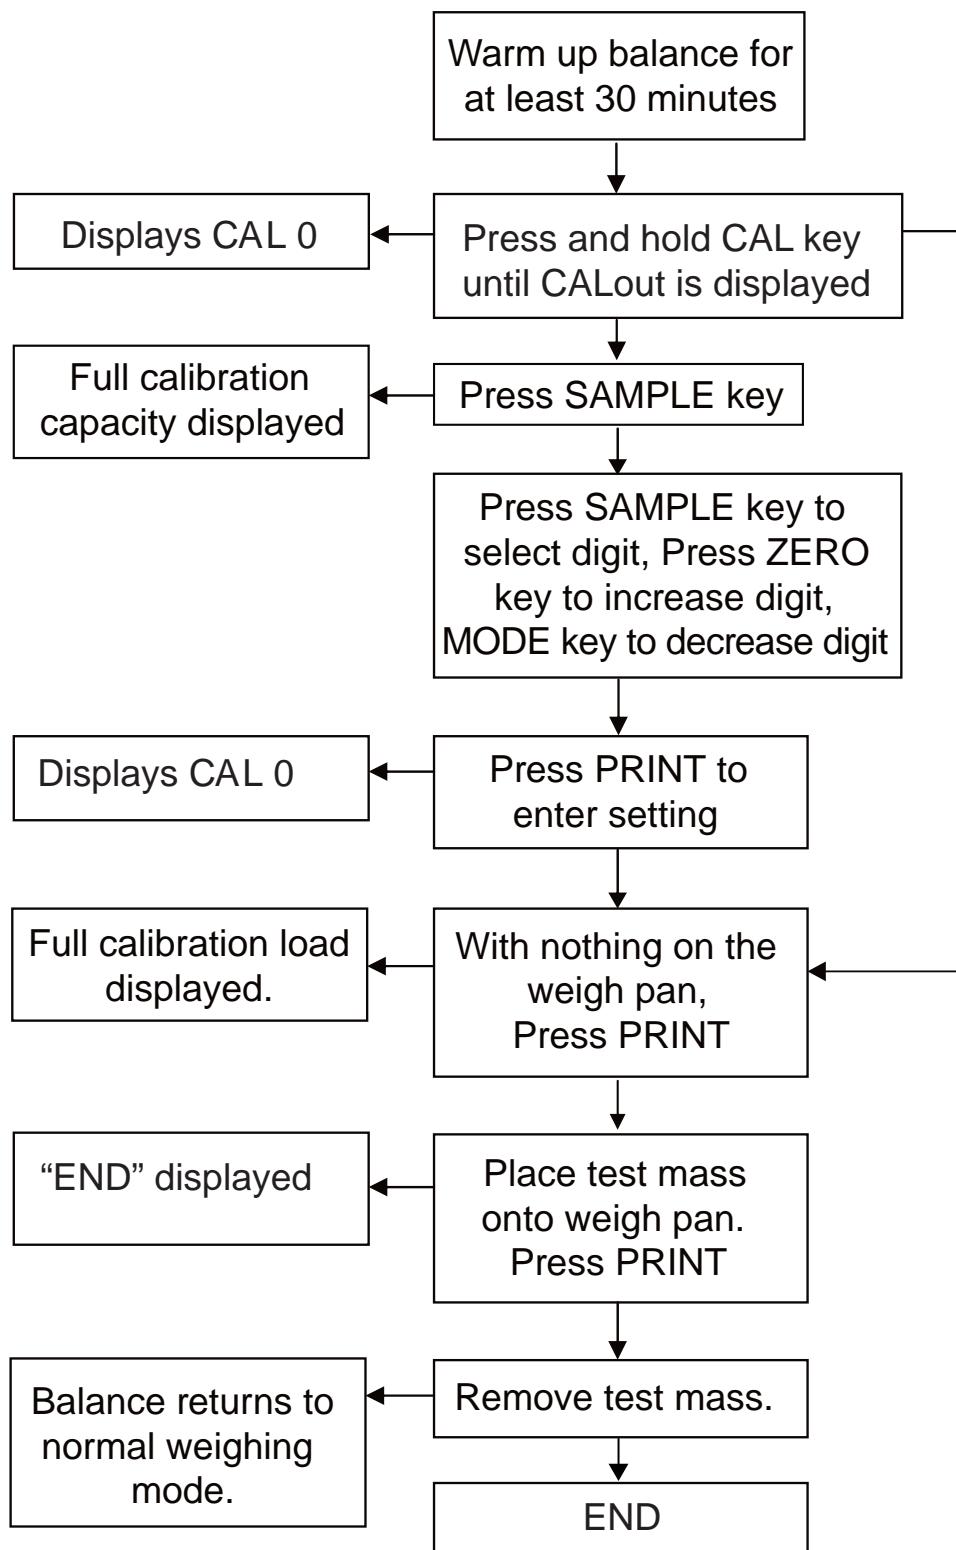


**FZ-CT/FX-CT Series**

## Simple Calibration Flow Chart

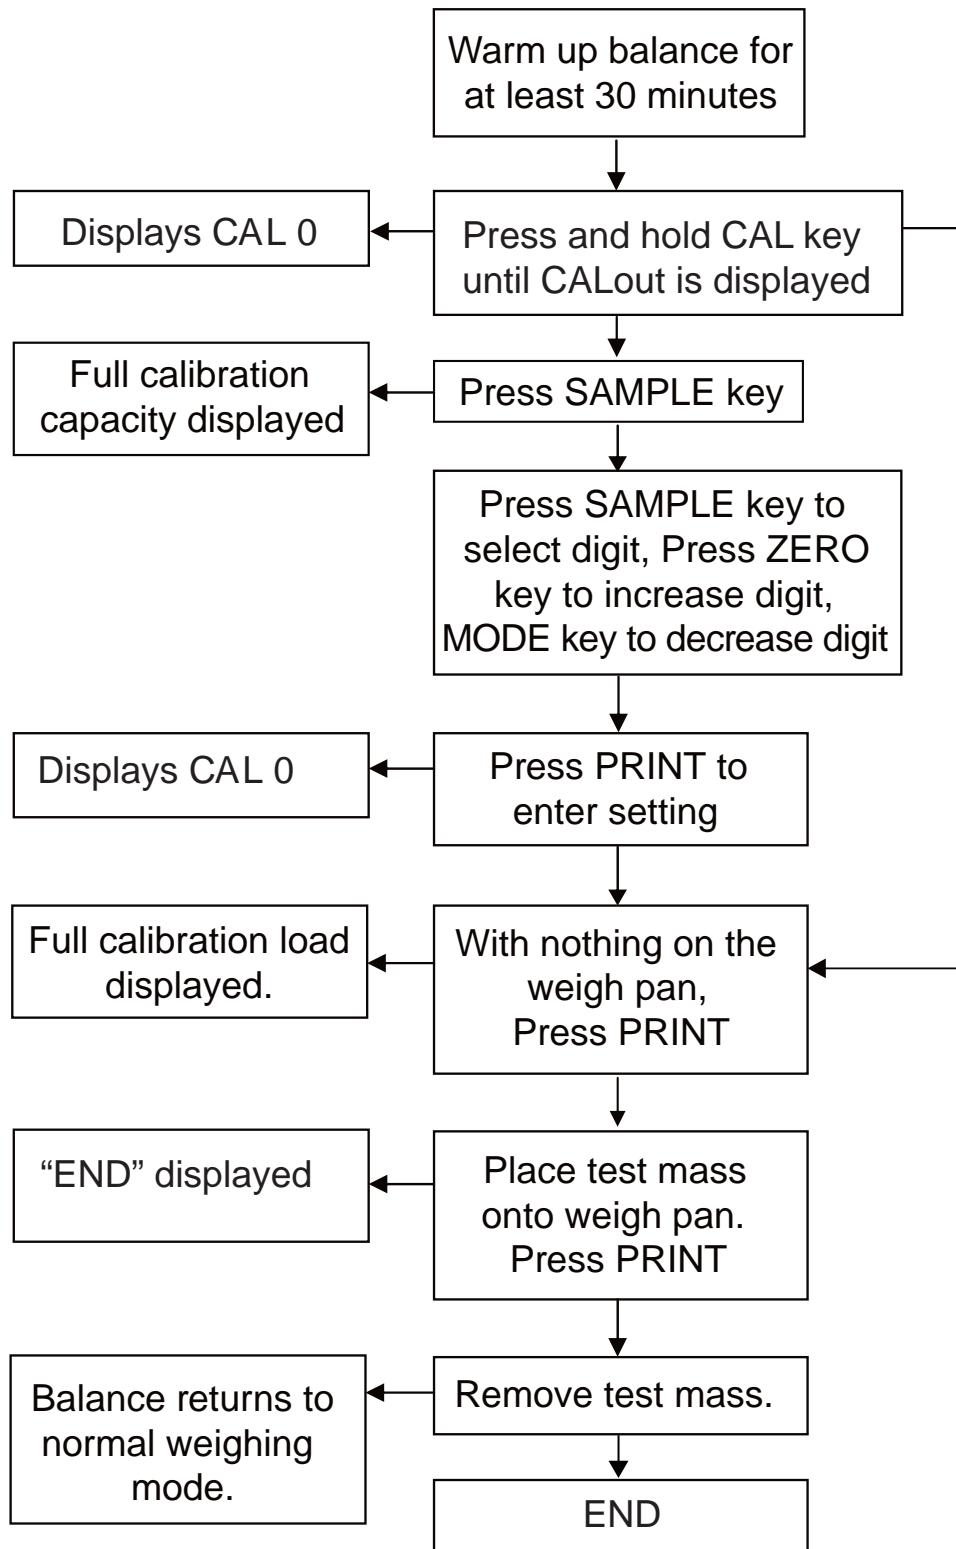


**FZ-i/FX-i Series**

## Simple Calibration Flow Chart

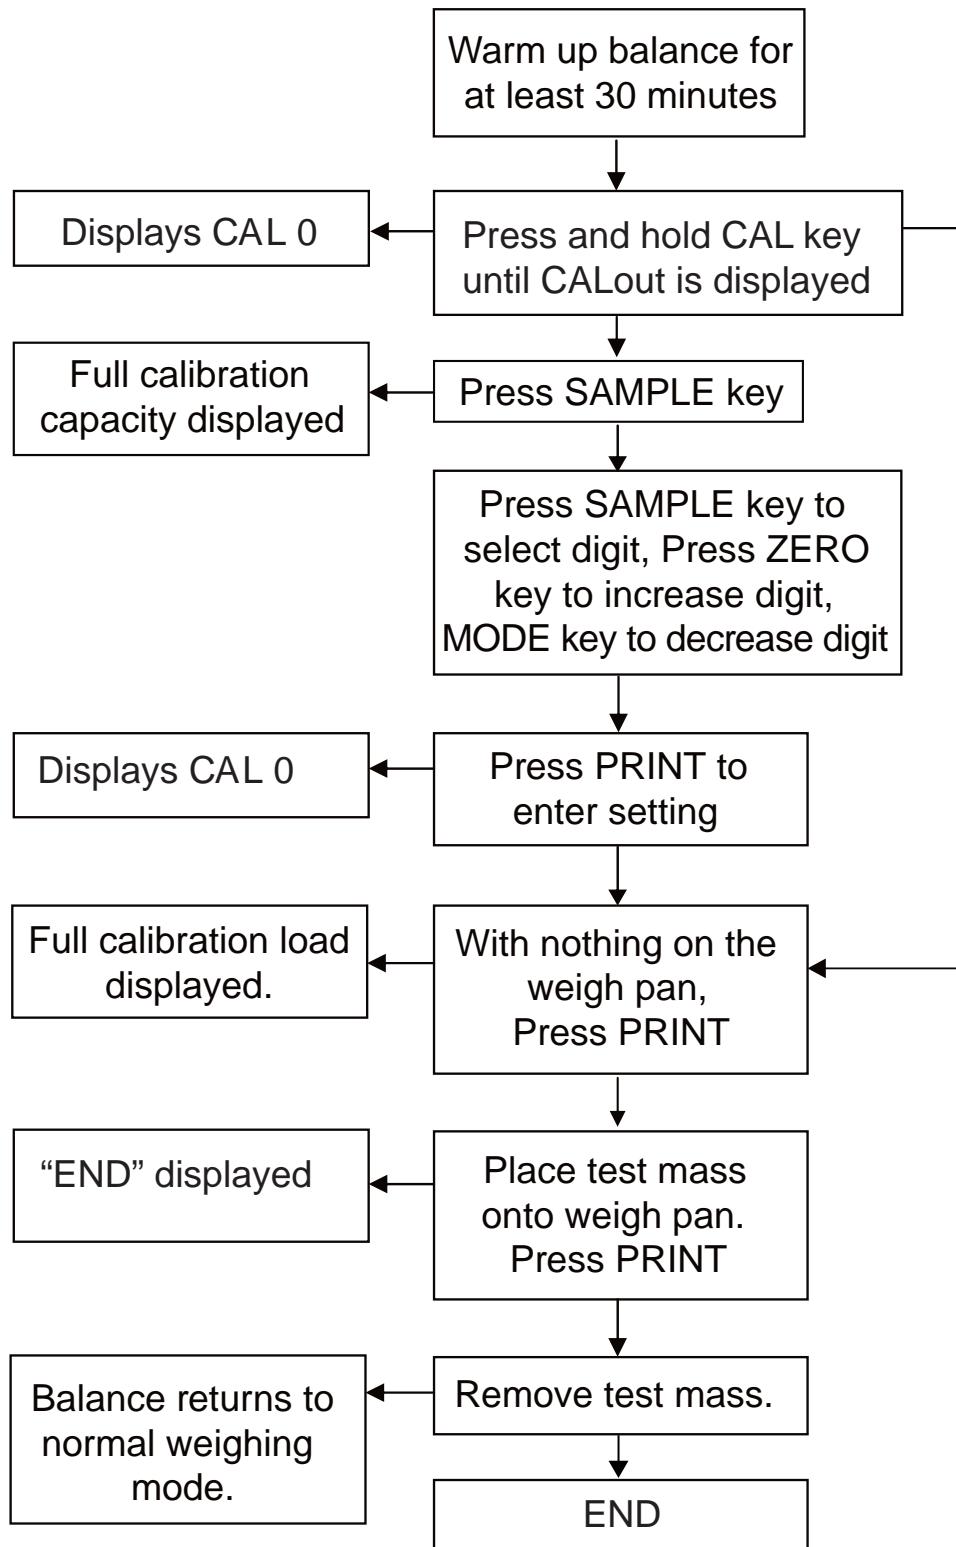


**FZ-iWP/FX-iWP Series**

## Simple Calibration Flow Chart

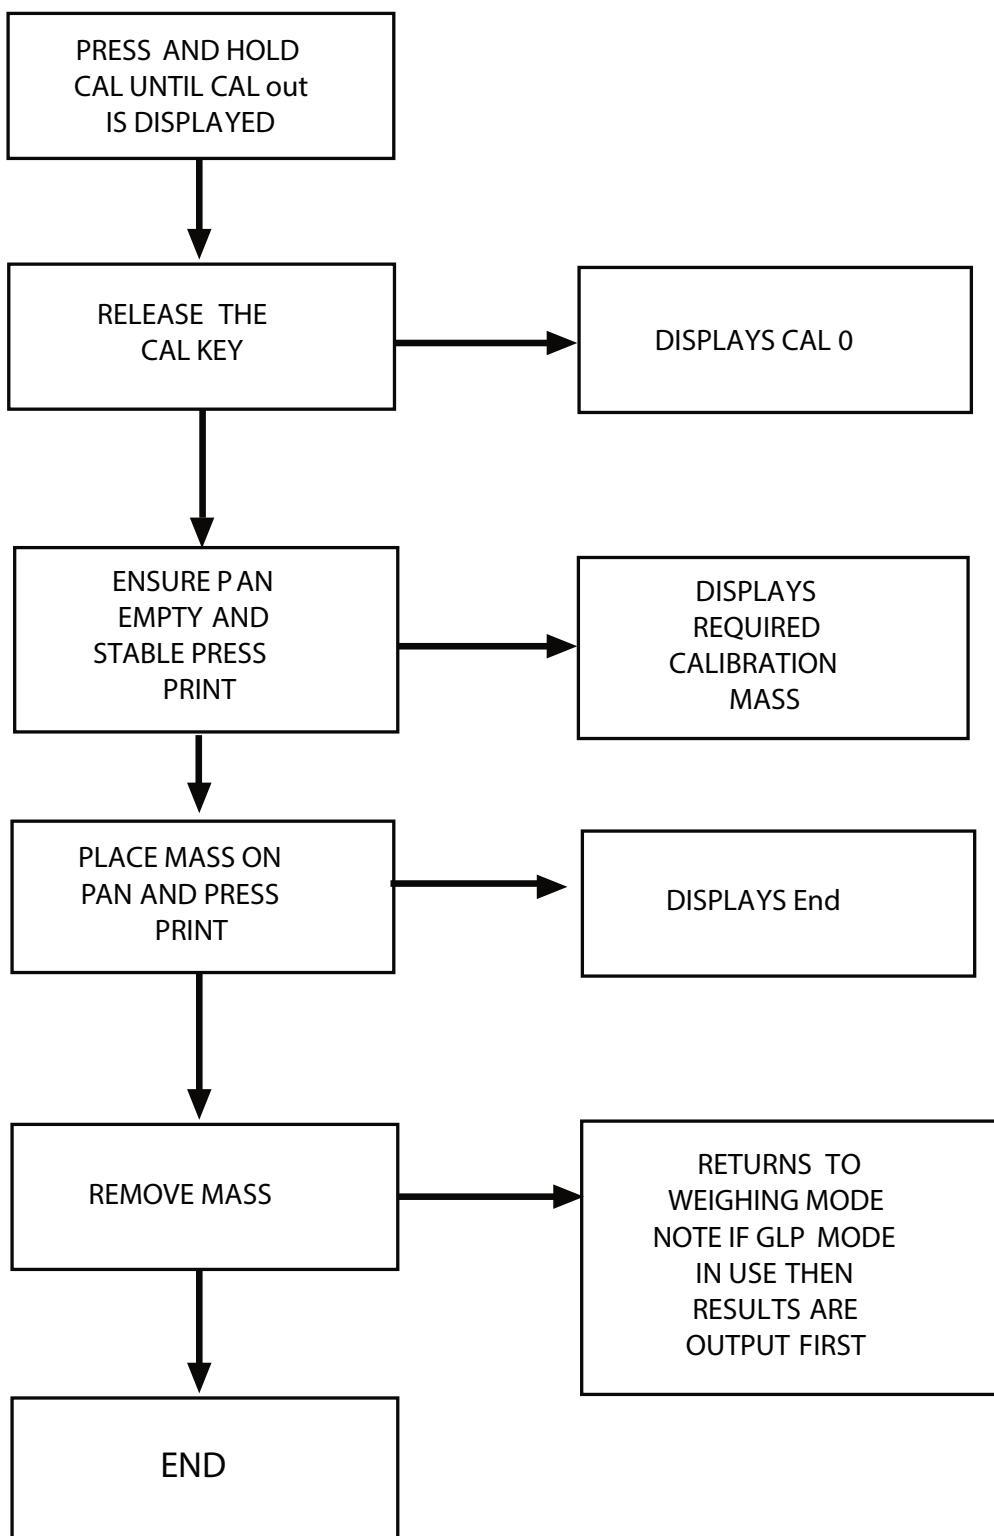


GF Series

## Simple Calibration Flow Chart

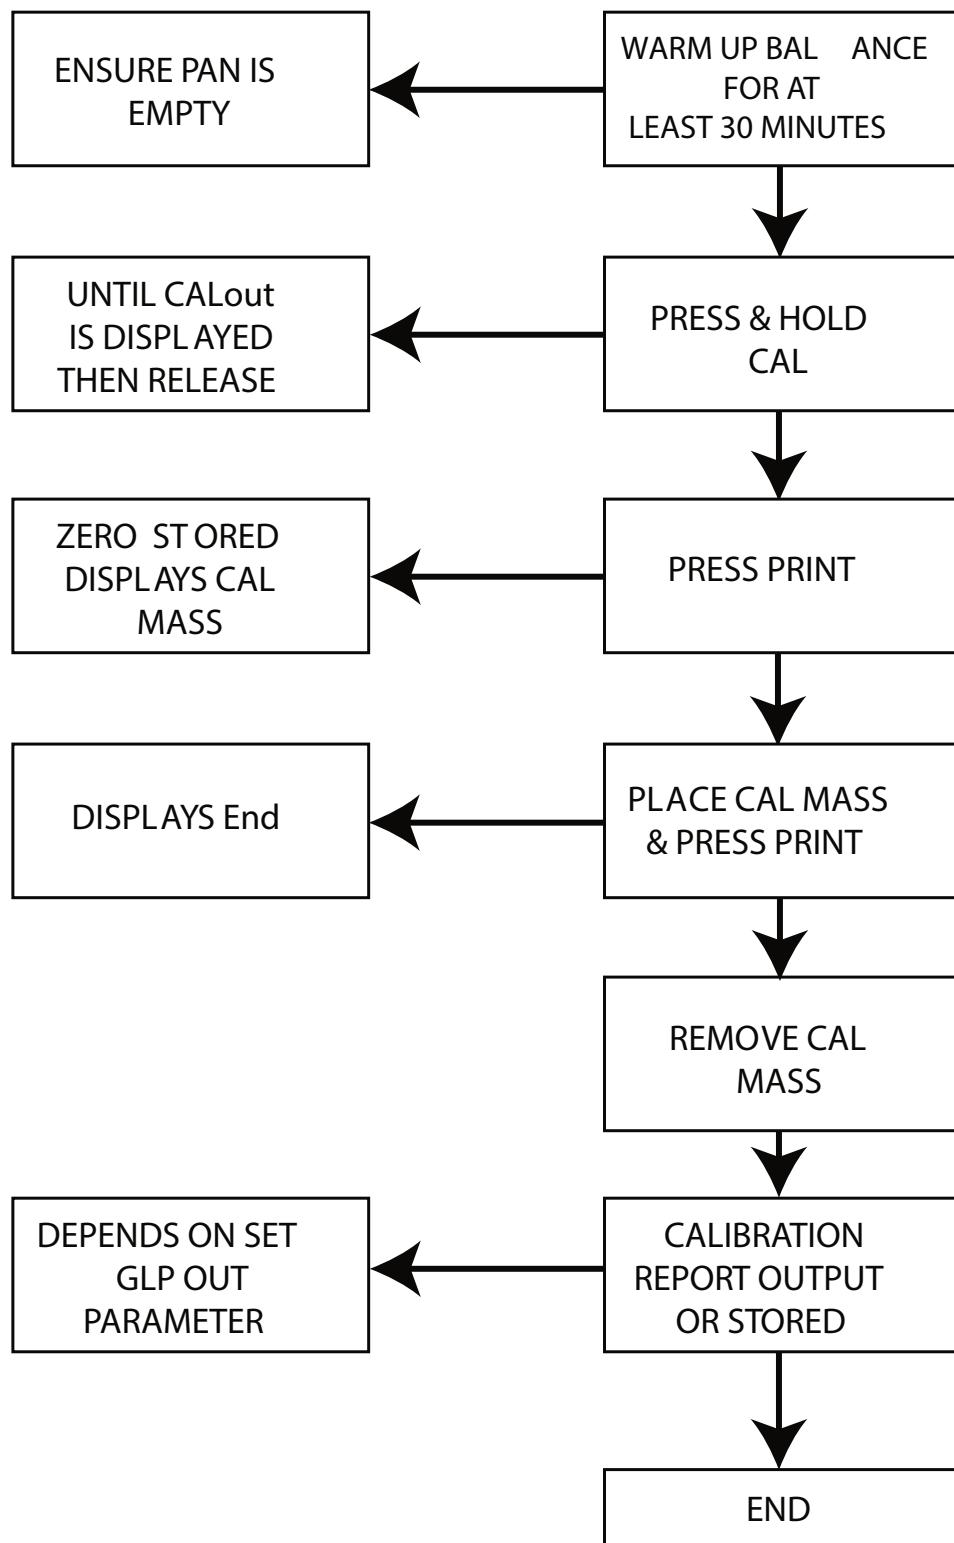


GF-K Series

## Simple Calibration Flow Chart

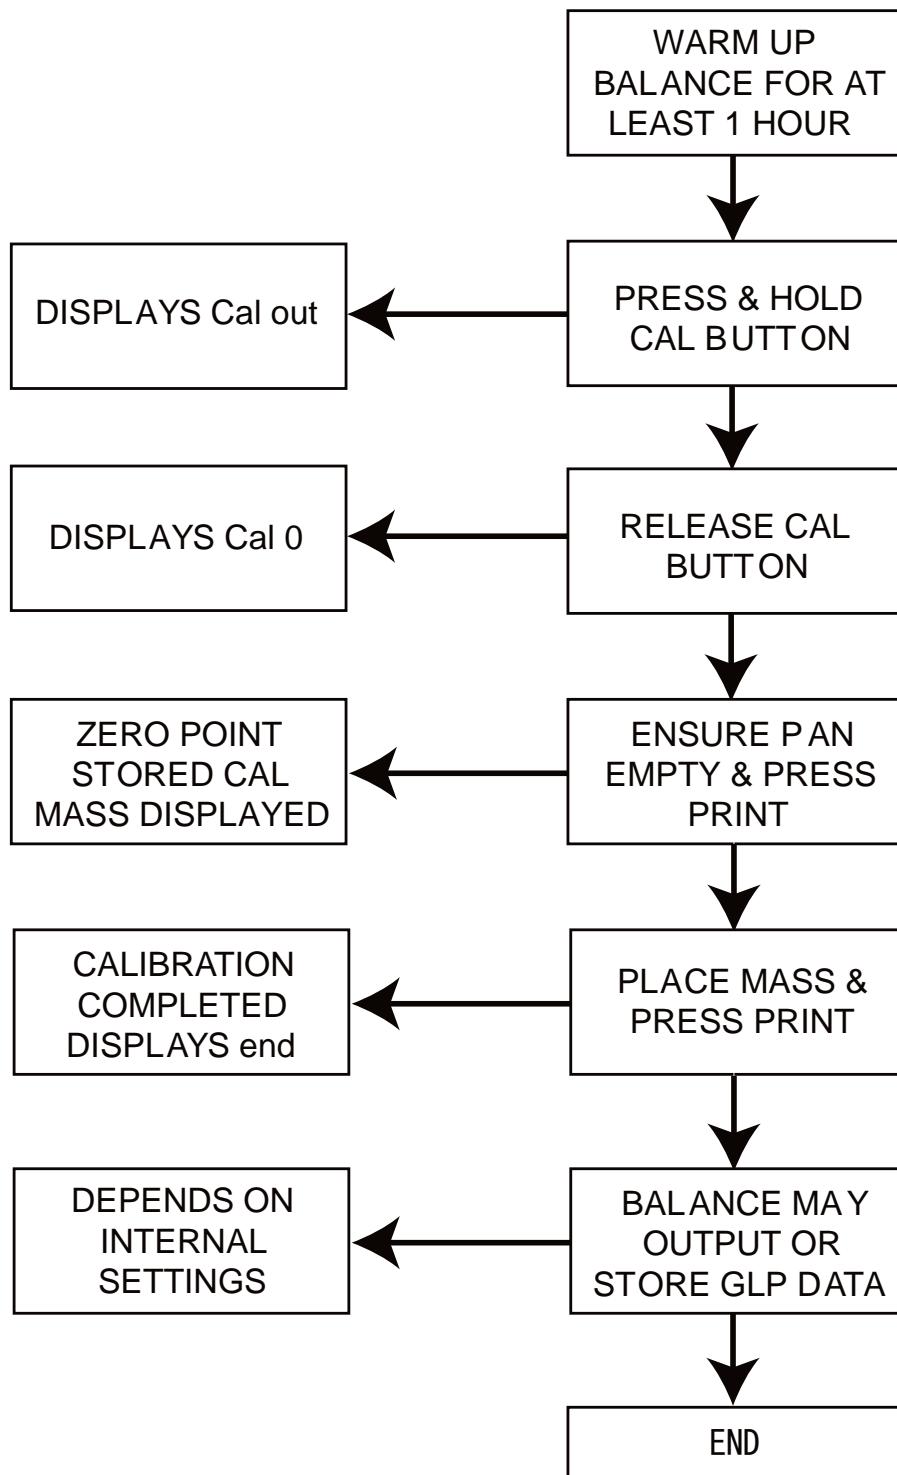


**GH Series**

## Simple Calibration Flow Chart

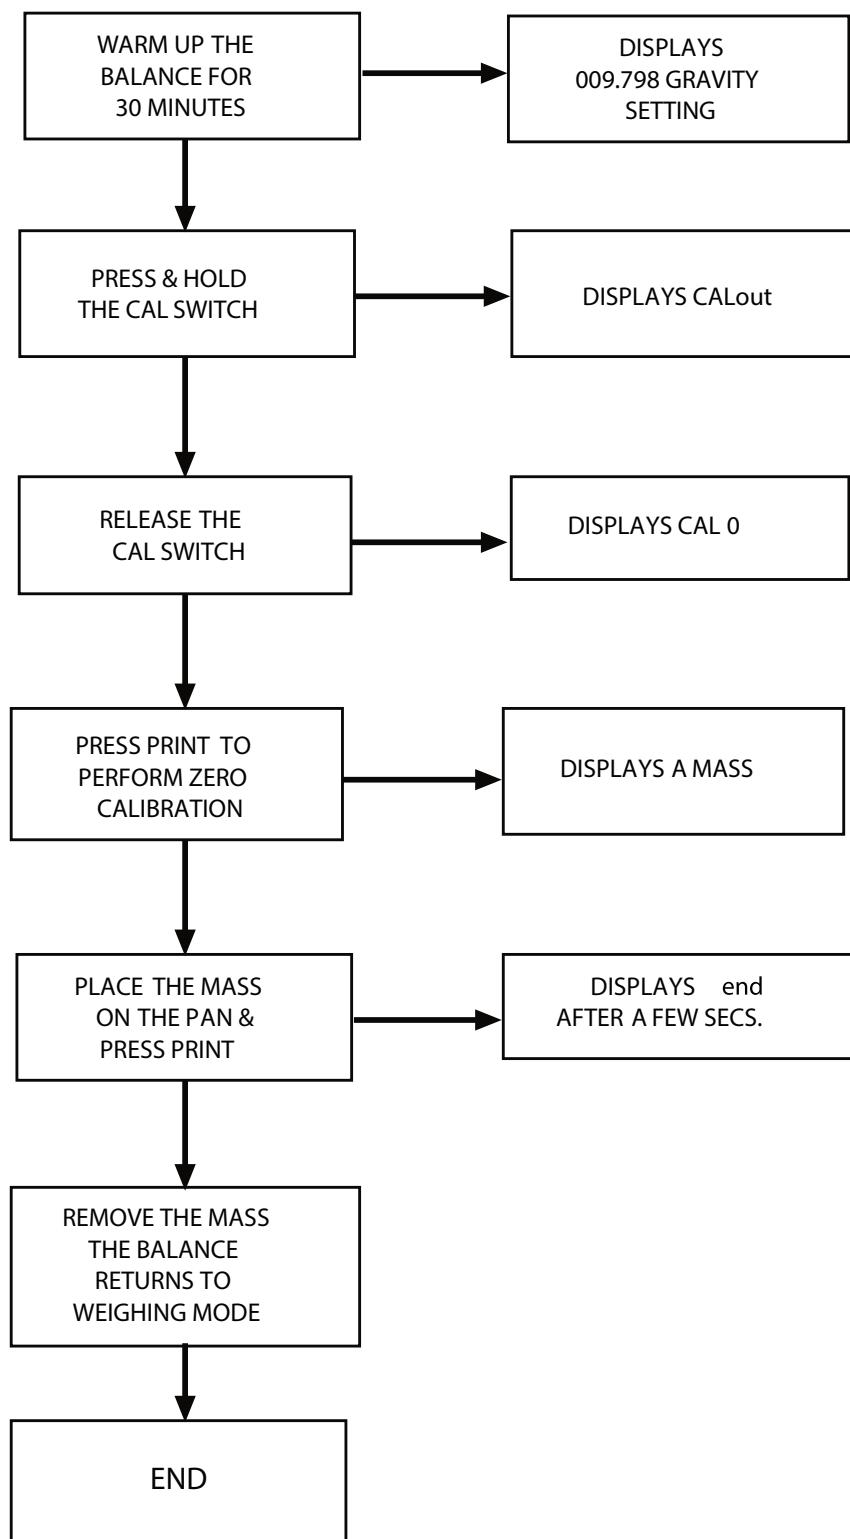


GP Series

## Simple Calibration Flow Chart

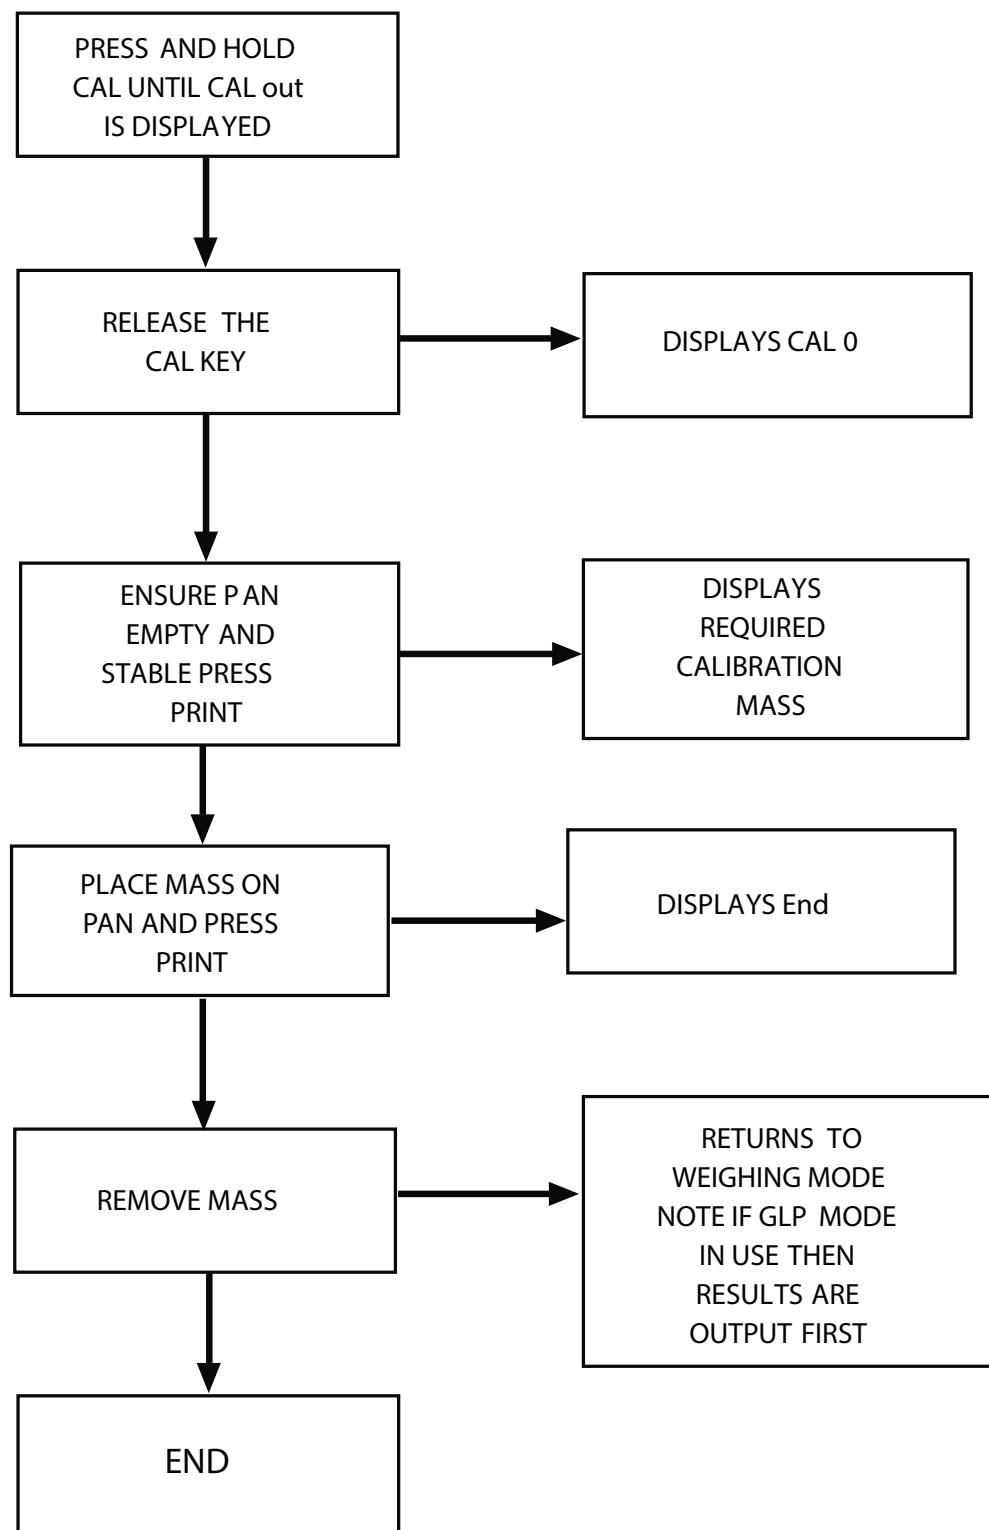


GR Series

## Simple Calibration Flow Chart

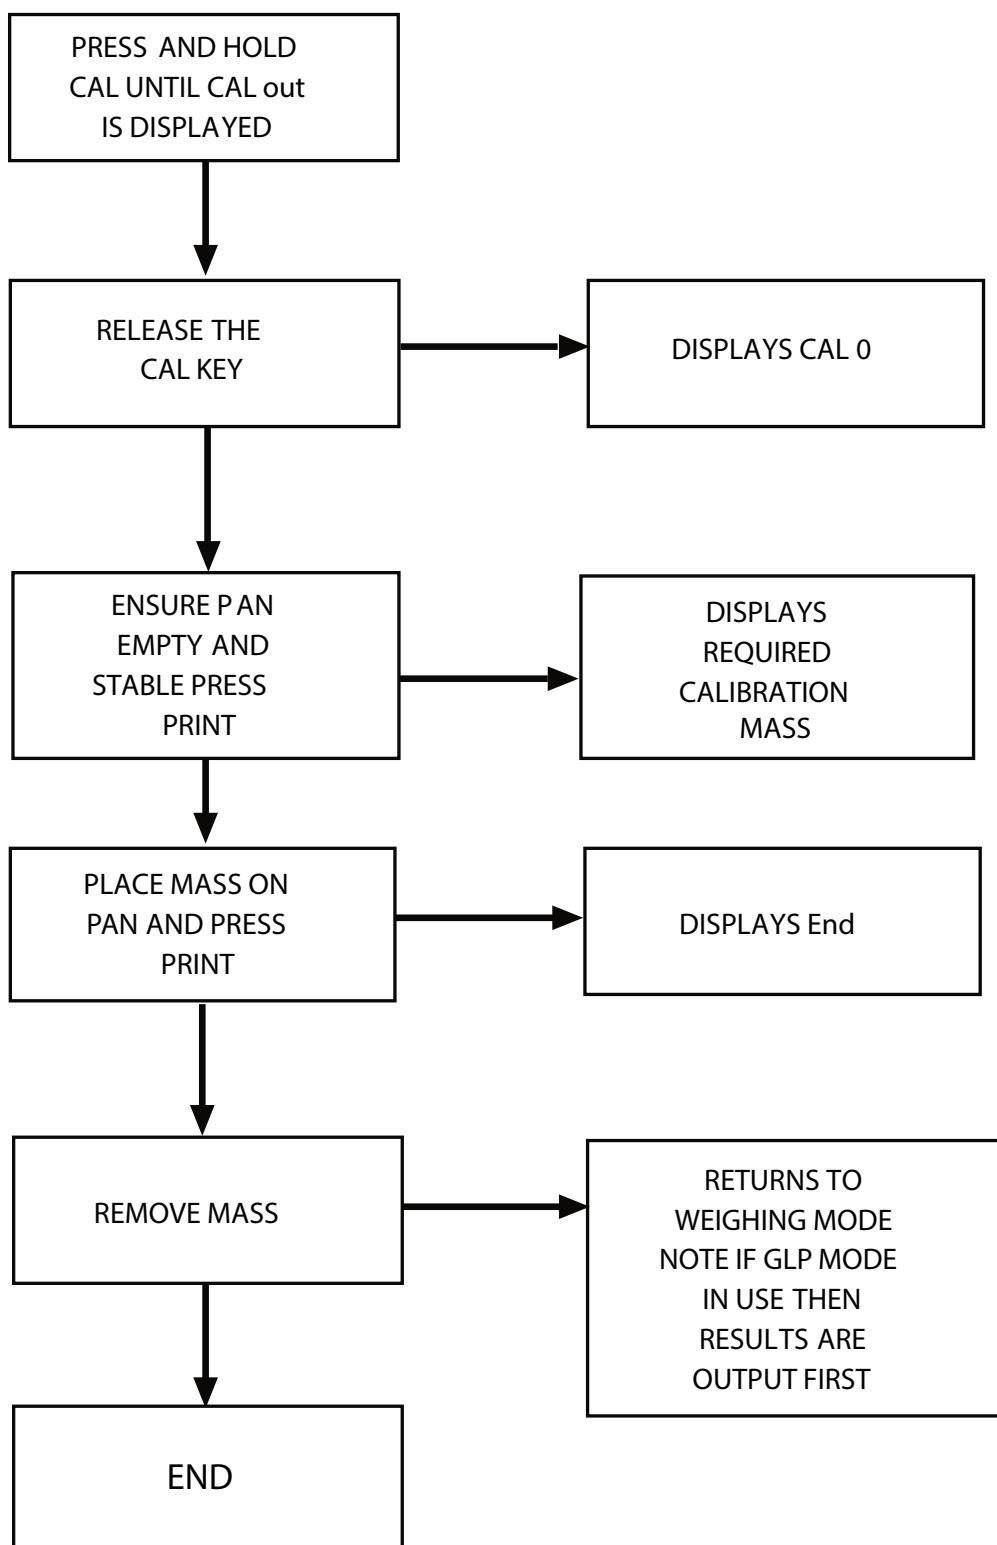


GX Series

## Simple Calibration Flow Chart

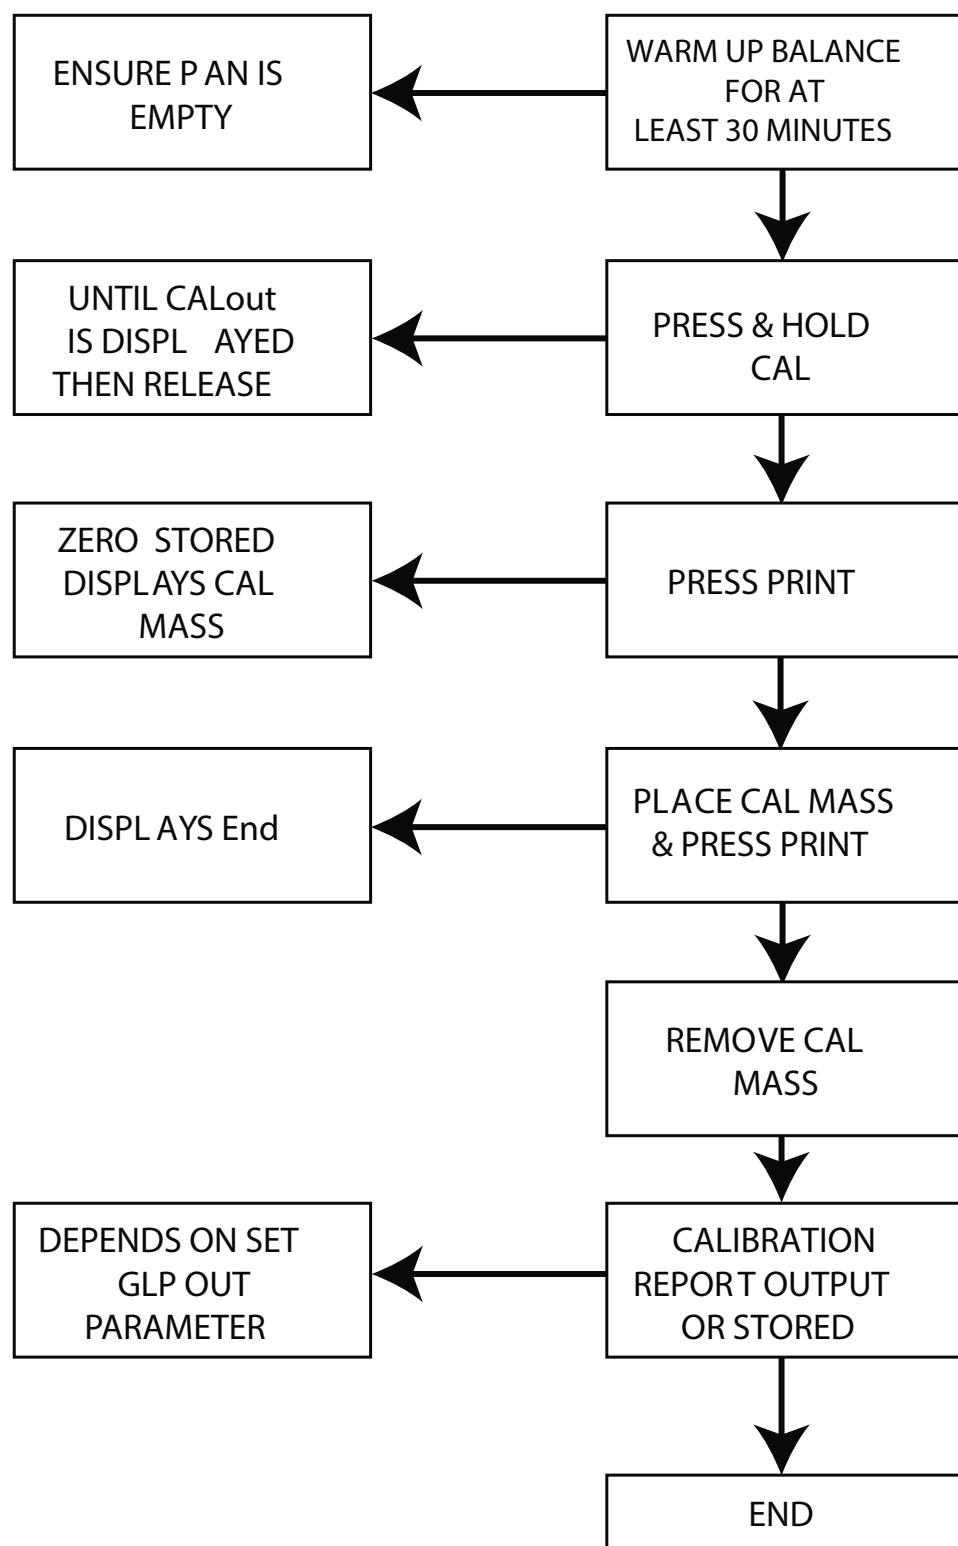


GX-K Series

# Simple Calibration Flow Chart

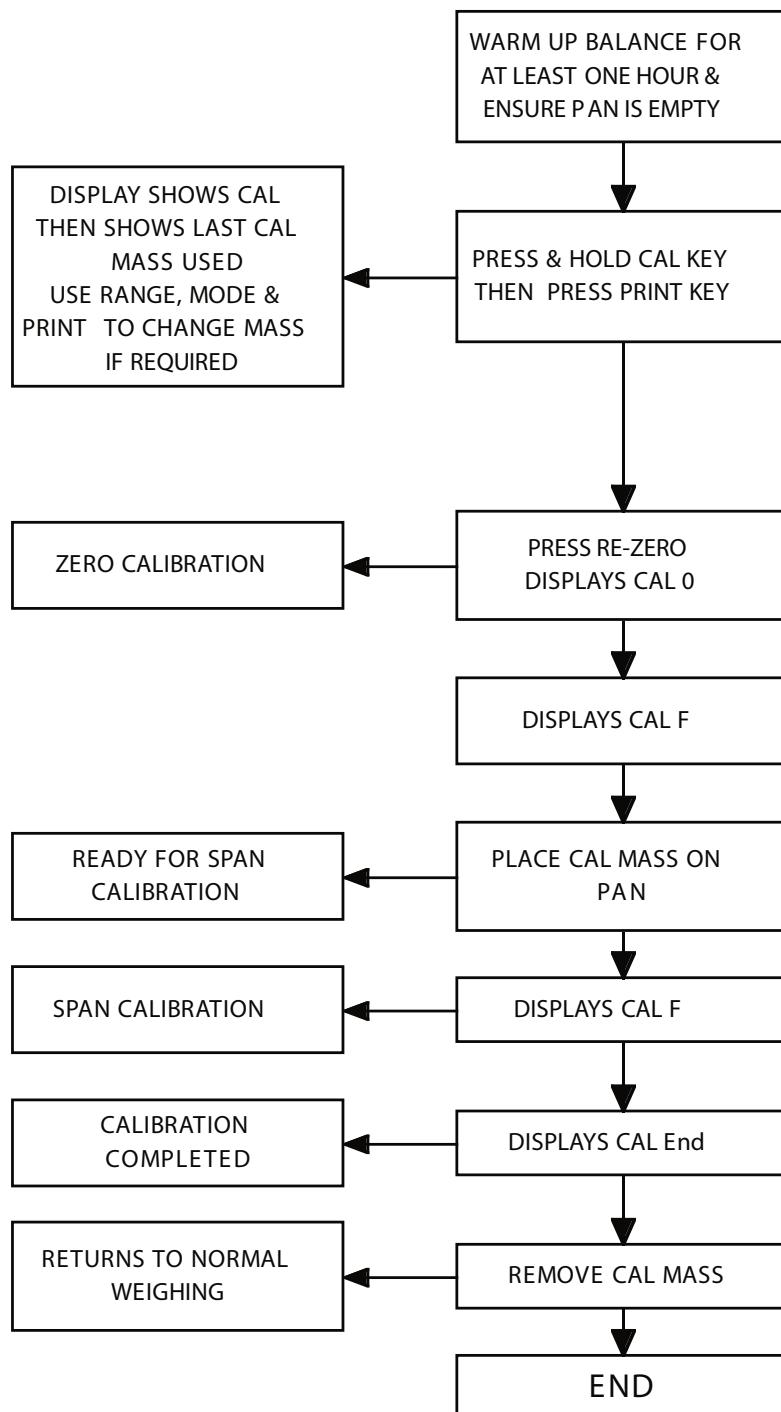


## HA Series

## Simple Calibration Flow Chart

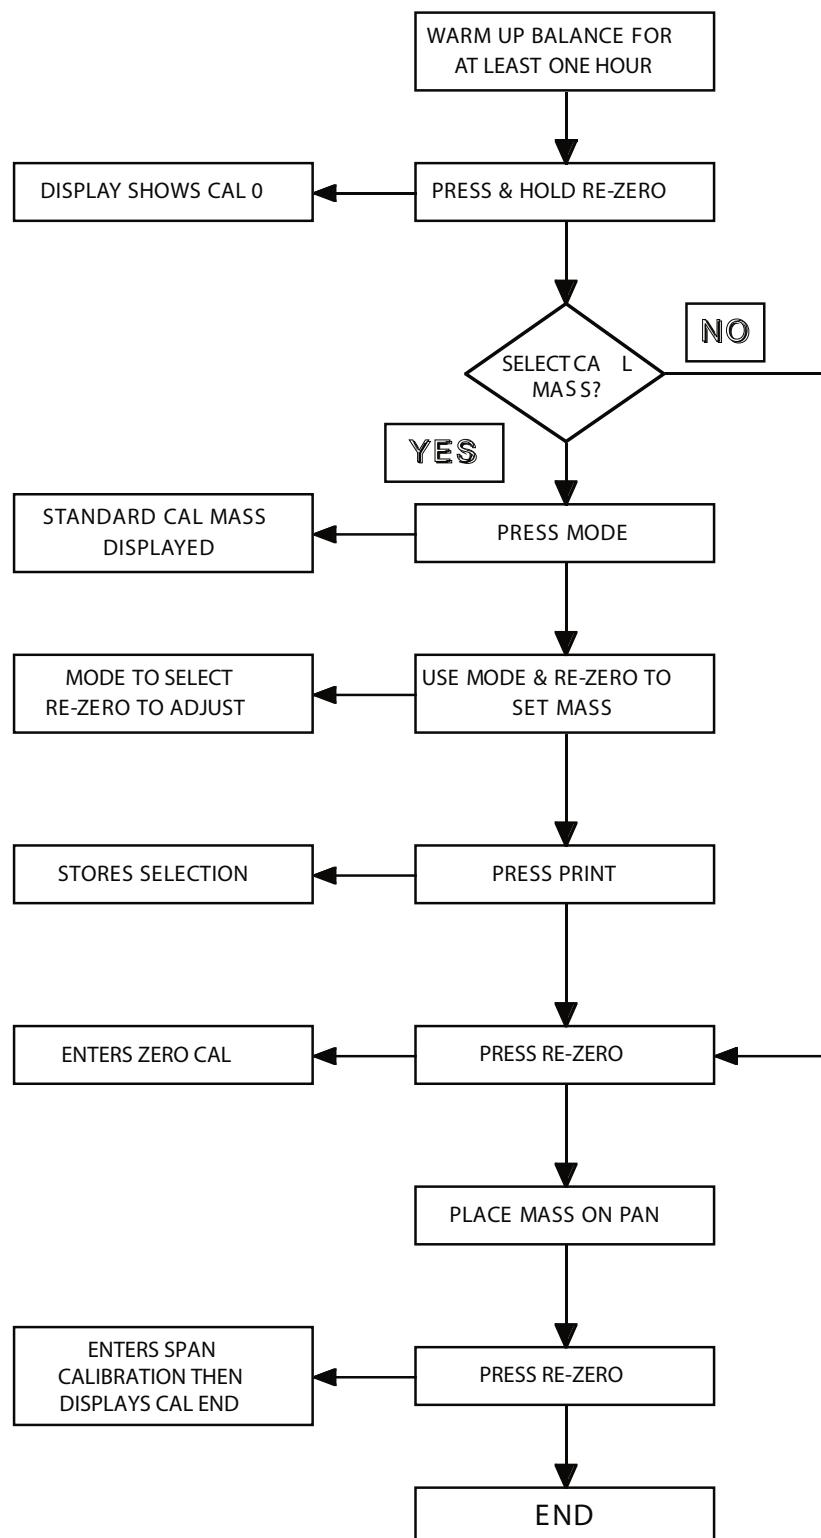


HF/HF-G/HP Series

## Simple Calibration Flow Chart

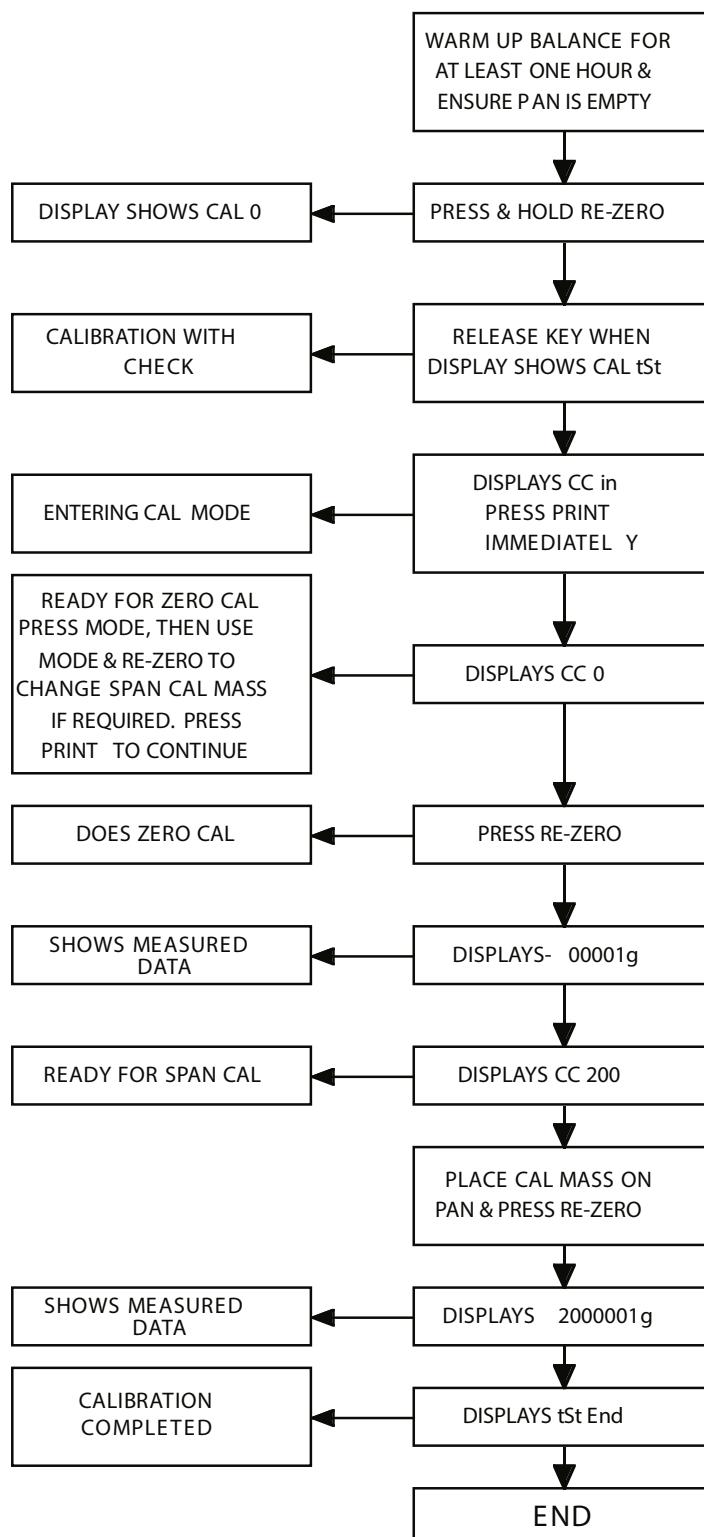


HM Series

## Simple Calibration Flow Chart

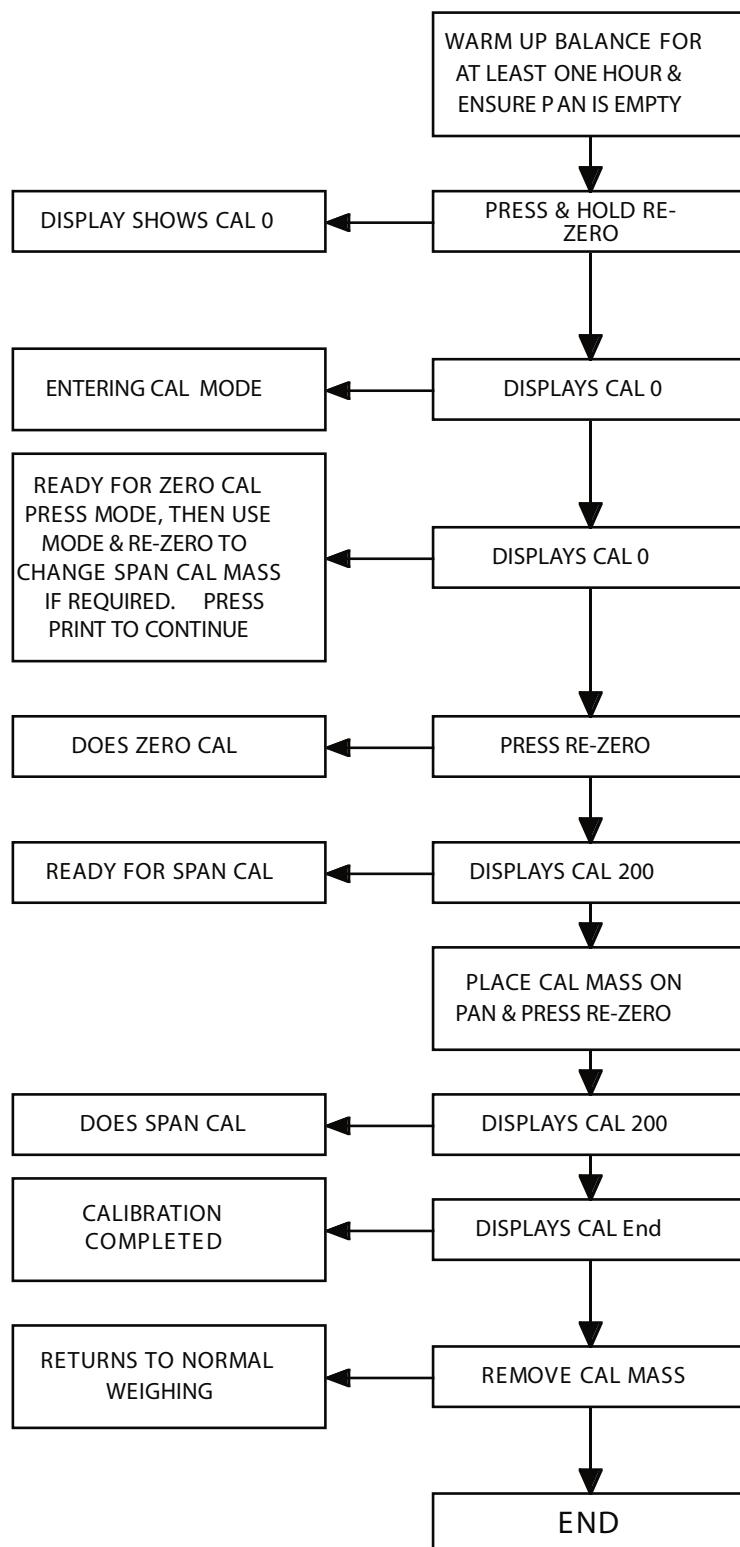


HR Series

## Simple Calibration Flow Chart

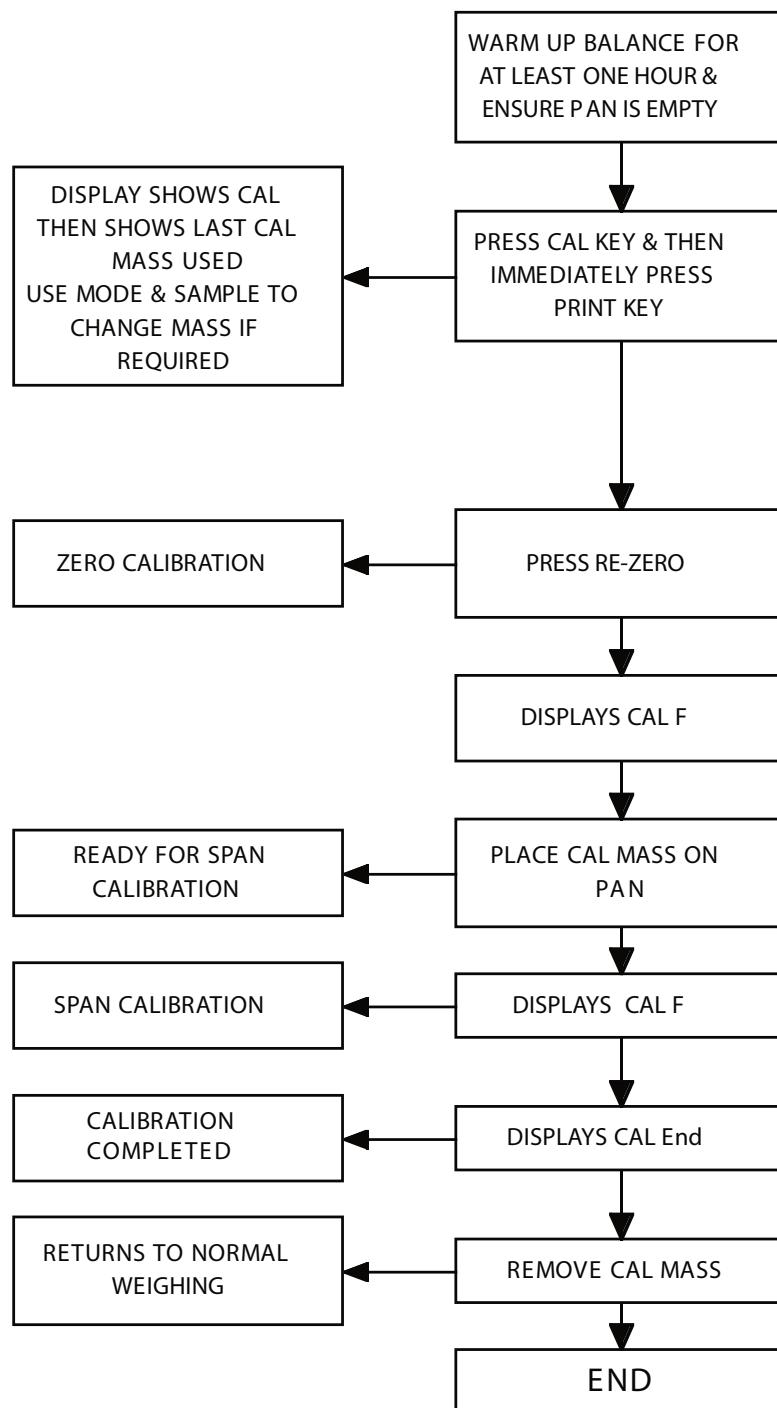


HX Series

## Simple Calibration Flow Chart

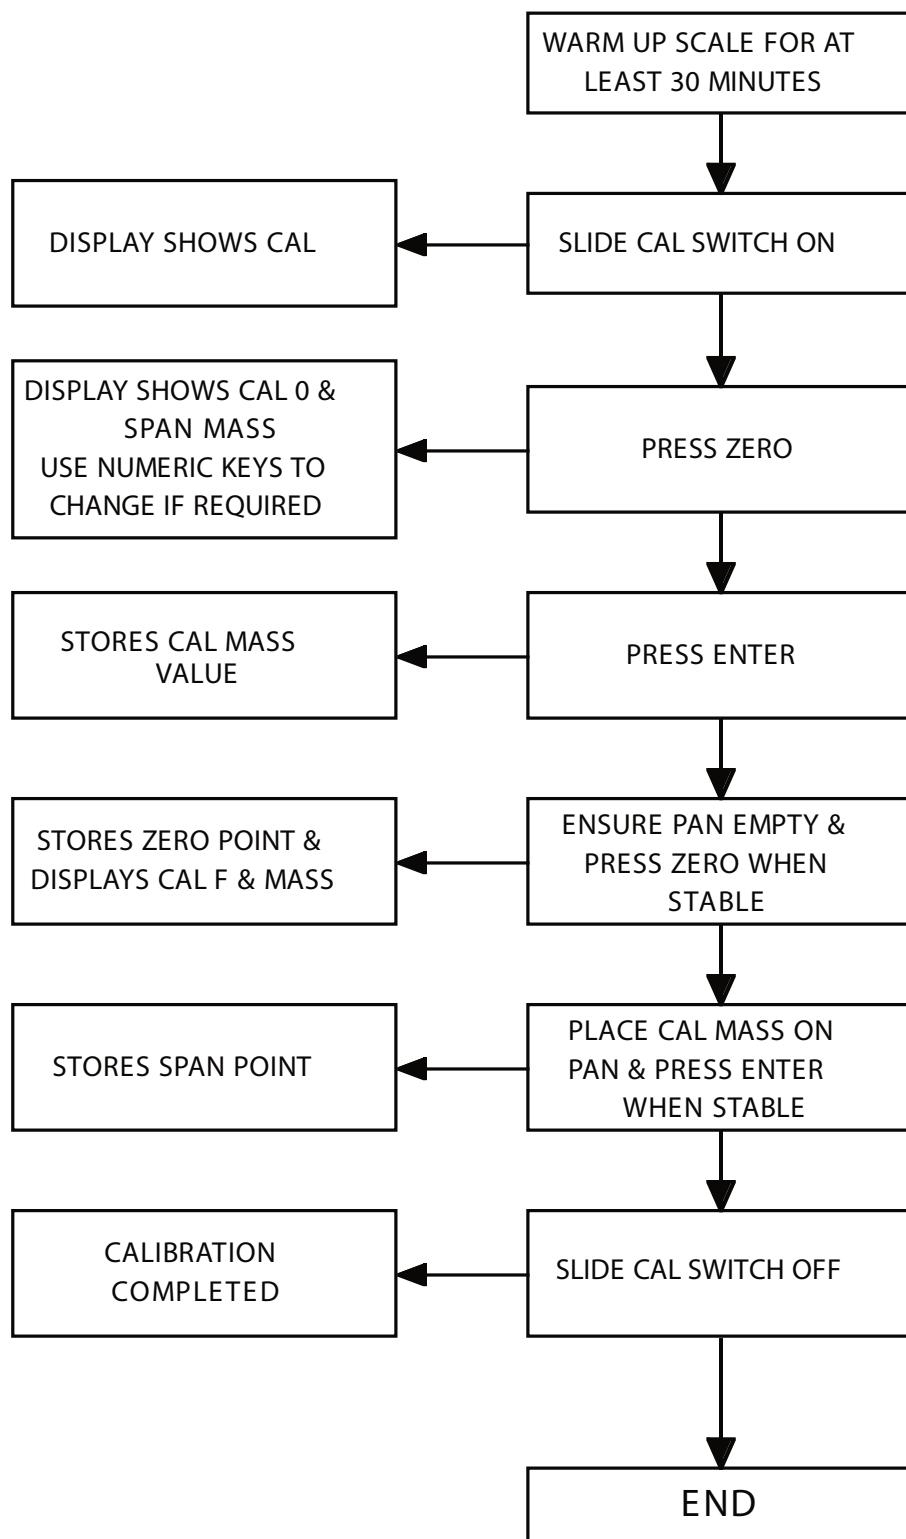


FC Series

## Simple Calibration Flow Chart

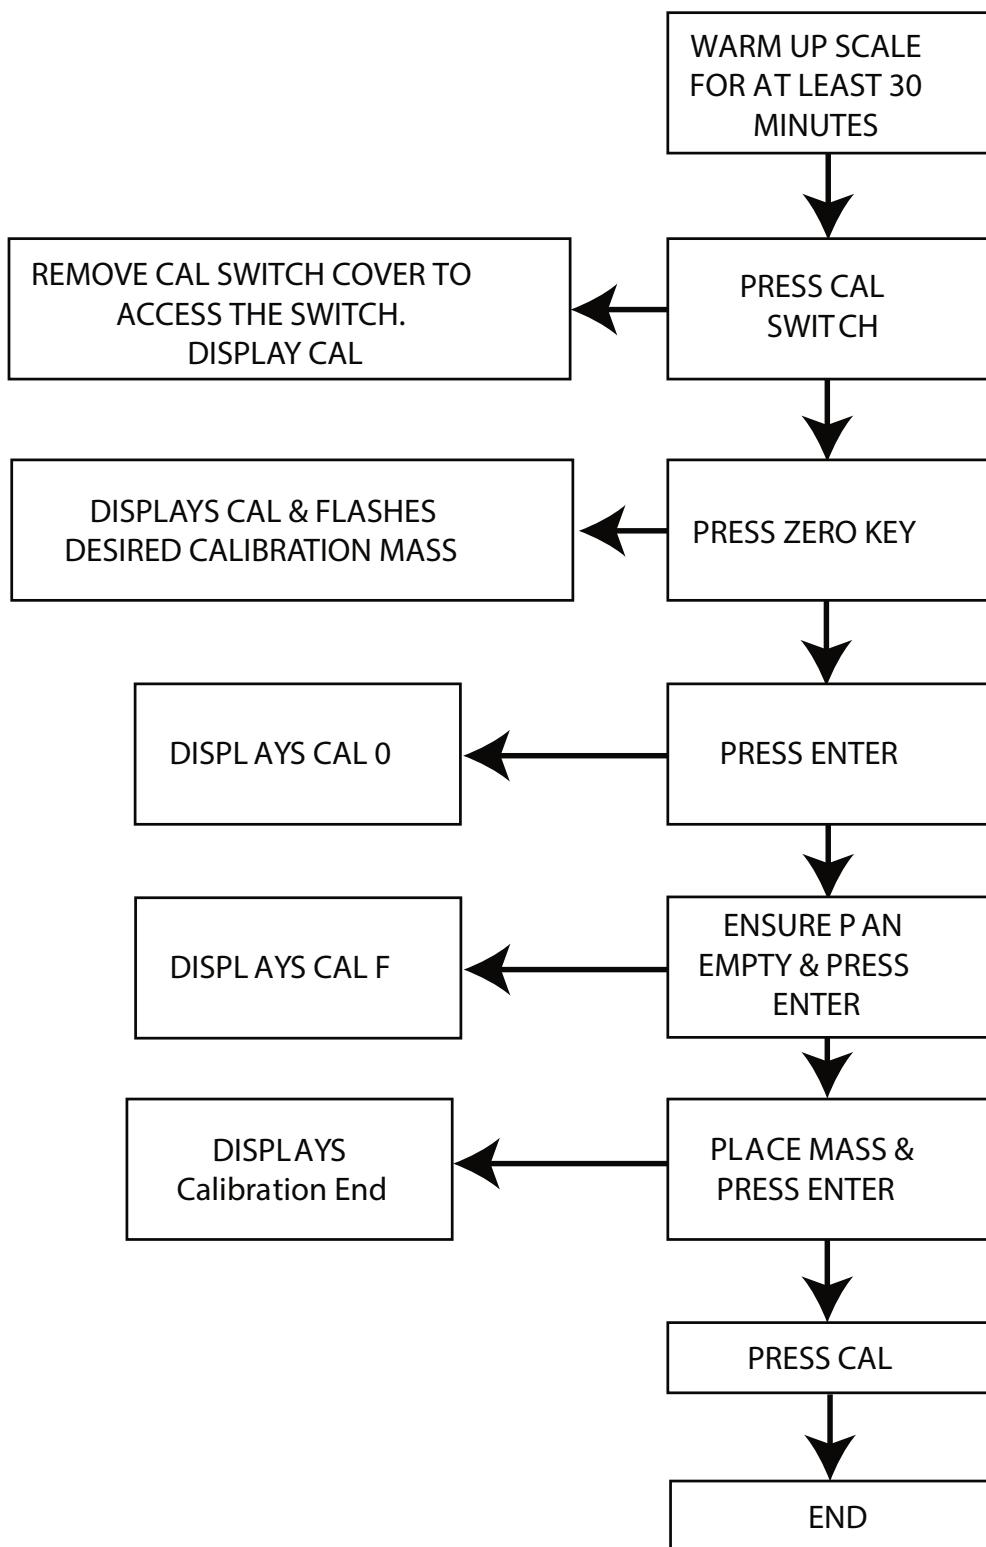


FC-i Series

## Simple Calibration Flow Chart

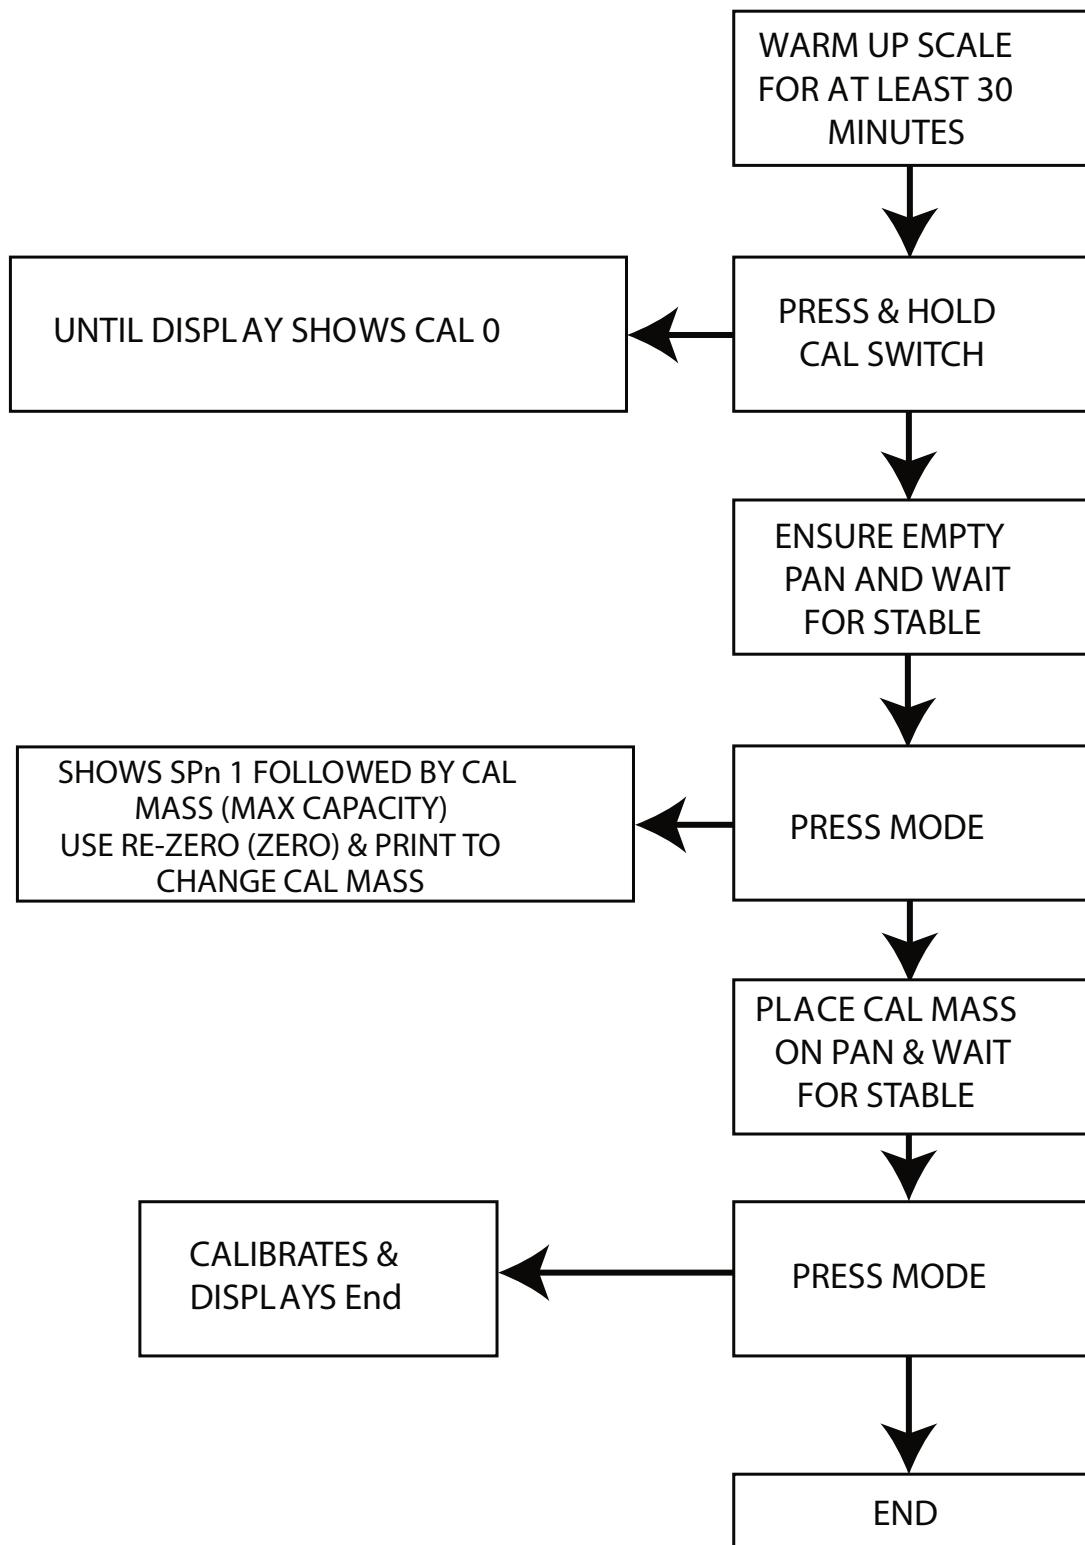


NEW FG Series

## Simple Calibration Flow Chart

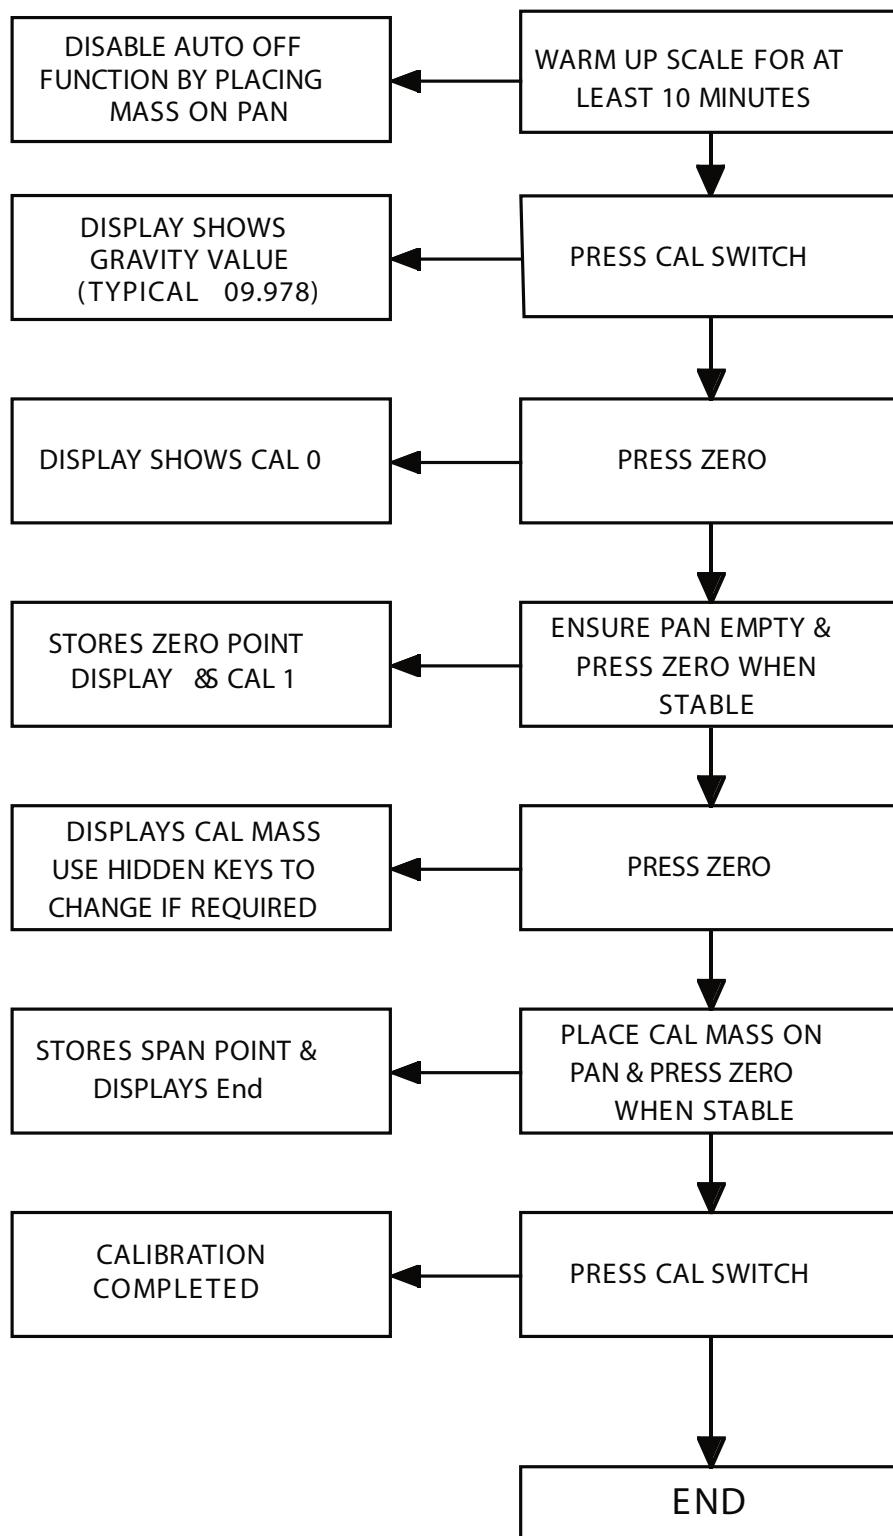


FG Series

## Simple Calibration Flow Chart

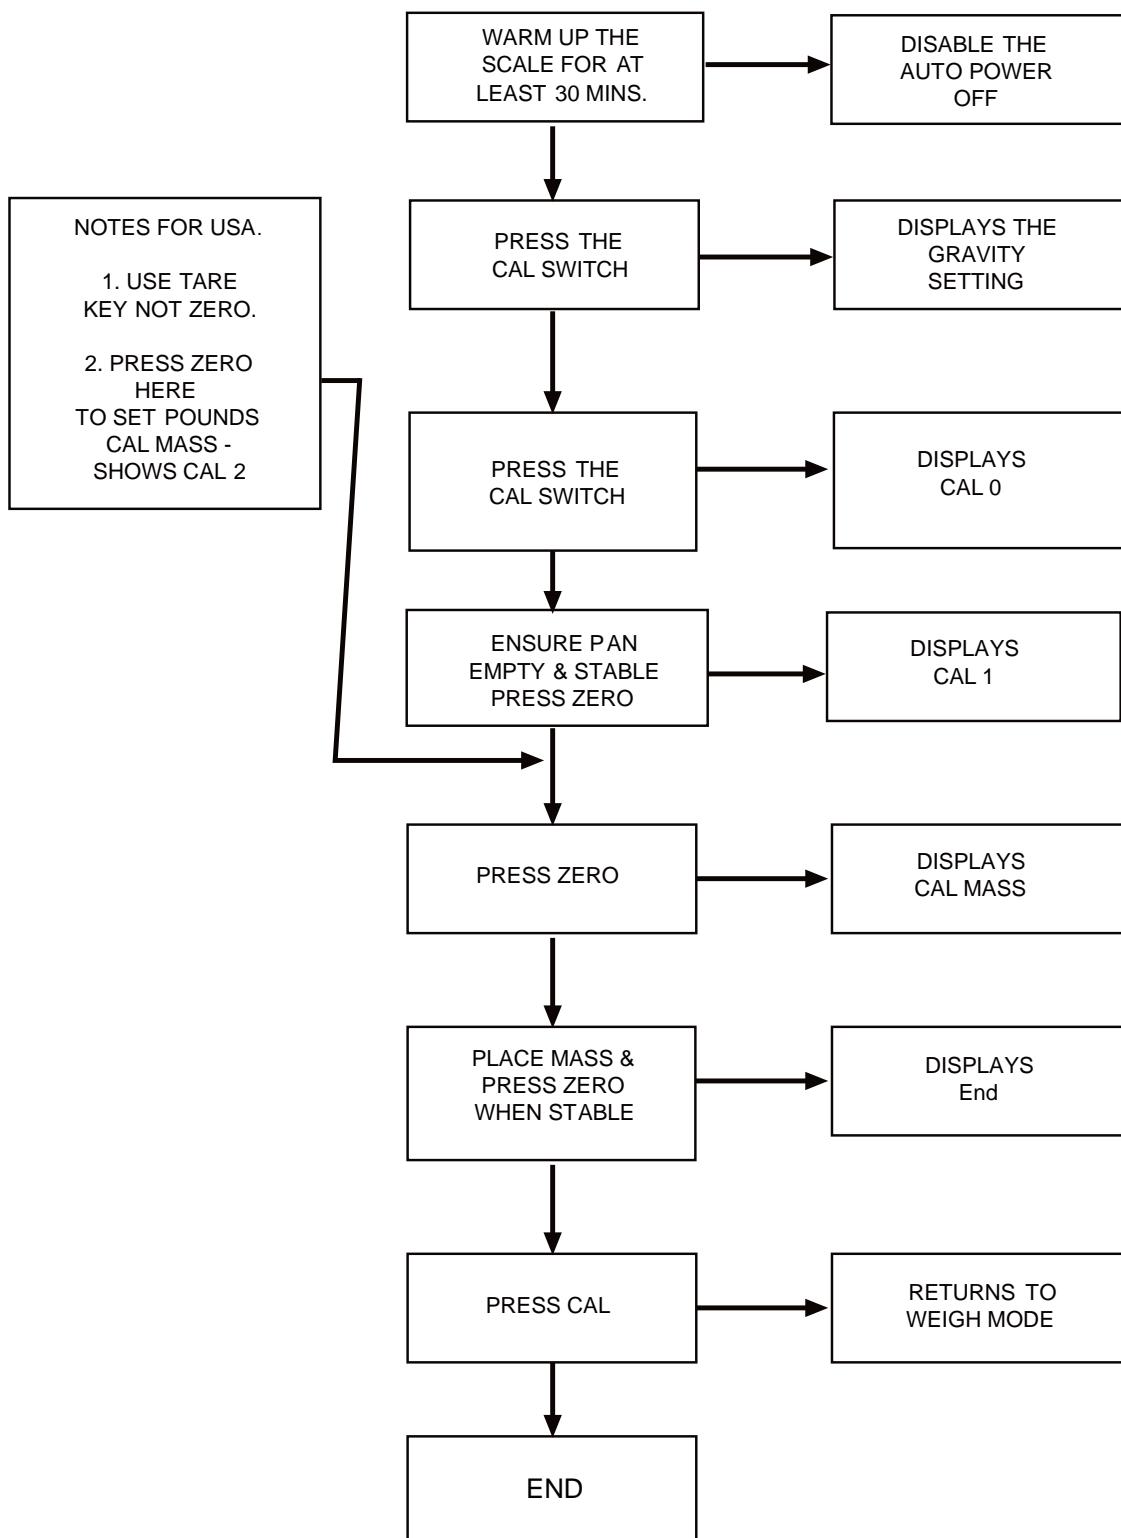


**FG-D Series**

## Simple Calibration Flow Chart

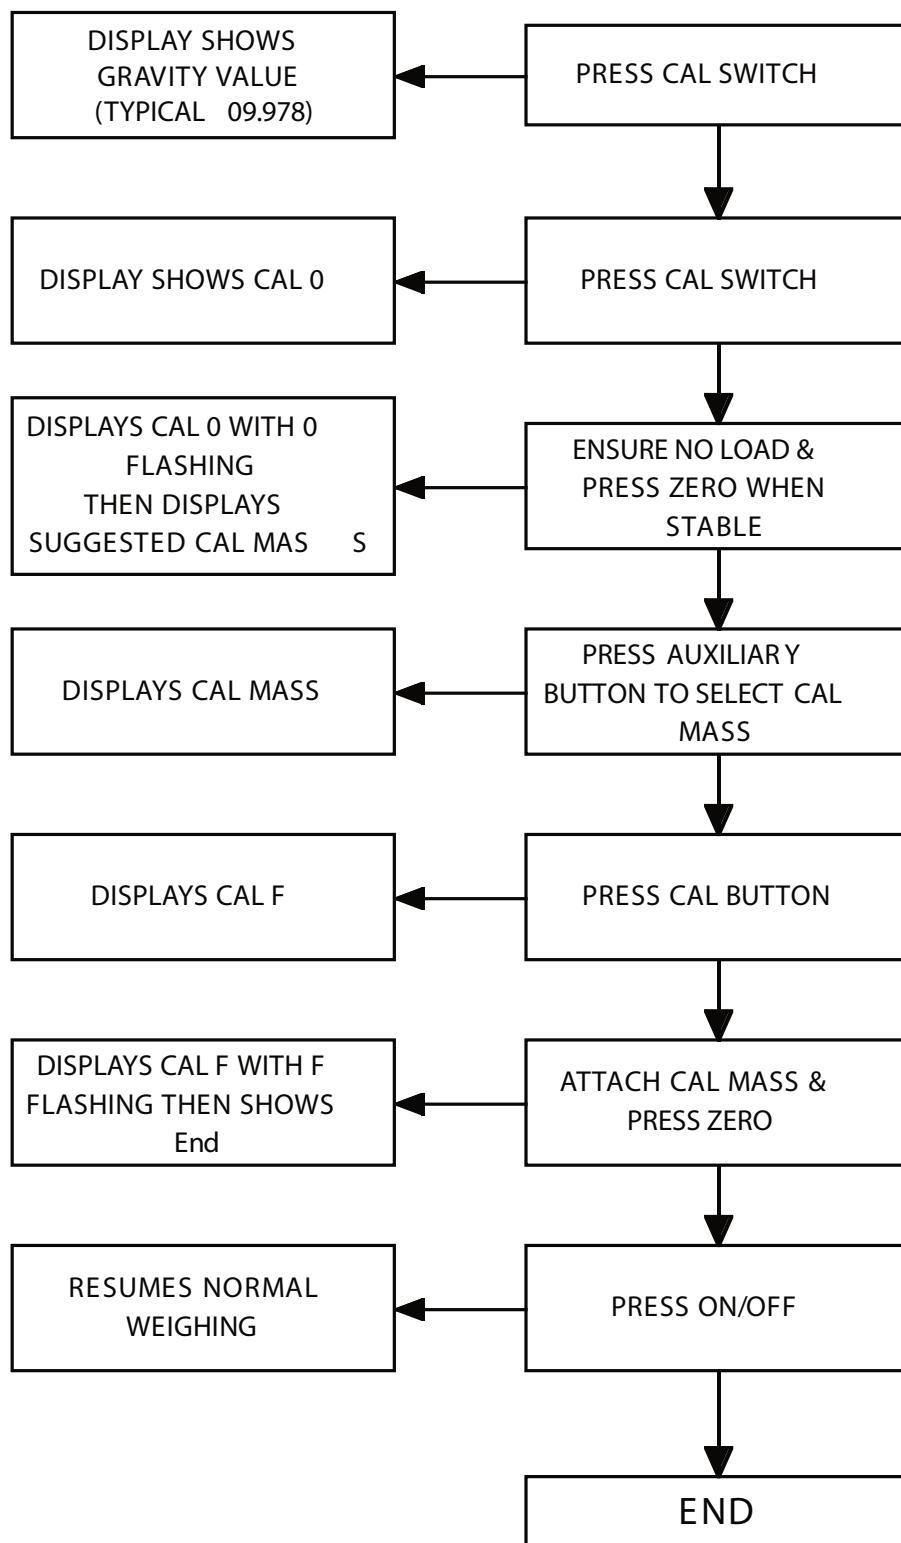


FJ Series

## Simple Calibration Flow Chart

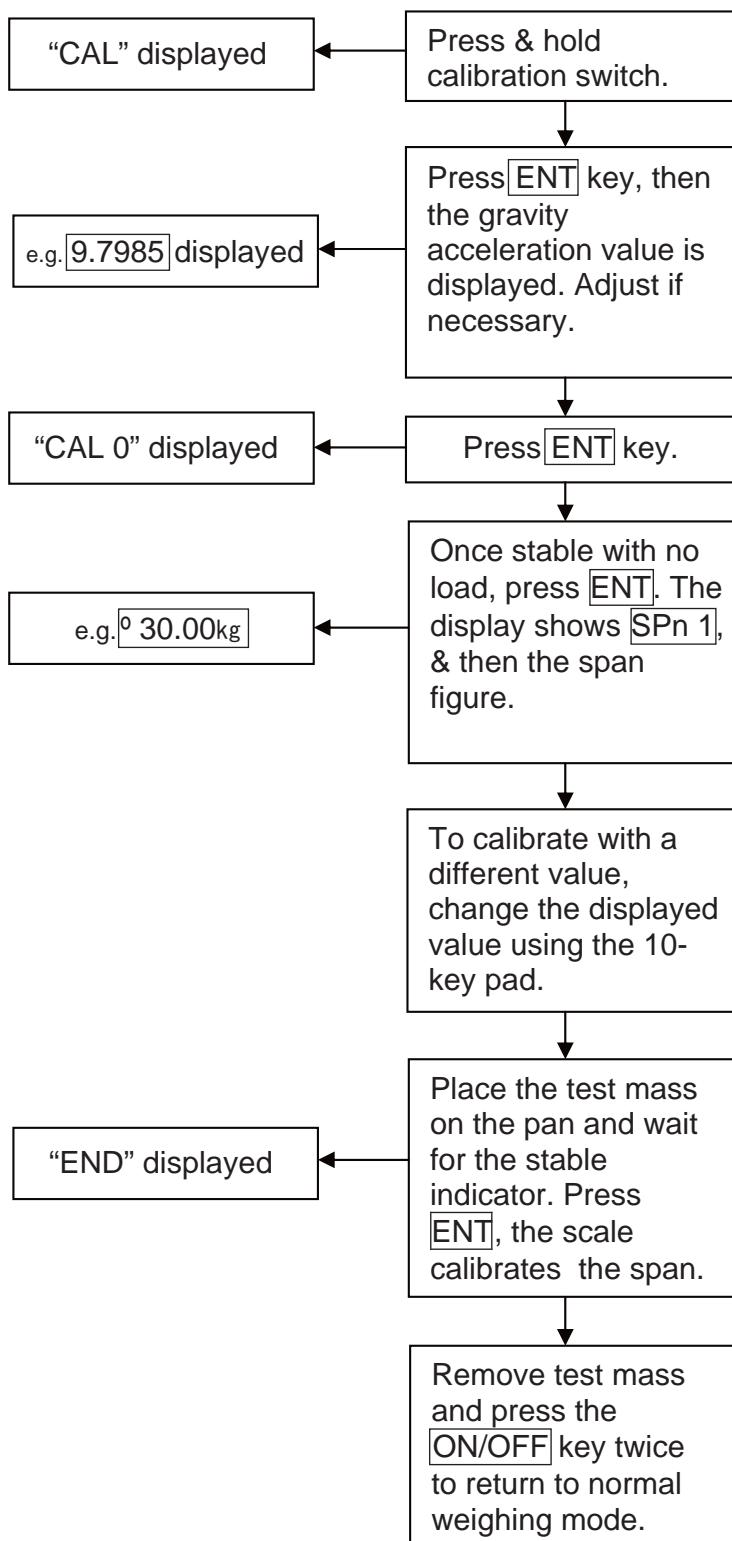


**FS-i Series**

## Simple Calibration Flow Chart

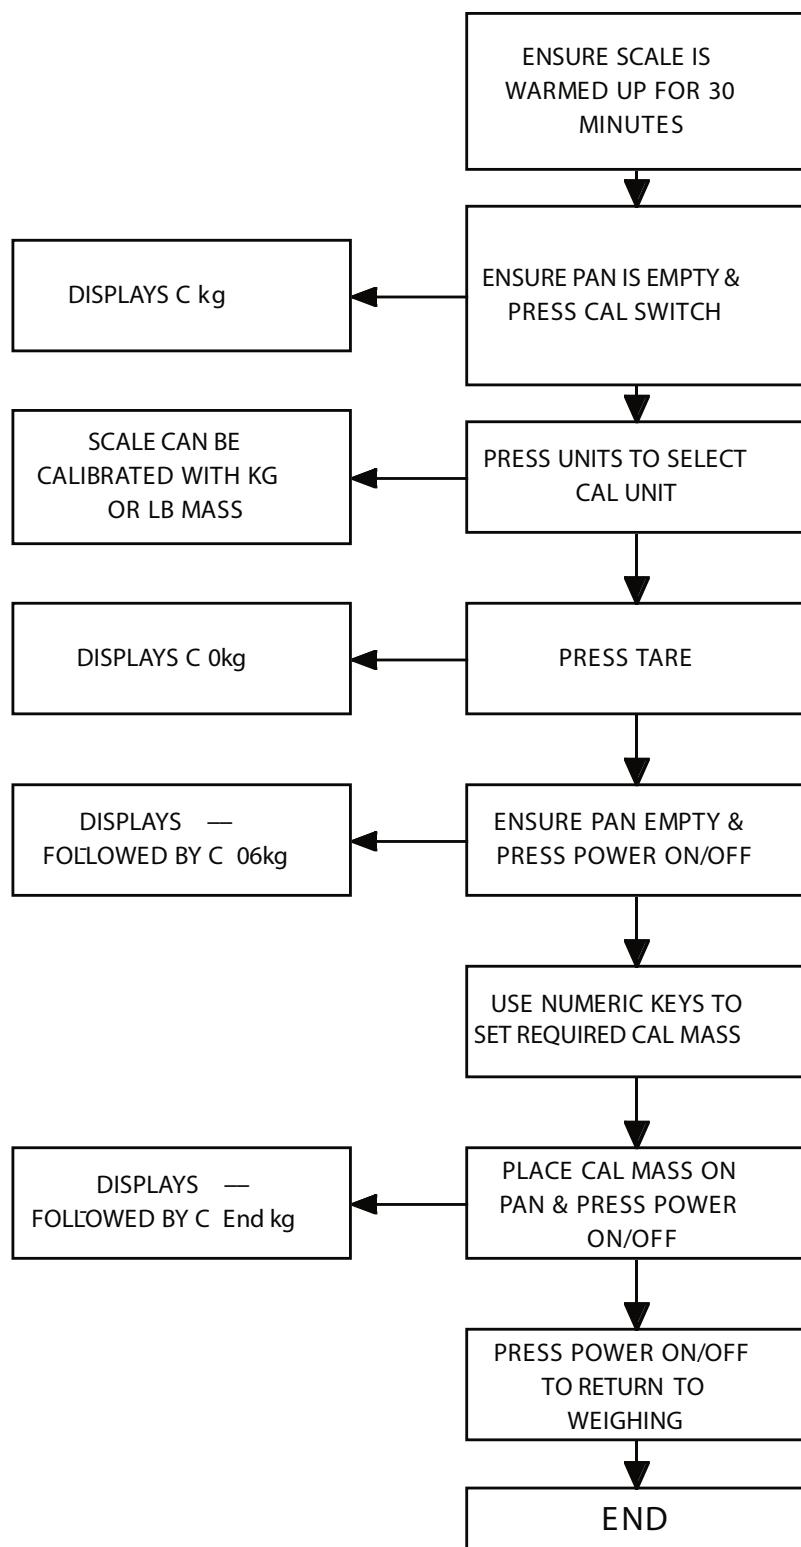


FS/FS-KL Series

## Simple Calibration Flow Chart

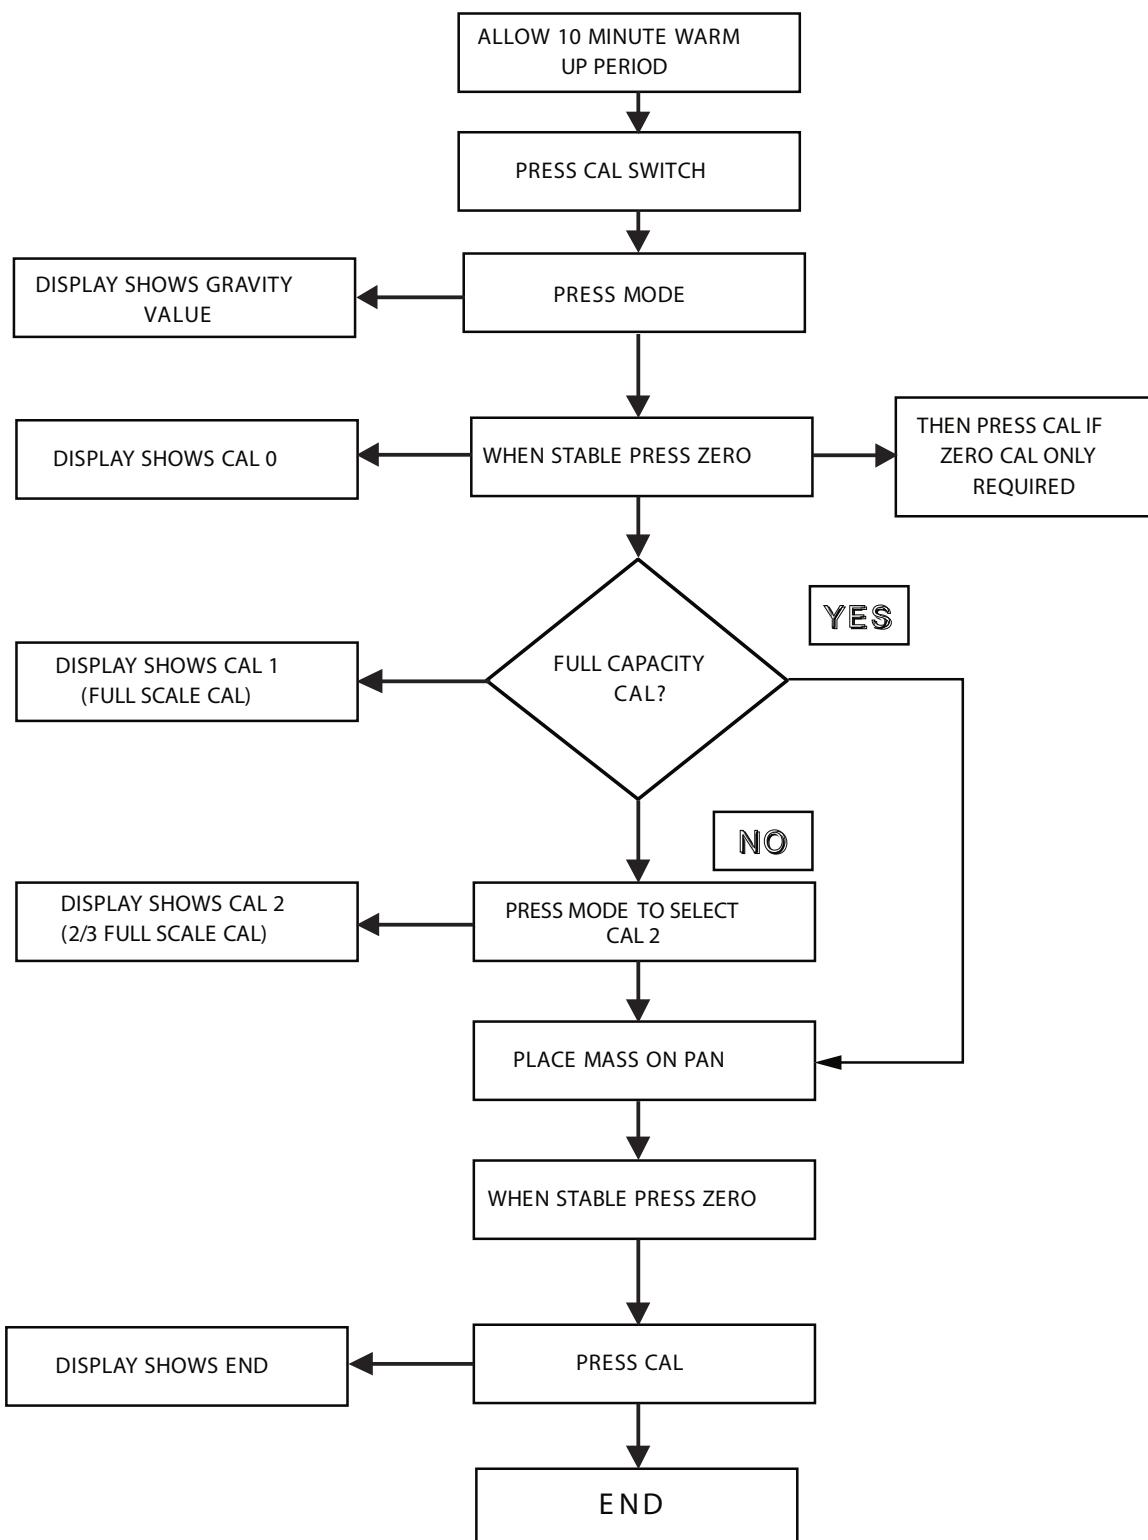


FV/FW Series

## Simple Calibration Flow Chart

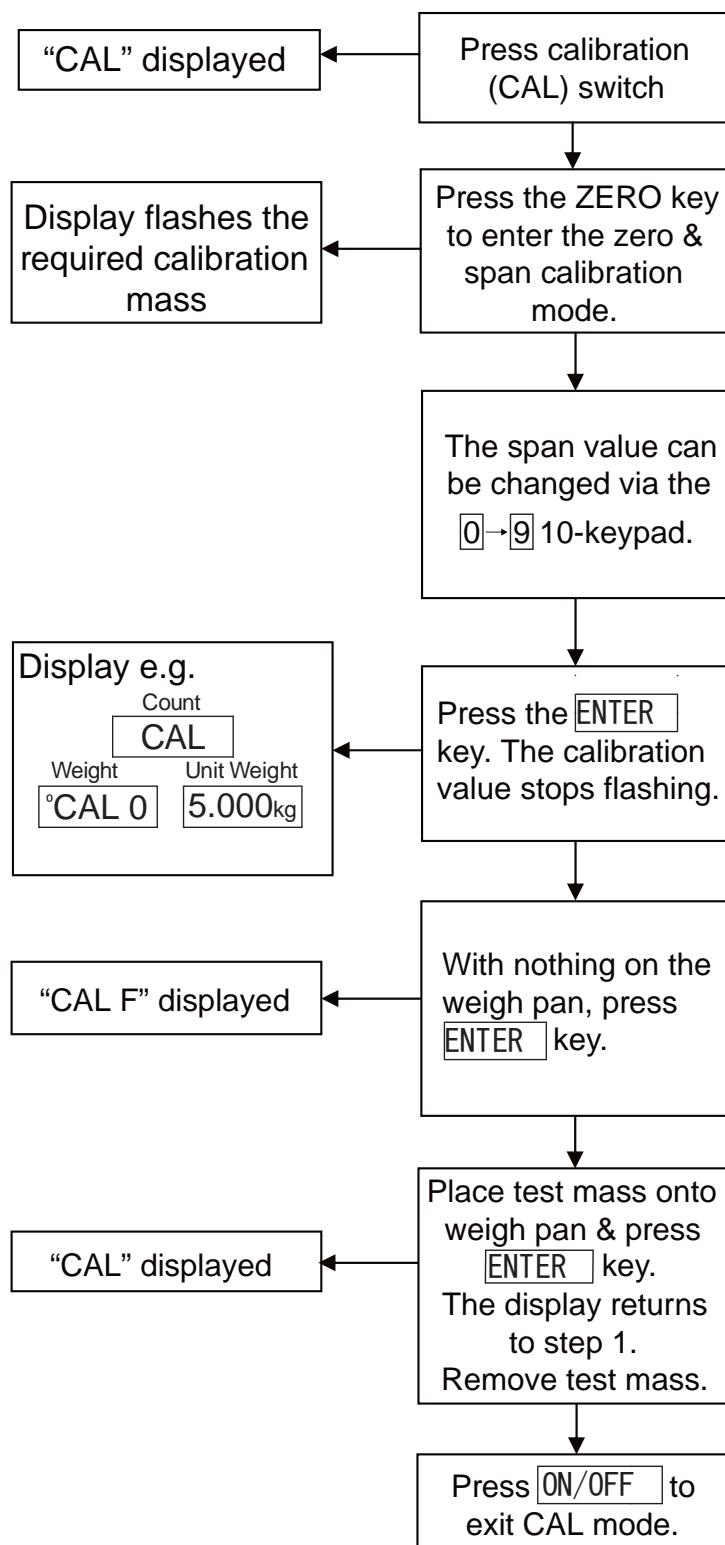


**HC-i Series**

## Simple Calibration Flow Chart

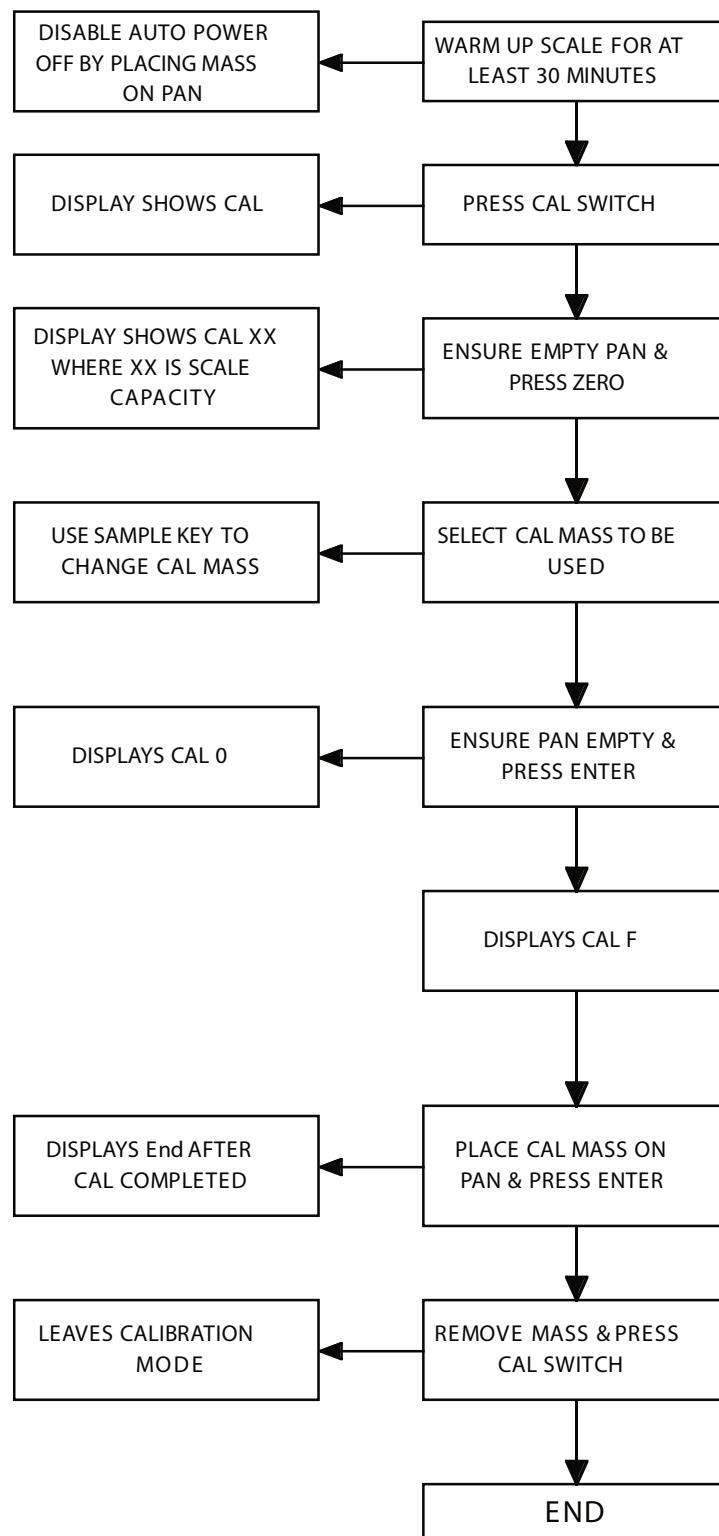


HC/HD Series

## Simple Calibration Flow Chart

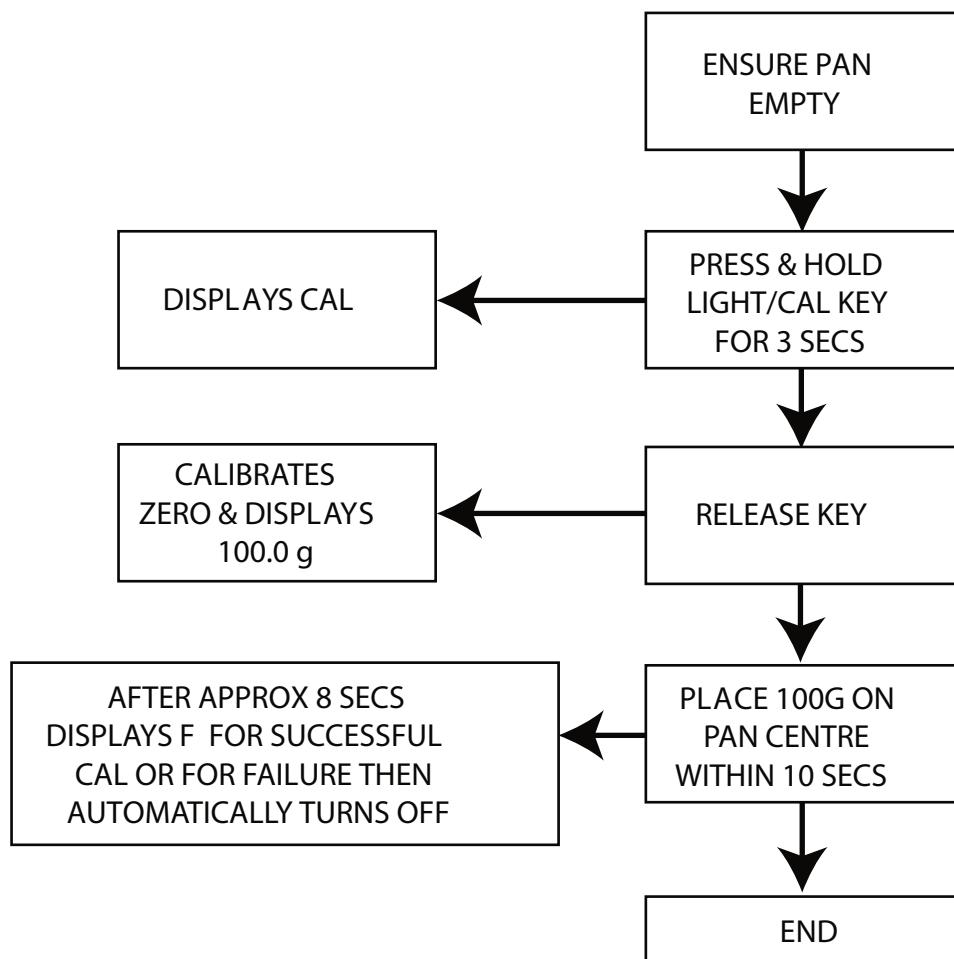


HJ-150

## Simple Calibration Flow Chart

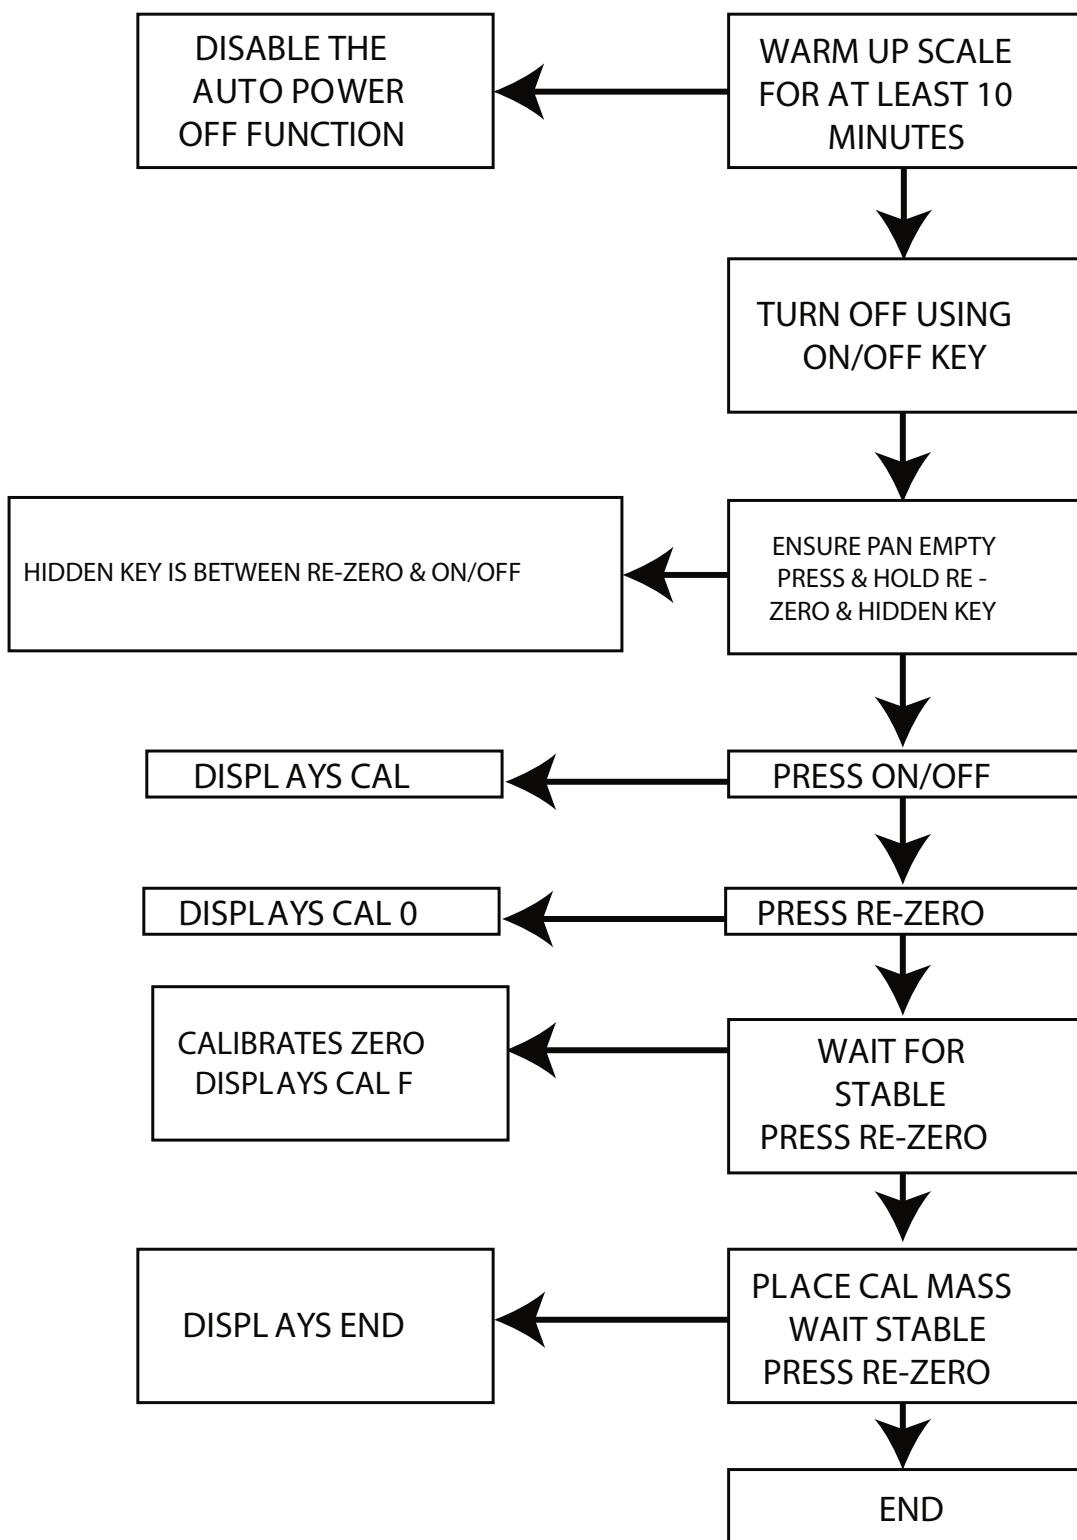


HL Series

## Simple Calibration Flow Chart

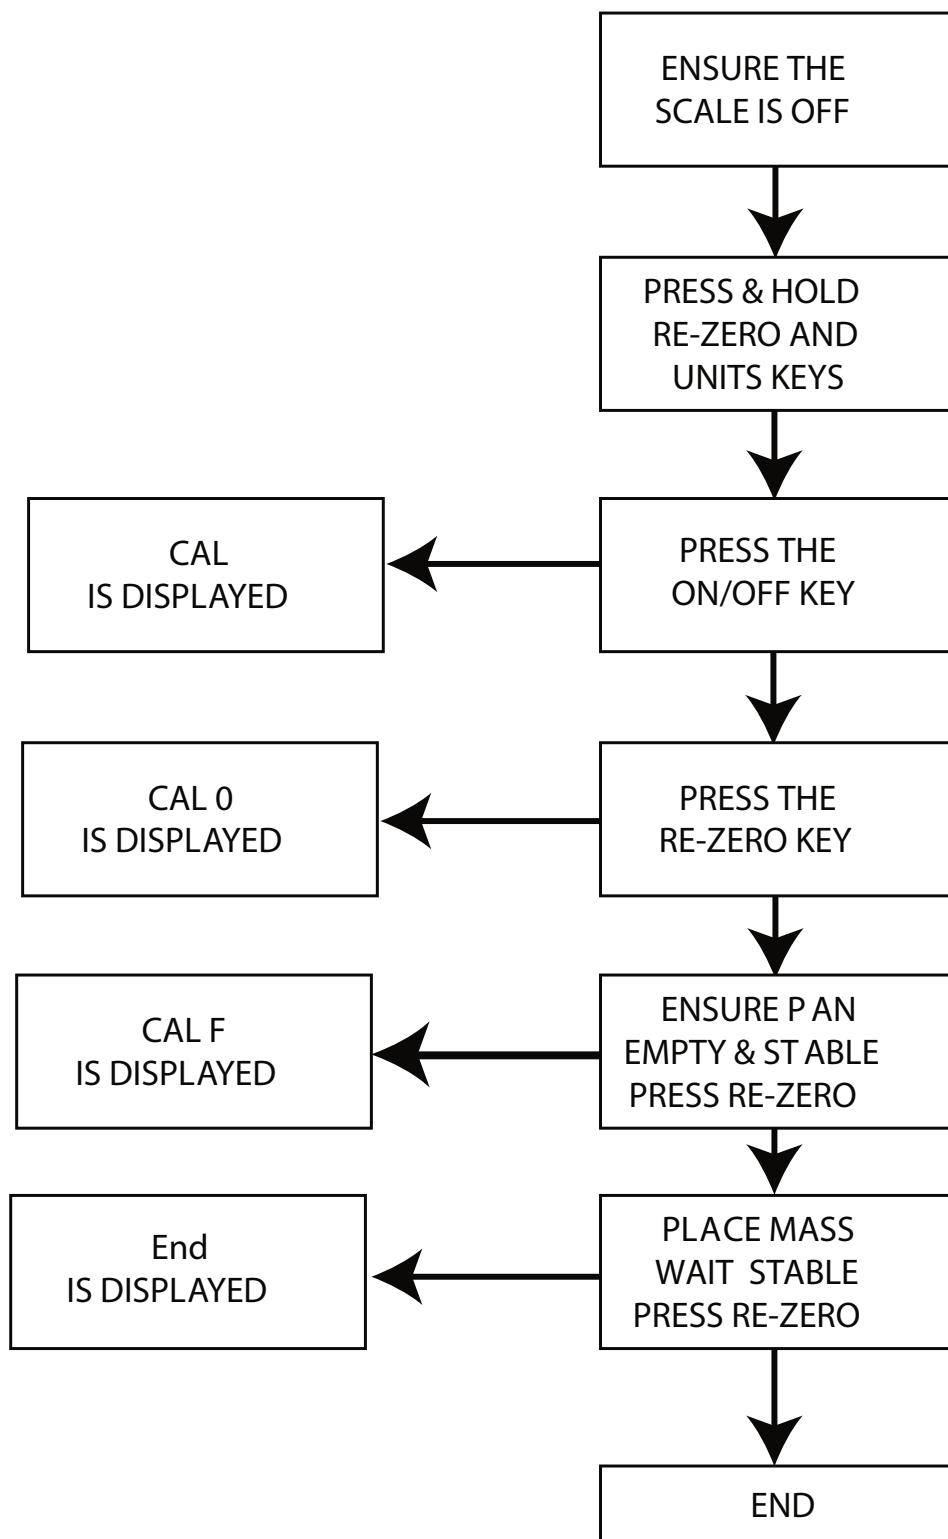


HL-i Series

## Simple Calibration Flow Chart

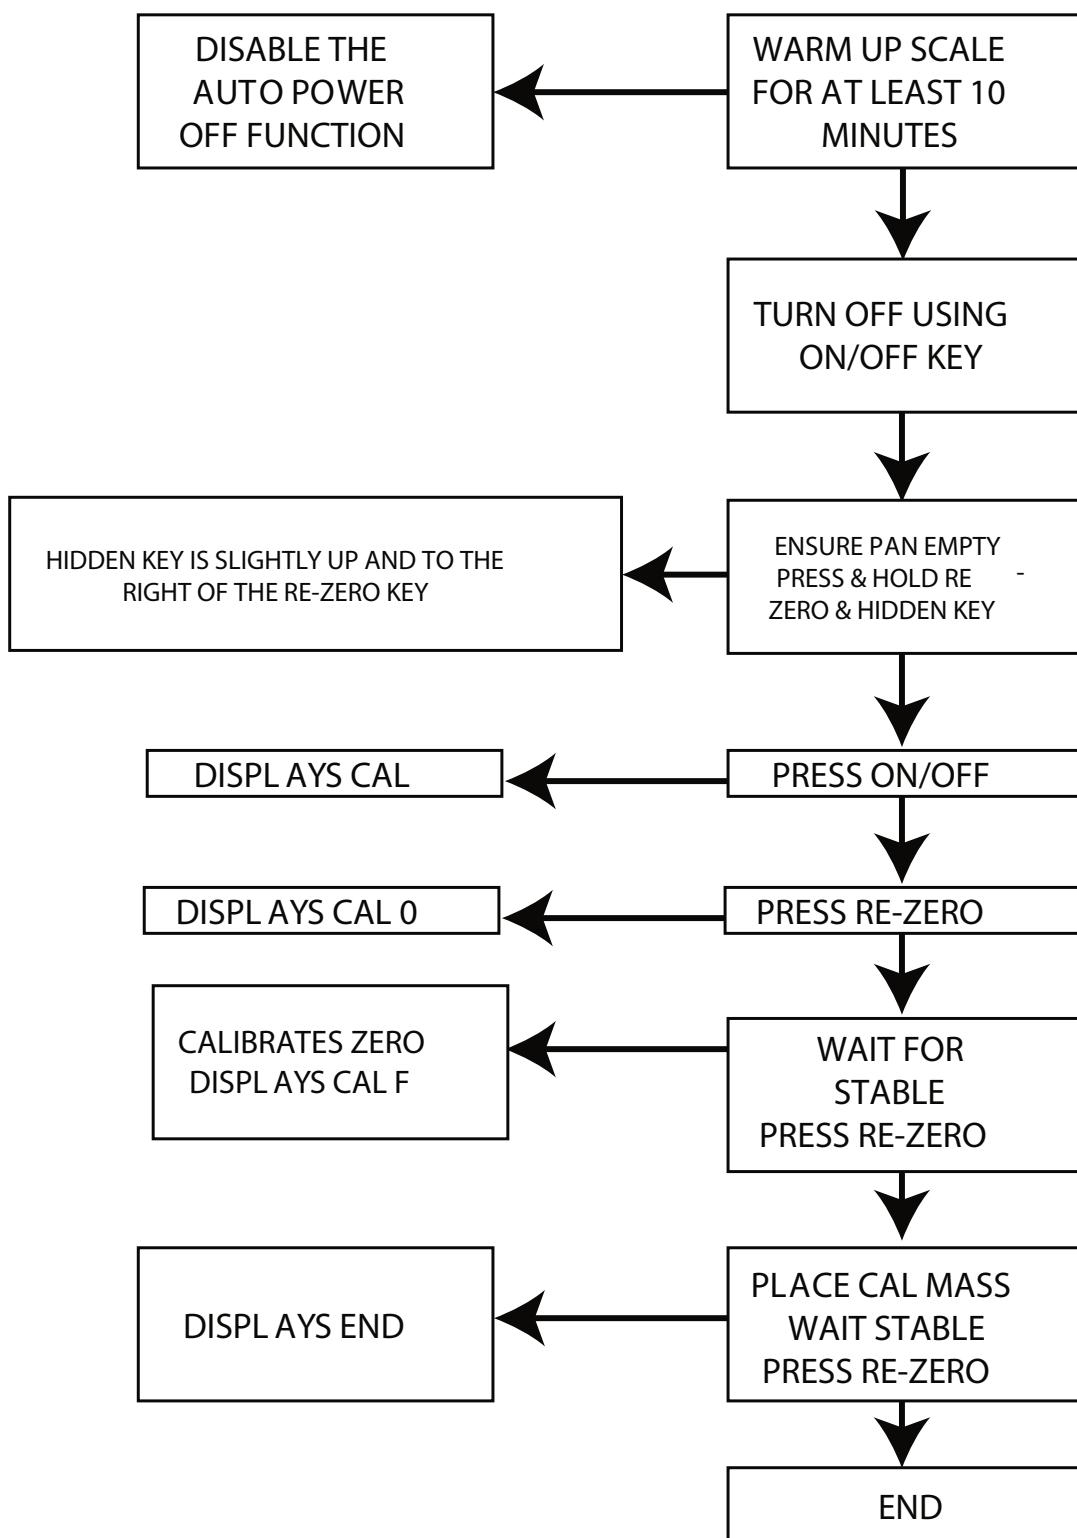


HL-WP Series

## Simple Calibration Flow Chart

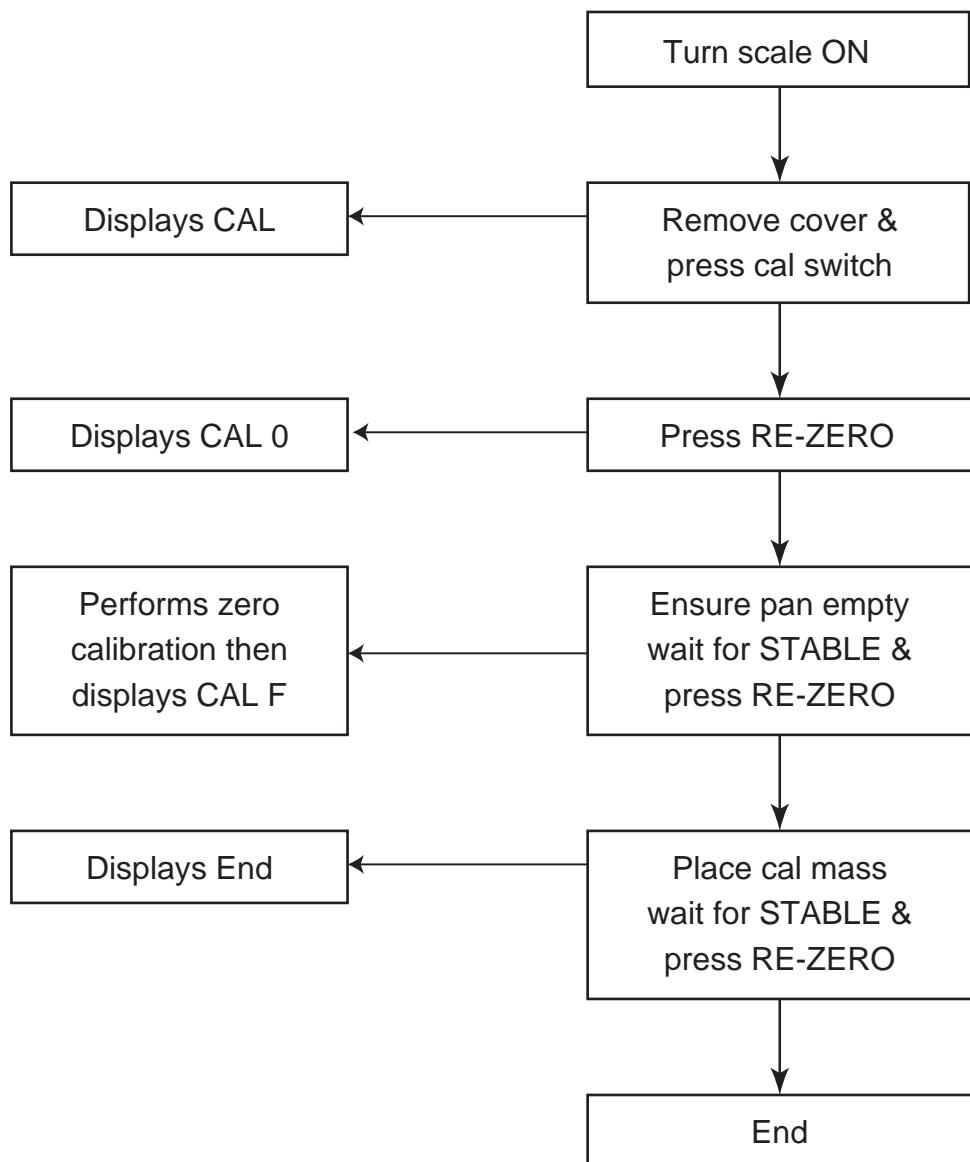


**HT Series**

## Simple Calibration Flow Chart

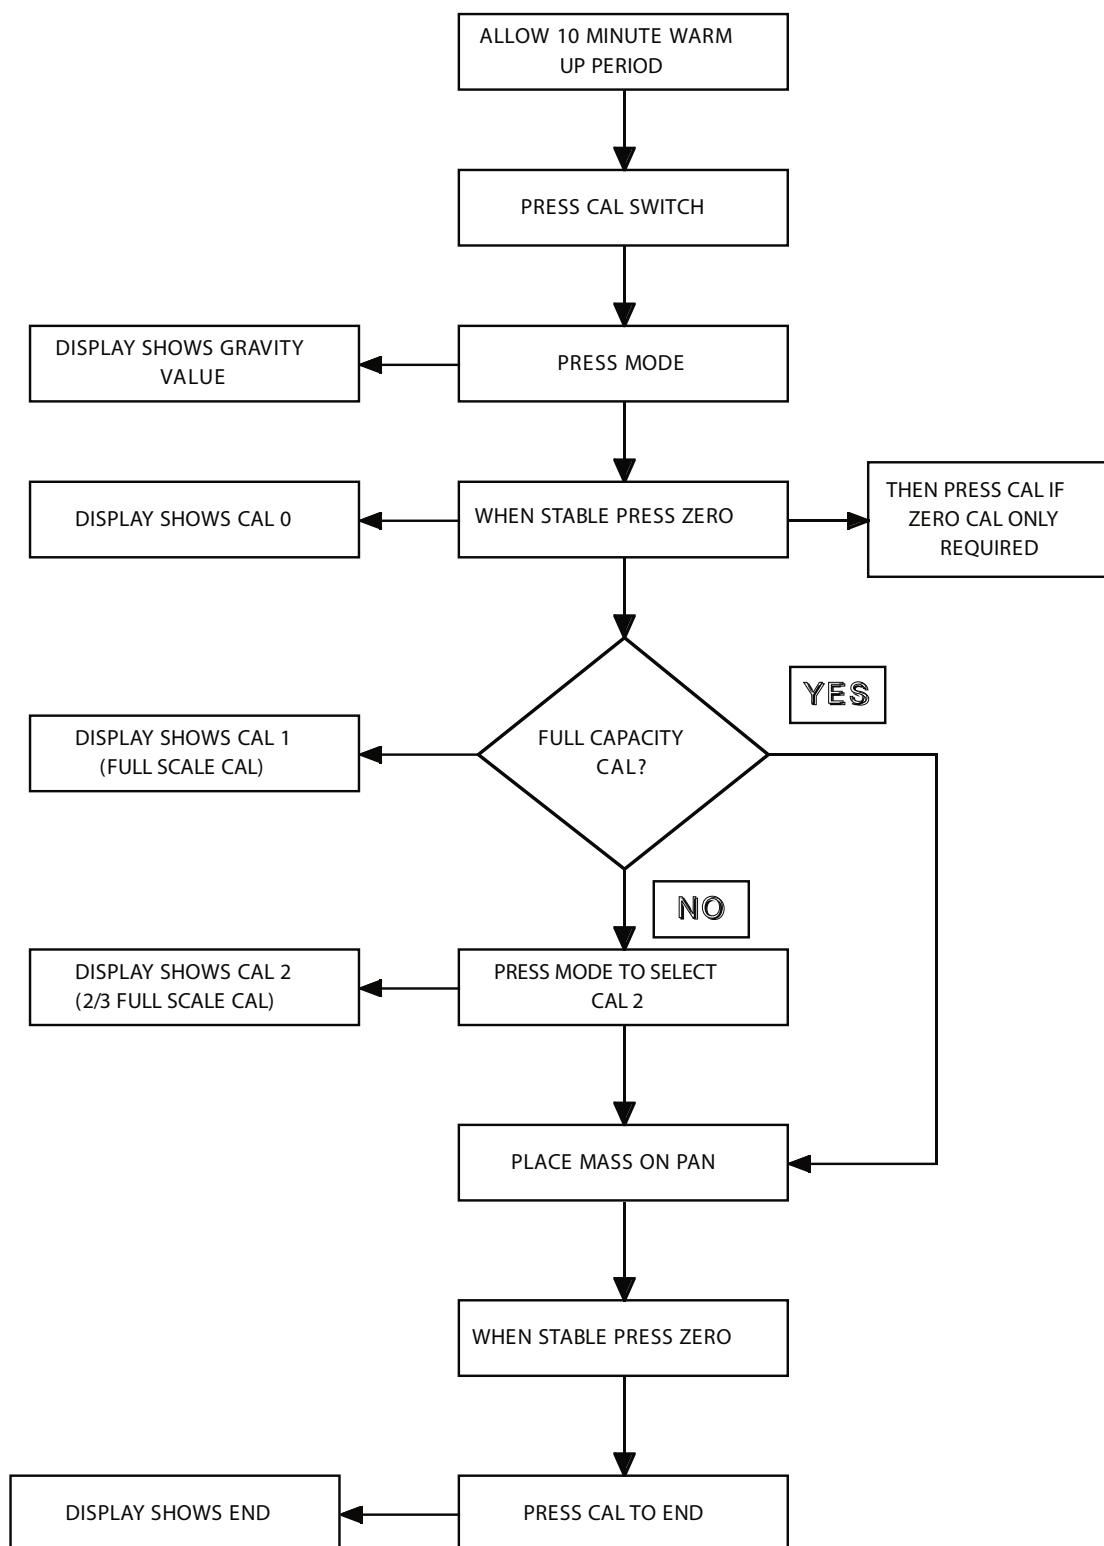


HV/HW Series

## Simple Calibration Flow Chart

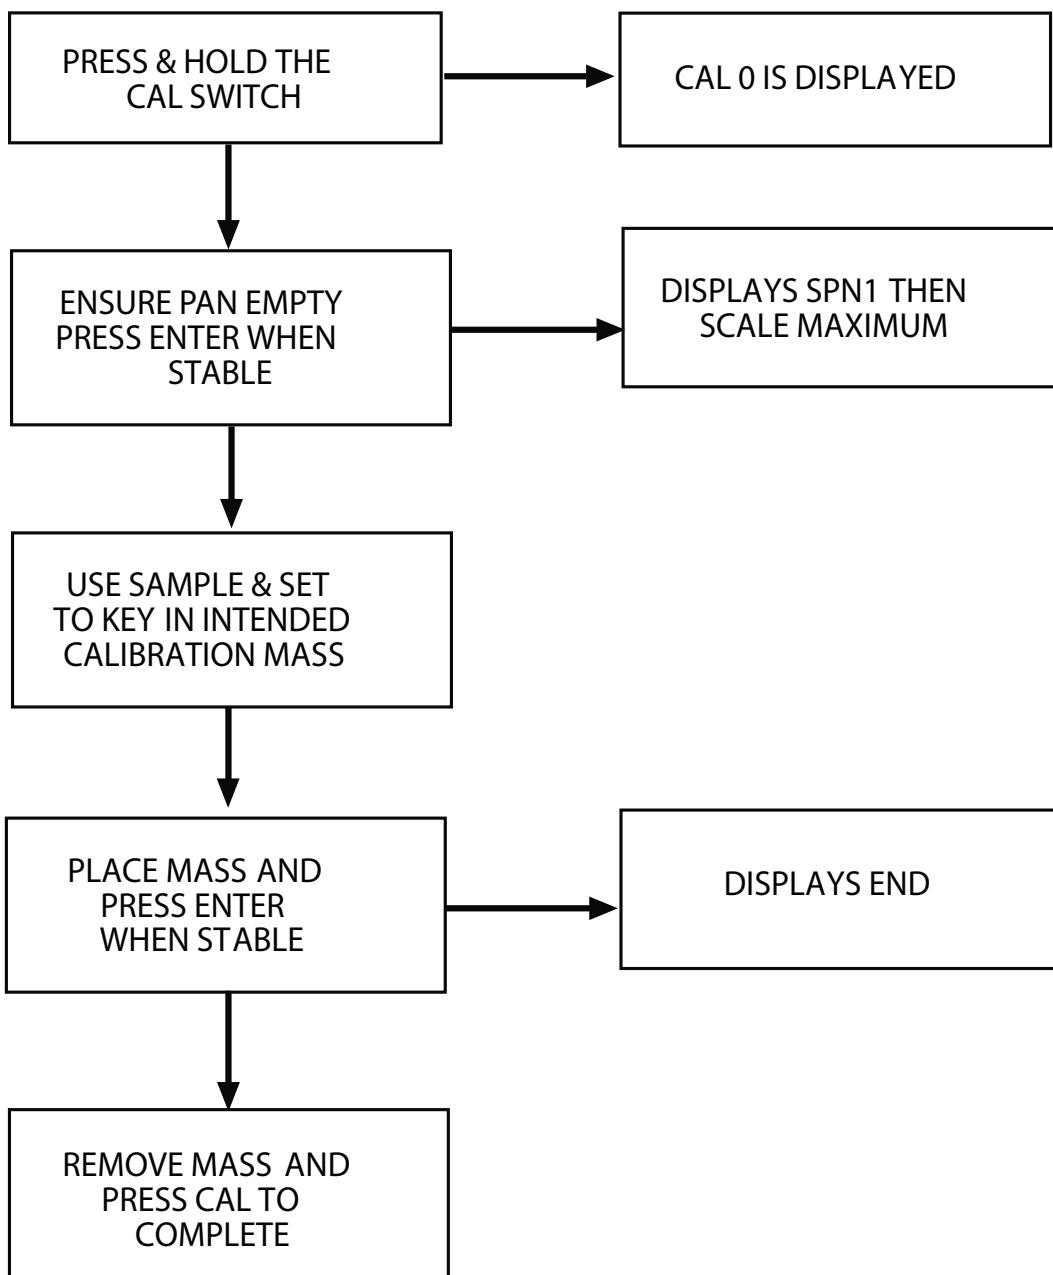


HV-G Series

## Simple Calibration Flow Chart

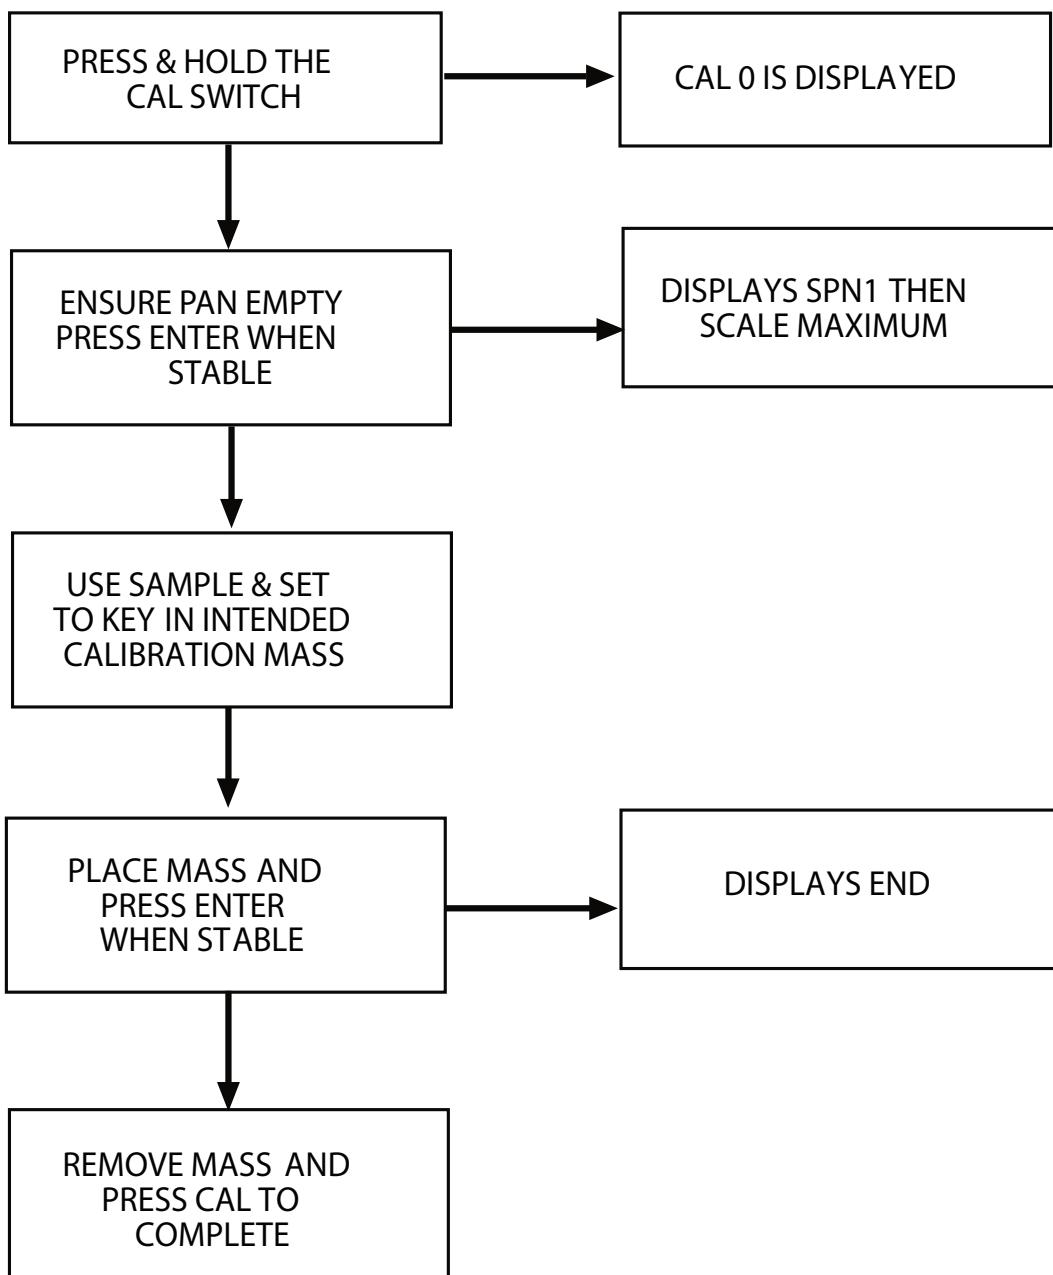


HVG-WP Series

## Simple Calibration Flow Chart

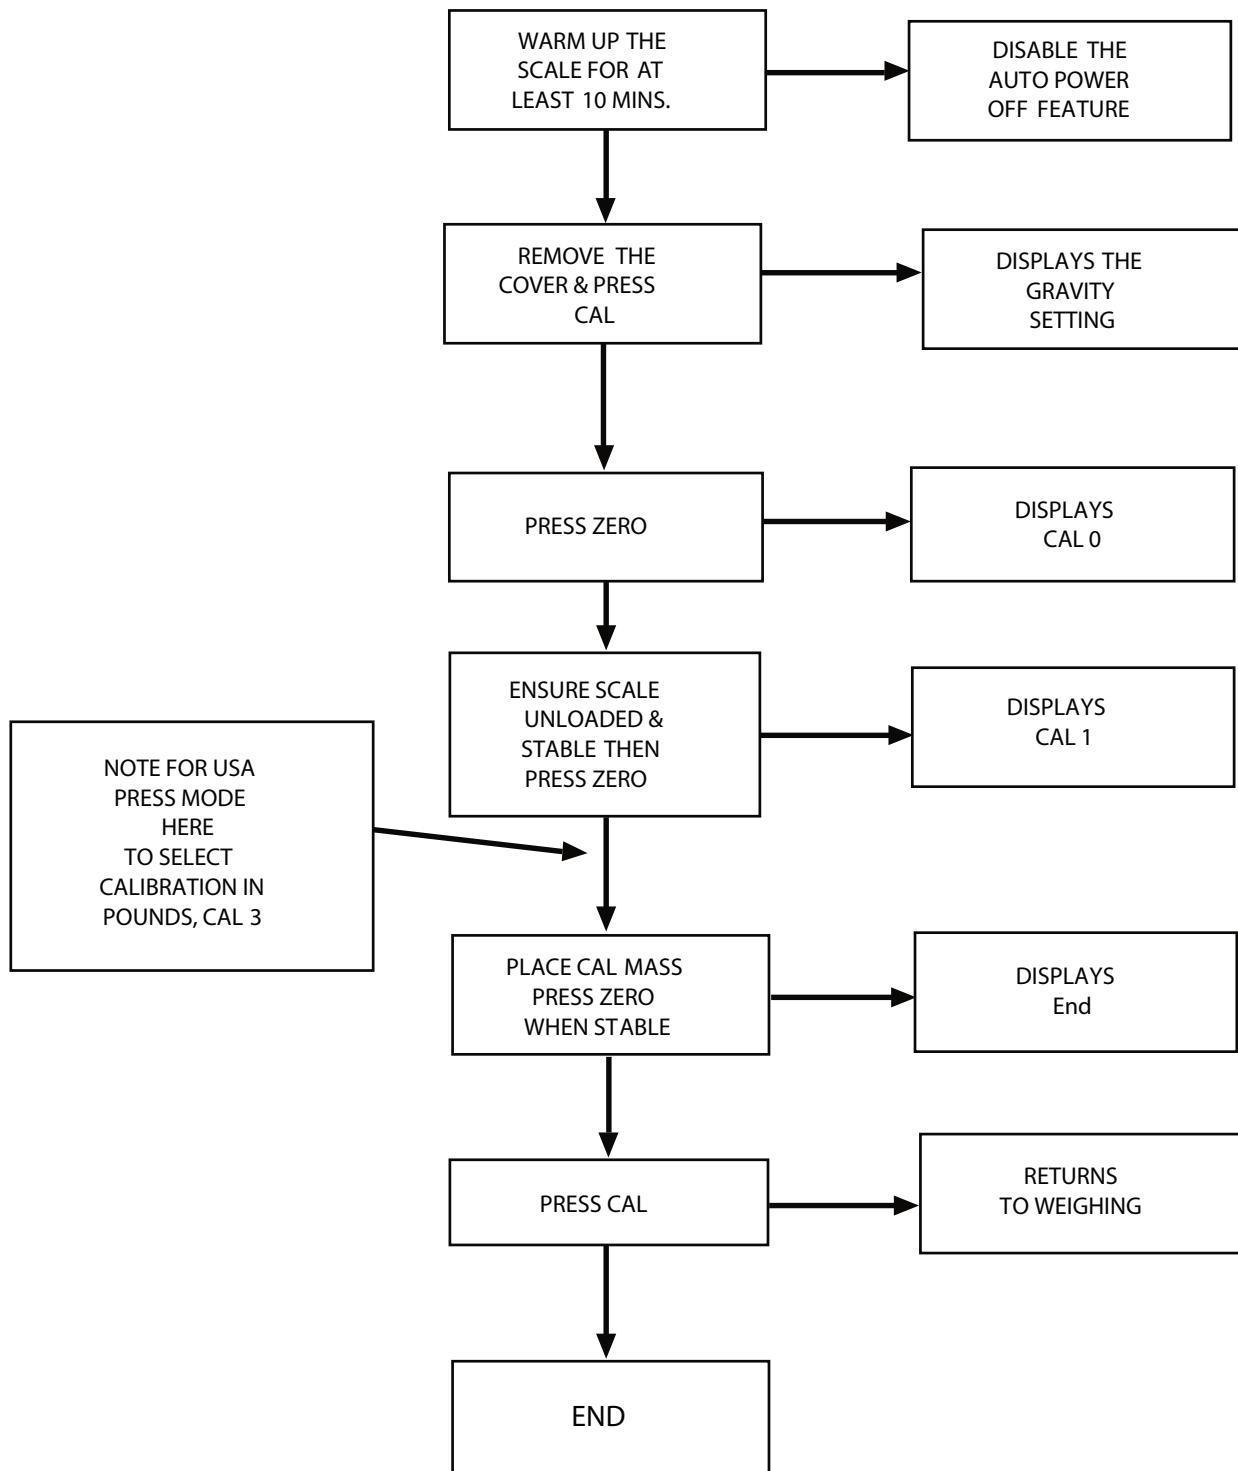


HW-D

## Simple Calibration Flow Chart

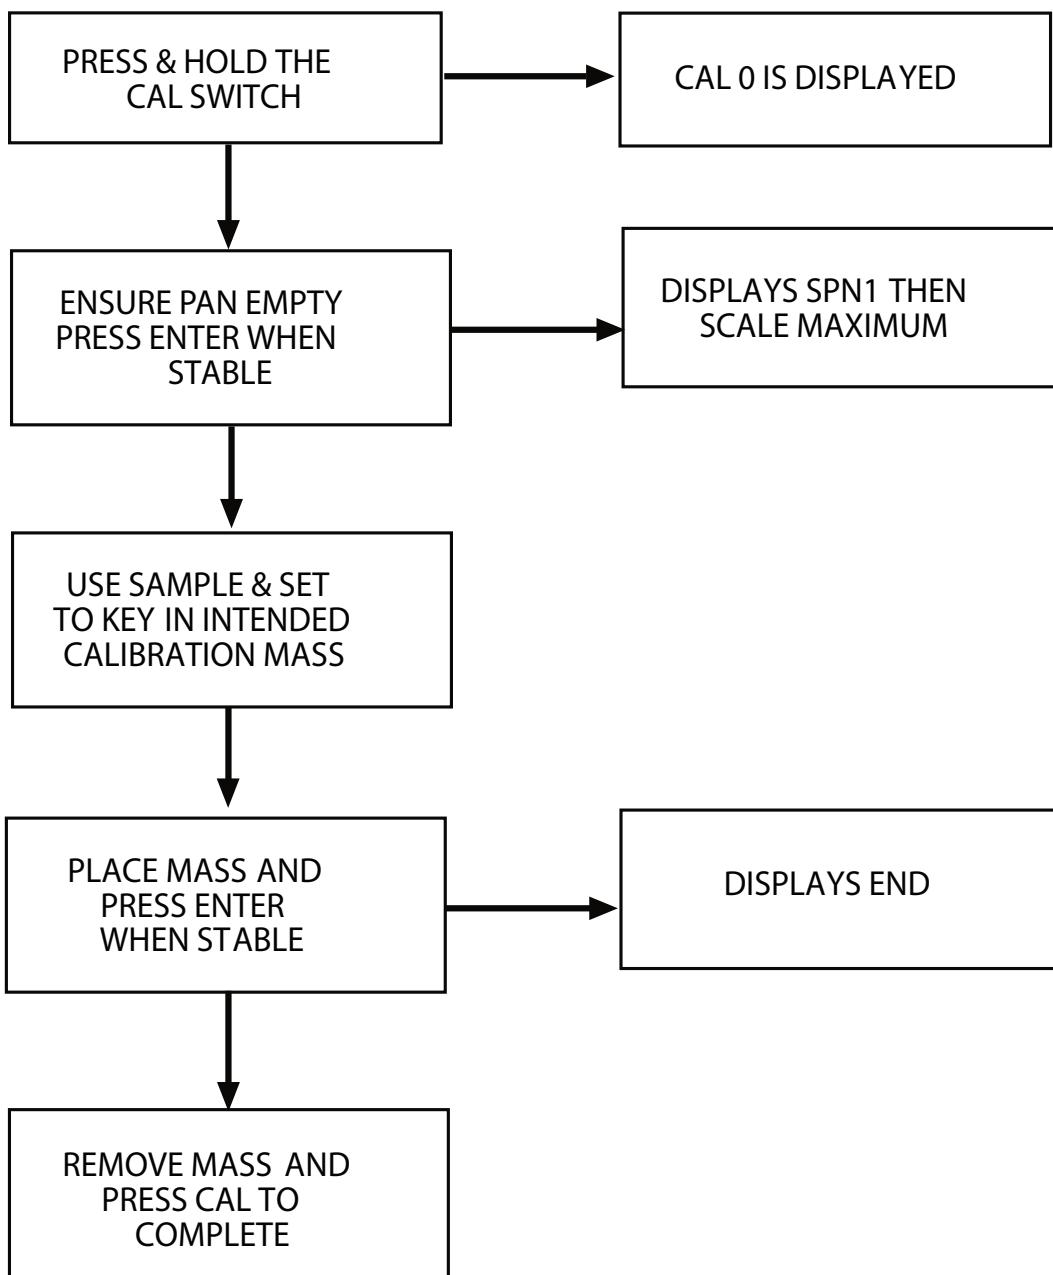


HW-G Series

## Simple Calibration Flow Chart

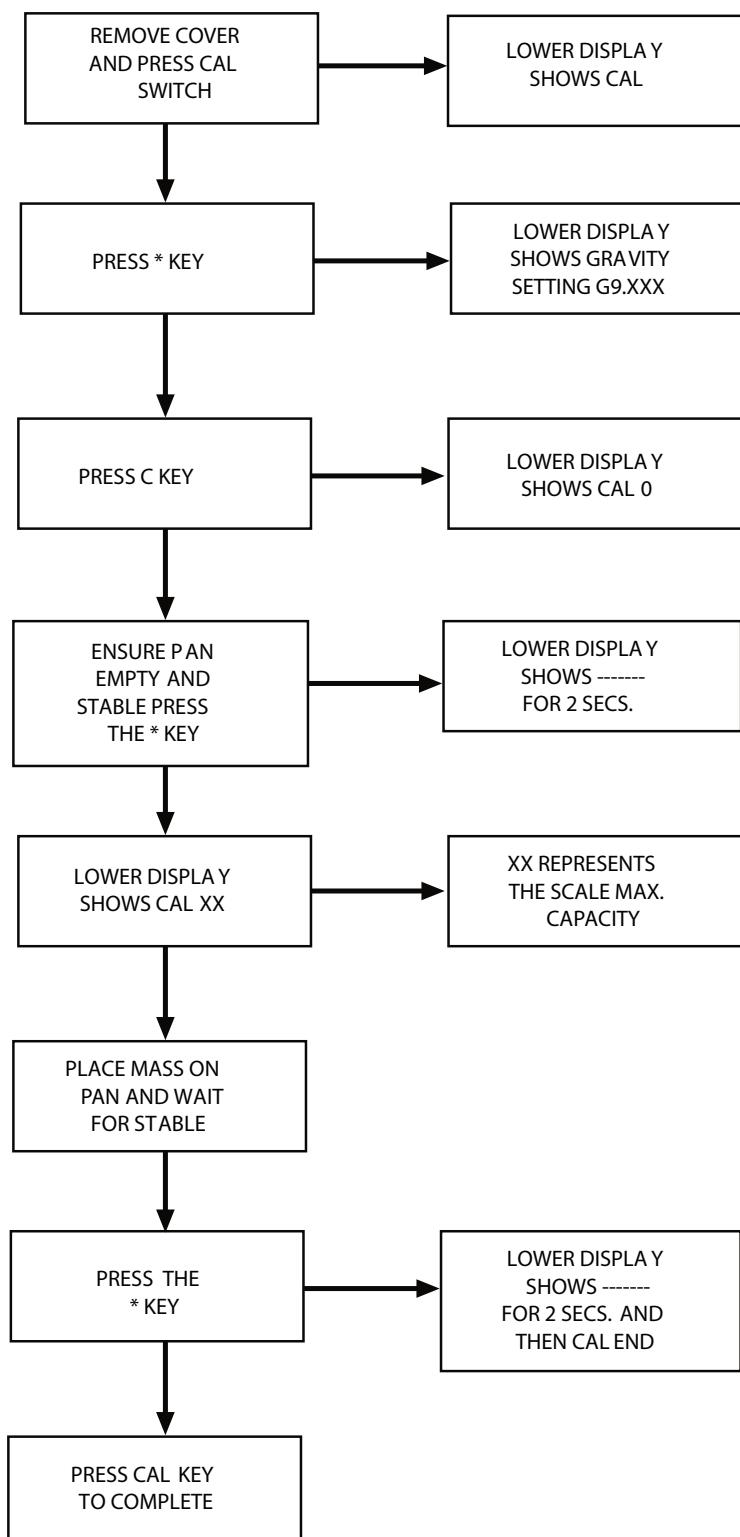


SF/SG Series

## Simple Calibration Flow Chart

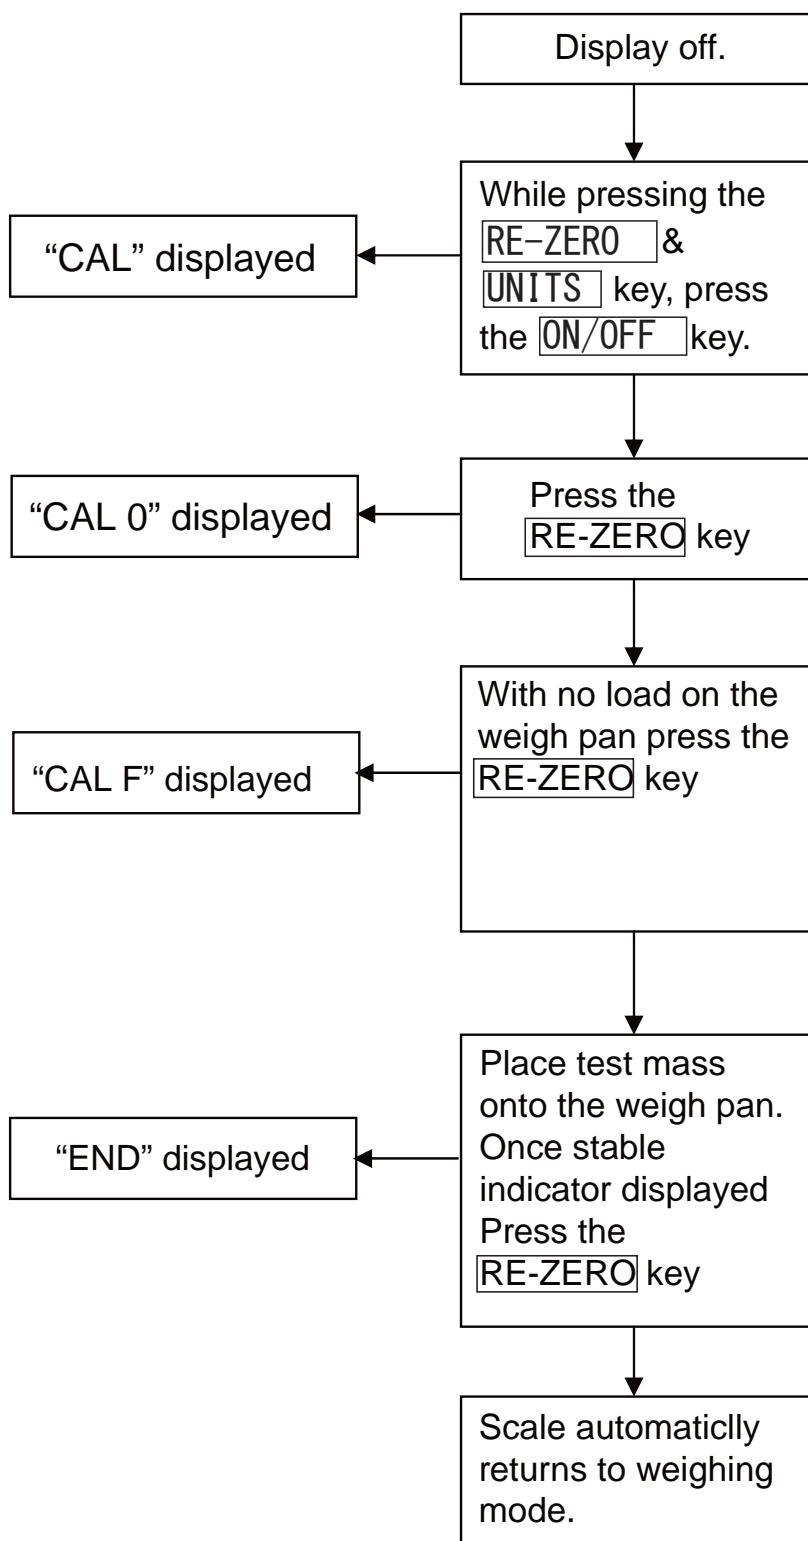


**SJ-H Series**

## Simple Calibration Flow Chart

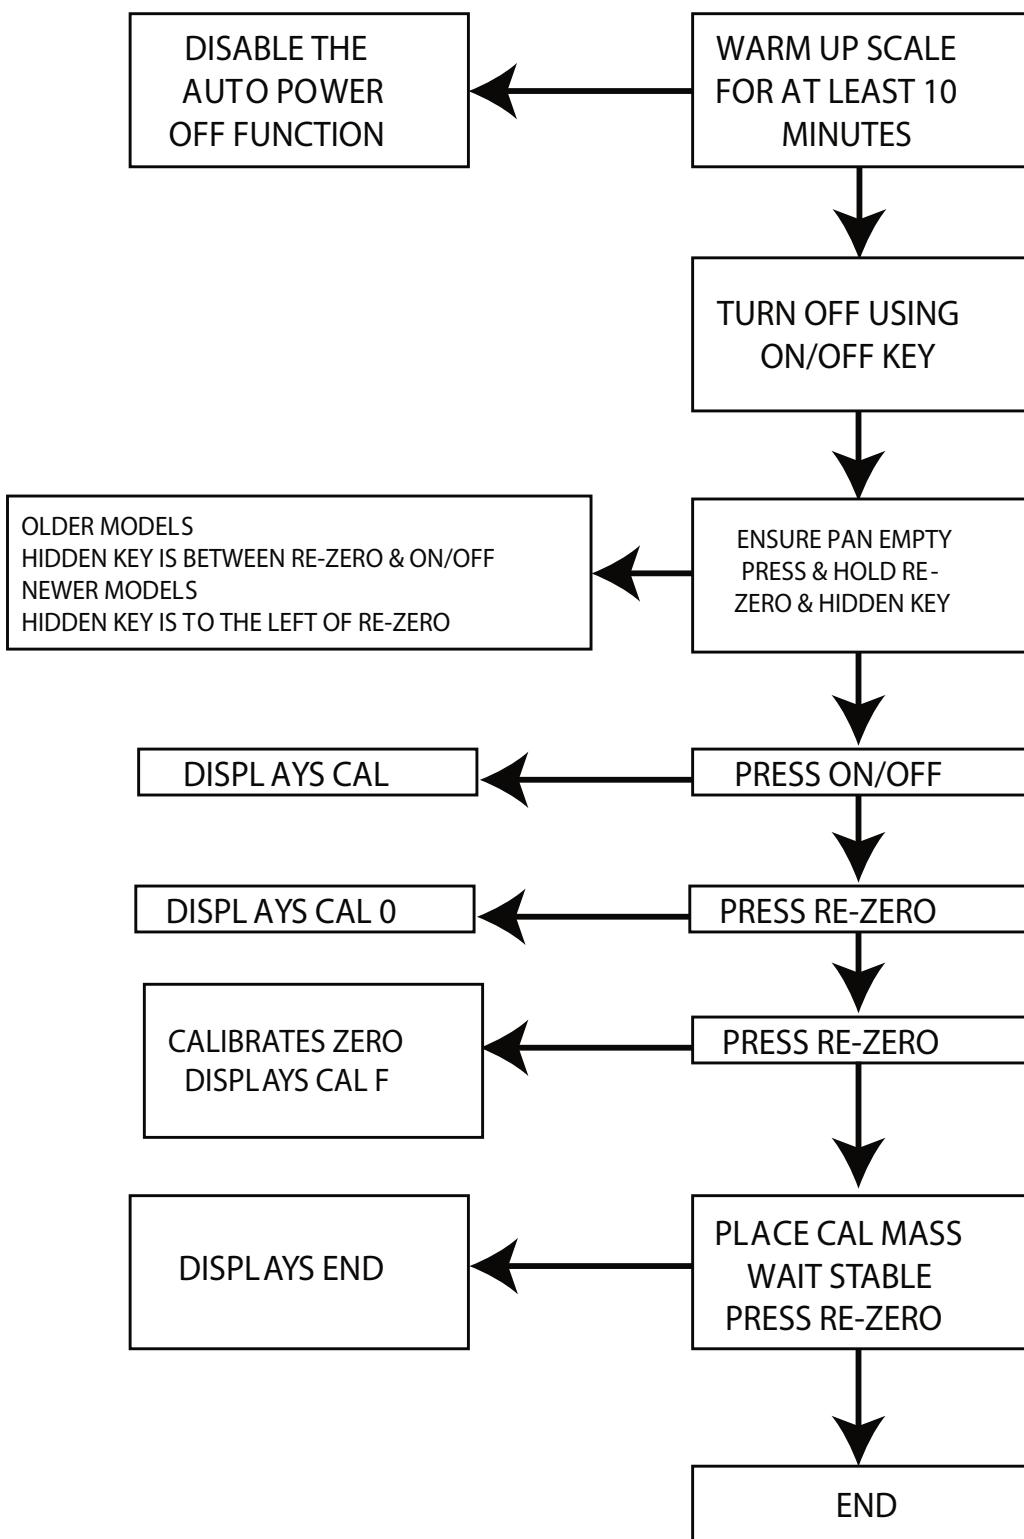


SK Series

## Simple Calibration Flow Chart

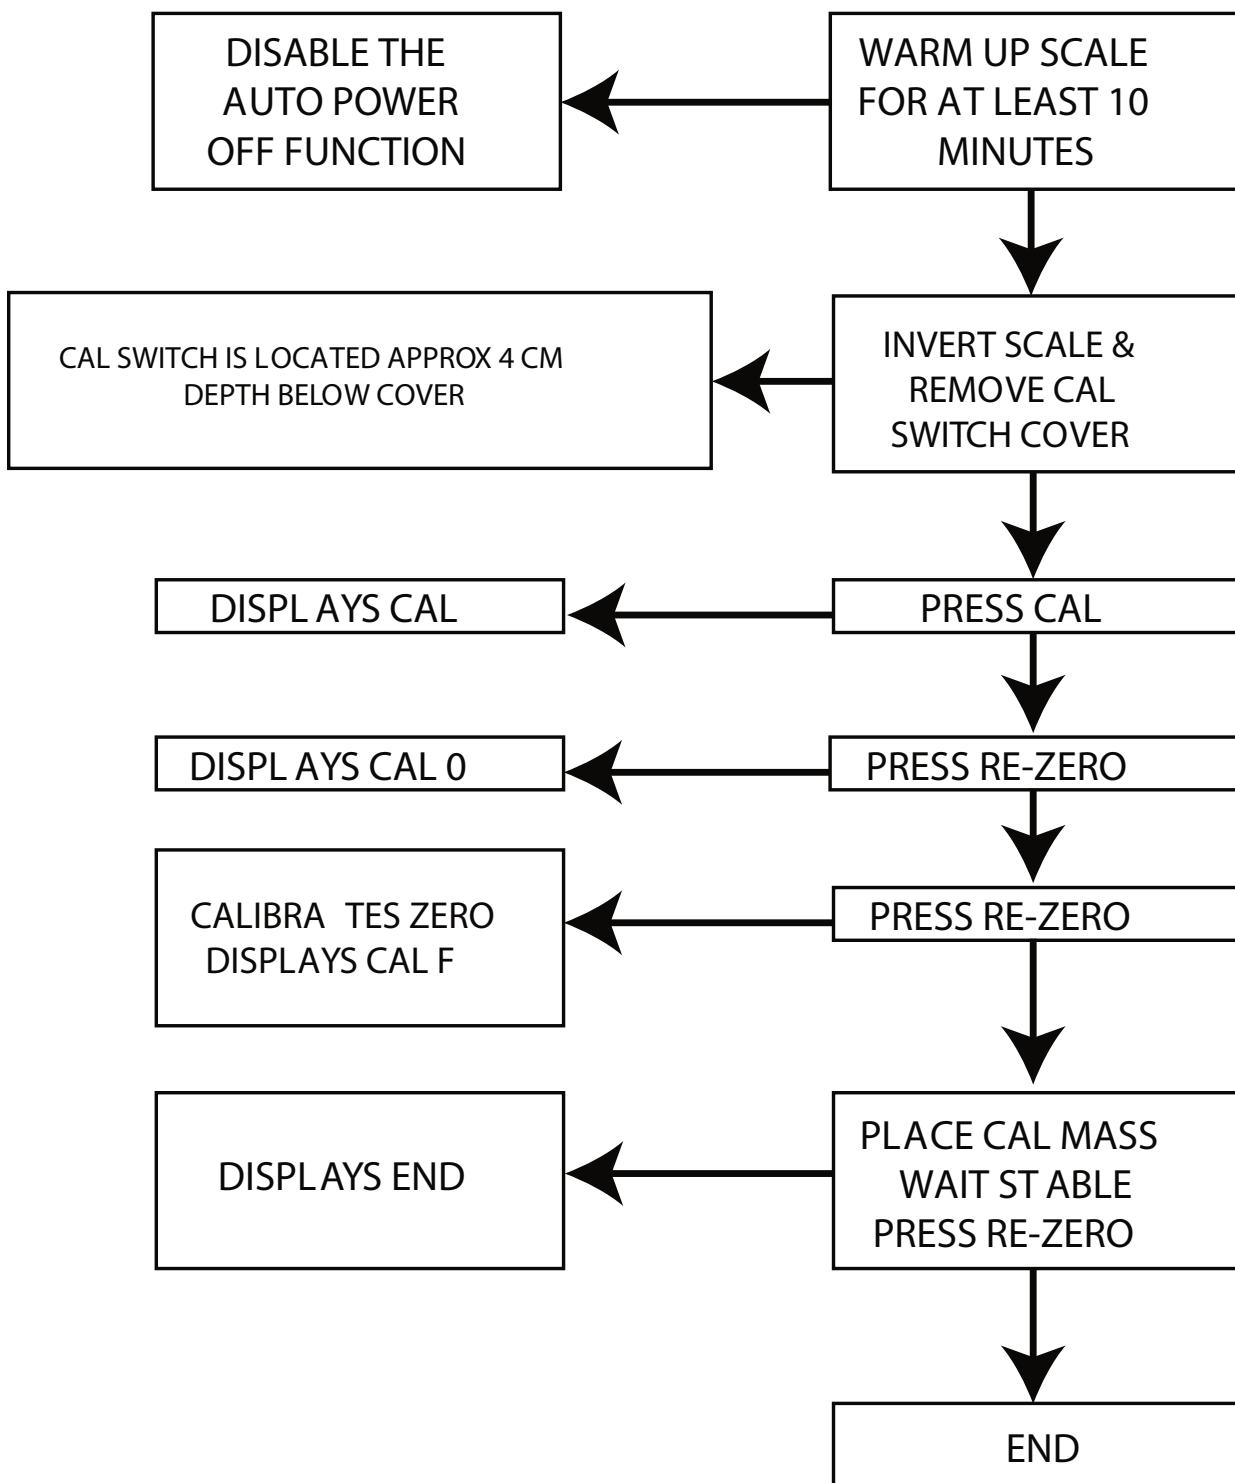


SK-WP Series

## Simple Calibration Flow Chart

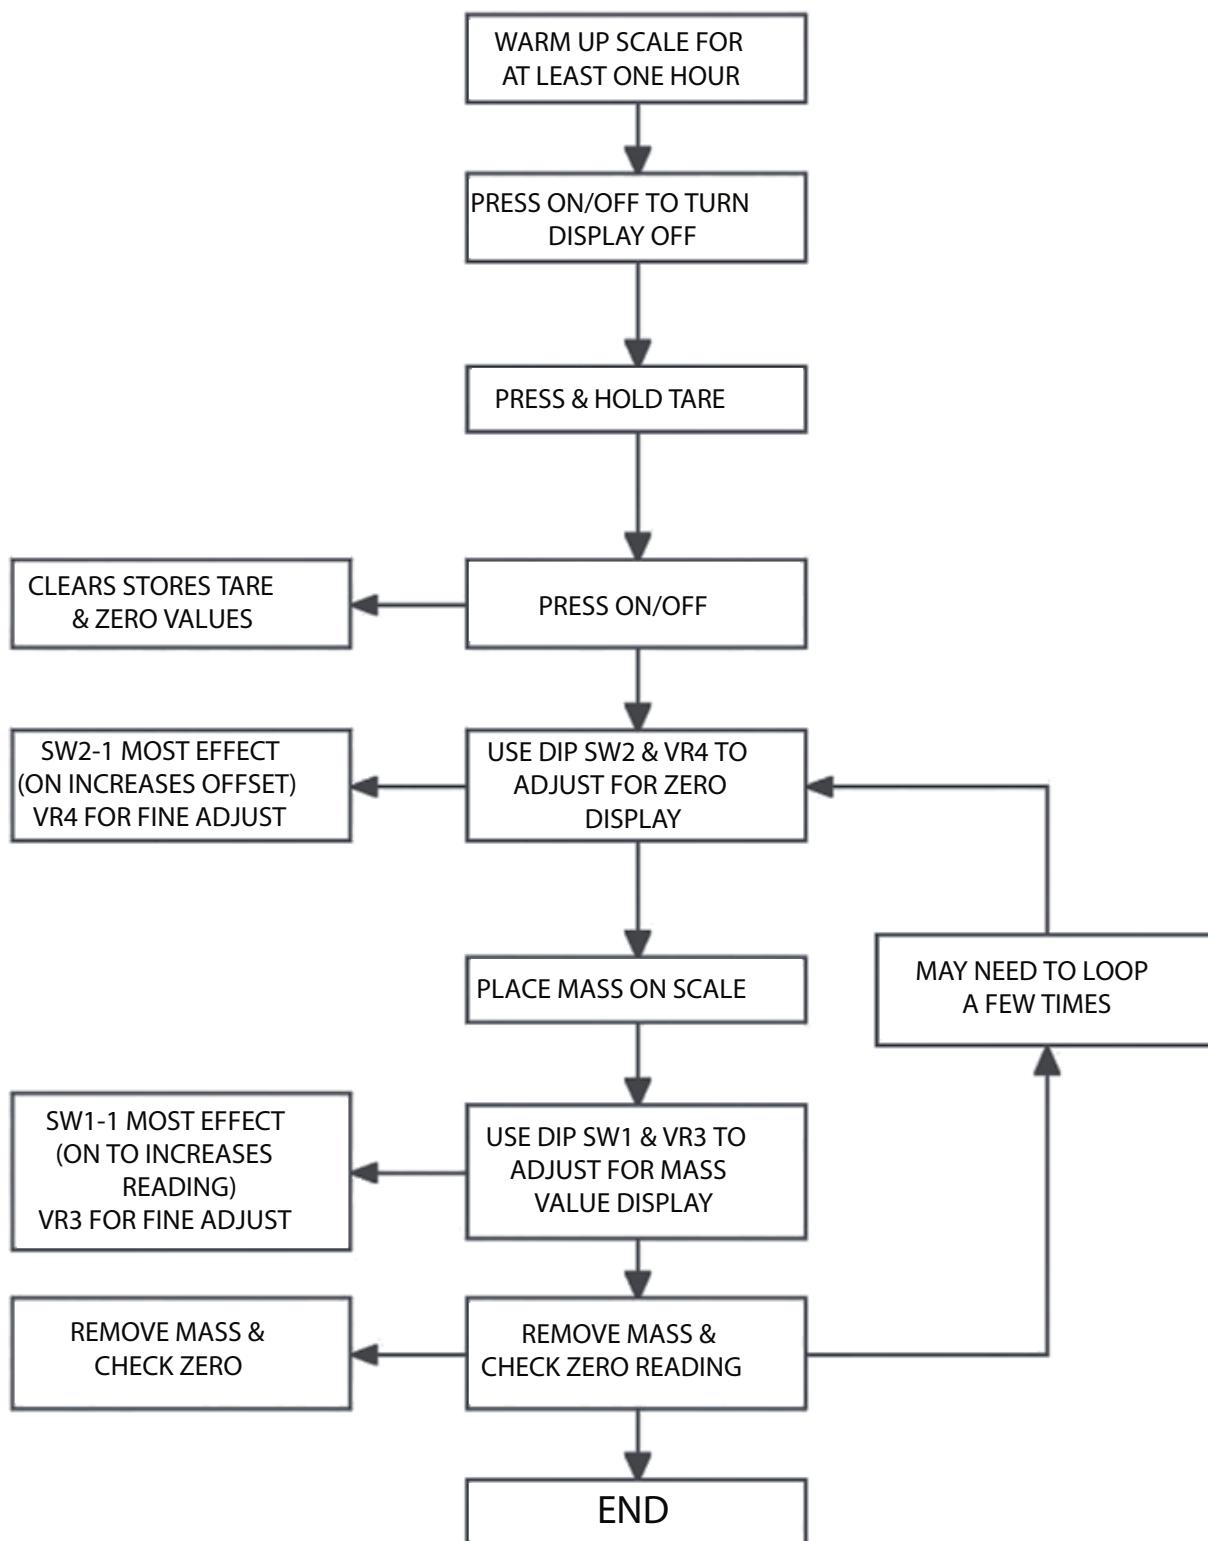


## Simple Calibration Flow Chart

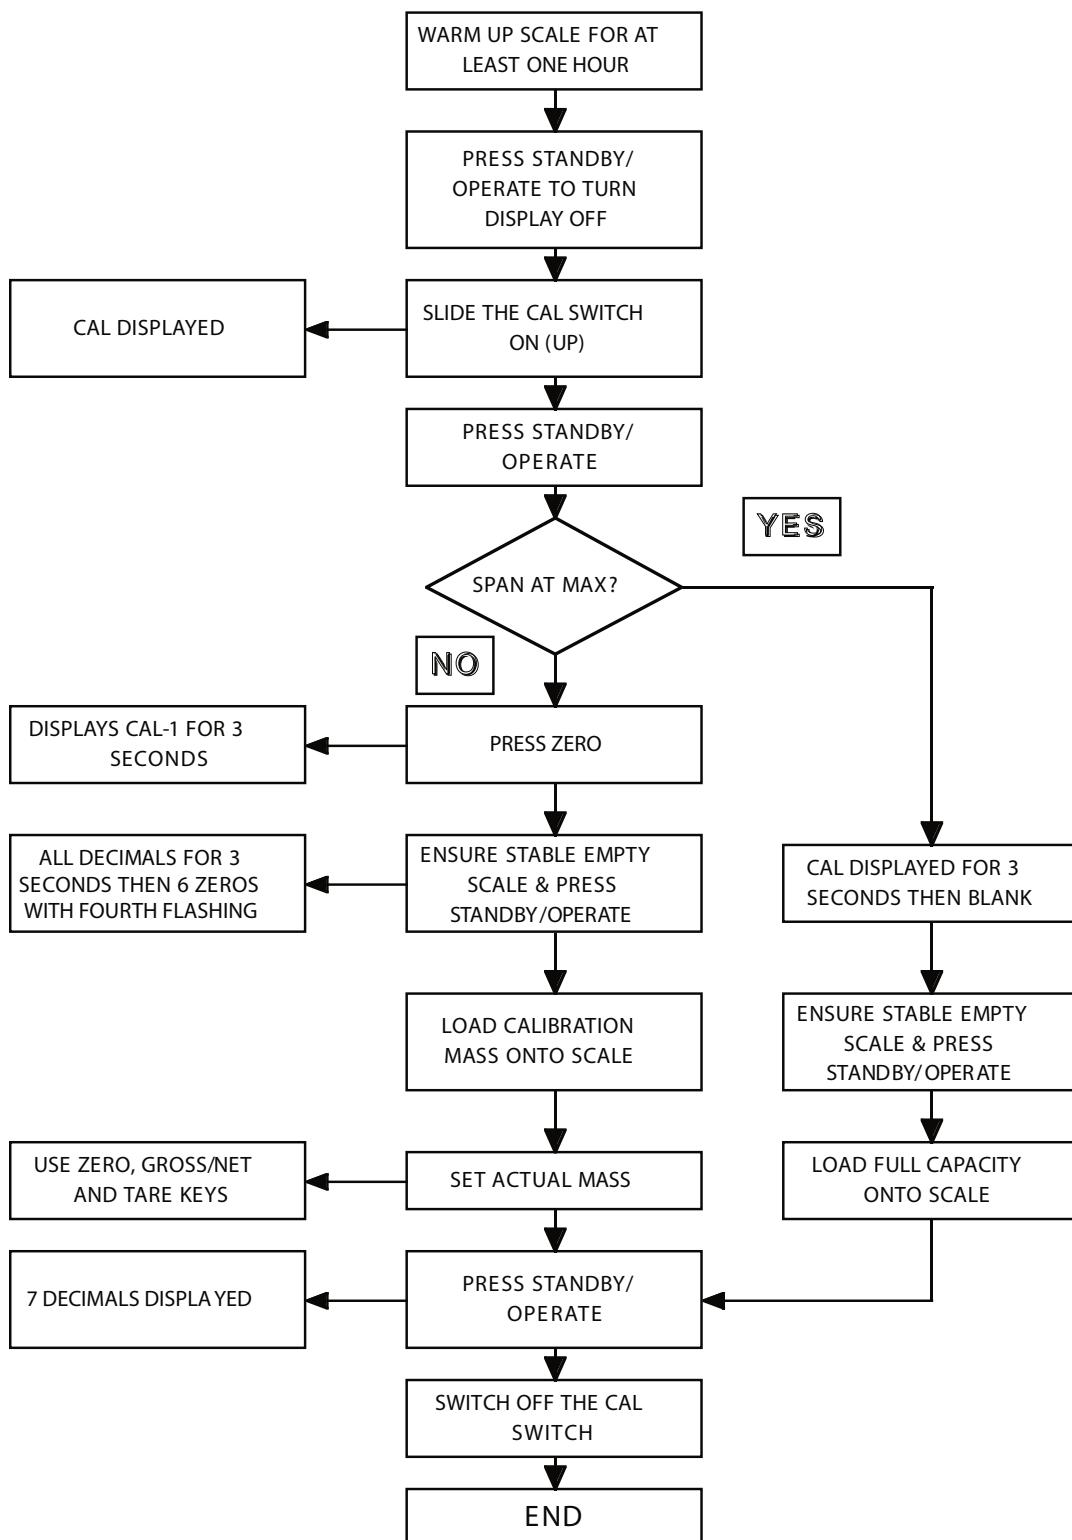


AD-4321

## Simple Calibration Flow Chart

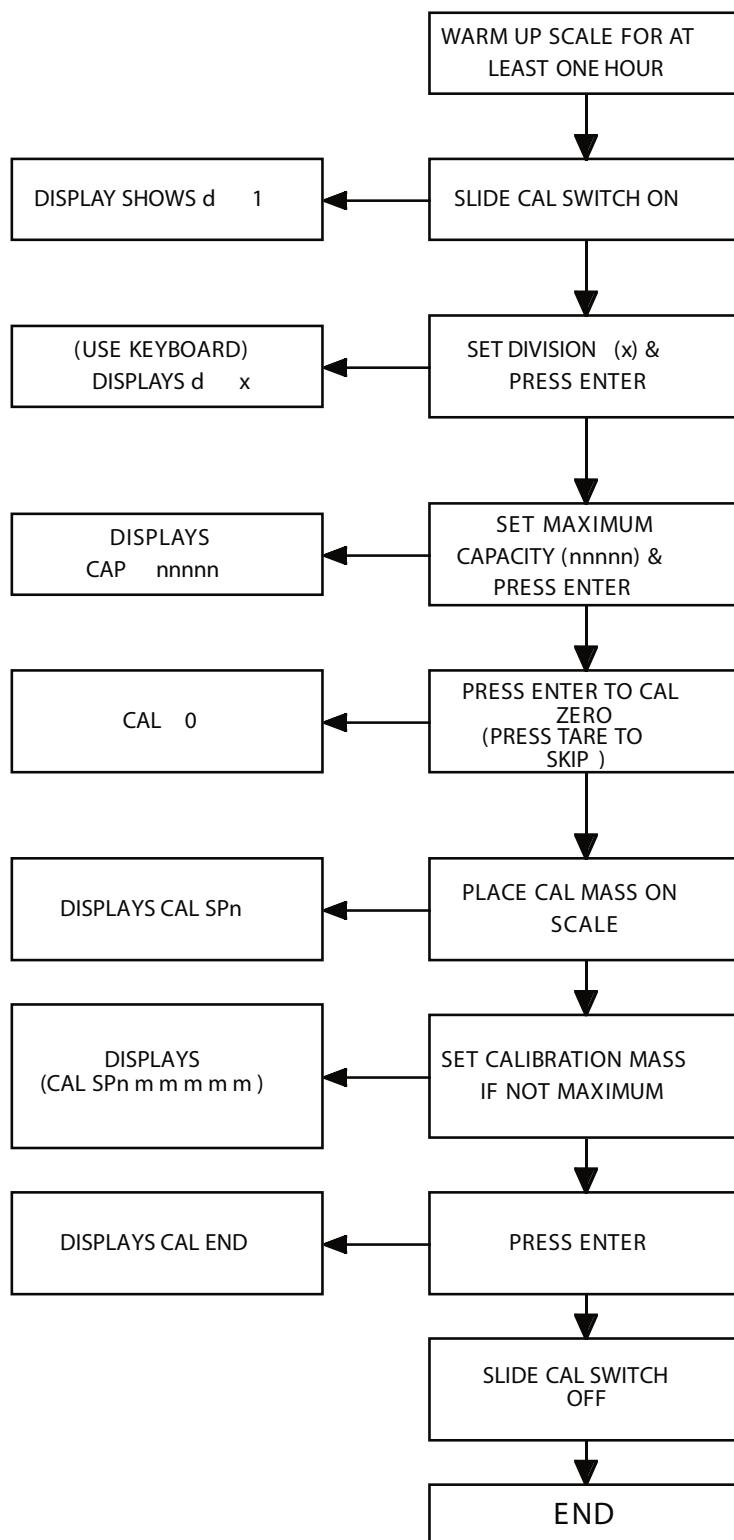


AD-4322

## Simple Calibration Flow Chart

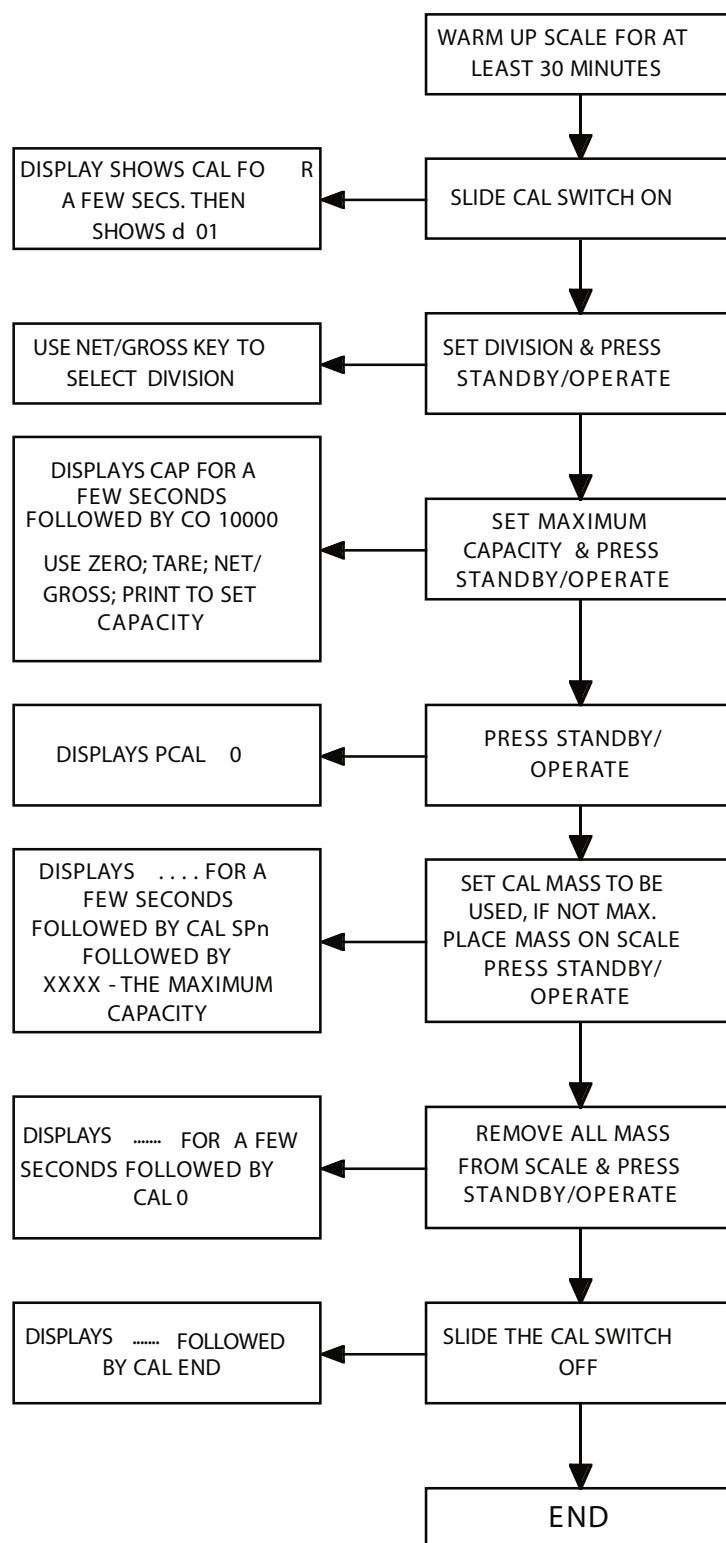


AD-4323

## Simple Calibration Flow Chart

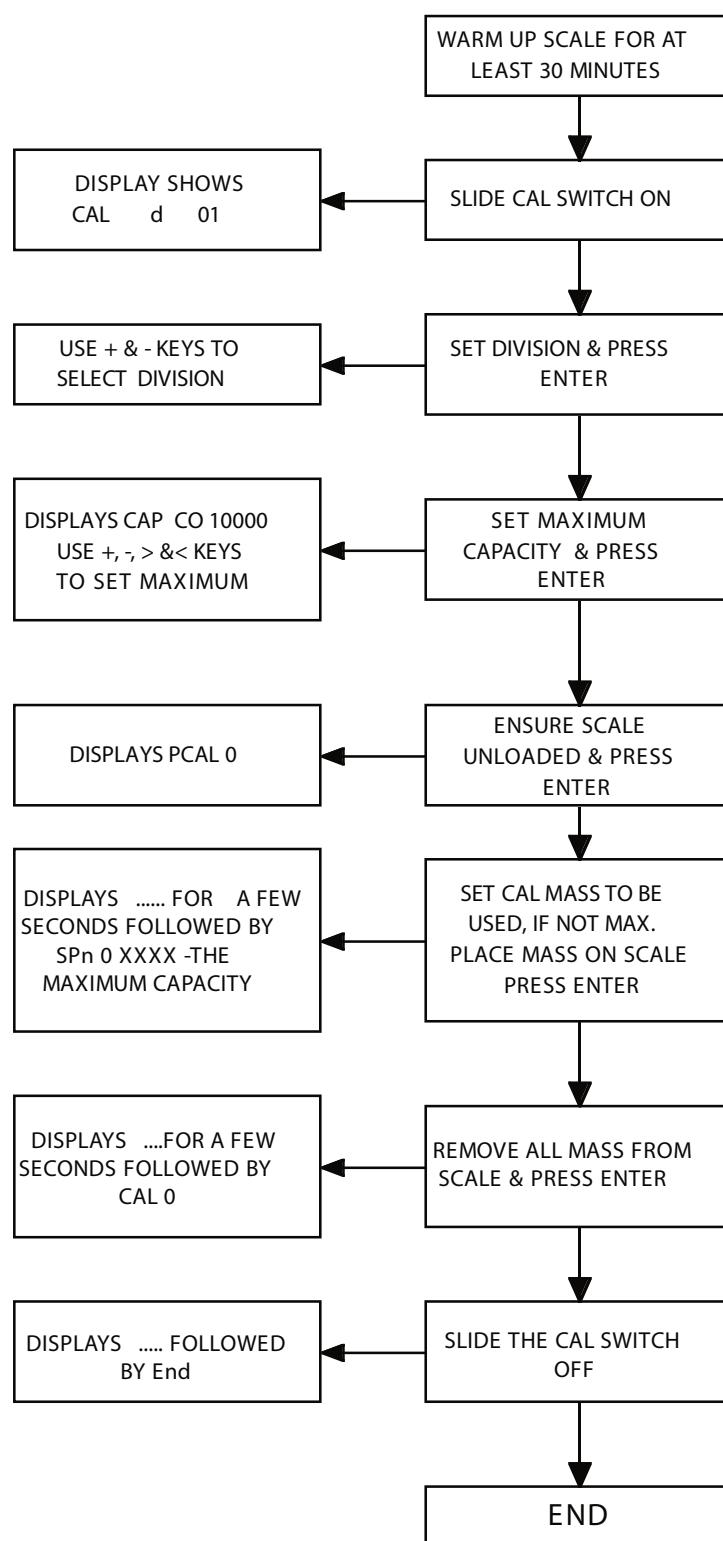


AD-4324

## Simple Calibration Flow Chart

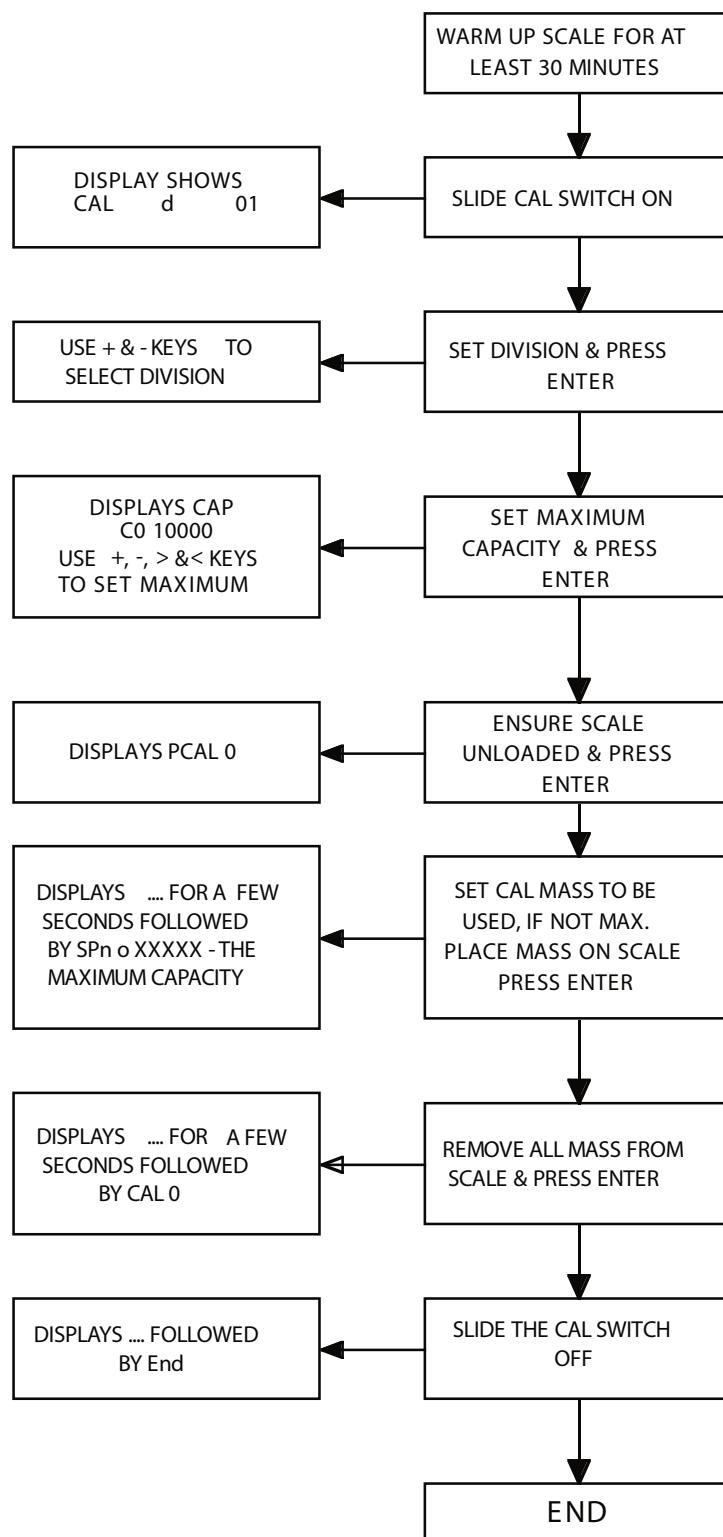


AD-4325

## Simple Calibration Flow Chart

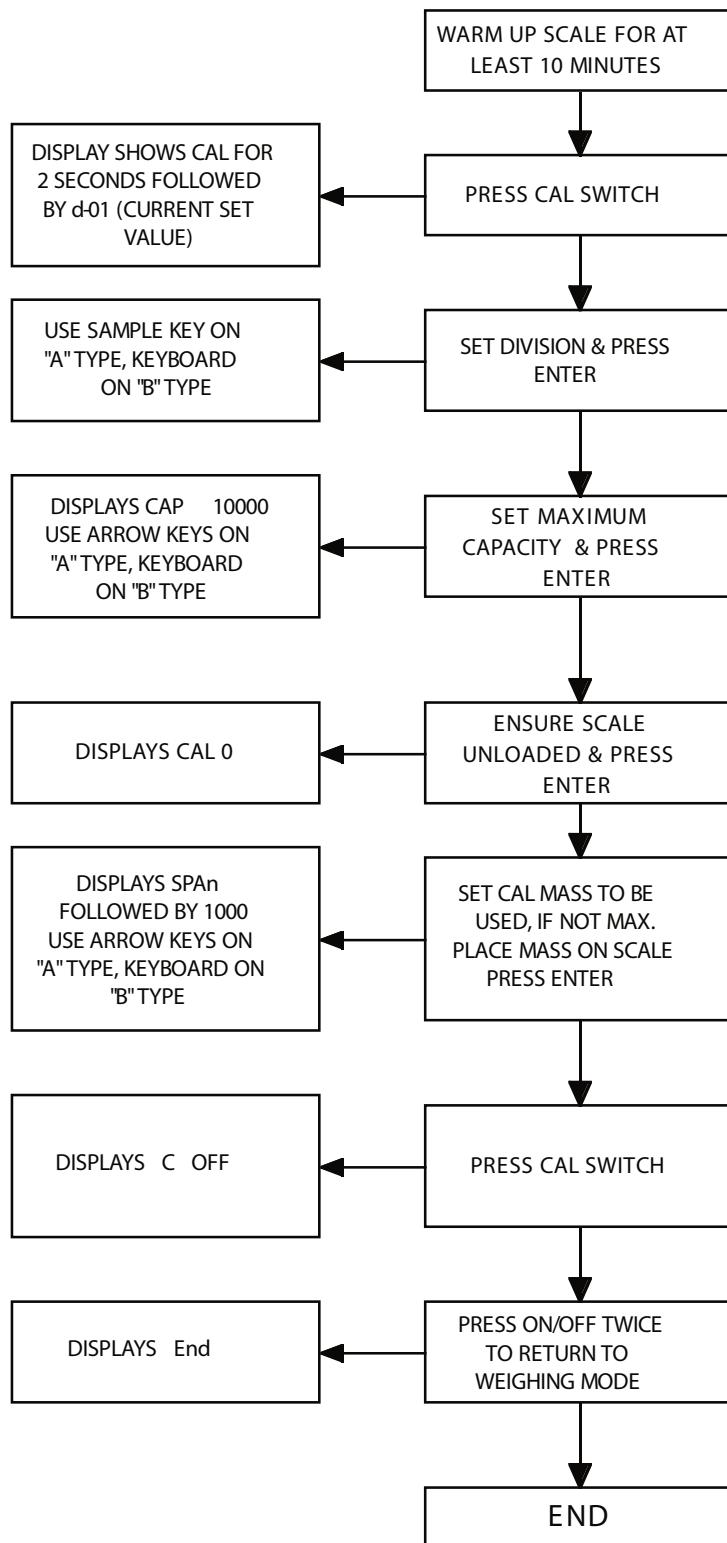


AD-4326/7

## Simple Calibration Flow Chart

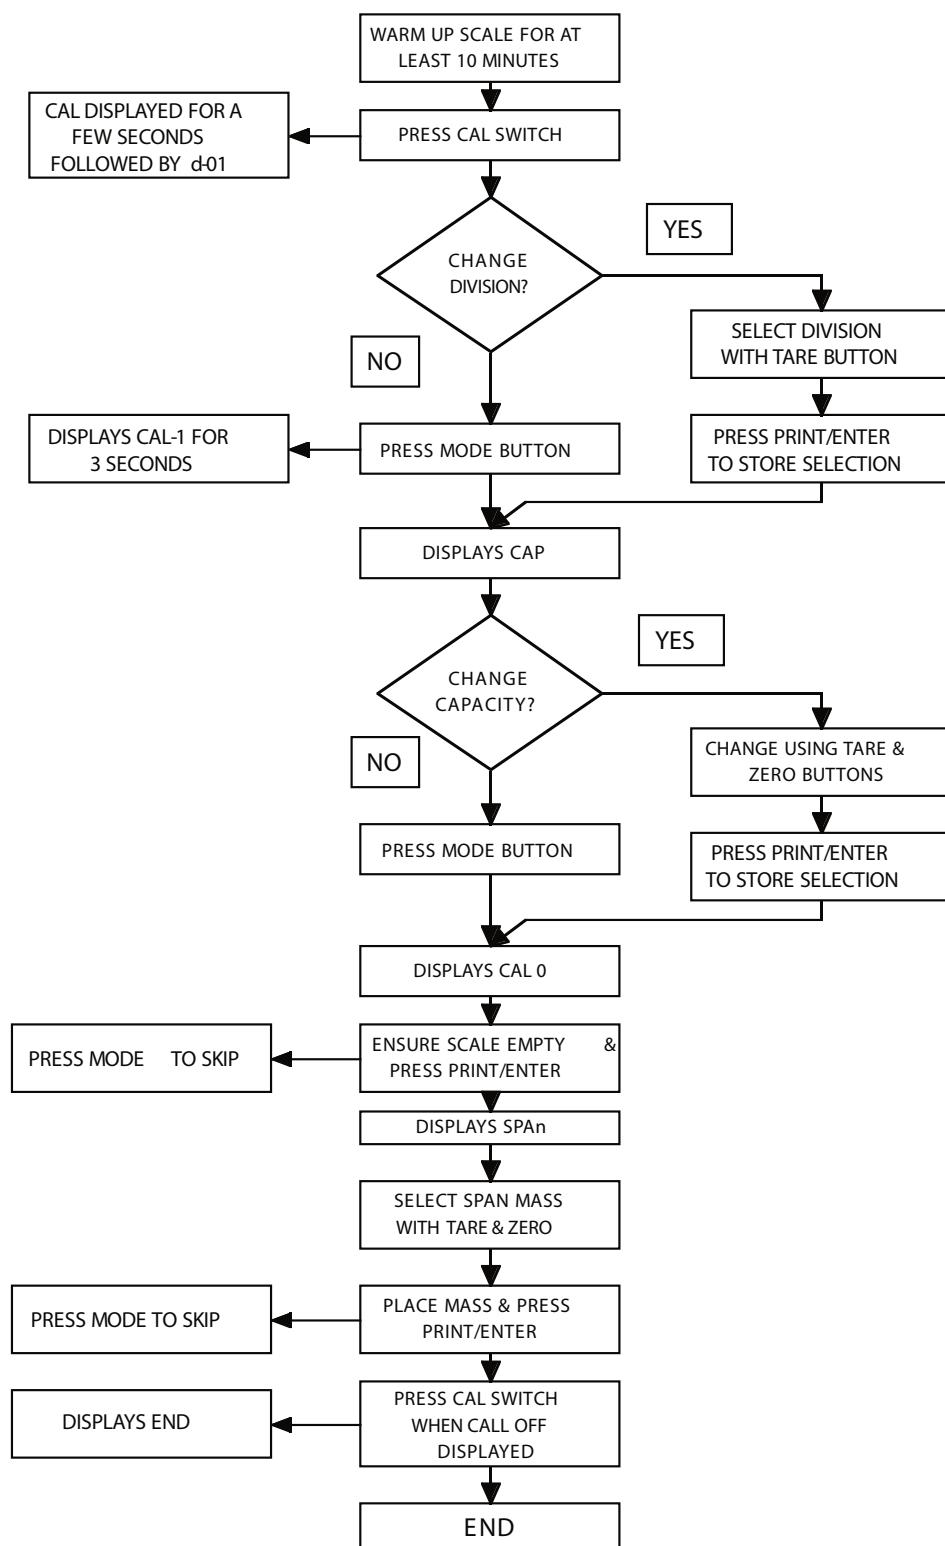


AD-4328

## Simple Calibration Flow Chart

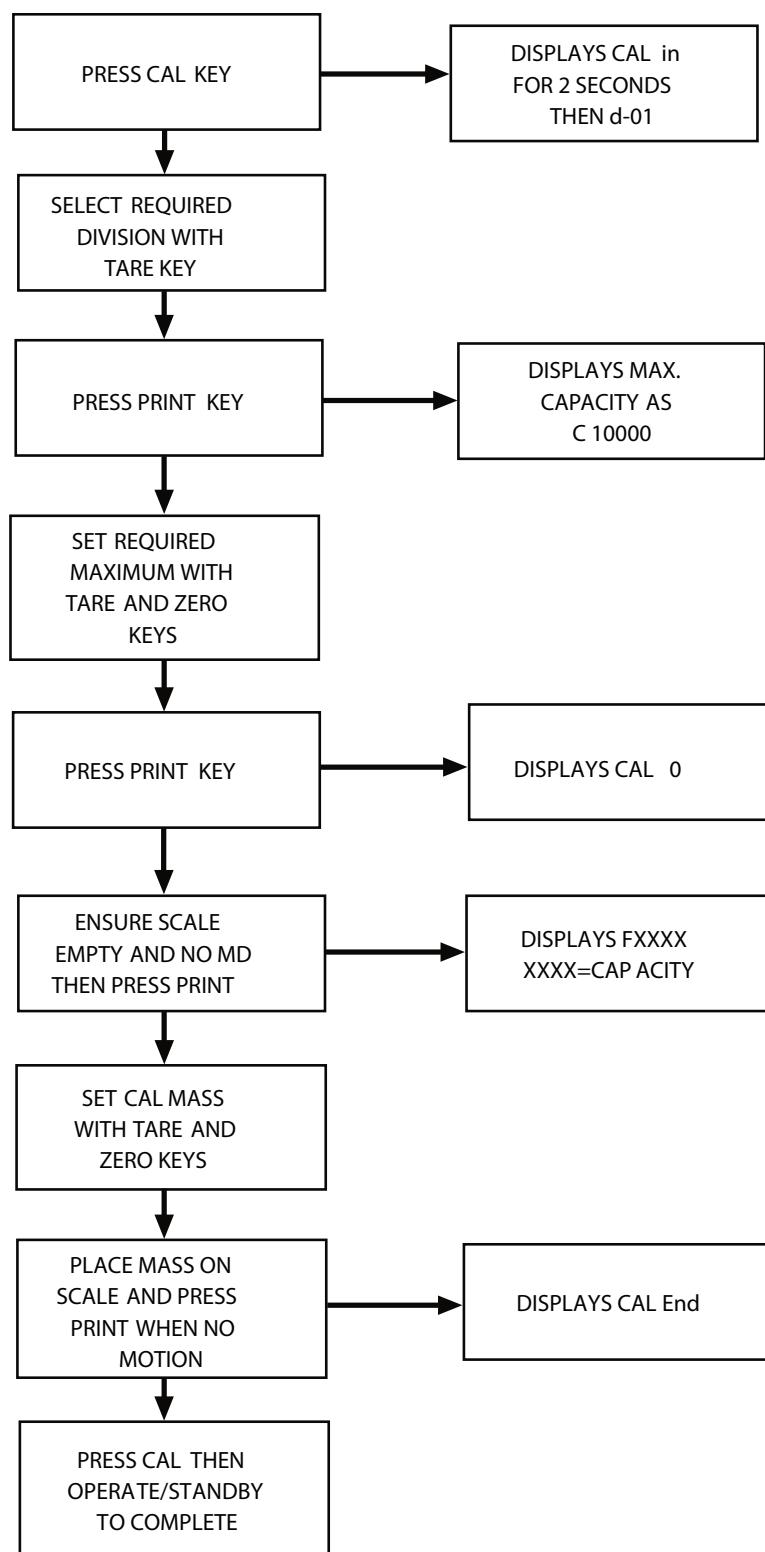


AD-4329

## Simple Calibration Flow Chart

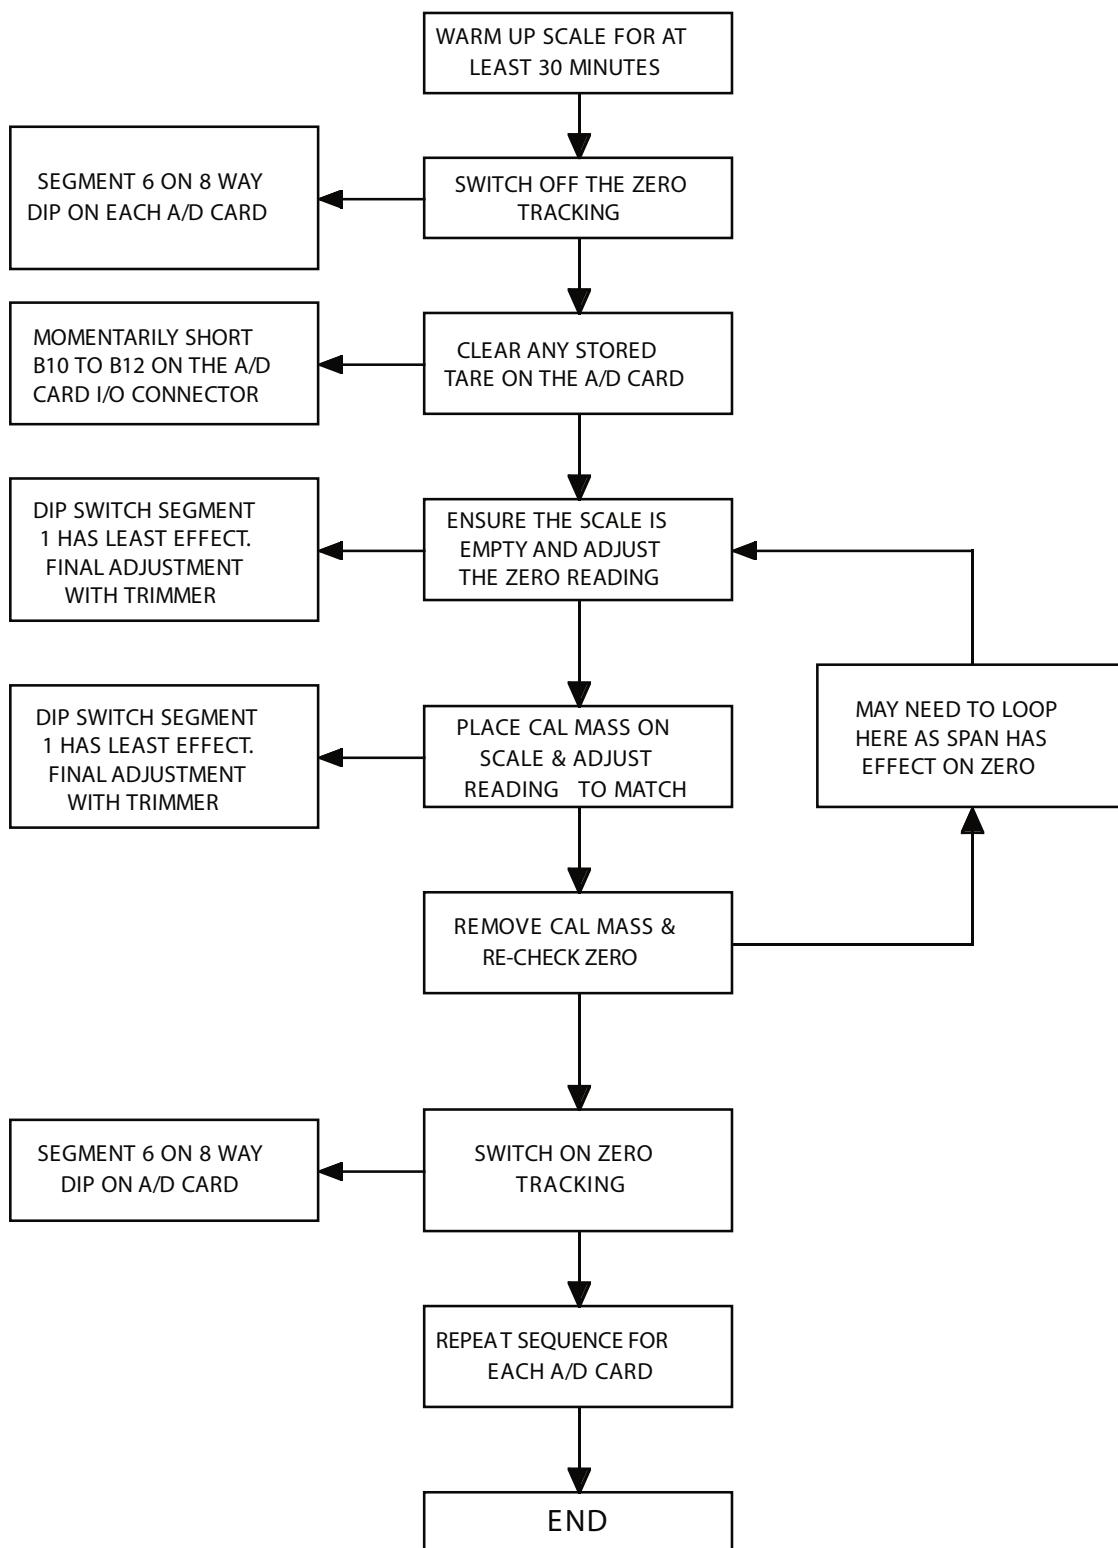


AD-4335/35C

## Simple Calibration Flow Chart

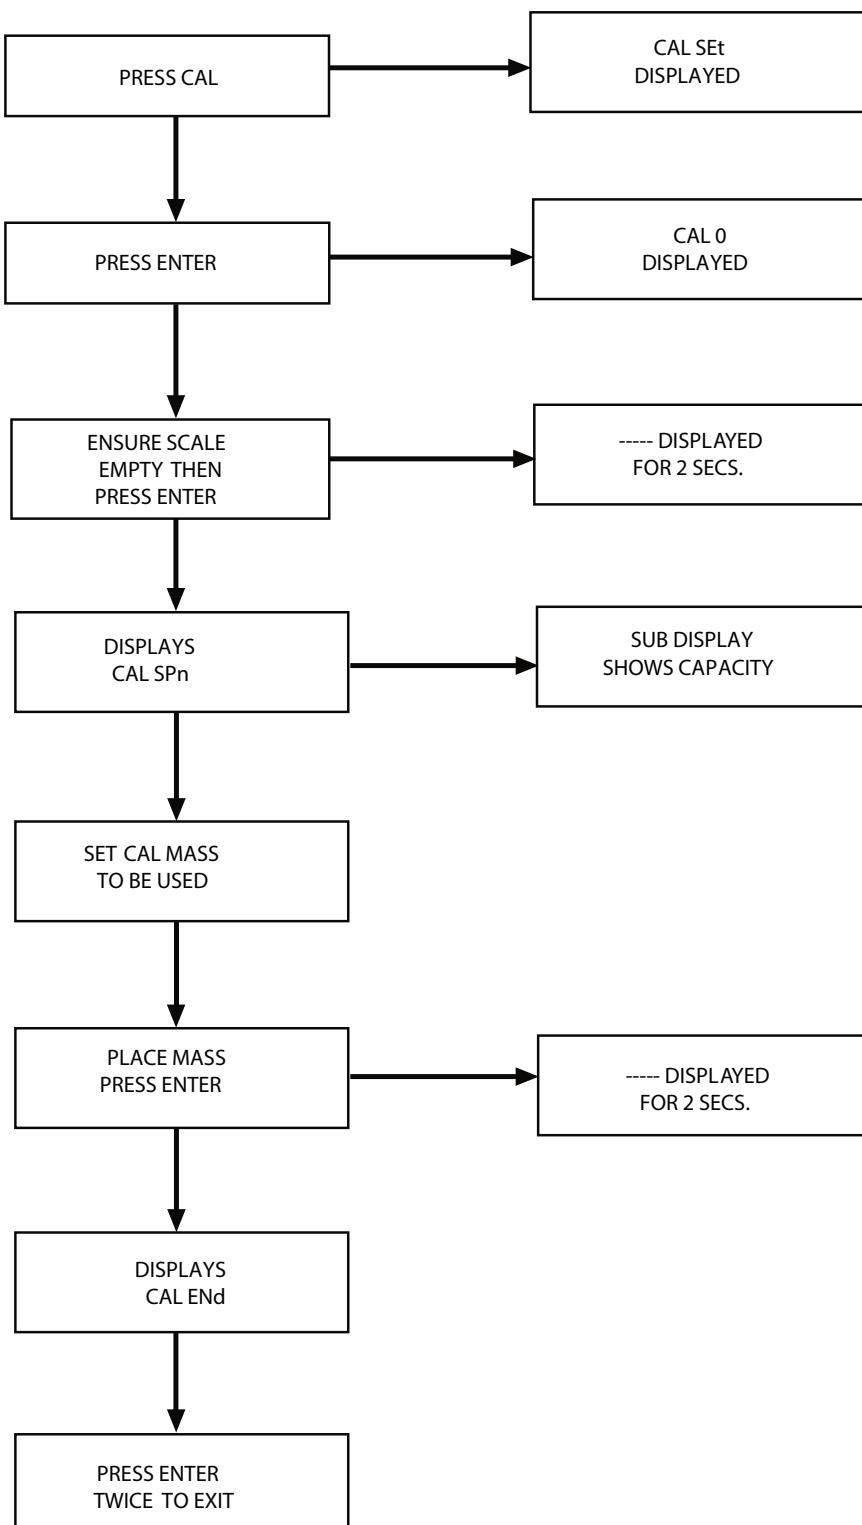


AD-4401

## Simple Calibration Flow Chart

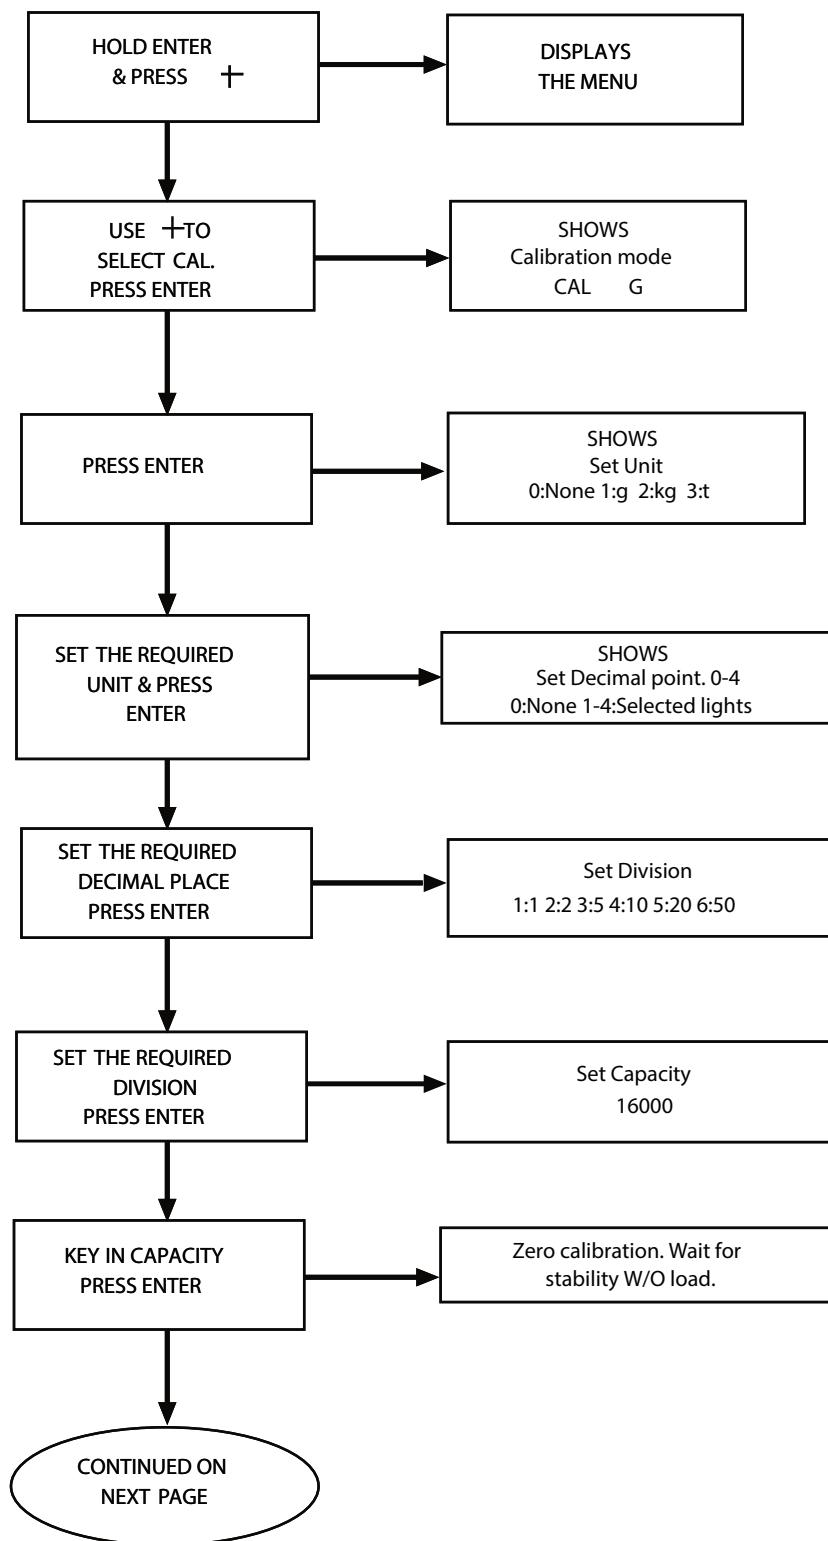


AD-4402

## Simple Calibration Flow Chart

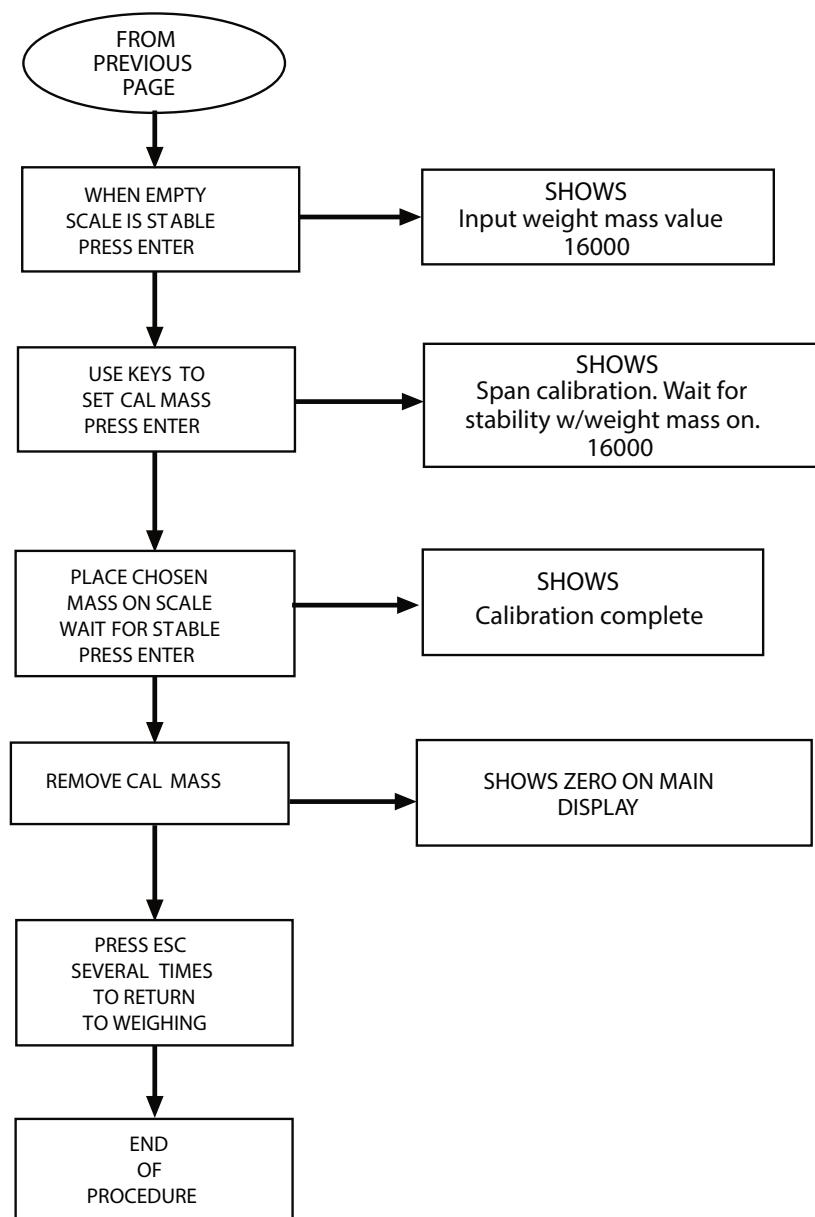


## Simple Calibration Flow Chart

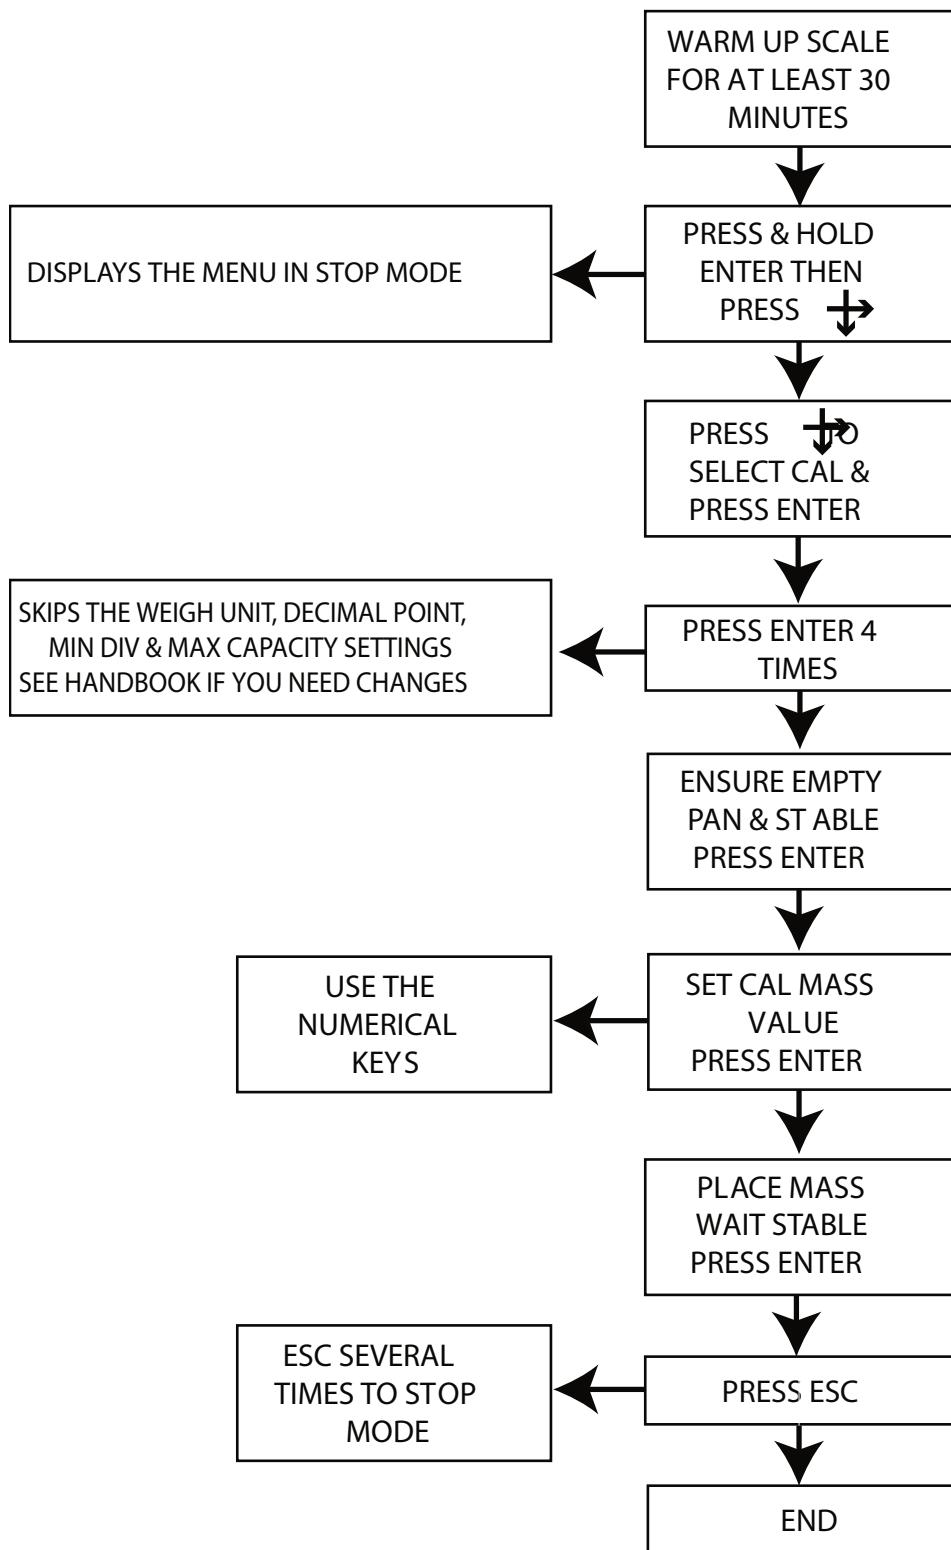


AD-4404

## Simple Calibration Flow Chart

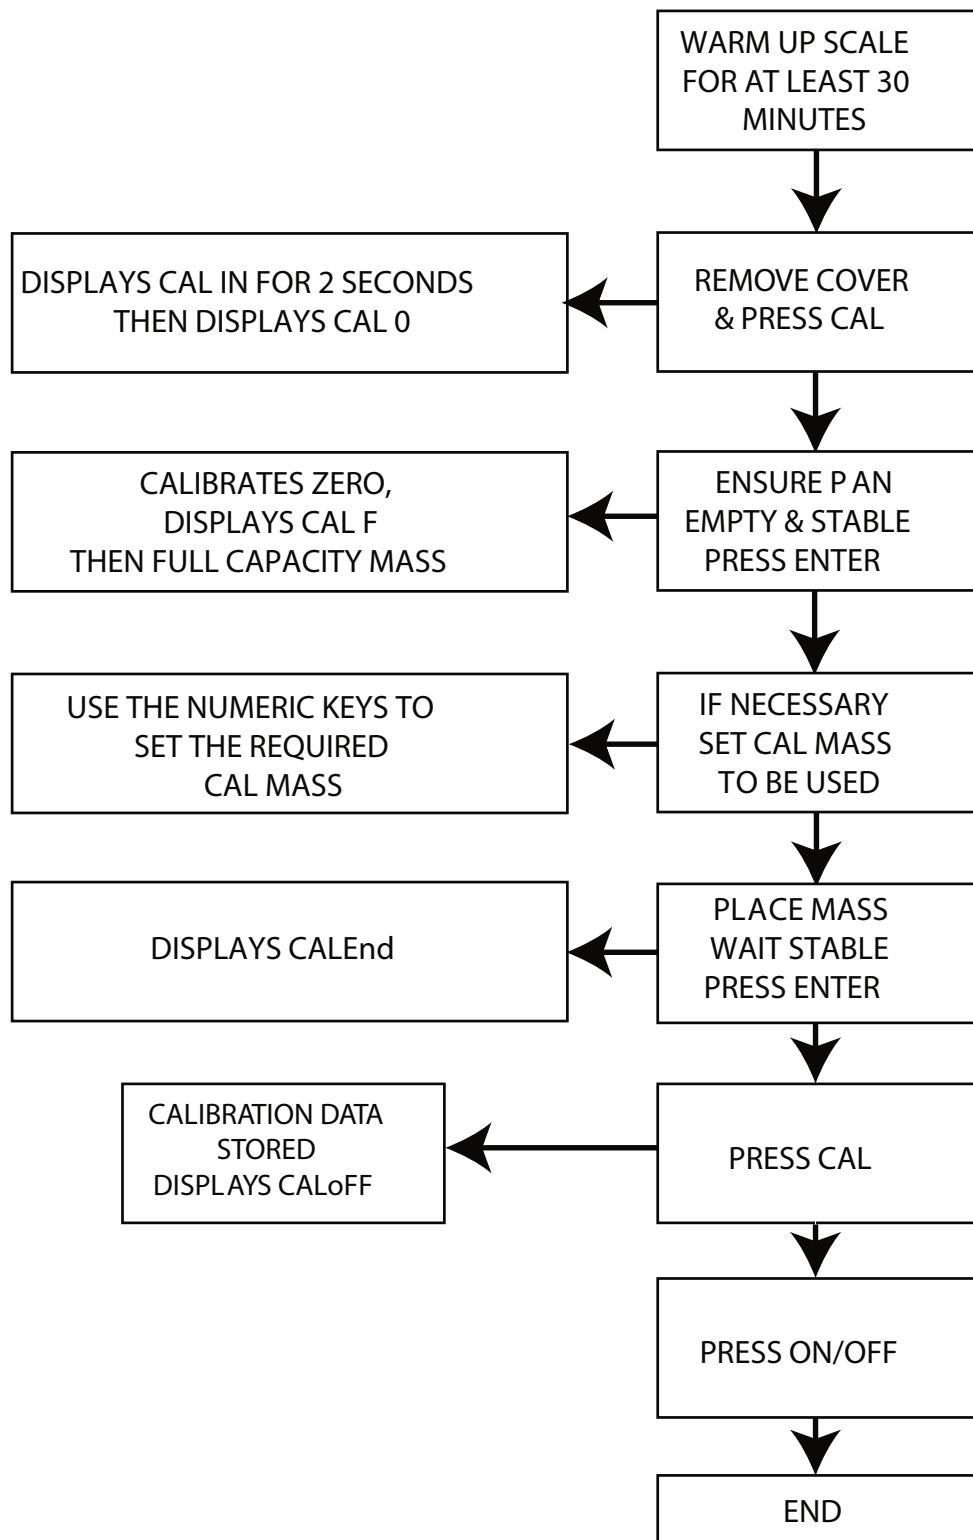


## Simple Calibration Flow Chart

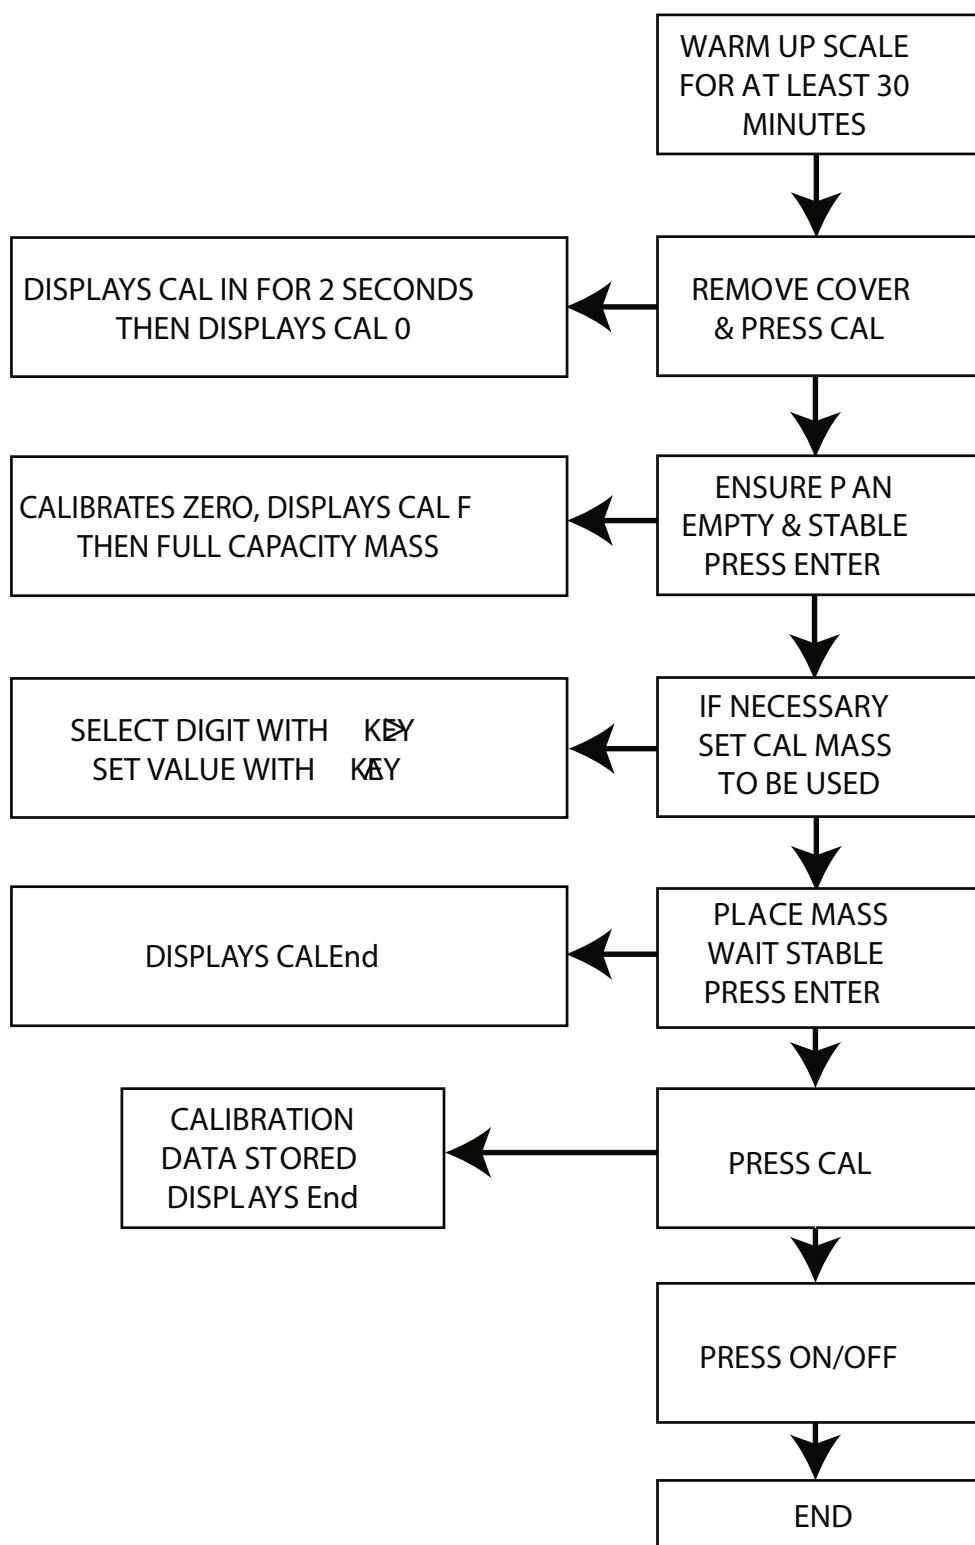


AD-4406

## Simple Calibration Flow Chart

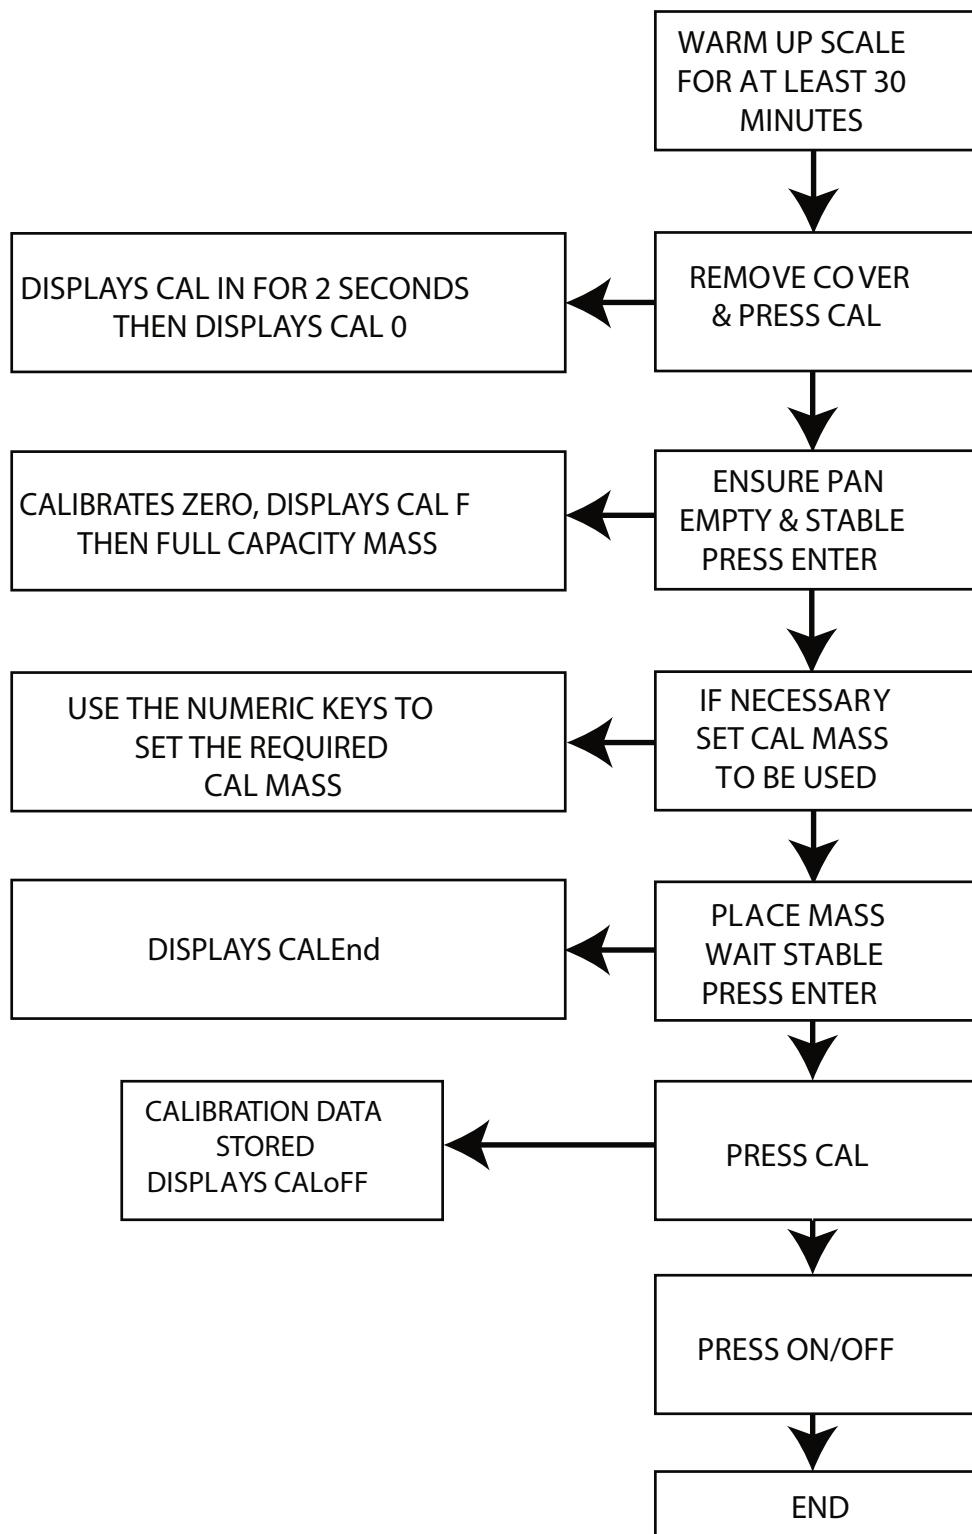


## Simple Calibration Flow Chart

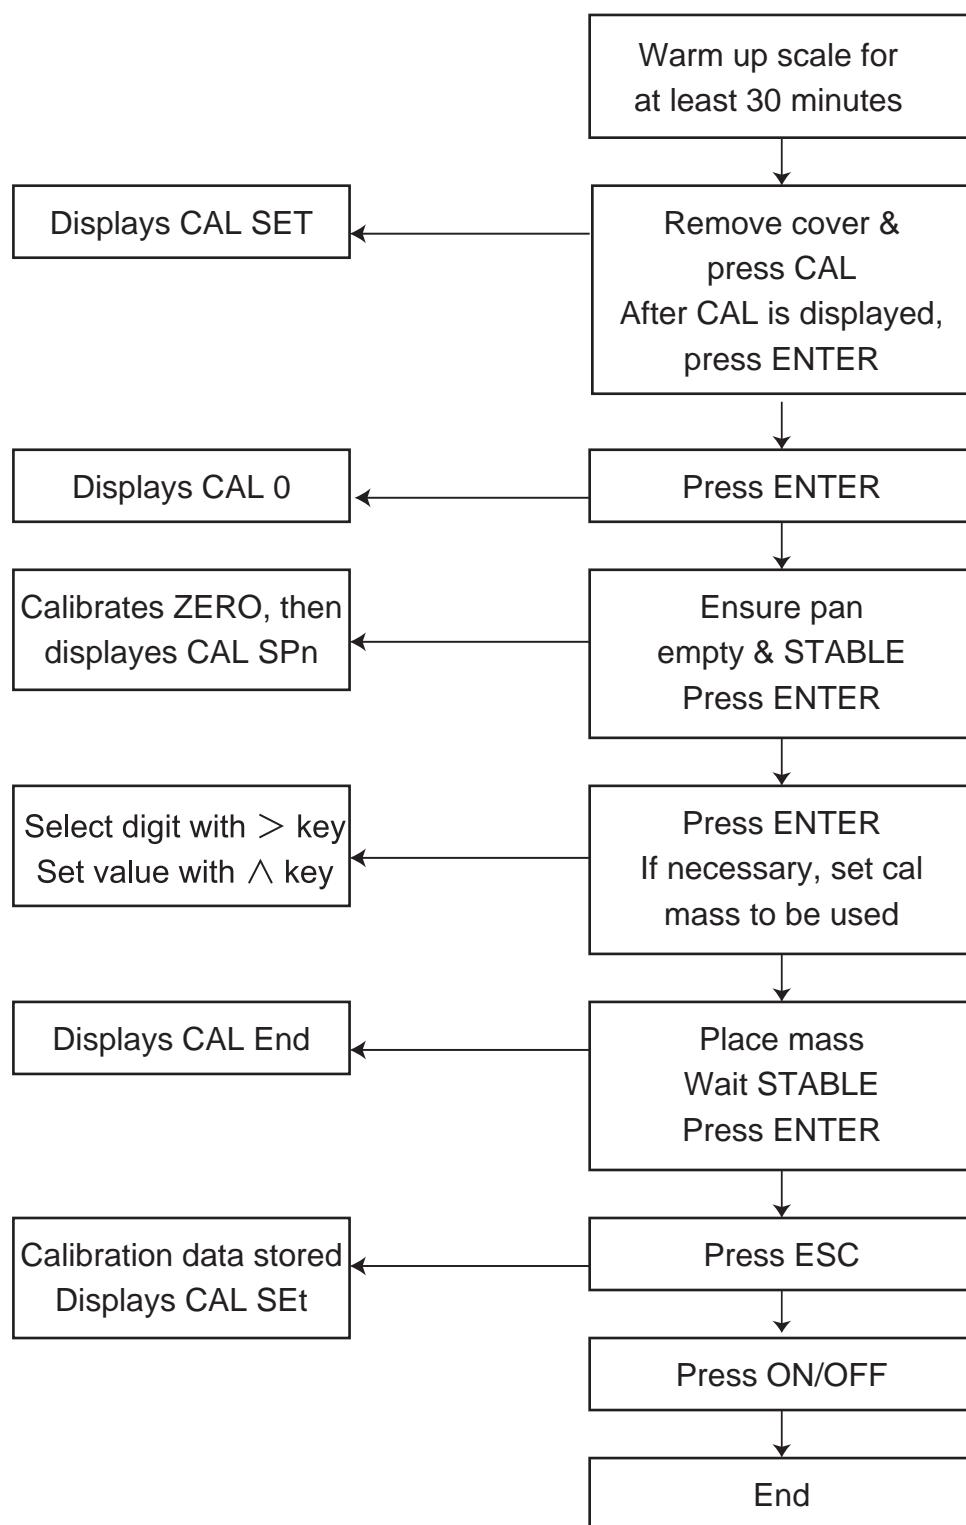


**AD-4408A/C**

## Simple Calibration Flow Chart

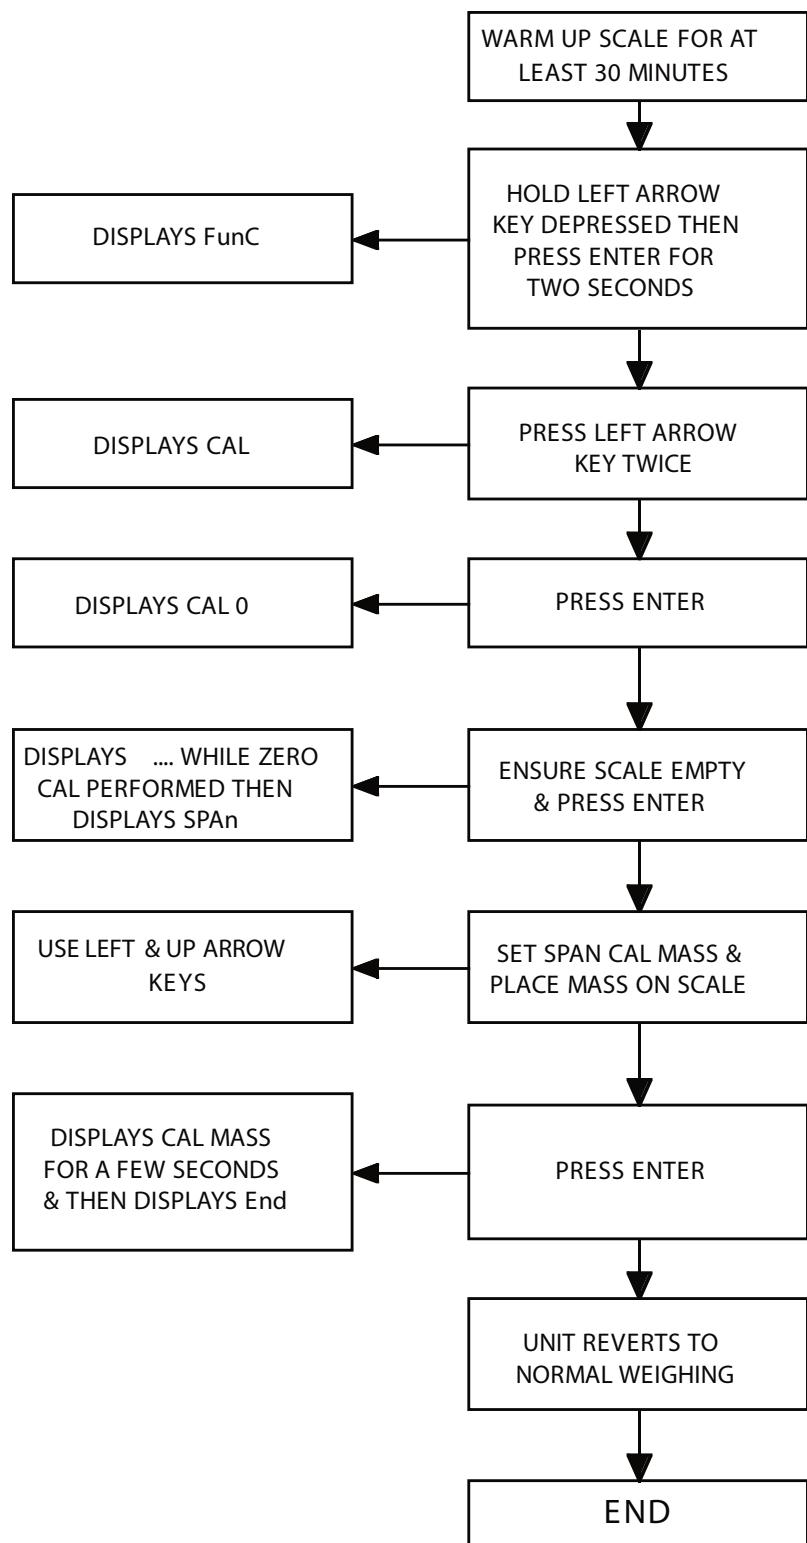


## Simple Calibration Flow Chart

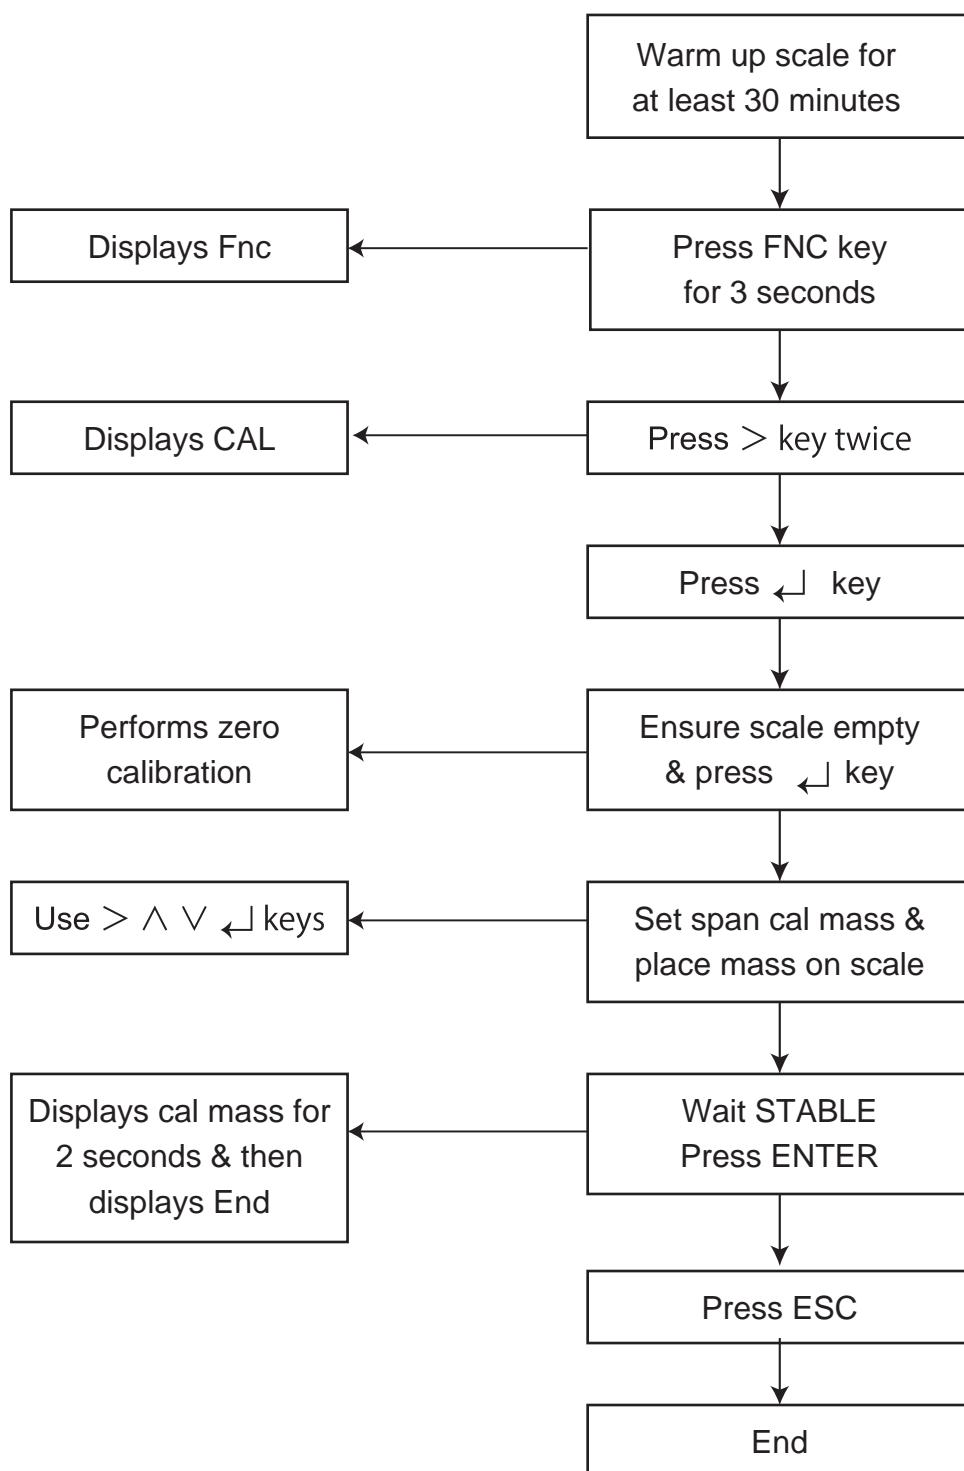


**AD-4532B**

## Simple Calibration Flow Chart

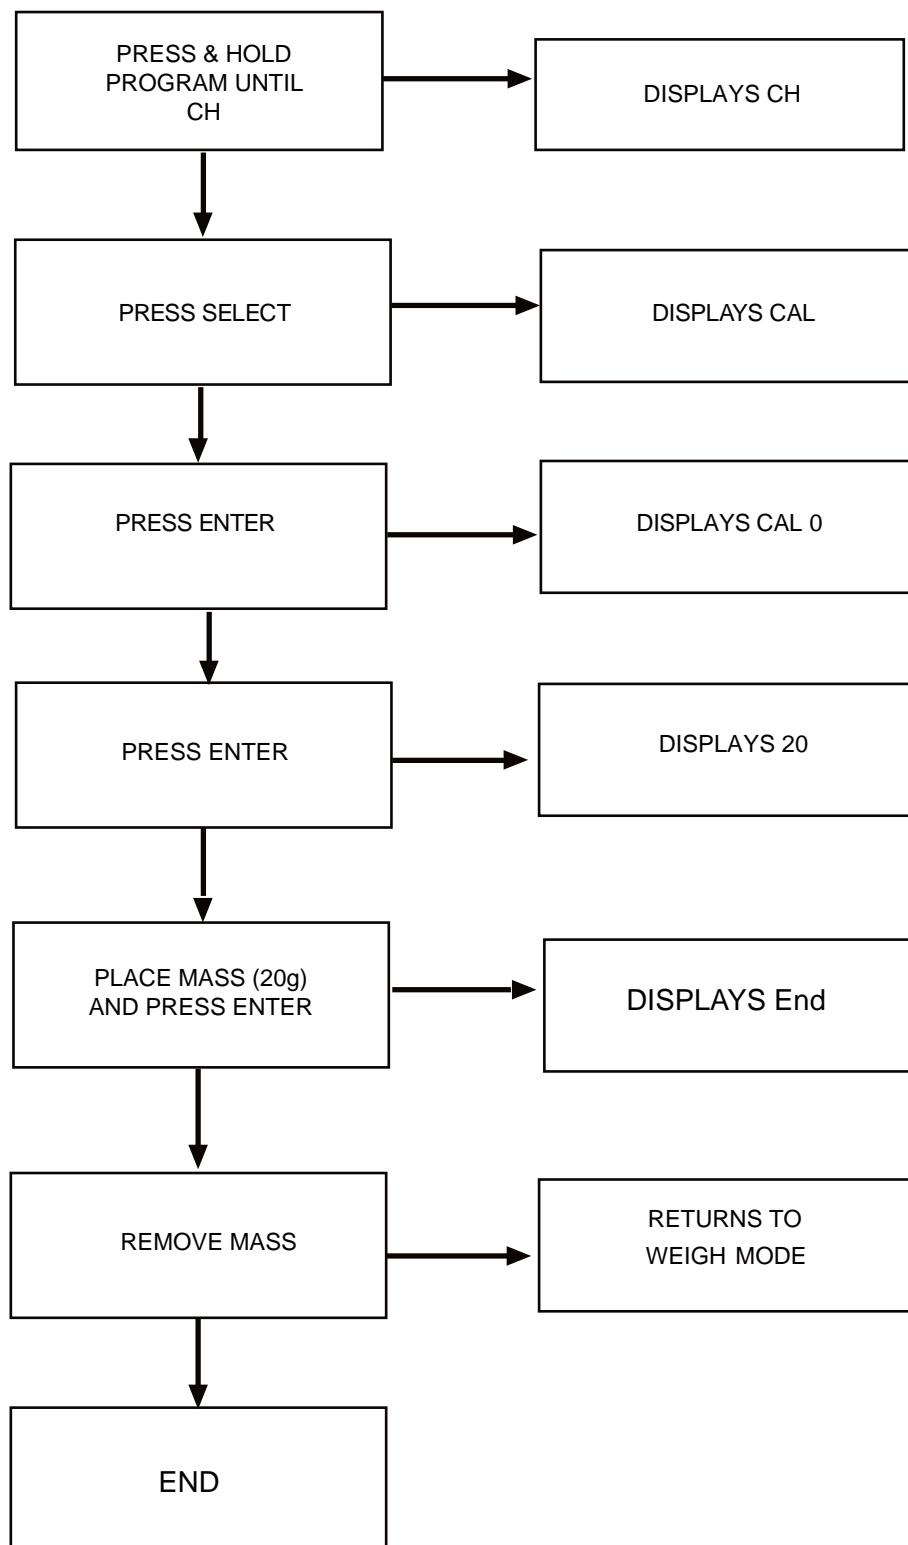


**M Series Moisture Analyzers**

## Simple Calibration Flow Chart

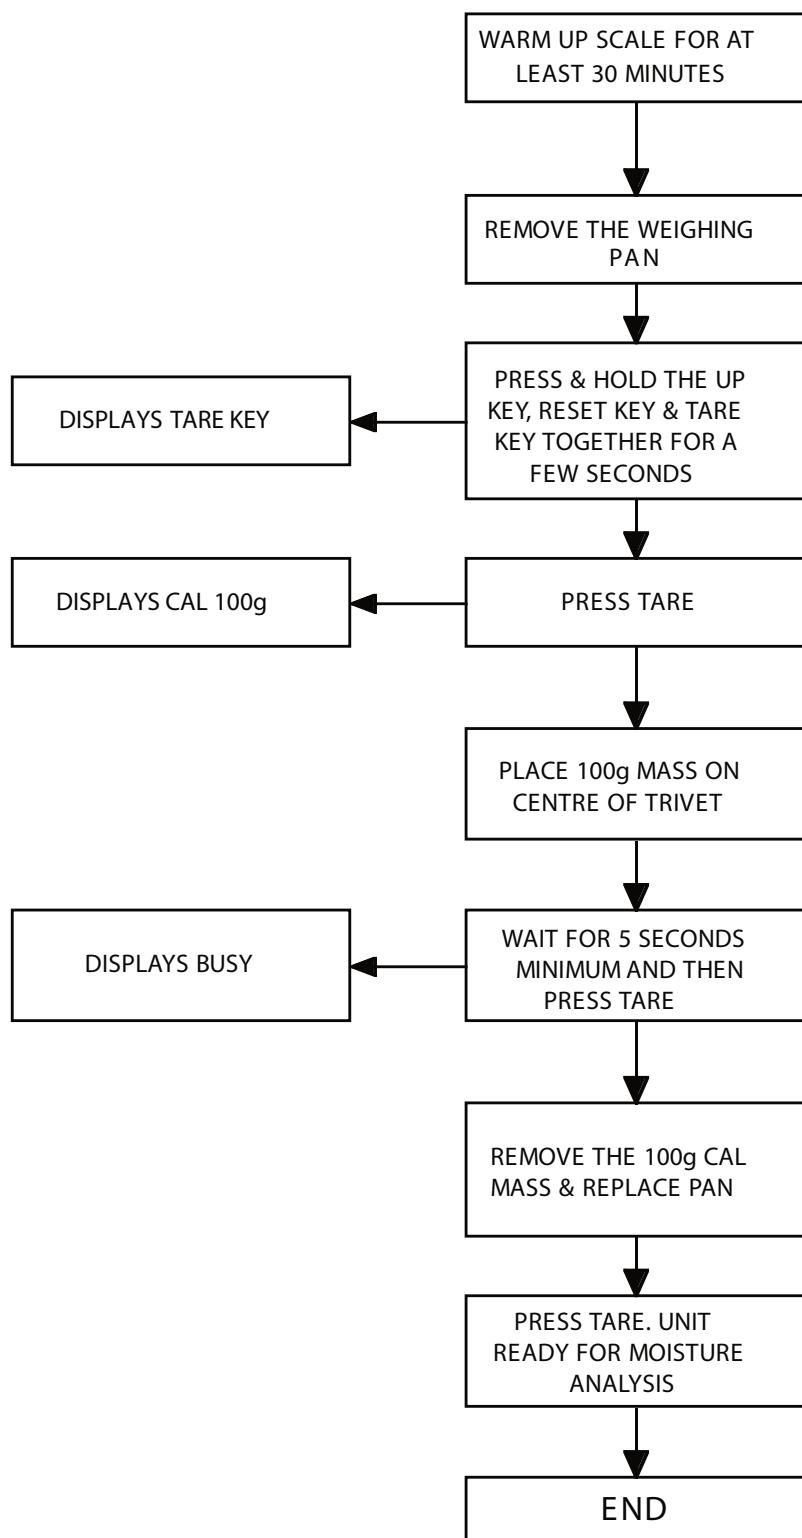


AD-4712

## Simple Calibration Flow Chart

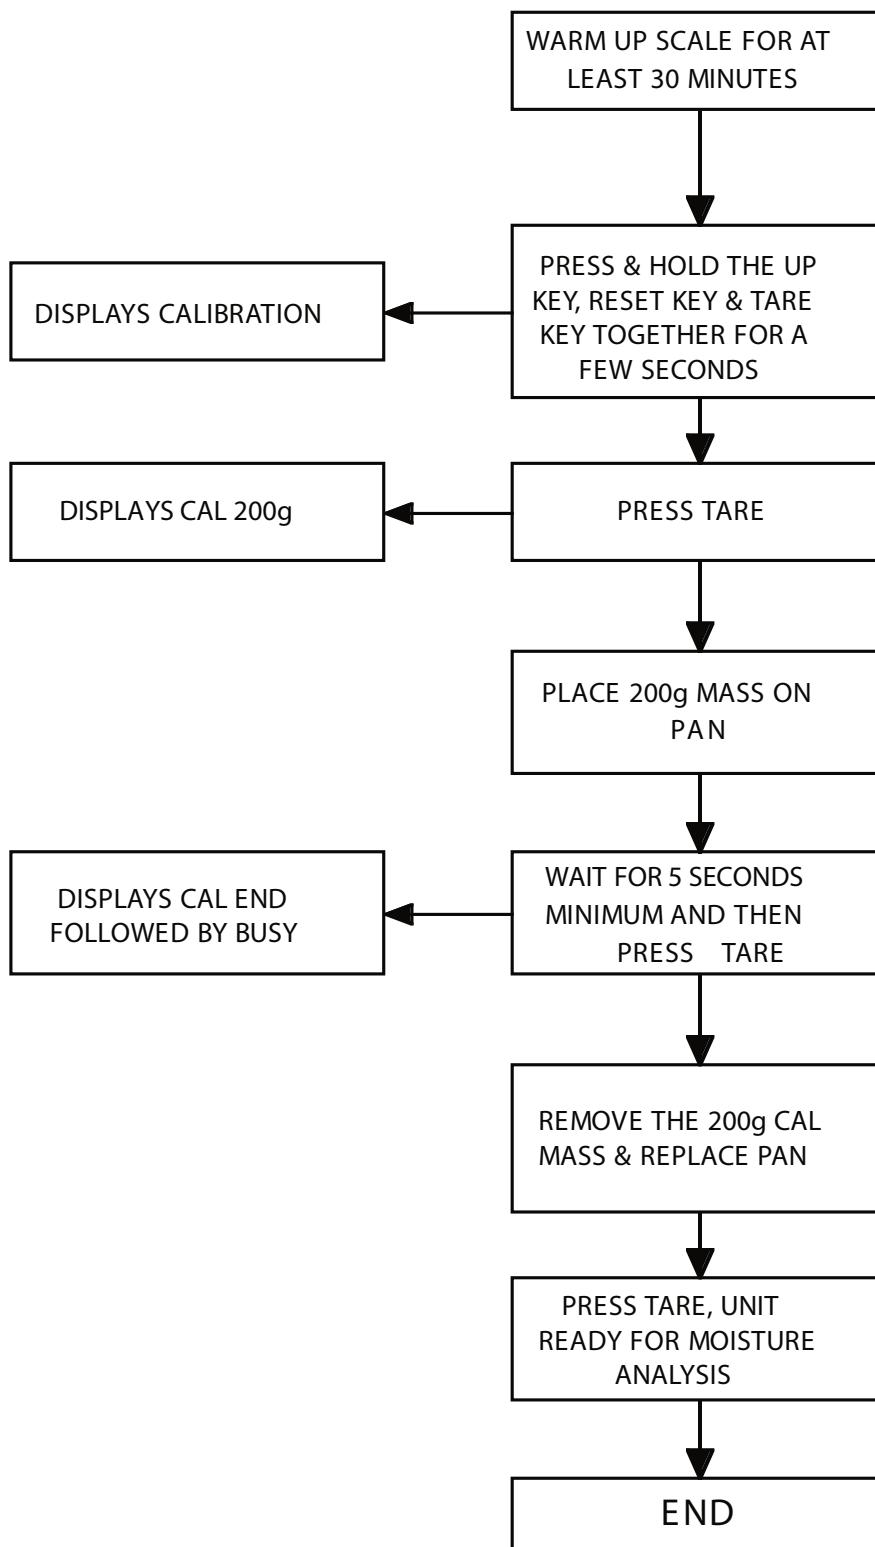


AD-4713

## Simple Calibration Flow Chart

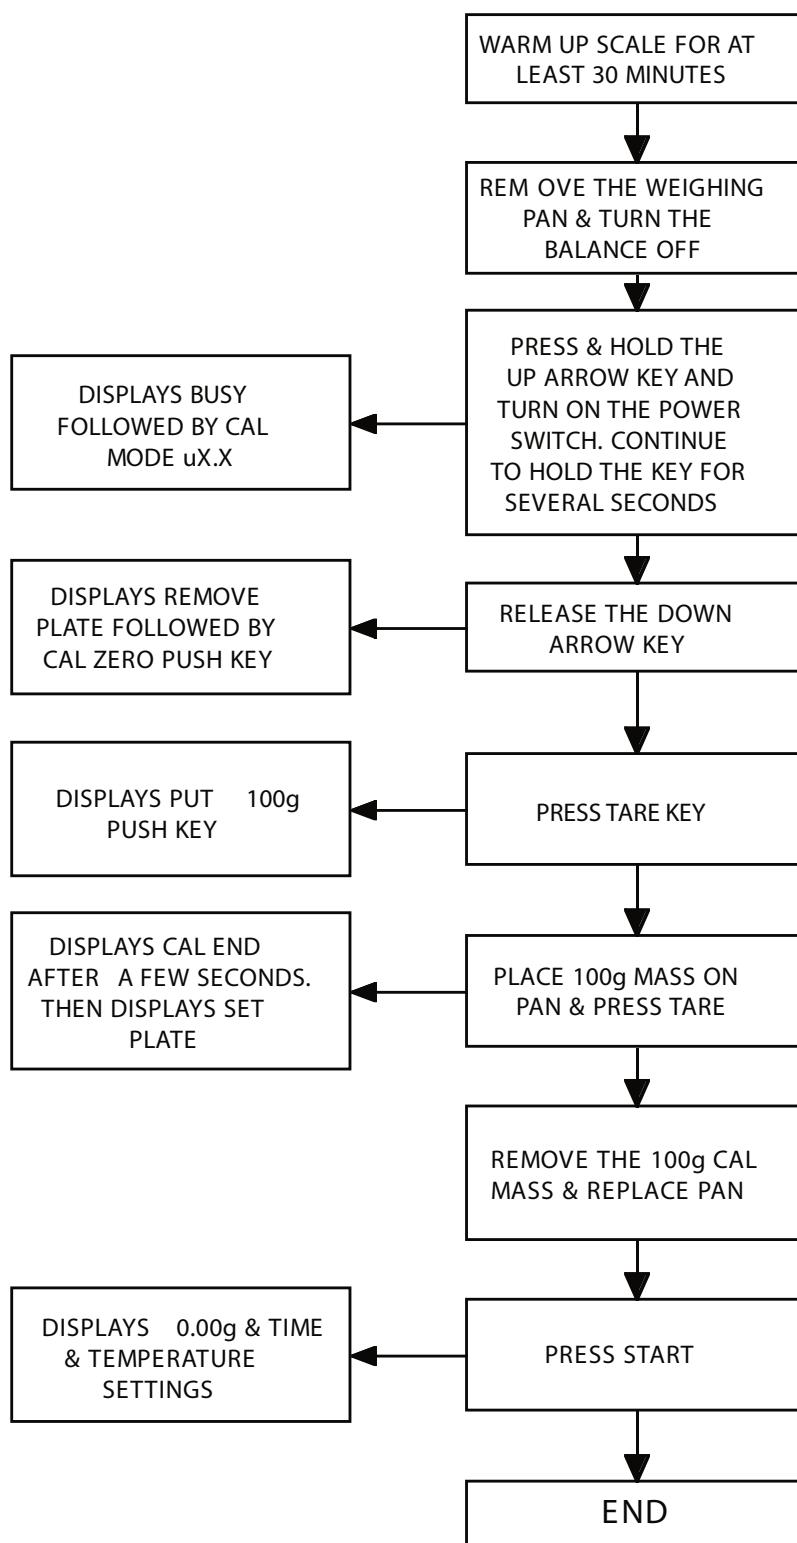


AD-4714

## Simple Calibration Flow Chart

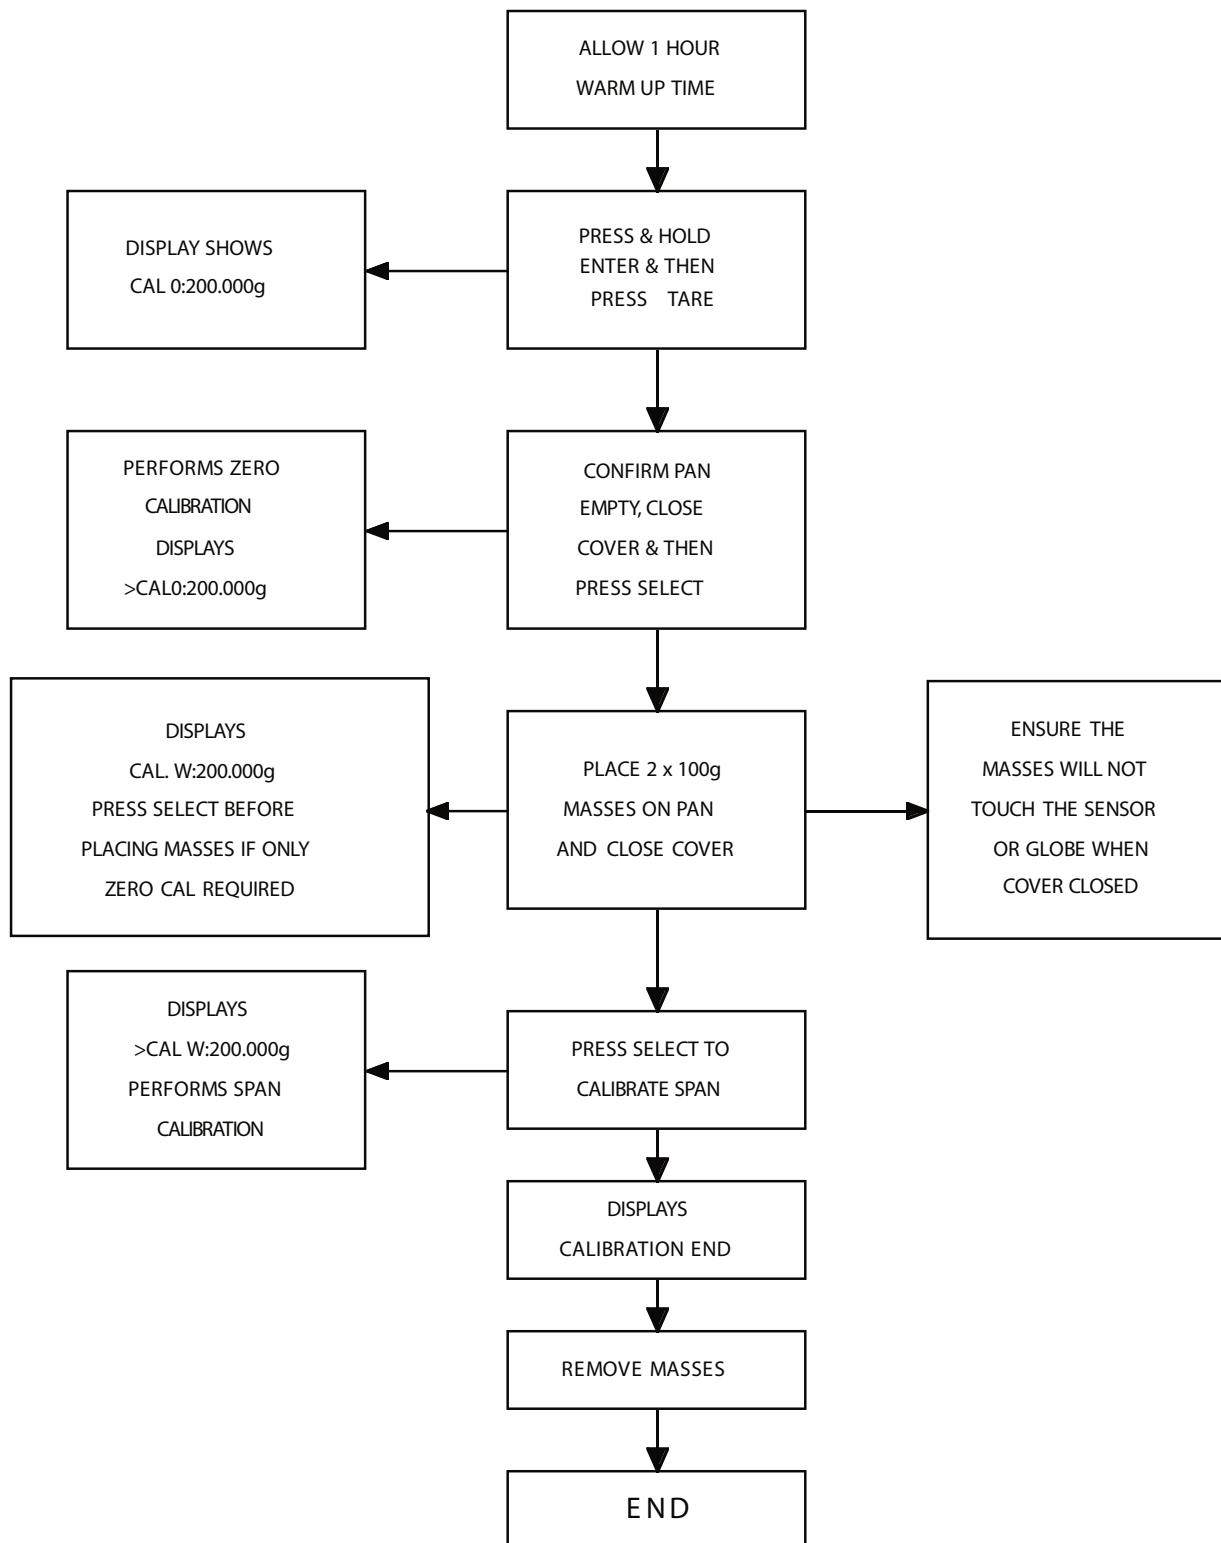

AD-4715


## Simple Calibration Flow Chart

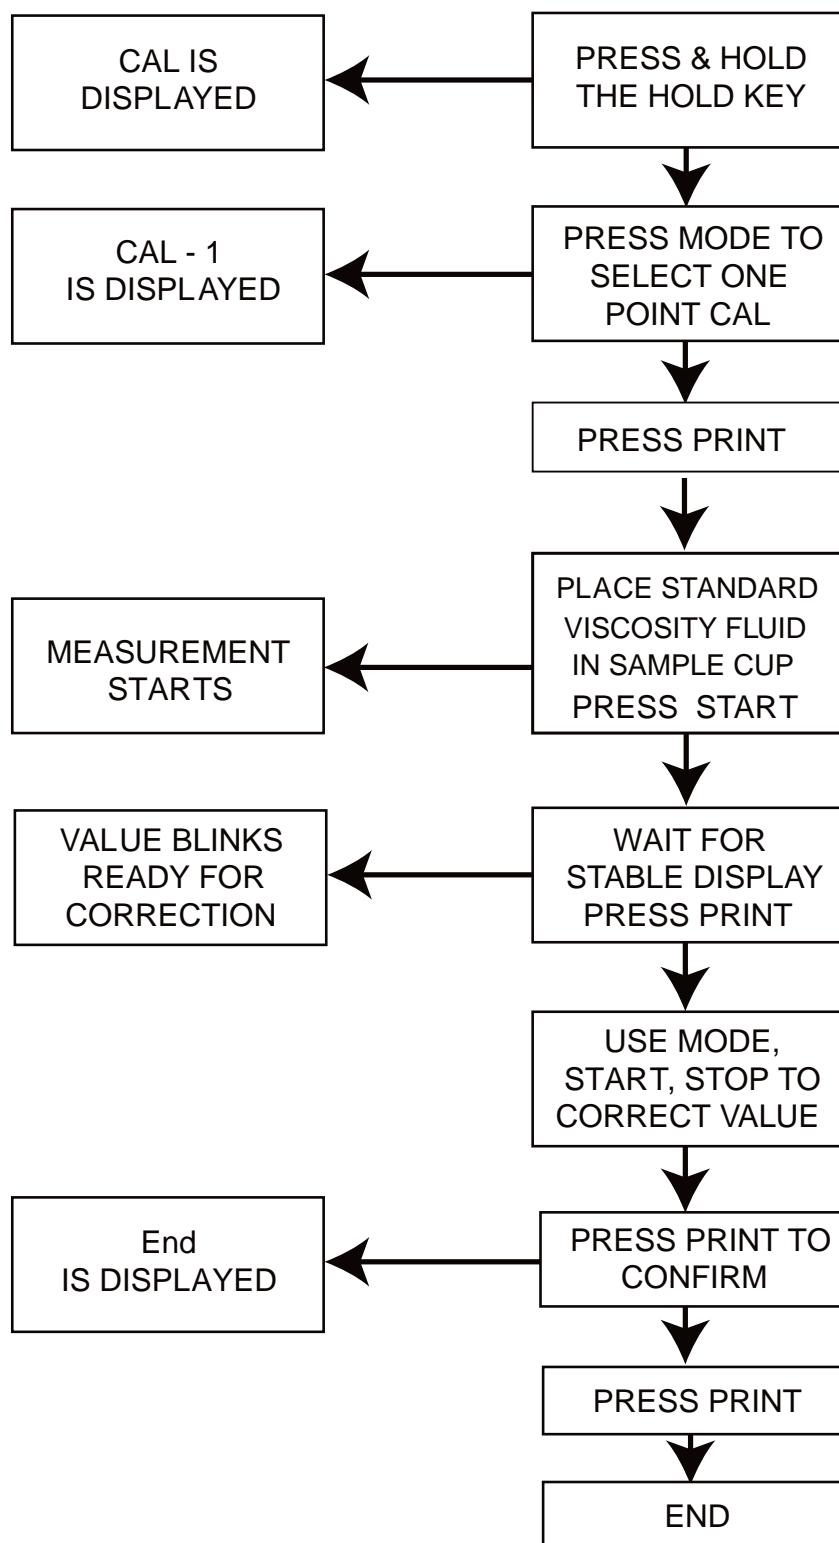

**SV/SV-A Series**


## Simple Calibration Flow Chart

Simplified Calibration  
(For the SV-10/1A/10A Only)

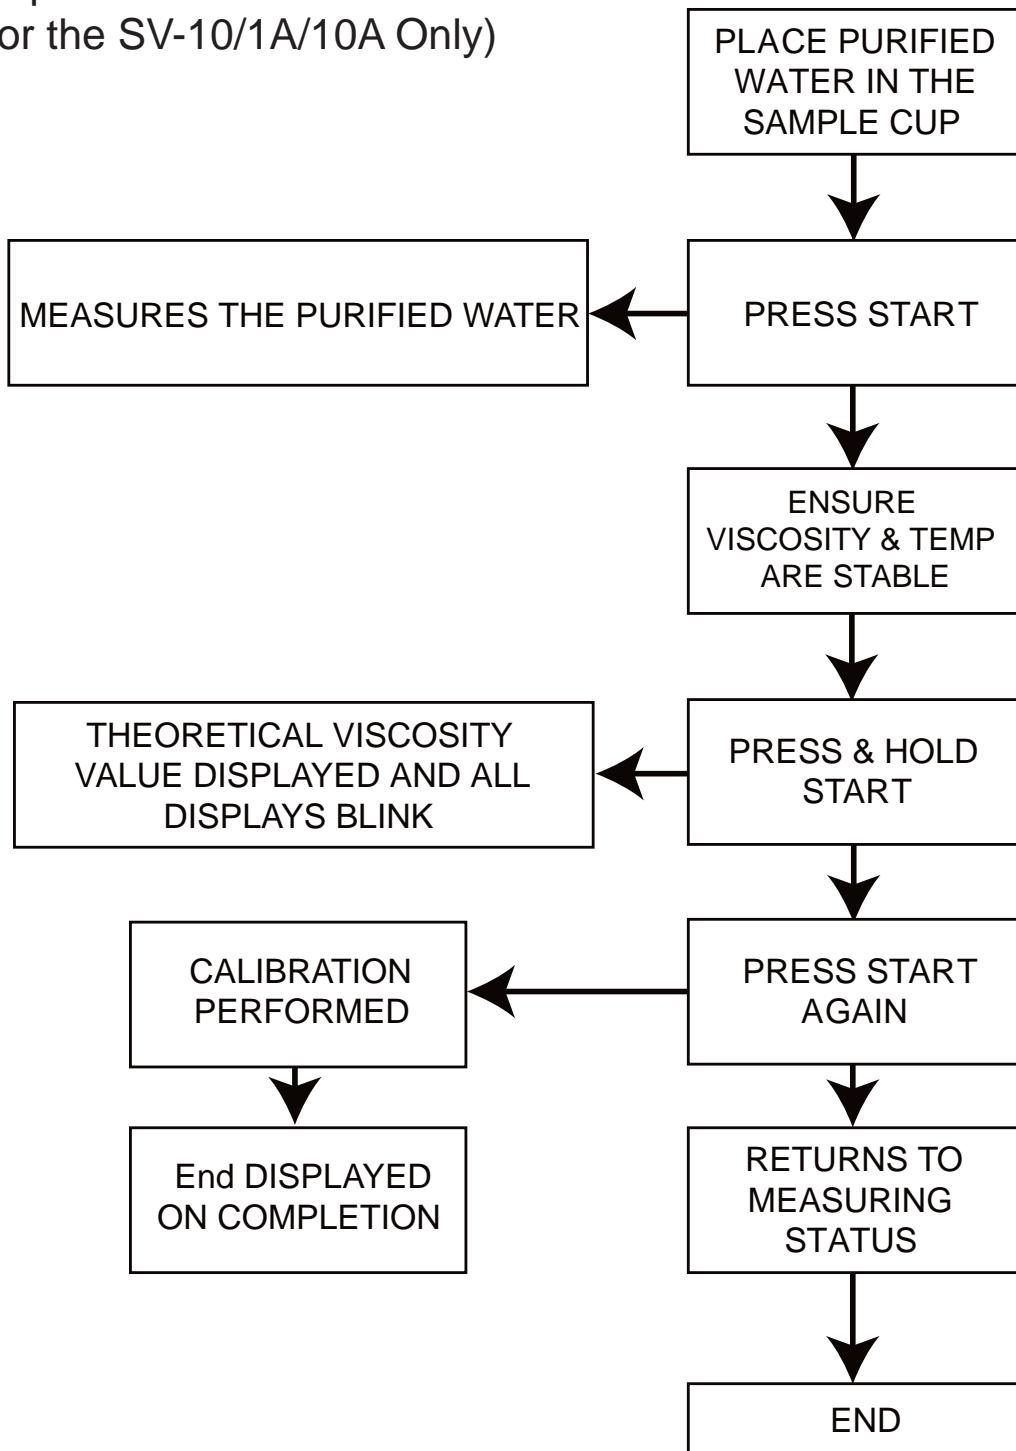


**SV-10/1A/10A**

## Simple Calibration Flow Chart

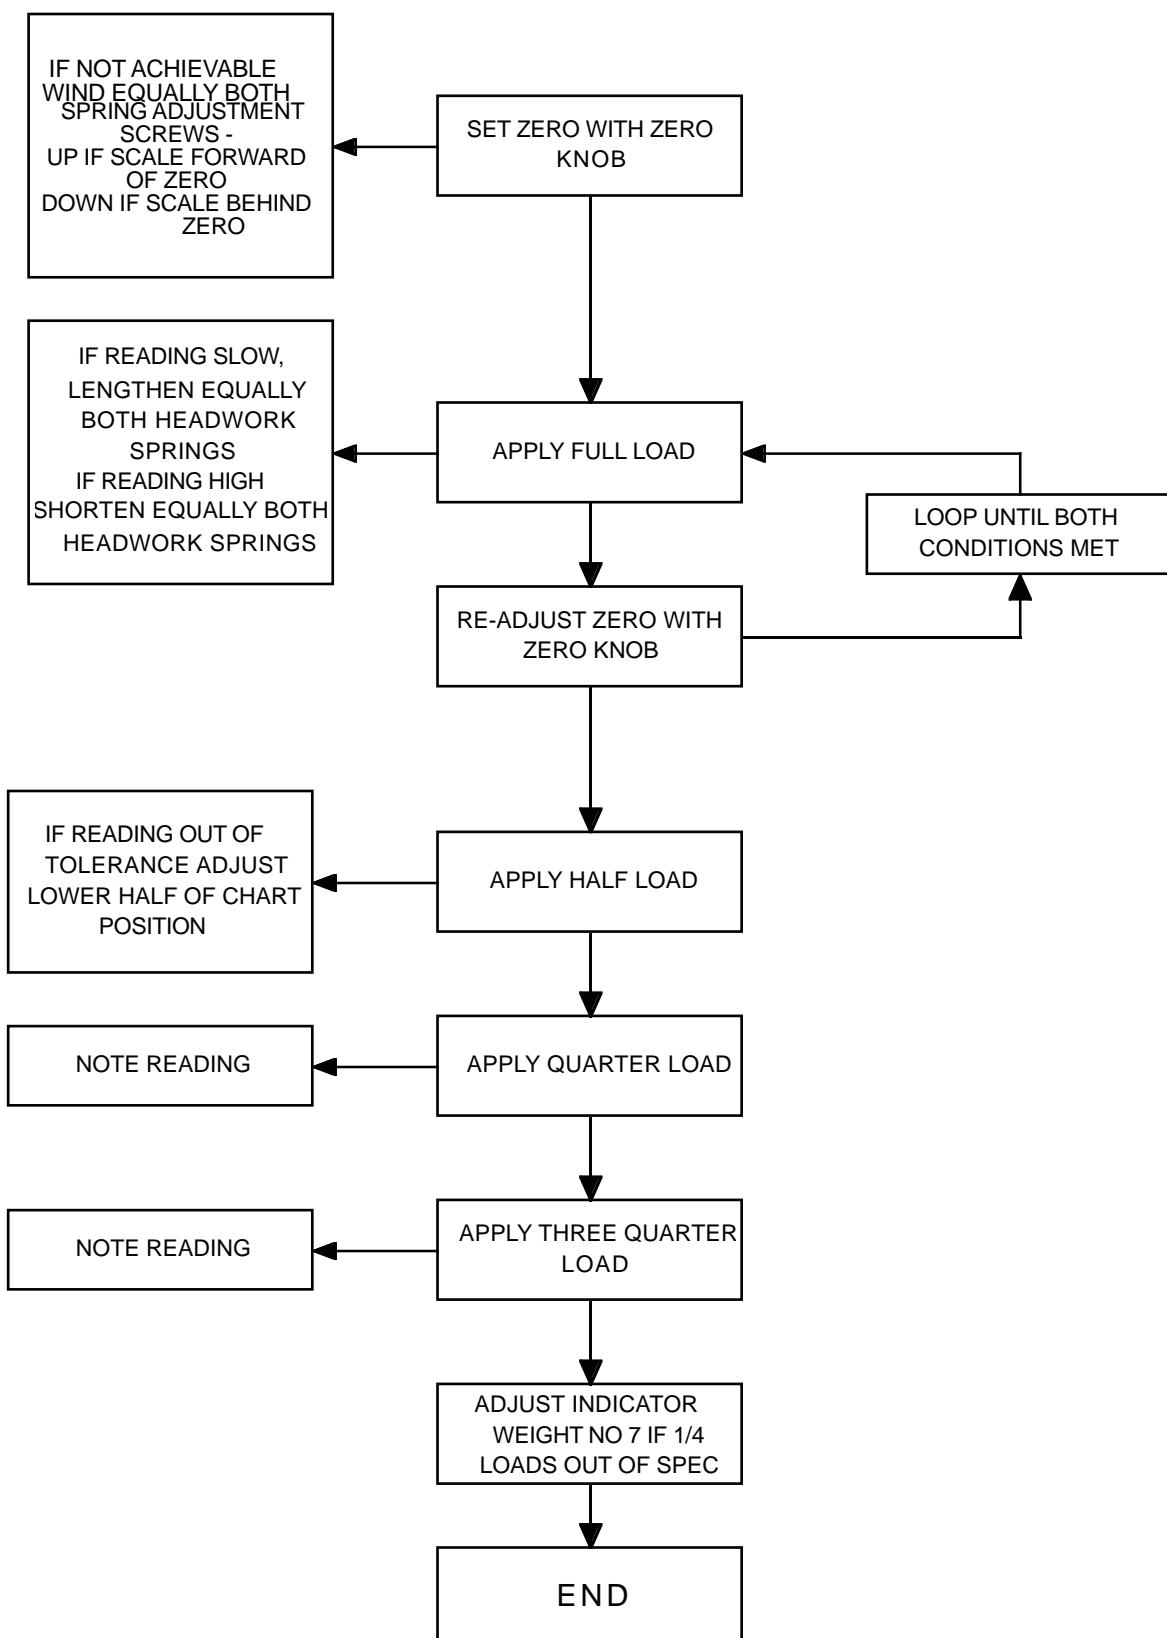


## Simple Calibration Flow Chart

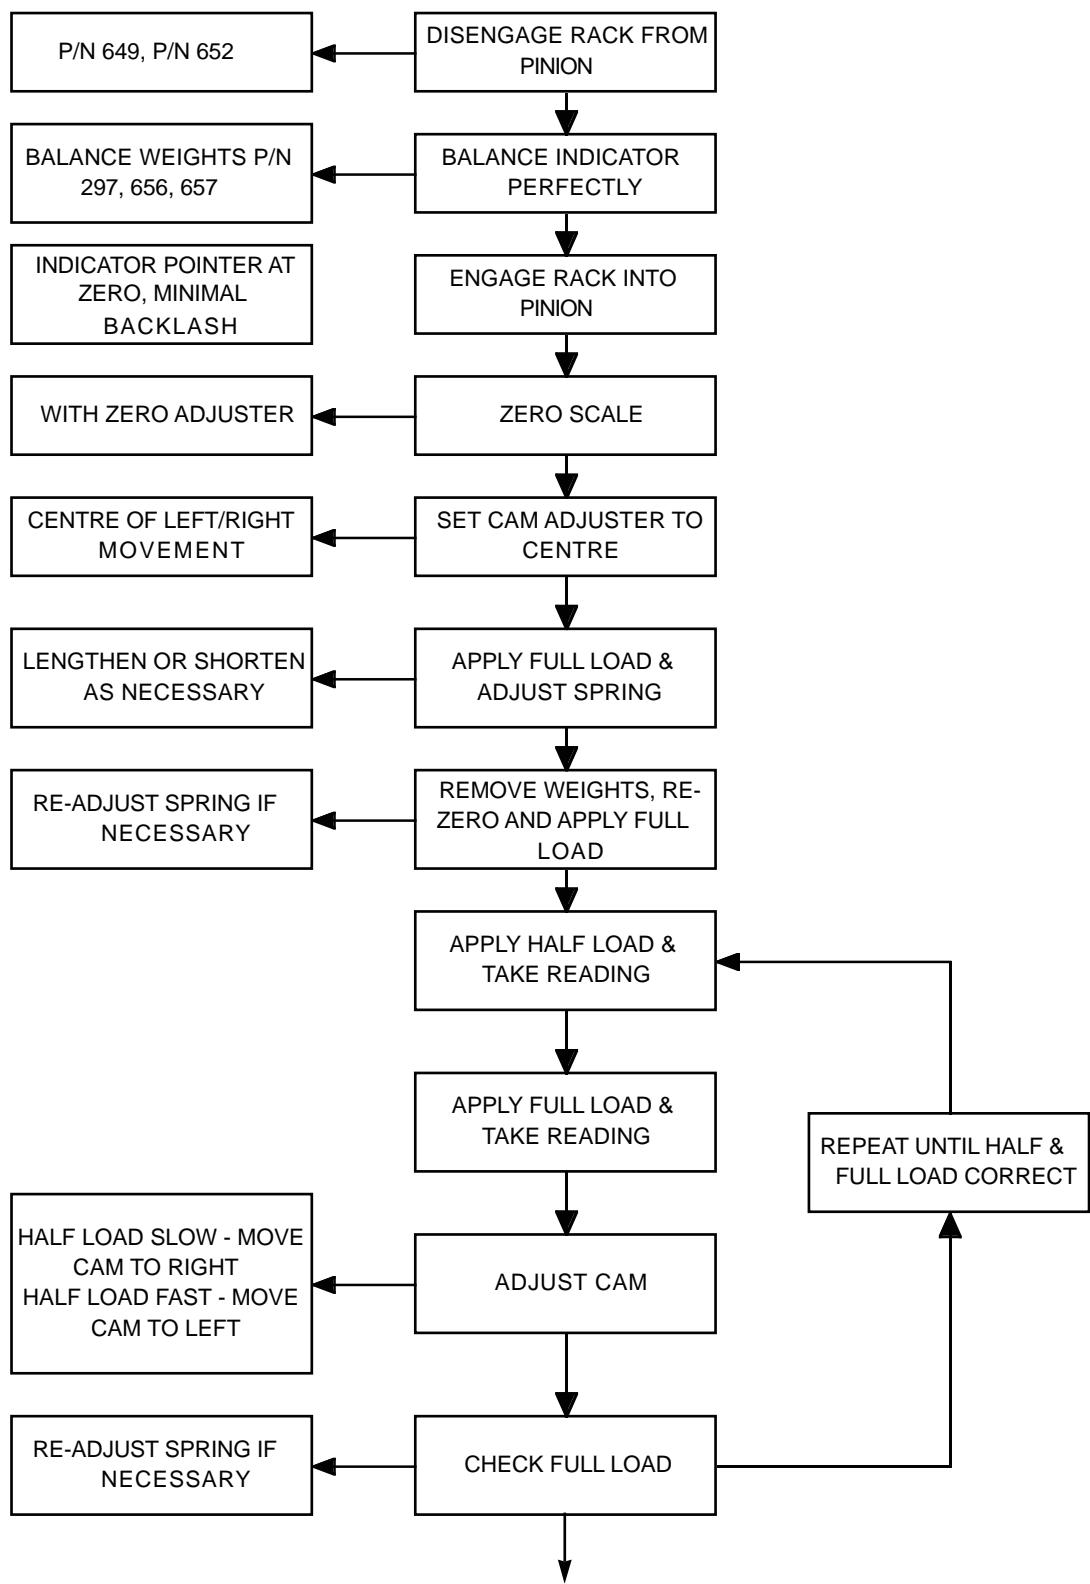

Continued on next page

## Simple Calibration Flow Chart

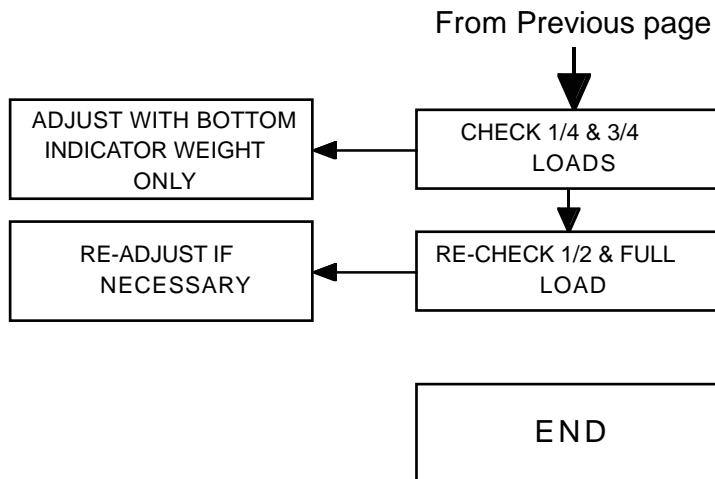


**Note:**

If Tare bars are fitted, set the scale to zero, remove the Tare bars and then add weight to the pan to compensate for the weight of the Tare bars.


**Test & adjust the scale as above.**

**Remove the weights & re-fit the Tare bars. Shift the Tare bars up or down, if necessary, to give an accurate zero.**


## Simple Calibration Flow Chart

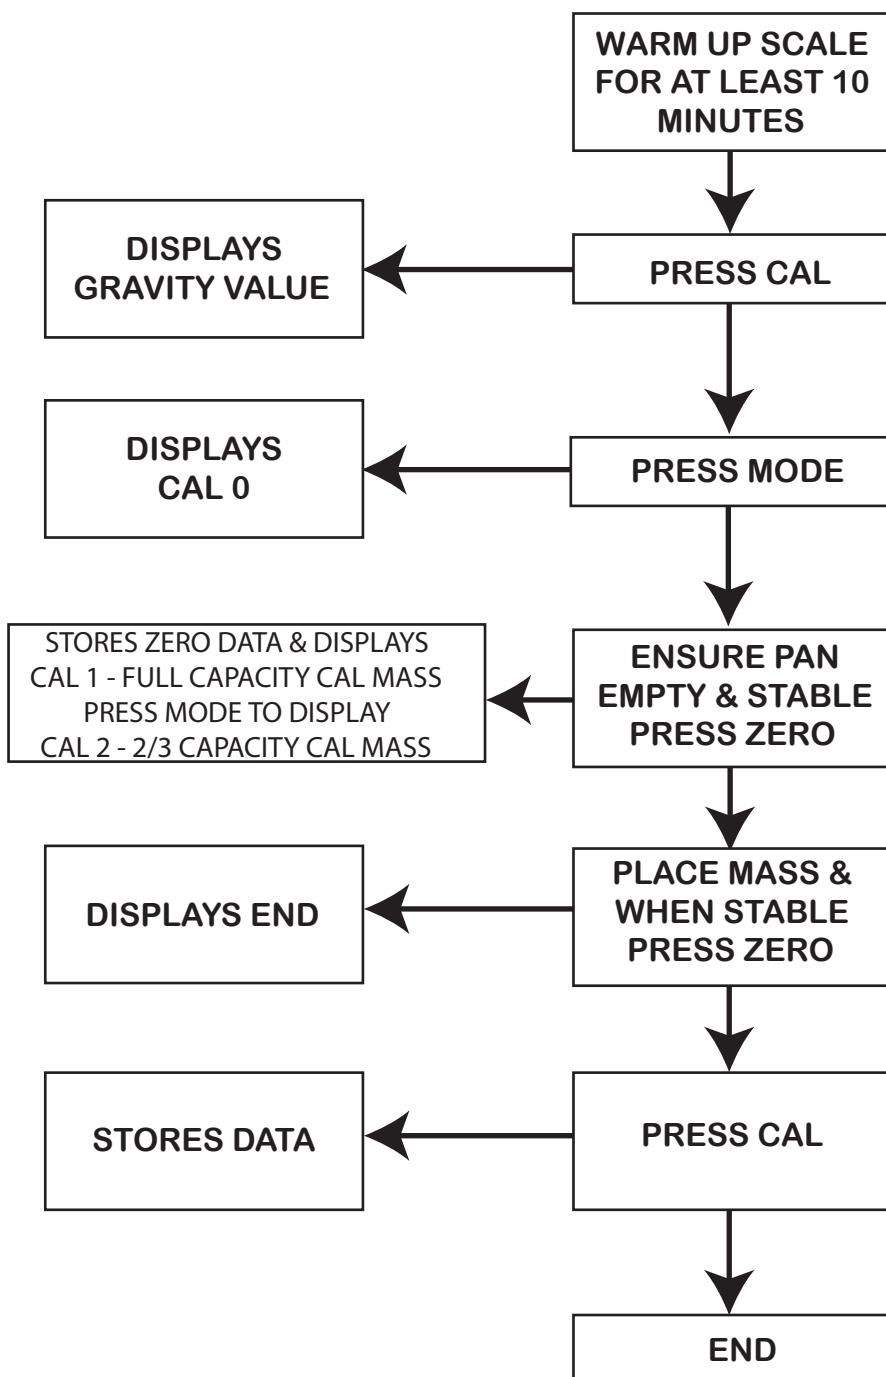


## Simple Calibration Flow Chart

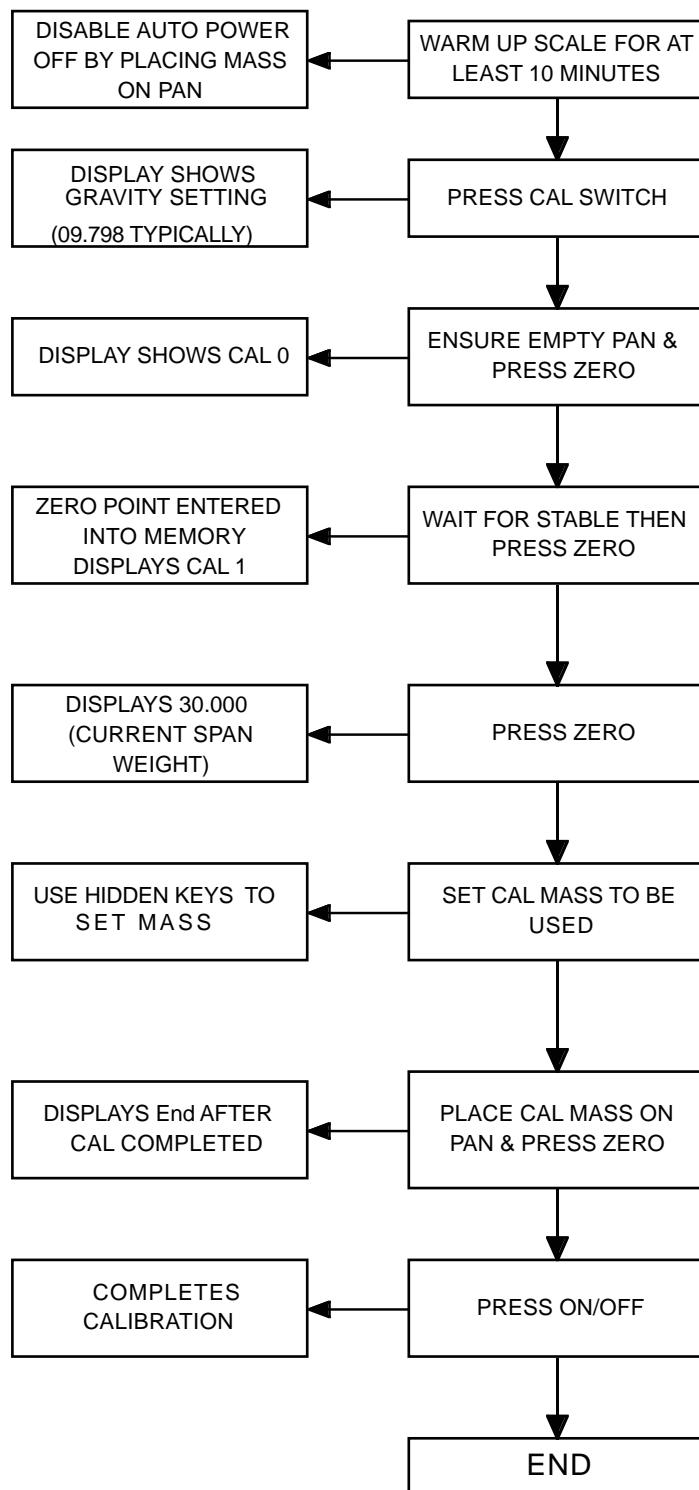


## Simple Calibration Flow Chart

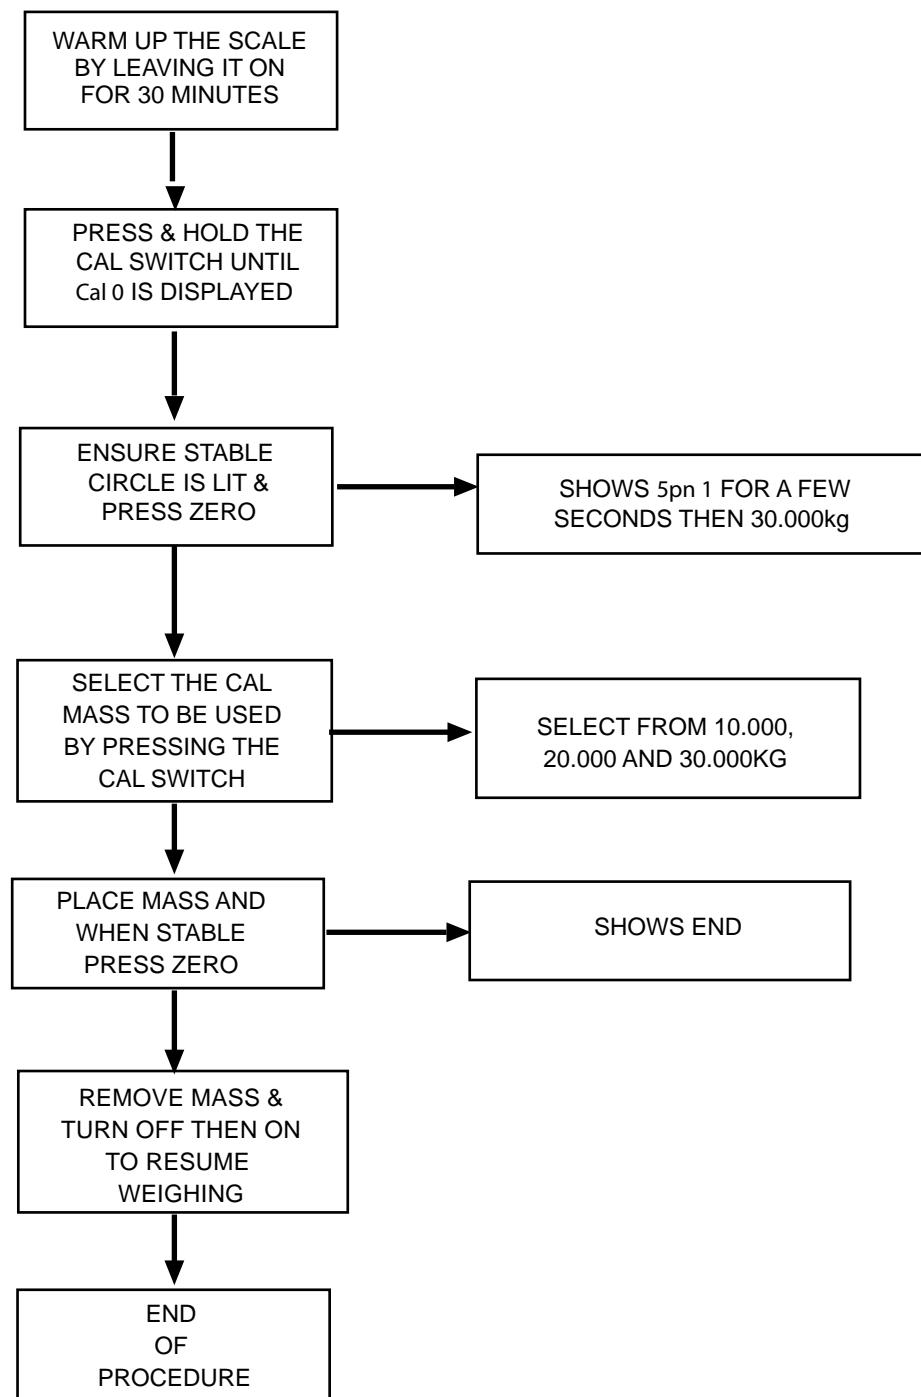


## Simple Calibration Flow Chart

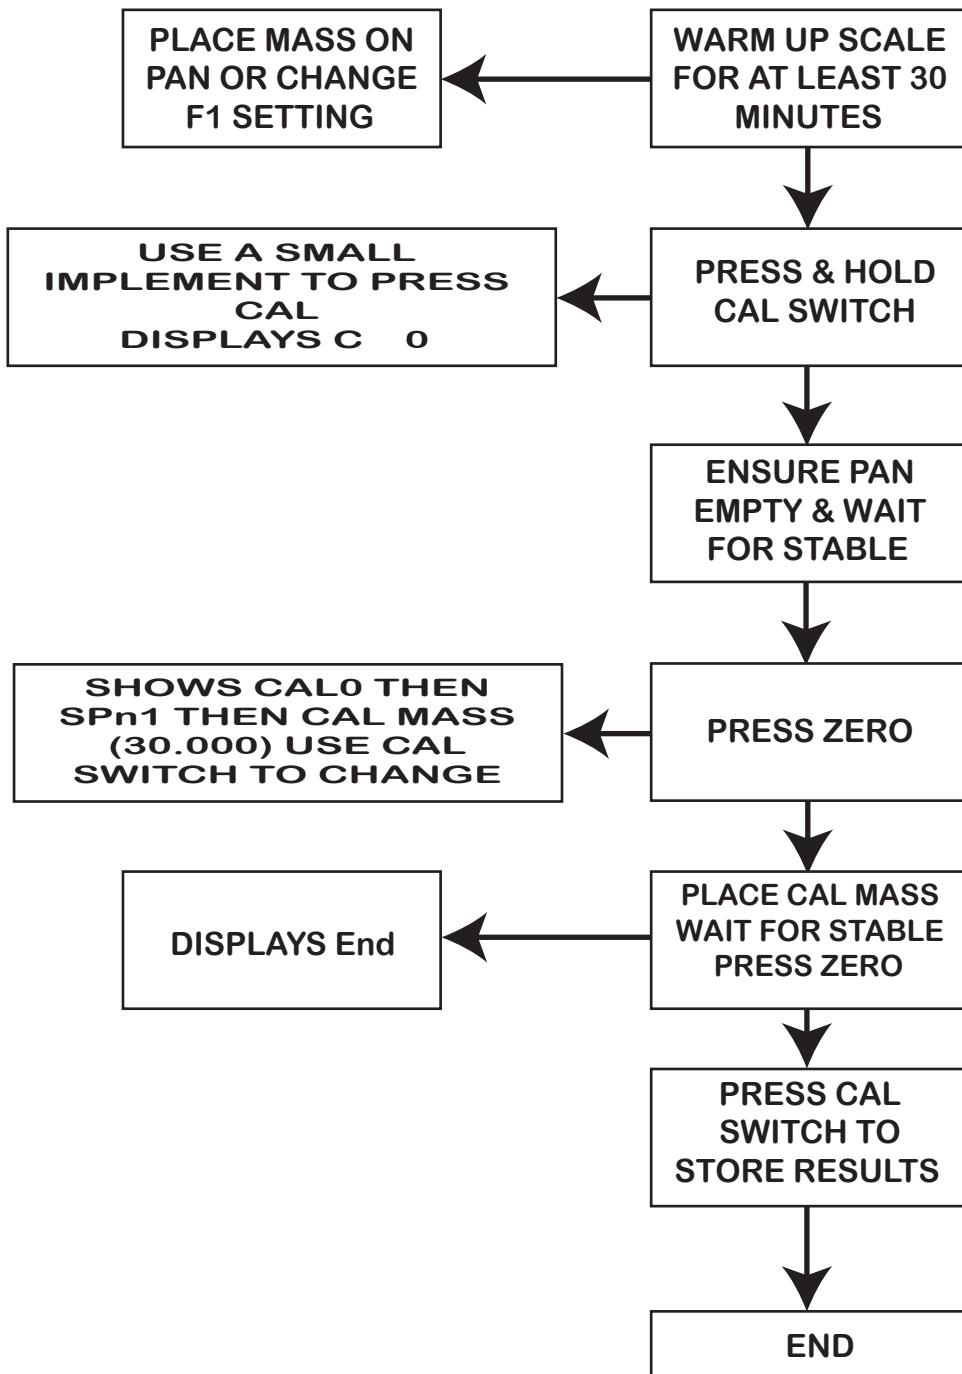


## Simple Calibration Flow Chart

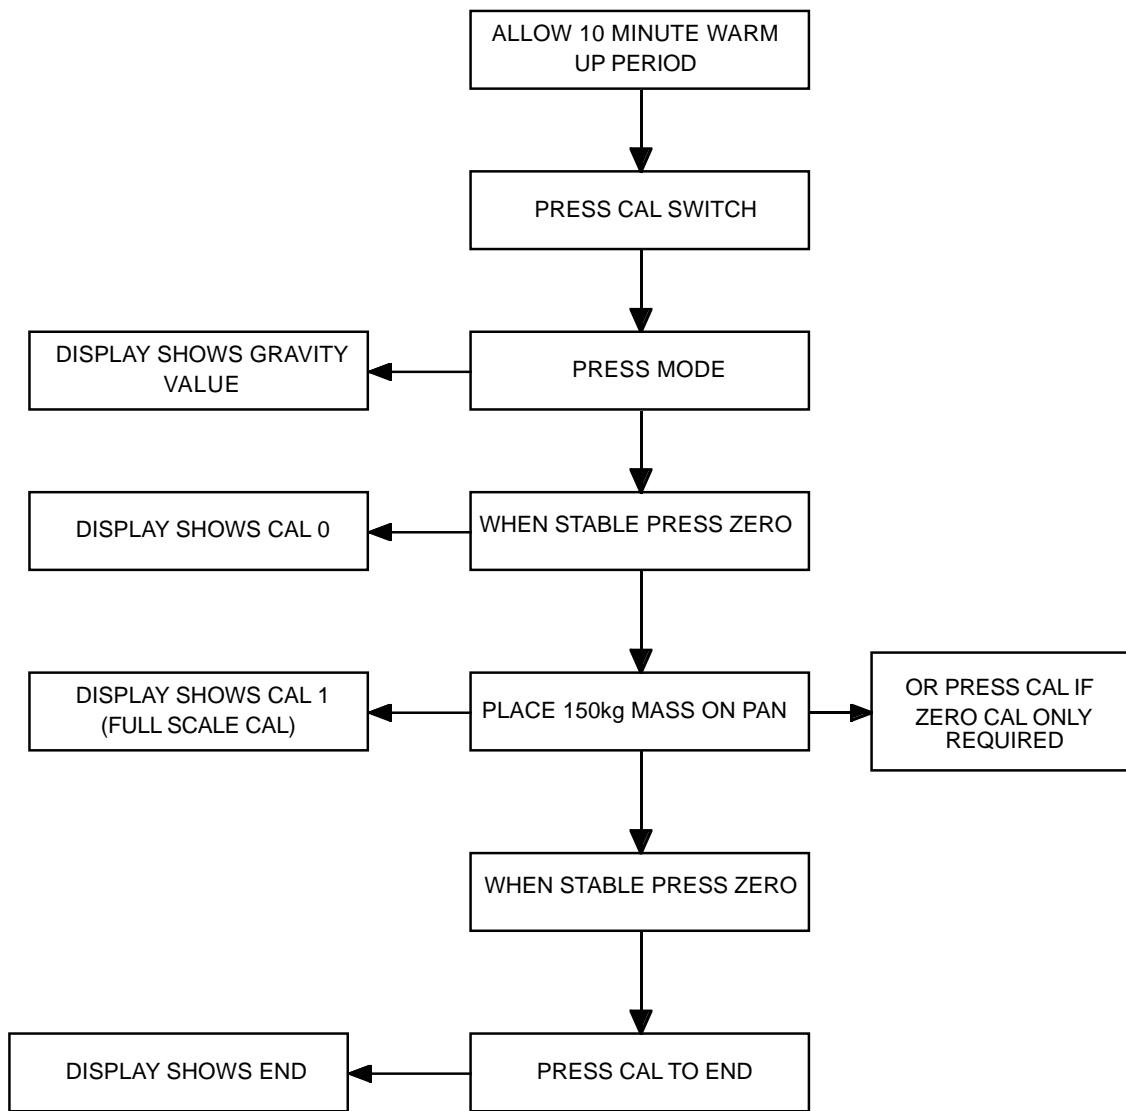


## Simple Calibration Flow Chart

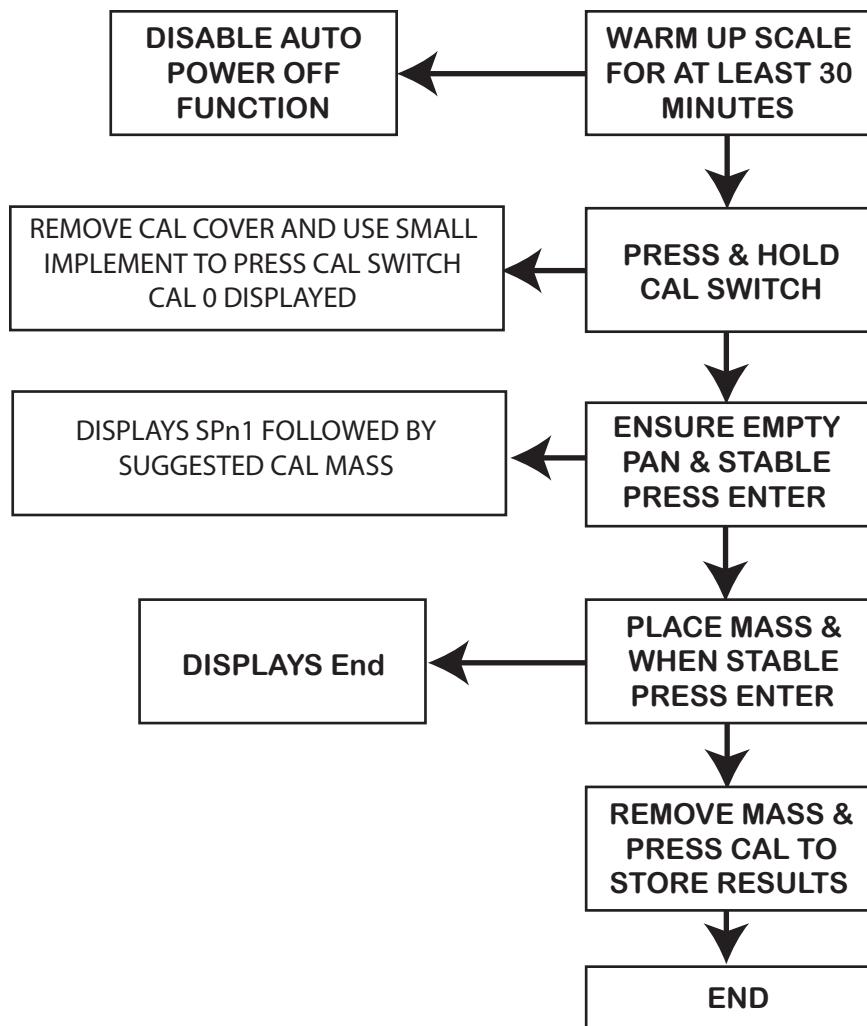


## Simple Calibration Flow Chart

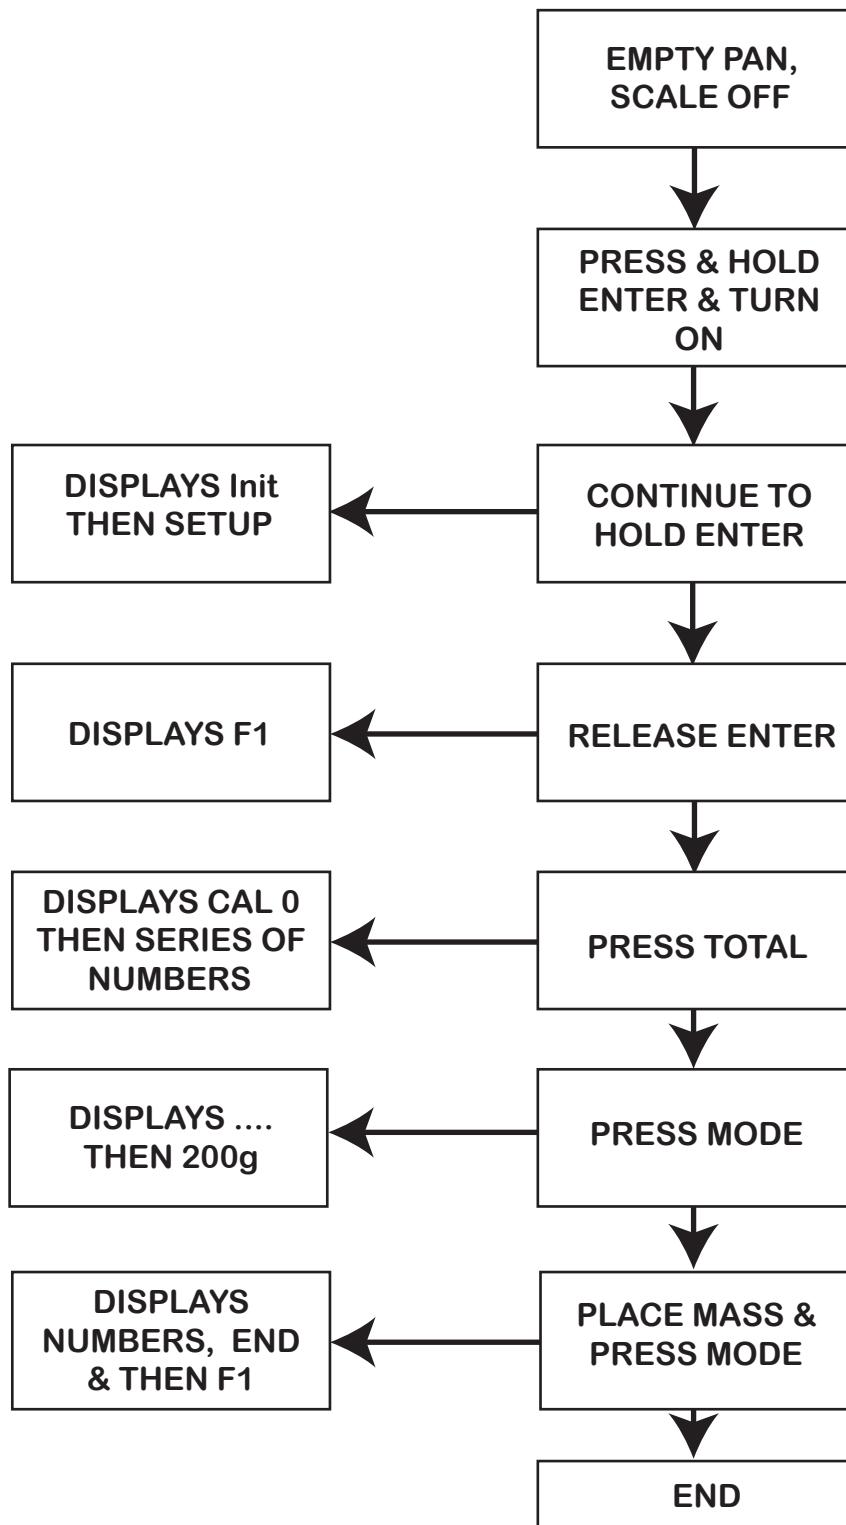


## Simple Calibration Flow Chart

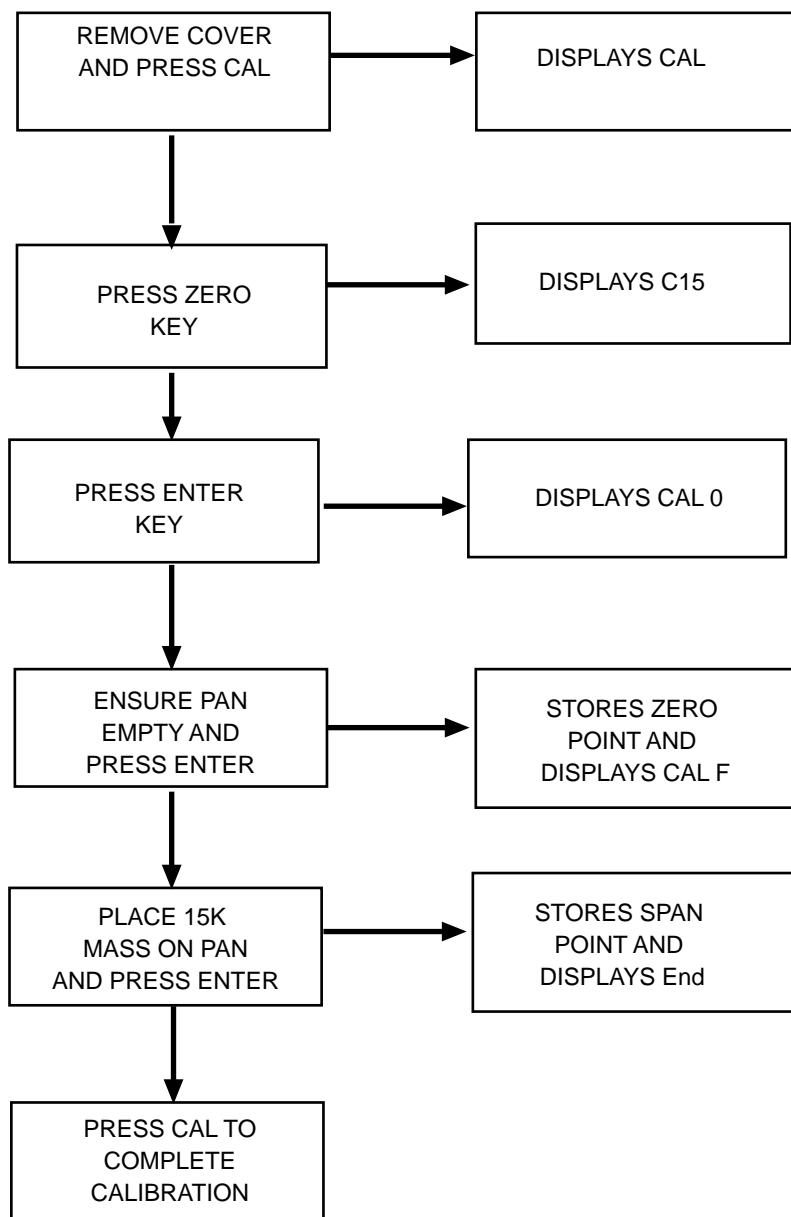


## Simple Calibration Flow Chart

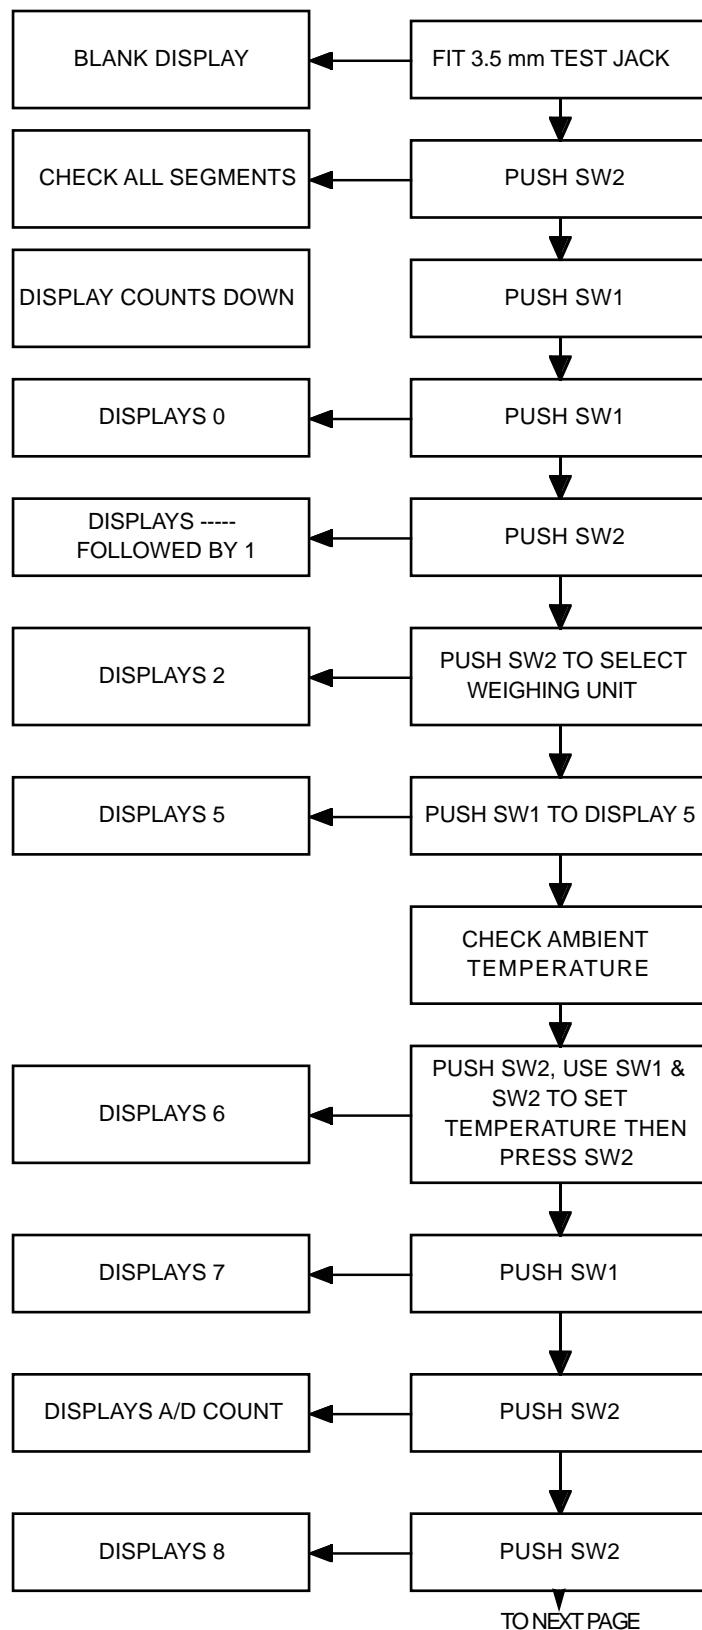


## Simple Calibration Flow Chart

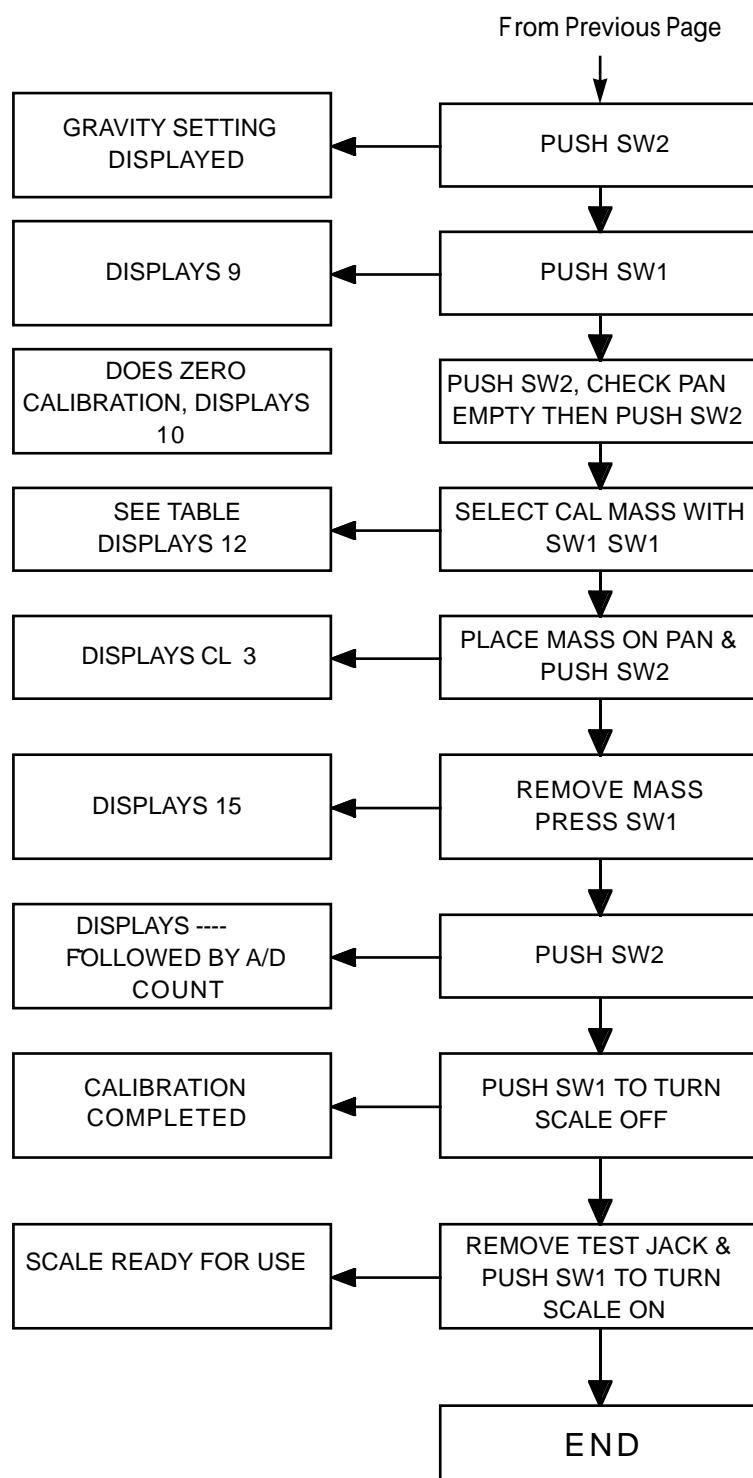


## Simple Calibration Flow Chart

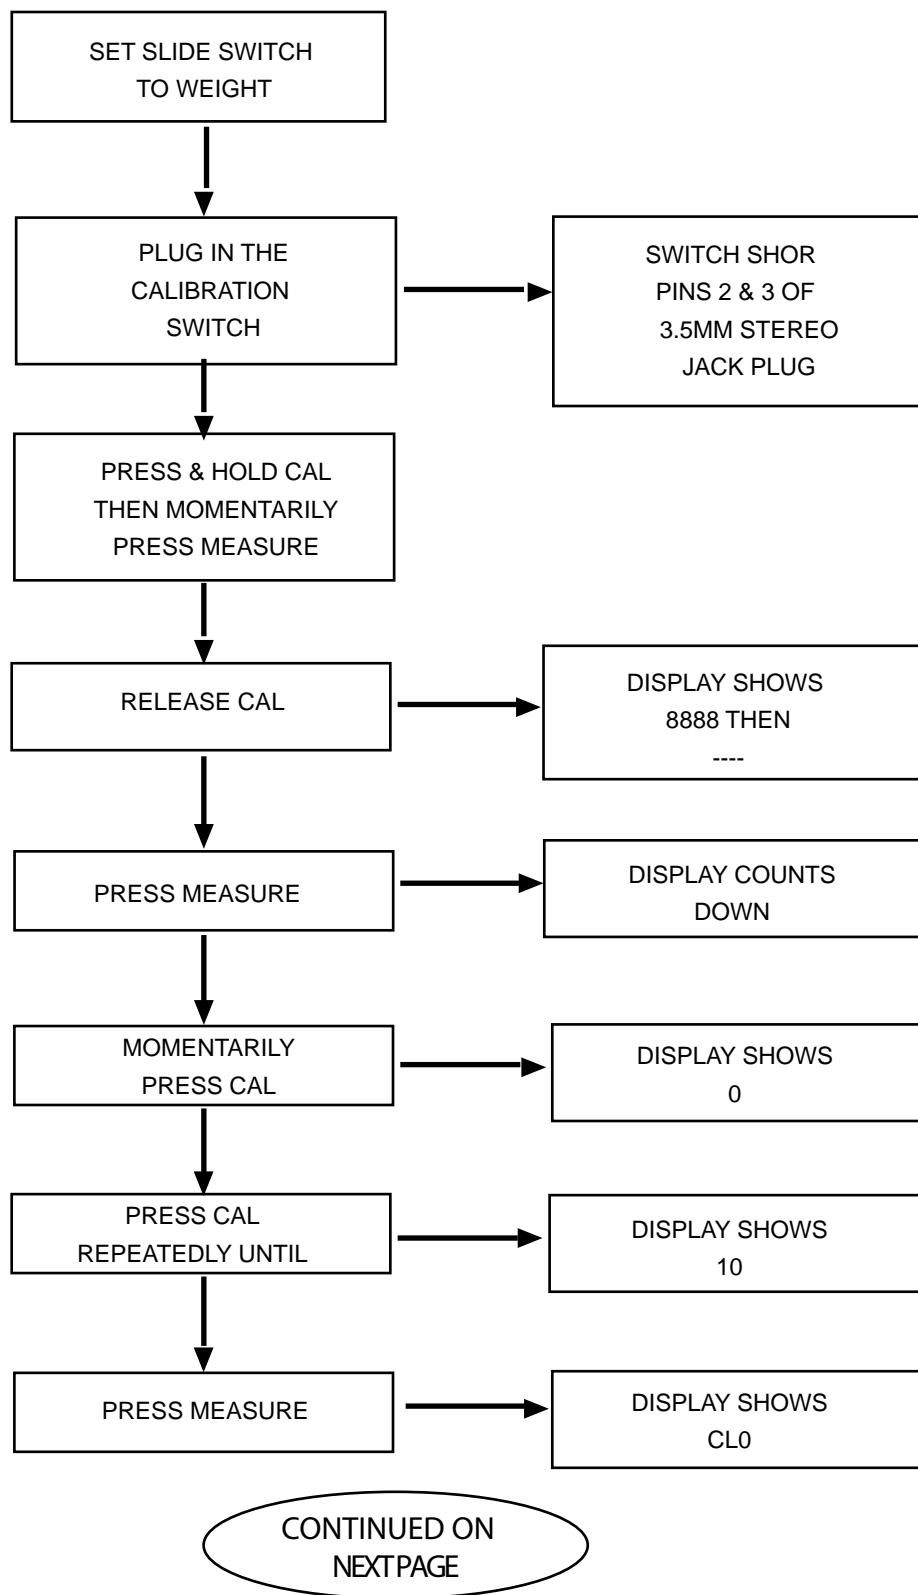

## Simple Calibration Flow Chart

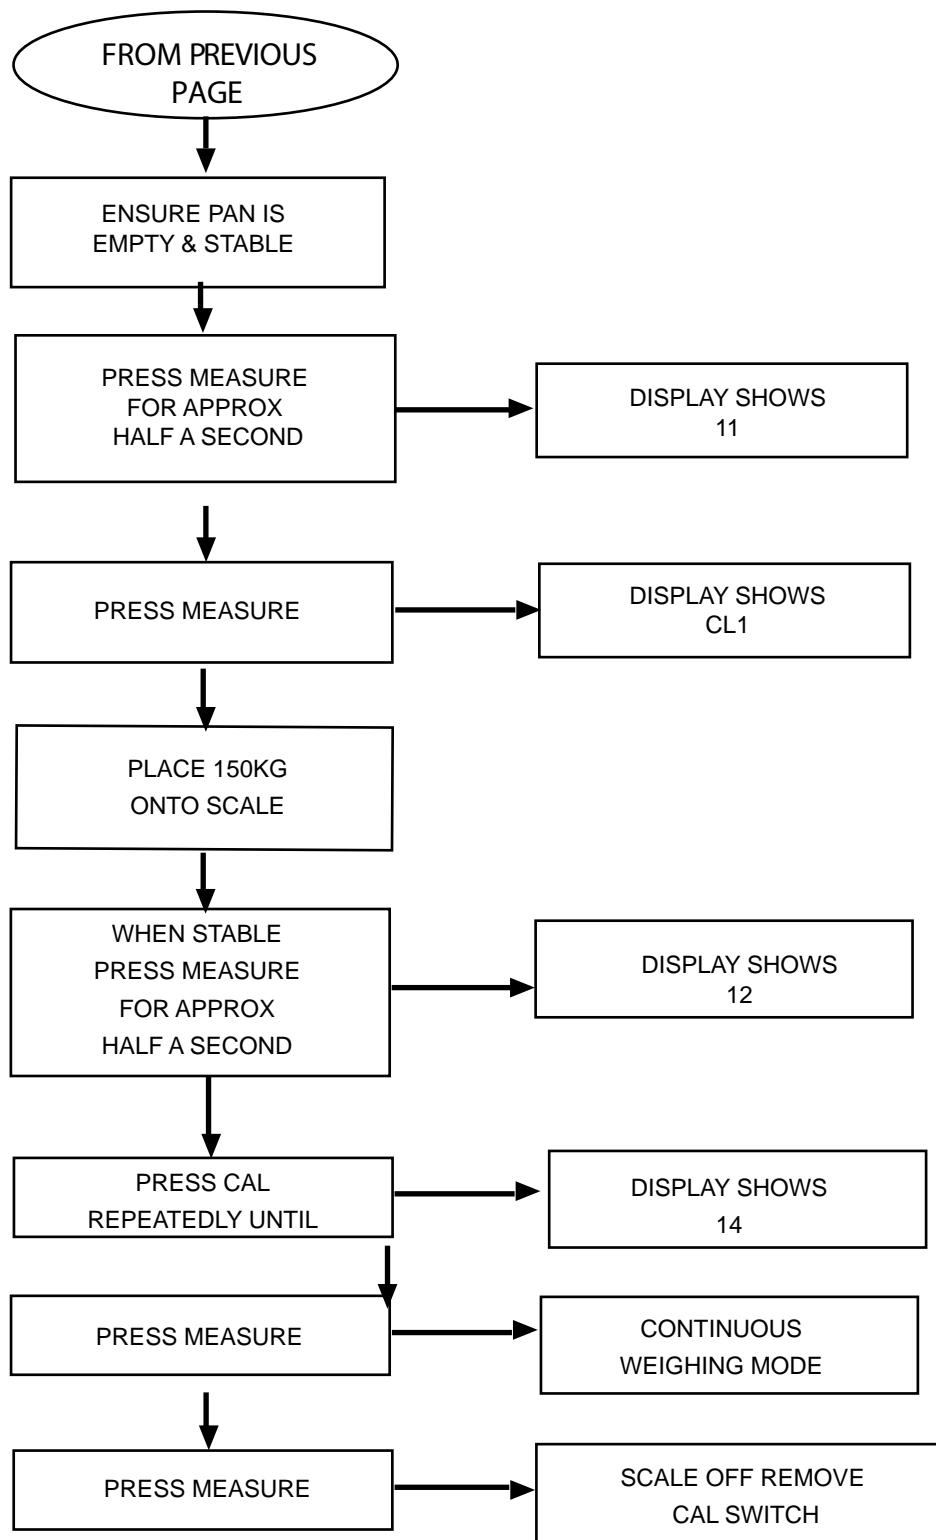

## Simple Calibration Flow Chart

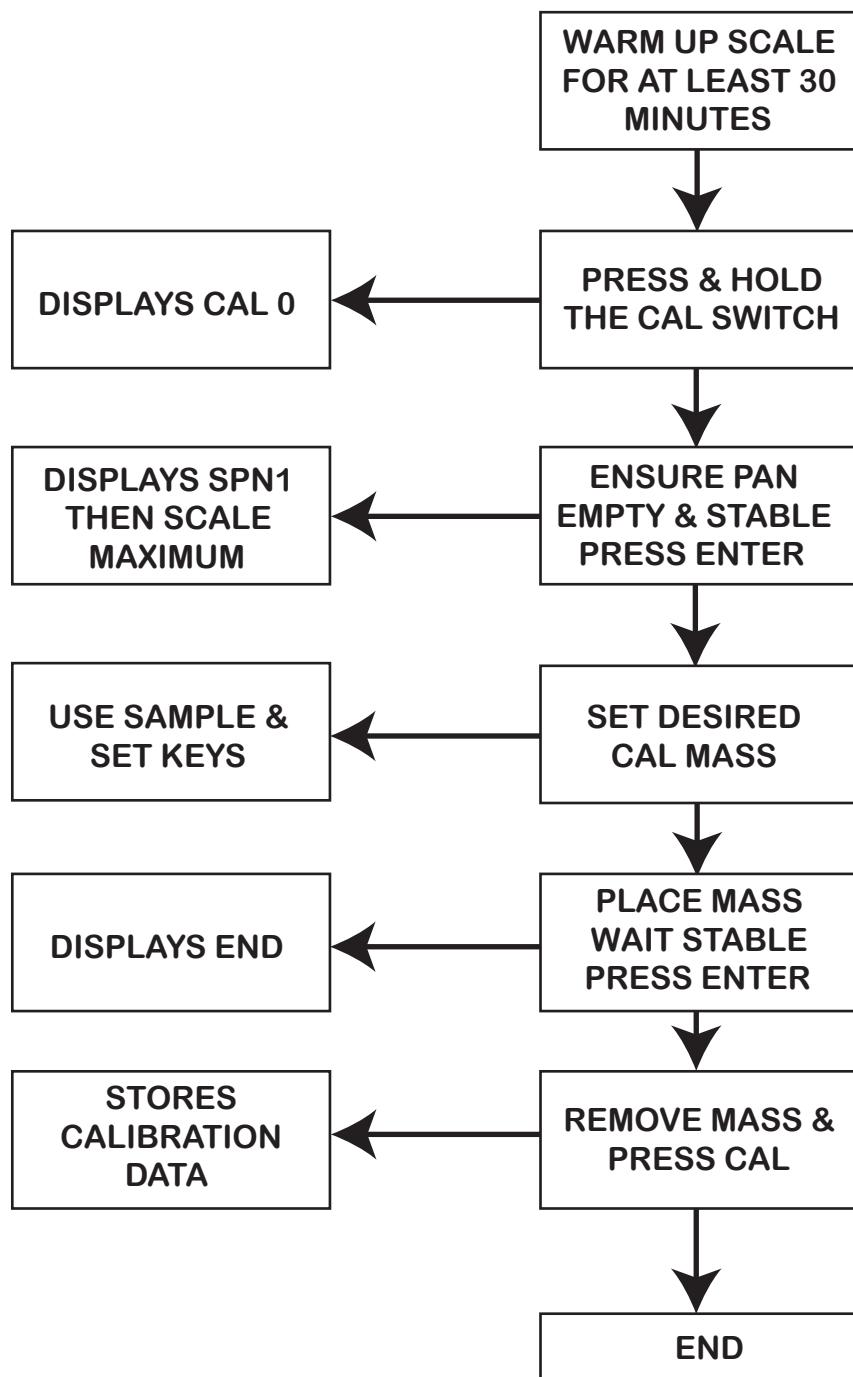

## Simple Calibration Flow Chart

