

3. Apply some anti-seize compound to the splines of the Parking Brake Disc shaft.
4. Locate the Parking Brake Disc and insert it between the brake pads in the caliper before installing it back to the shaft. Face the shoulder of the disc in towards the seal.
5. Install the assembly together on to the shaft

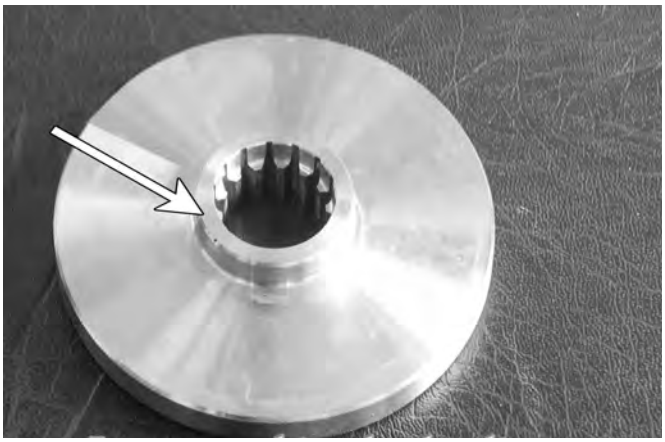

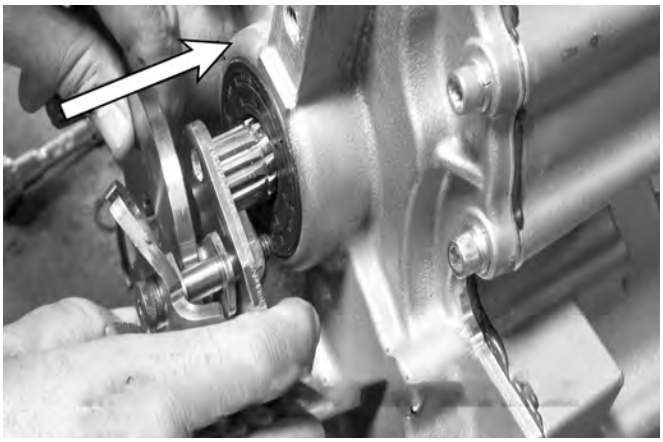


6. Secure the caliper to the transmission with (1) SHCS 5/16x1.25 ZINC, and one (1) SHCS 5/16-18x3.25 ZINC

## IMPORTANT

**Ensure mounting bolts and spacers are installed as illustrated in the drawing on page BR-32 of this service guide under, Removing The Parking Brake Disc/Caliper (Aurora Models).**

7. Reinstall the retaining ring to secure the Parking Brake Disc. Make sure it is properly seated in the groove of the shaft.
8. Perform the servicing procedure**, Installing The Steering Brake Disc (Aurora Models).**


## Steering Bar Assembly

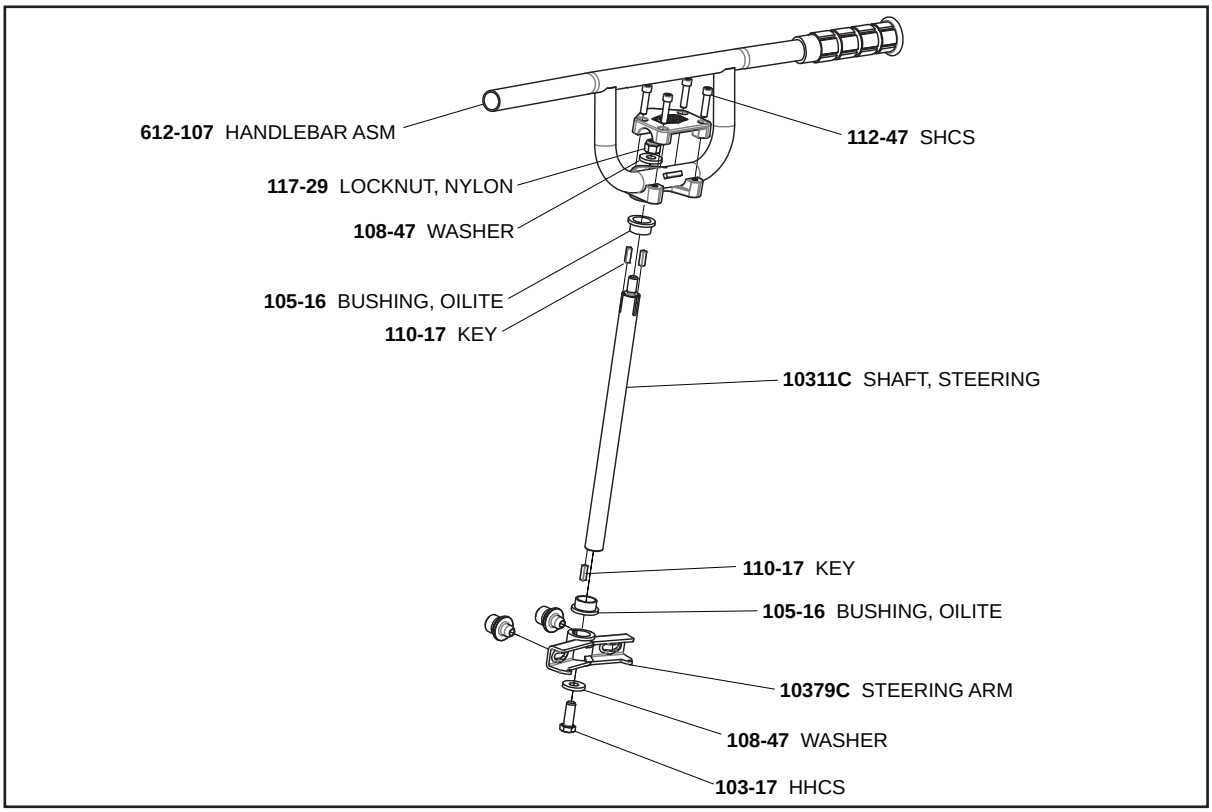


### Removing The Steering Shaft.

1. Remove the Upper Handle Bar Clamp to expose the nylon locknut and flat washer securing the steering shaft in the steering column. Disconnect the return springs at the bottom of the steering column.



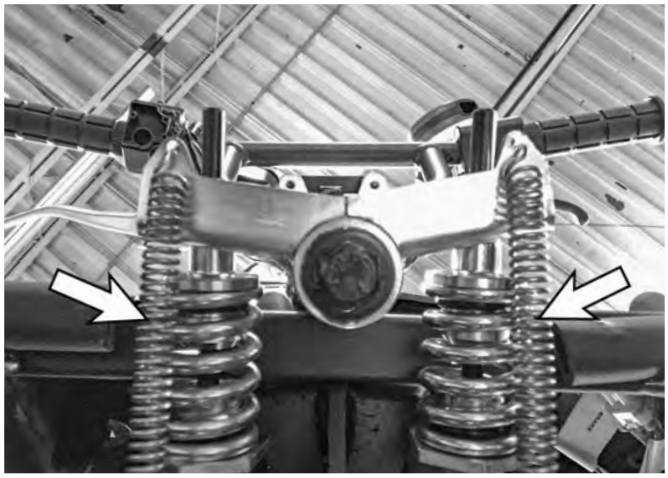

2. Perform the servicing procedure, **Removing The RMCI Assembly**

NOTE

*You not NOT have to disconnect the brake lines from the RMCI in this circumstance as you are only moving the plungers out of the way to drop the steering shaft.*


3. Drop the shaft into the front compartment of the vehicle and remove to a clean work surface for further disassembly if required.

IMPORTANT

**New oilite bushings installed to the steering column will require reaming for steering shaft fit. Run a 3/4" reamer through the bushing after installation to the steering column.**

**Installing The Steering Shaft**

1. Apply grease to the steering shaft and insert into the steering column from the bottom up.
2. Install two keys into the keyways at the top of the shaft.
3. Install the Lower Handle Bar Clamp aligning the keys in the handle bar clamp with the keys on the steering shaft.
4. Secure with one (1) Washer .39x.94x.13 Zn Di-Chro and one (1) Locknut, Nylon 3/8-16 Bnz

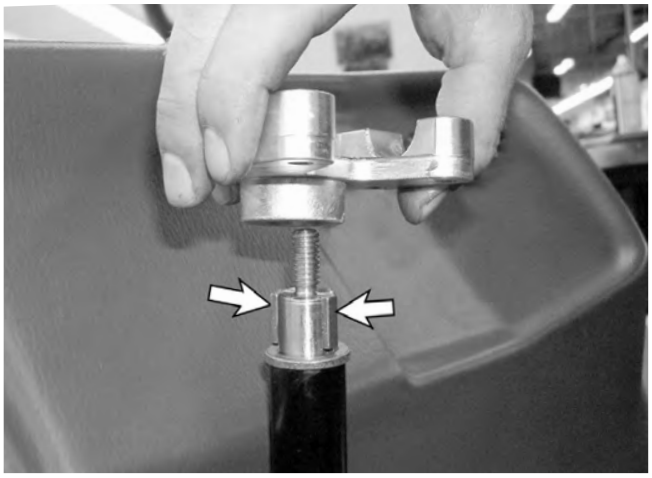



5. Tighten down the Nylon Locknut against the Flat Washer. Back off the Locknut just enough to allow the Flat Washer below to be turned by hand minimally. Do not over-tighten. Ensure the shaft turns freely with minimal end play.
6. Place the Steering Bar to the lower clamp and install the upper clamp securing with four (4) SHCS 1/4-20x1.0 Zn.
7. Tighten down the fasteners in an "X" pattern indifferent to the starting location at a **torque specification of 10 - 12 Ft. LBS (13.5 - 16N.m)**

# SECTION CS

# Clutch System

## Table of Contents

GENERAL INSTRUCTIONS....CS-2
AUTOMATIC TORQUE CONVERTER SYSTEM....CS-2
MAINTENANCE INFORMATION....CS-3
DRIVE BELT MAINTENANCE SCHEDULE....CS-3
DRIVE BELT INSPECTION....CS-4
REMOVE THE DRIVE BELT (INVANCE)....CS-4
INSTALL THE DRIVE BELT (CVTECH/INVANCE)....CS-5
INVANCE DRIVEN CLUTCH DRIVE BELT ADJUSTMENT....CS-5
REMOVING THE DRIVEN CLUTCH (INVANCE)....CS-6
INSTALLING THE DRIVEN CLUTCH (INVANCE)....CS-6
CLUTCH MAINTENANCE....CS-7
DRIVEN CLUTCH INSPECTION (INVANCE)....CS-7
DRIVEN CLUTCH LUBRICATION....CS-7
DRIVER CLUTCH INSPECTION....CS-7
DRIVER CLUTCH REMOVAL (CVTECH)....CS-8
DISASSEMBLING THE DRIVER CLUTCH (CVTECH)....CS-8
REASSEMBLING THE DRIVER CLUTCH (CVTECH)....CS-9
INSTALLING THE DRIVER CLUTCH....CS-10
DISASSEMBLING THE DRIVEN CLUTCH (CVTECH)....CS-11
ASSEMBLING THE DRIVEN CLUTCH (CVTECH)....CS-14
INSTANT TORQUE DRIVE SYSTEM (ITDS)....CS-15
REMOVING THE DRIVE BELT (ITDS CLUTCH SYSTEM)....CS-16
INSTALLING DRIVE BELT (ITDS CLUTCH SYSTEM)....CS-16
DRIVER CLUTCH REMOVAL (ITDS CLUTCH SYSTEM)....CS-17
DRIVER CLUTCH DISASSEMBLY (ITDS CLUTCH SYSTEM)....CS-17
DRIVER CLUTCH REASSEMBLY (ITDS CLUTCH SYSTEM)....CS-19
INSTALLING THE DRIVER CLUTCH (ITDS)....CS-20
REMOVING THE DRIVEN CLUTCH (ITDS)....CS-21
DRIVEN CLUTCH DISASSEMBLY (ITDS)....CS-22
DRIVEN CLUTCH REASSEMBLY (ITDS)....CS-24
REPLACING THE DRIVEN CLUTCH NYLON ROLLERS (ITDS CLUTCH SYSTEM)....CS-26
INSTALLING THE DRIVEN CLUTCH (ITDS)....CS-26