



8. Set to 11.2V for low voltage warning. Push **Select** button

9. Set to T-1 for temperature reading Aurora 800 models only.

10. Set to "Off" for temperature reading for all models except Aurora 800 Models. Push **Select** button.

11. Set to KM or MILES as your preference. Push **Select** button.










12. Set clock. Push **Select** button
13. Set display brightness between 5-1 to 5-5. Push **Select** button.



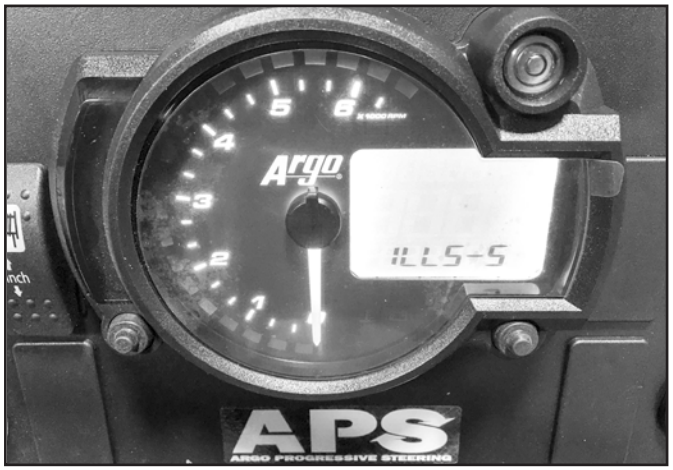

14. Exit the setup by turning the key off.

Calibrating the Digital Gauge Package

Frontier Digital Gauge Package

1. With key switch off, hold both “Select” and “Adjust” buttons down simultaneously.
2. Turn the key to the run position until you see the letter “adj” and then release both buttons.
3. Using the “Adjust” button, change the "P-" number to 4 (tach setting). Push the **Select** button.





4. Using the “Adjust” button, change the top flashing numbers to read **1914** (for 24"tires). Cycle to the next number using the “**Select**” button.
5. Set the lower number to **15P** (speedometer setting) using the Adjust button. Push the **Select** button.

6. Set the fuel system to "On" and push the **Select** button.





7. Set the low voltage charge warning to 11.2V. Push the **Select** button.

8. Set the time on the clock. Push the **Select** button.





9. Set the display brightness between 5-1 and 5-5. Push the **Select** button.

10. Set the odometer to Miles or KM. Push the **Select** button.







11. Exit the setup by turning the key off. **If fuel the gauge does not show up on the gauge once it is programmed, hold down the Select Button for 3-5 seconds.**

Replacing The Alternator V-Belt - 800 Kawasaki Models Only

1. Remove the vehicle firewall. See **Removing The Firewall Panel** in the **Vehicle Body** section of this service guide.
2. Locate the alternator on the right side of the engine beneath the radiator.
3. Using a 1/2" socket, loosen the bolt securing the alternator to the adjustment bracket.
4. Using a 1/2" socket, thread the adjustment bolt counter-clockwise to slacken the alternator V-Belt.

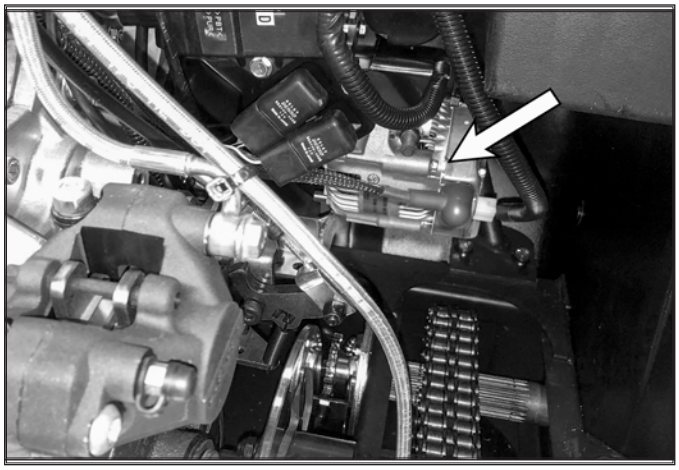


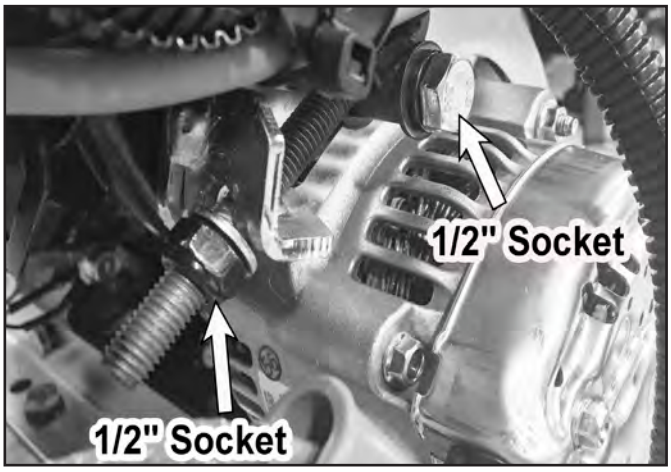


5. Slip the alternator belt off both engine and alternator pulleys
6. Slip the new V-Belt over both pulleys and tighten the adjustment bolt by turning it clockwise. Do not overtighten the belt or allow it to be too loose. The V-belt should be tightened enough that it deflects no more then 1/8" with approx. 6 lbs. of force.
7. Once the belt is tensioned, re-tighten the bolt securing the alternator to the bracket. Torque to **225.4 IN-LBS (Dry, Non-Lubricated Condition)**


Removing The Alternator - 800 Kawasaki Models Only

1. Remove the vehicle firewall. See **Removing The Firewall Panel** in the **Vehicle Body** section of this service guide.
2. Locate the alternator on the right side of the engine beneath the radiator.
3. Using a 1/2" socket, loosen the bolt securing the alternator to the adjustment bracket.
4. Using a 1/2" socket, thread the adjustment bolt counter-clockwise to slacken the alternator V-Belt.
5. Slip the alternator belt off both engine and alternator pulleys.

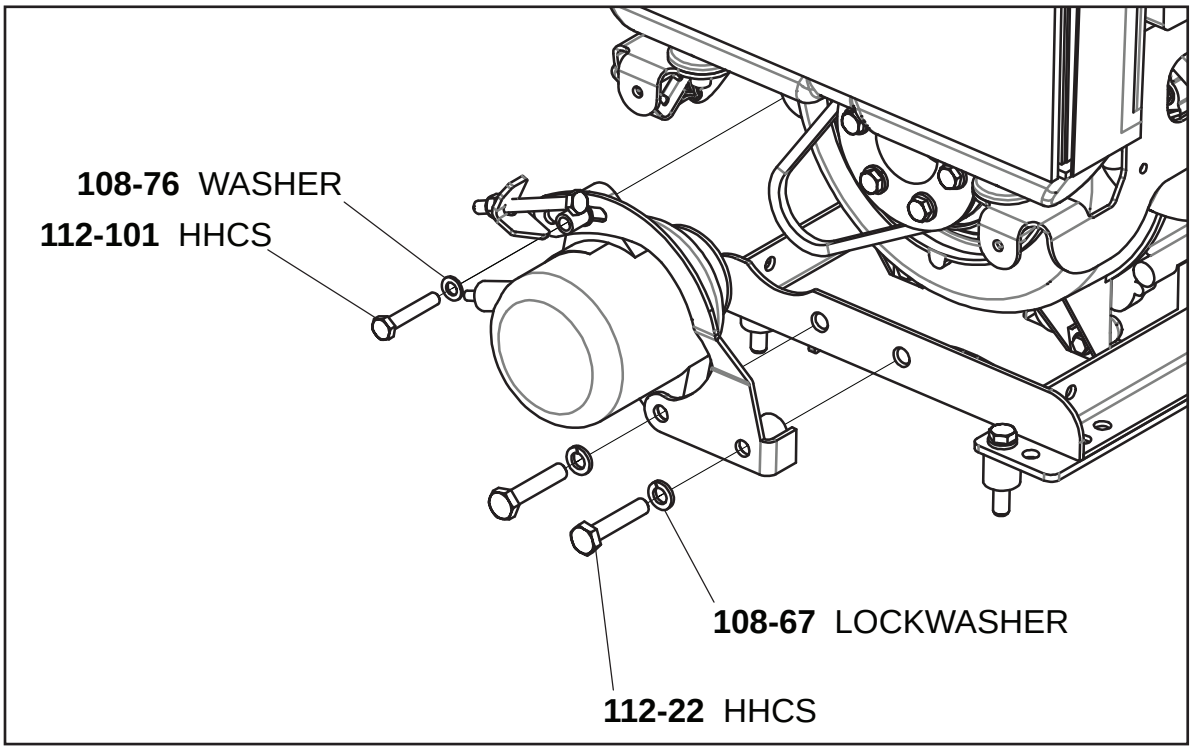

6. Disconnect the wiring from the alternator.
7. Using a 17mm Socket, locate and remove the two bolts securing the alternator to the powerpack frame.
8. Remove the alternator.

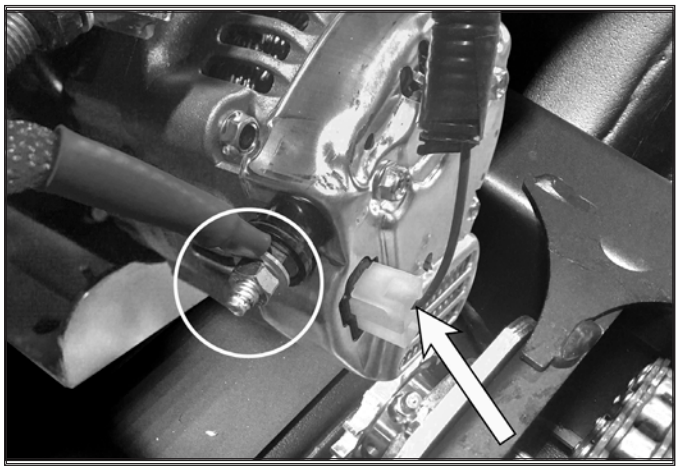

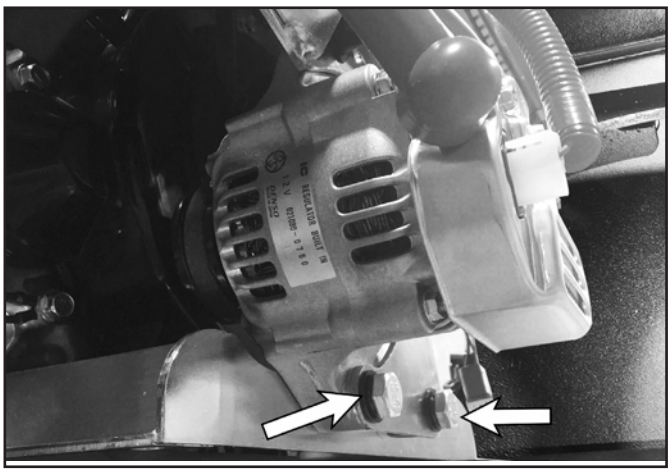

Installing The Alternator

1. Install the alternator to the powerpack frame using the two HHCS M10x1,5x50mm ZINC Bolts and Lockwashers. **Torque to 37.2 FT-LBS (Dry, Non-Lubricated Condition)**

2. Reinstall the V-Belt over both pulleys and tighten the adjustment bolt by turning it clockwise. Do not overtighten the belt or allow it to be too loose. The V-belt should be tightened enough that it deflects no more then 1/8" with approx. 6 lbs. of force.

3. Once the belt is tensioned, re-tighten the bolt securing the alternator to the bracket. Torque to **225.4 IN-LBS (Dry, Non-Lubricated Condition)**


Dash Panel Switches And Gauge

NOTE

Switch or gauge replacement is best done with the dash panel removed from the vehicle.

1. Remove the four (4) screws securing the dash panel to the upper body.

2. Pull the dash panel away from the upper body to access gauges and switches.

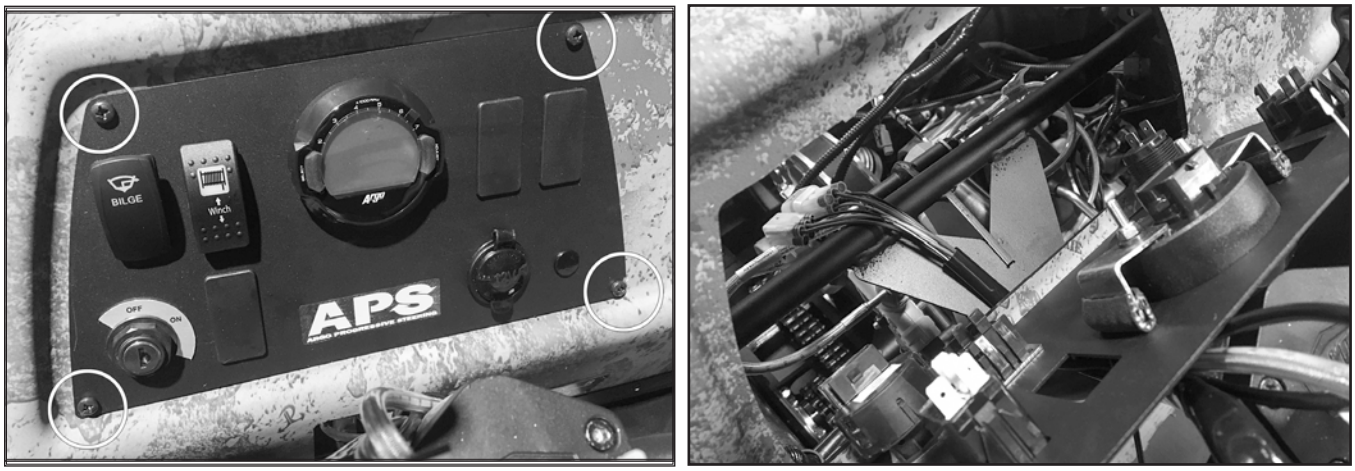


Frontier Models




Aurora Models

Speedometer Sensor

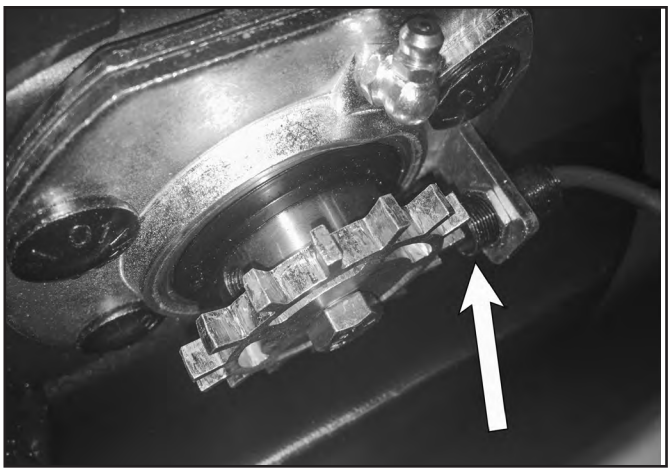


The speedometer sensor is located on the right hand side of the vehicle at the mid sprocket on 6x6 models and the front sprocket on 8x8 models. This sensor picks up the signal from a 15 tooth wheel speed sensor disc attached to the axle.
Gap between speed sensor and sprocket tooth is 1mm. Adjust as necessary.

Wiring Schematics:600-0054 (Models 800/850/950) Print To 11x17 Paper

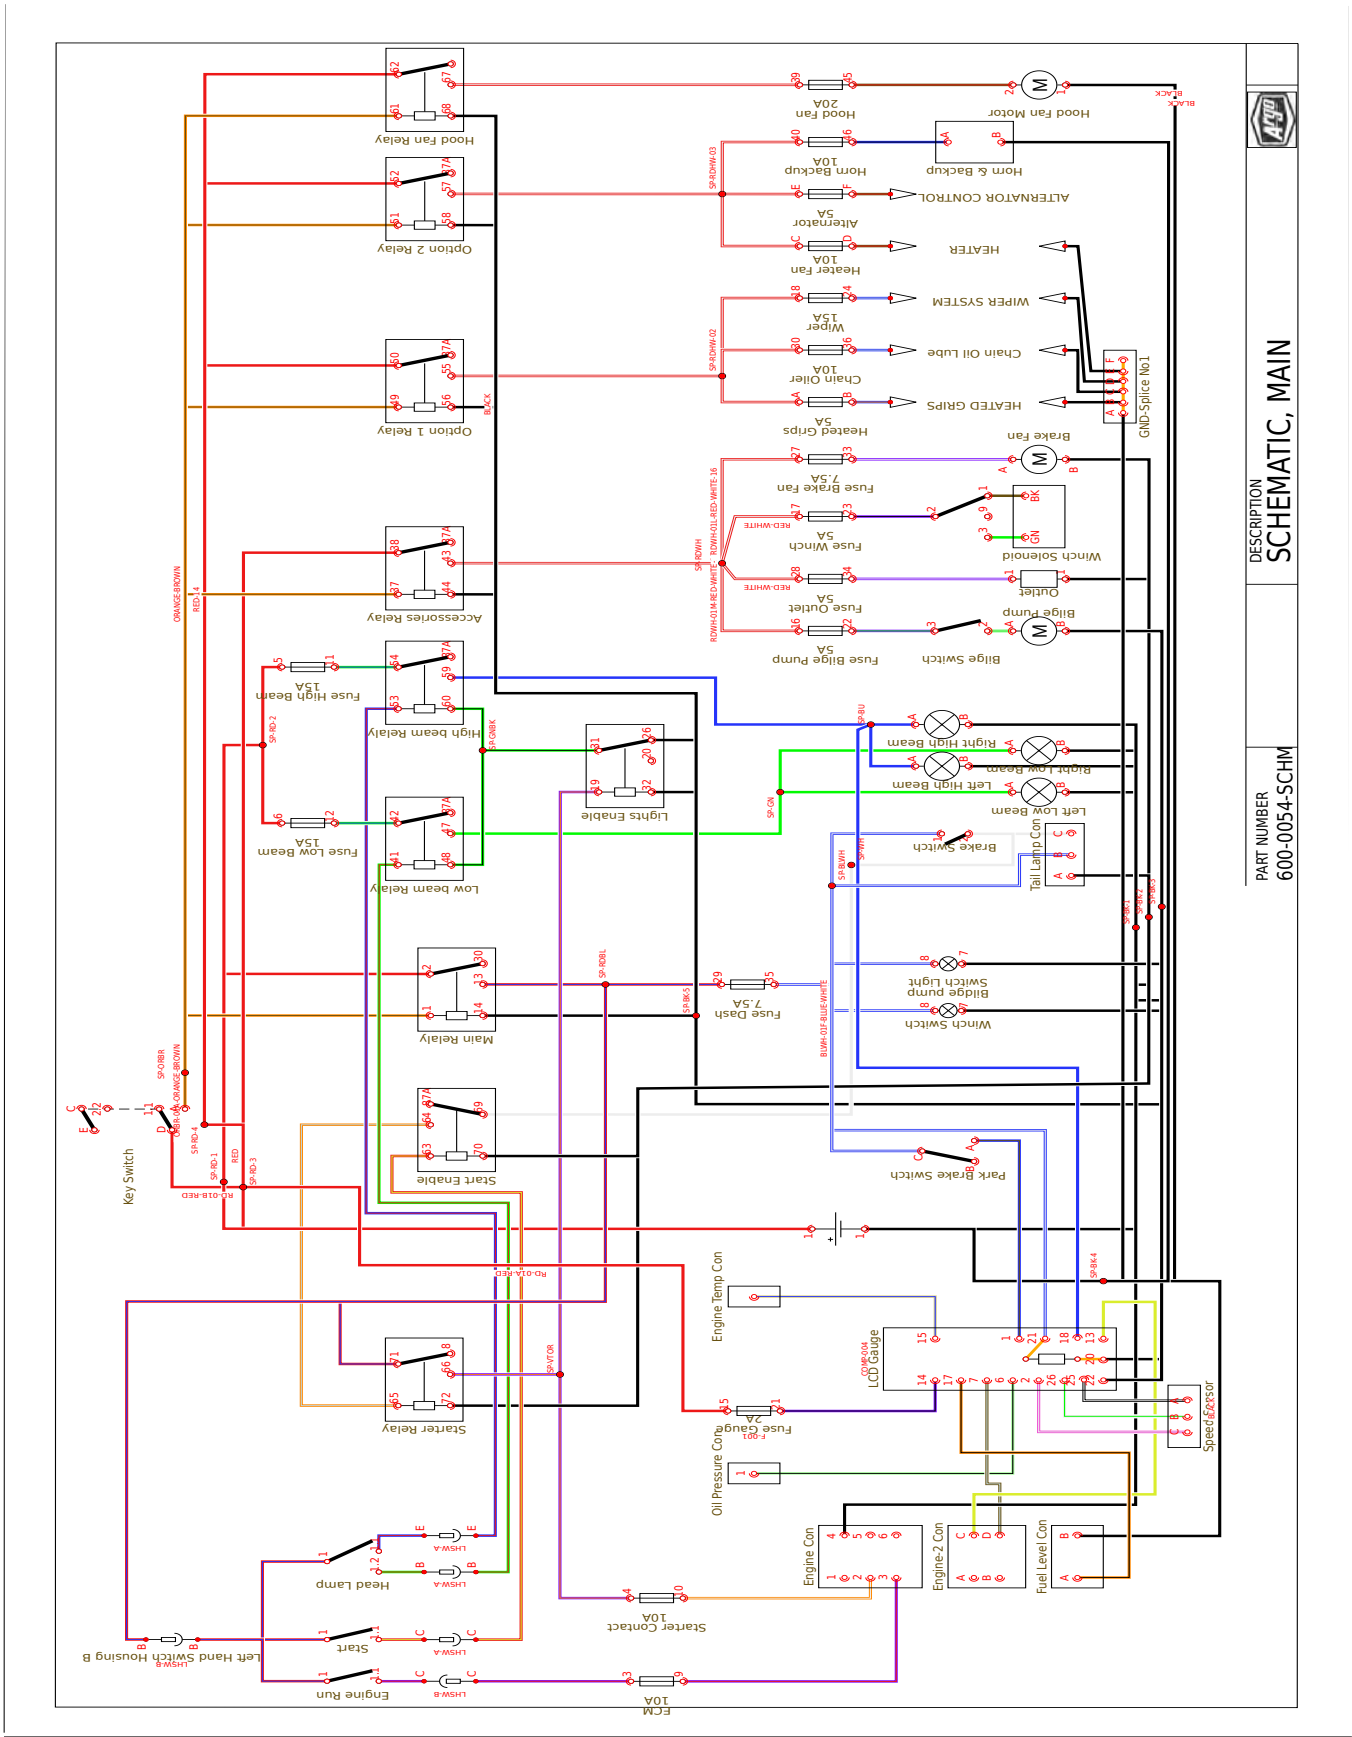

600-241 Harness Adapter for 800 Kawasaki - Print To 11x17 Paper

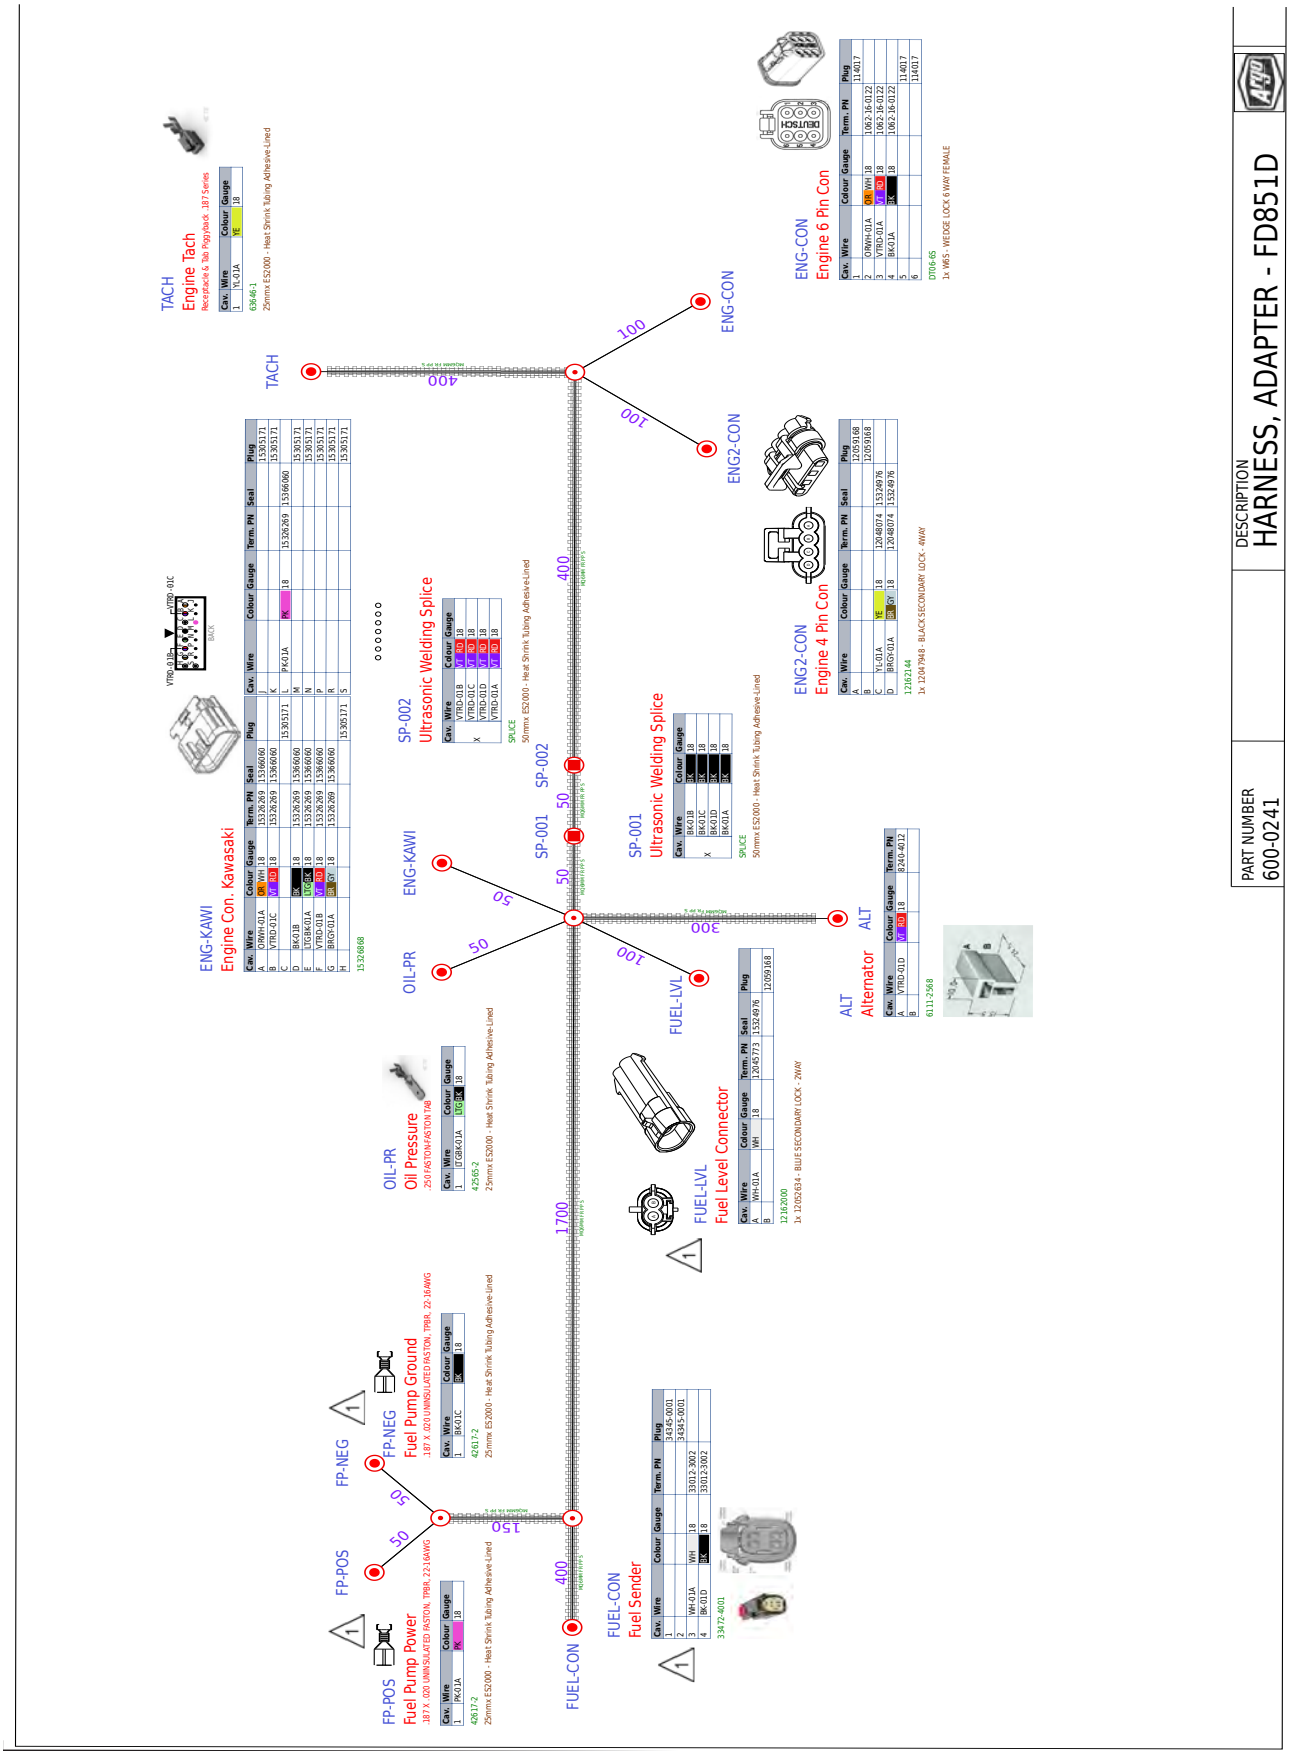

600-0054 Wire Harness Connectors and Colour Codes - Print To 11x17 Paper


Fuse Box


Cav.	Wire	Colour	GA	Term. PN	Seal	Plug
1	ORBR-01C	OR BR	18	12077411	15324985	
2	RD-01G	RD	14	12129493	15324982	
3	VTRD-01B	VT RD	18	12077411	15324985	
4	VTOR-01A	VT OR	18	12077411	15324985	
5	RD-01P	RD	18	12077411	15324985	
6	RD-01N	RD	18	12077411	15324985	
7						12010300
8						12010300
9	VTRD-01A	VT RD	18	12077411	15324985	
10	ORWH-01A	OR WH	18	12077411	15324985	
11	GNBL-01B	GN BL	18	12077411	15324985	
12	GNBL-01A	GN BL	18	12077411	15324985	
13	RDBL-01B	RD BL	14	12129493	15324982	
14	BK-01AF	BK	18	12077411	15324985	
15	RD-01A	RD	18	12077411	15324985	
16	RDWH-01M	RD WH	16	15363933	15324982	
17	RDWH-01P	RD WH	16	15363933	15324982	
18	RDWH-01F	RD WH	16	15363933	15324982	
19	VTOR-01C	VT OR	18	12077411	15324985	
20						12010300
21	VTBK-01A	VT BK	18	12077411	15324985	
22	VTGN-01A	VT GN	18	12077411	15324985	
23	VTBK-01B	VT BK	18	12077411	15324985	
24						12010300

Cav.	Wire	Colour	GA	Term. PN	Seal	Plug
25						12010300
26	BK-01AE	BK	18	12077411	15324985	
27	RDWH-01L	RD WH	16	15363933	15324982	
28	RDWH-01N	RD WH	16	15363933	15324982	
29	RDBL-01A	RD BL	14	12129493	15324982	
30	RDWH-01E	RD WH	18	12077411	15324985	
31	GNBK-01C	GN BK	18	12077411	15324985	
32	BK-01AJ	BK	18	12077411	15324985	
33	VTWH-01C	VT WH	18	12077411	15324985	
34	VTWH-01A	VT WH	18	12077411	15324985	
35	BLWH-01D	BL WH	18	12077411	15324985	
36						12010300
37	ORBR-01D	OR BR	18	12077411	15324985	
38	RD-01D	RD	14	12129493	15324982	
39	RDWH-01D	RD WH	16	15363933	15324982	
40	RDWH-01K	RD WH	18	12077411	15324985	
41	GNRD-01A	GN RD	18	12077411	15324985	
42	GNBL-01A	GN BL	18	12077411	15324985	
43	RDWH-01A	RD WH	14	12129493	15324982	
44	BK-01AD	BK	18	12077411	15324985	
45	BRRD-01A	BR RD	16	15363933	15324982	
46	BLBK01A	BL BK	18	12077411	15324985	
47	GN-01C	GN	16	15363933	15324982	
48	GNBK-01A	GN BK	18	12077411	15324985	

Cav.	Wire	Colour	GA	Term. PN	Seal	Plug
49	ORBR-01F	OR BR	18	12077411	15324985	
50	RD-01F	RD	14	12129493	15324982	
51	ORBR-01E	OR BR	18	12077411	15324985	
52	RD-01H	RD	14	12129493	15324982	
53	BLRD-01A	BL RD	18	12077411	15324985	
54	GNBL-01B	GN BL	18	12077411	15324985	
55	RDWH-01B	RD WH	14	12129493	15324982	
56	BK-01AG	BK	18	12077411	15324985	
57	RDWH-01G	RD WH	14	12129493	15324982	
58	BK-01AH	BK	18	12077411	15324985	
59	BL-01C	BL	16	15363933	15324982	
60	GNBK-01B	GN BK	18	12077411	15324985	
61	ORBR-01B	OR BR	18	12077411	15324985	
62	RD-01C	RD	14	12129493	15324982	
63	RDYE-01A	RD YE	18	12077411	15324985	
64	ORGY-01A	OR GY	18	12077411	15324985	
65	ORGY-01A	OR GY	18	12077411	15324985	
66	VTOR-01B	VT OR	16	15363933	15324982	
67	RDWH-01D	RD WH	16	15363933	15324982	
68	BK-01F	BK	18	12077411	15324985	
69	WH-01A	WH	18	12077411	15324985	
70	BK-01X	BK	18	12077411	15324985	
71	RDBL-01D	RD BL	16	15363933	15324982	
72	BK-01J	BK	18	12077411	15324985	



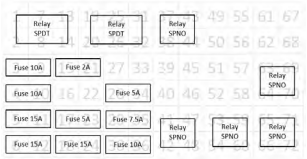

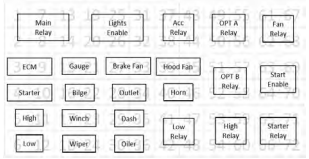

BATT-POS
BATT POSITIVE POST



Cav.	Wire	Colour	Gauge
1	RD-01E	RD	10
	RD-01L	RD	10

1 RING
50mm- CPA 100 RED - Terminal Heat shrink Tubing
1x RING TERMINAL - For M6 Stud


BATT-GND
Battery GND Post



Cav.	Wire	Colour	Gauge
1	BK-01A	BK	10
	BK-01AA	BK	10

1 RING
50mm- CPA 100 - Terminal Heat shrink Tubing
1x RING TERMINAL - For M6 Stud


LHSW-A
LH Switch Housing A



Cav.	Wire	Colour	Gauge	Term. PN	Seal	Plug
A						7160-9465
B	GNRD-01A	GN RD	18	1500-0110	7160-8234	
C	RDYE-01A	RD YE	18	1500-0110	7160-8234	
D						7160-9465
E	BLRD-01A	BL RD	18	1500-0110	7160-8234	
F						7160-9465

6180-6181

LHSW-B
LH Switch Housing B



Cav.	Wire	Colour	Gauge	Term. PN	Seal	Plug
A						7160-9465
B	RDBL-01C	RD BL	16	1500-0105	7160-8234	
C	VTRD-01B	VT RD	18	1500-0105	7160-8234	
D						7160-9465
E						7160-9465
F						7160-9465

6189-6171

HB-CON
Horn & Backup Con



Cav.	Wire	Colour	Gauge	Term. PN	Seal
A	BLBK-01A	BL BK	18	12048074	15324976
B	BK-01AC	BK	18	12048074	15324976

12052641
1x 12052634 - BLUE SECONDARY LOCK - 2WAY

USB-GND
USB GND



Cav.	Wire	Colour	Gauge	Term. PN
1	BK-01T	BK	18	1-160759-1

154719-0

USB-POS
USB 12V



Cav.	Wire	Colour	Gauge	Term. PN
1	VTWH-01A	VT WH	18	1-160759-1

154719-0

WINCH_IN
Winch In



Cav.	Wire	Colour	Gauge	Term. PN
GN	GN-01B	GN	18	1-160759-1

154719-5

WINCH_OUT
Winch Out



Cav.	Wire	Colour	Gauge	Term. PN
BK	BR-01A	BR	14	154718-3

154719-0

OIL-PRESS
Oil Pressure



Cav.	Wire	Colour	Gauge	Term. PN
1	LTGNBY-01A	LTGBK	18	1-160759-1

154719-0

BRAKE
Brake switch 1 2



Cav.	Wire	Colour	Gauge	Term. PN
1	BLWH-01A	BL WH	18	1062-20-0122
2	WH-01C	WH	18	1062-20-0122

DTM06-2S
1x WM-2S - WEDGE LOCK 2WY PLUG

KEY
Key Switch



Cav.	Wire	Colour	Gauge	Term. PN
A	ORBR-01A	OR BR	16	12034046
B				
C				
D	RD-01B	RD	16	12034046

12052856
1x 15324456 - Delphi TPA

BPS
Bilge Pump Switch



Cav.	Wire	Colour	Gauge	Term. PN
1				
2	GNWH-01A	GN WH	18	0-0060295-2
3	VTGN-01A	VT GN	18	0-0060295-2
4				
5				
6				
7	BK-01M	BK	18	0-0060295-2
8	BLWH-01C	BL WH	18	0-0060295-2

VCH-01

WSW
Winch Switch



Cav.	Wire	Colour	Gauge	Term. PN
1	BR-01A	BR	14	42100-2
2	VTBK-01B	VT BK	18	0-0060295-2
3	GN-01B	GN	18	0-0060295-2
4				
5				
6				
7	BK-01U	BK	18	0-0060295-2
8	BLWH-01E	BL WH	18	0-0060295-2
9				
10				

VC1-02

ENG-CON
Engine Connector



Cav.	Wire	Colour	Gauge	Term. PN	Plug
1					114017
2	ORWH-01A	OR WH	18	1060-16-0122	
3	VTRD-01A	VT RD	18	1060-16-0122	
4	BK-01L	BK	18	1060-16-0122	
5					114017
6					114017

DT04-6P
1x W6P - WEDGE LOCK 6WY RECEPTACLE

SS
Wheel Speed Sensor



Cav.	Wire	Colour	Gauge	Term. PN	Seal
A	BKWH-01A	BK WH	18	1500-0110	
B	WHGN-01A	WH GN	22	1500-0110	
C	PKWH-01A	PK WH	18	1500-0110	

6180-3241

IC
Cluster



Cav.	Wire	Colour	Gauge	Term. PN	Plug
1	BLBR-01A	BL BR	18	3-1447221-3	
2	PKWH-01A	PK WH	18	3-1447221-3	
3					4-1437284-3
4					4-1437284-3
5					4-1437284-3
6	LTGNBY-01A	LTGBK	18	3-1447221-3	
7	BRGY-01A	BR GY	18	3-1447221-3	
8					4-1437284-3
9					4-1437284-3
10					4-1437284-3
11					4-1437284-3
12					4-1437284-3
13	YL-01A	YE	18	3-1447221-3	

Cav.	Wire	Colour	Gauge	Term. PN	Seal	Plug
14	VTBK-01A	VT BK	18	3-1447221-3		
15	BEBL-01A	BE BL	18	3-1447221-3		
16						4-1437284-3
17	ORBK-01A	OR BK	18	3-1447221-3		
18	BL-01D	BL	18	3-1447221-3		
19						4-1437284-3
20	BK-01K	BK	18	3-1447221-3		
21	BLWH-01B	BL WH	18	3-1447221-3		
22	BK-01Y	BK	18	3-1447221-3		
23						4-1437284-3
24						4-1437284-3
25	BKWH-01A	BK WH	18	3-1447221-3		
26	WHGN-01A	WH GN	22	3-1447221-4		

3-1437290-7

SW-PB
Park Brake Switch



Cav.	Wire	Colour	Gauge	Term. PN	Seal	Plug
A	BLBR-01A	BL BR	18	12048074	15324976	
B						12059168
C	BLWH-01F	BL WH	18	12048074	15324976	

12110293
1x 12052845 - CREAM SECONDARY LOCK - 3WAY

TL-CON
Tail Light Connector



Cav.	Wire	Colour	Gauge	Term. PN	Seal
A	BK-01Z	BK	18	12048074	15324976
B	BLWH-01G	BL WH	18	12048074	15324976
C	WH-01B	WH	18	12048074	15324976

12110293
1x 12052845 - CREAM SECONDARY LOCK - 3WAY

BF-CON
Brake Fan Connector



Cav.	Wire	Colour	Gauge	Term. PN	Seal
A	VTWH-01C	VT WH	18	12048074	15324976
B	BK-01H	BK	18	12048074	15324976

12052641
1x 12052634 - BLUE SECONDARY LOCK - 2WAY

BP-CON
Bilge Pump Connector



Cav.	Wire	Colour	Gauge	Term. PN	Seal
A	GNWH-01A	GN WH	18	12048074	15324976
B	BK-01G	BK	18	12048074	15324976

12052641
1x 12052634 - BLUE SECONDARY LOCK - 2WAY

FL-CON
Fuel Level Con



Cav.	Wire	Colour	Gauge	Term. PN	Seal
A	ORBK-01A	OR BK	18	12048074	15324976
B	BK-01E	BK	18	12048074	15324976

12052641
1x 12052634 - BLUE SECONDARY LOCK - 2WAY

ENG2-CON
Engine Connector 2



Cav.	Wire	Colour	Gauge	Term. PN	Seal	Plug
A						12059168
B						12059168
C	YL-01A	YE	18	12045773	15324976	
D	BRGY-01A	BR GY	18	12045773	15324976	

12162102
1x 12047948 - BLACK SECONDARY LOCK - 4WAY

HF-CON
Hood Fan Connector



Cav.	Wire	Colour	Gauge	Term. PN
1	BK-01AB	BK	16	42100-2
2	BRRD-01A	BR RD	16	42100-2

926474-1

FB-ACC
Fuse Block Acc



Cav.	Wire	Colour	Gauge	Term. PN	Seal	Plug
A	RDWH-01C	RD WH	18	12077411	15324985	
B						12010300
C	RDWH-01H	RD WH	16	15363933	15324982	
D						12010300
E	RDWH-01J	RD WH	18	12077411	15324985	
F						12010300

12059573
1x 12110783 - Tree Mounting Clip
1x 600-0158 - LABEL SECONDARY FUSE PANEL - INSTALL ON SIDE OF COVER
1x 38075 - Delphi 6 pos Metripack 280 cap

GND
Ground Con.



Cav.	Wire	Colour	Gauge	Term. PN	Seal	Plug
A	BK-01S	BK	12	12129493	15324980	
B						12010300
C						12010300
D						12010300
E						12010300
F						12010300

12059573
1x 38075 - Delphi 6 pos Metripack 280 cap
1x 12110783 - Tree Mounting Clip
1x 38074 - Common Bar 38074, 6 Gang

LHB
Left High Beam



Cav.	Wire	Colour	Gauge	Term. PN	Seal
A	BL-01A	BL	18	12077411	15324985
B	BK-01P	BK	18	12077411	15324985

12059183

LLB
Left Low Beam



Cav.	Wire	Colour	Gauge	Term. PN	Seal
A	GN-01A	GN	18	12077411	15324985
B	BK-01W	BK	18	12077411	15324985

12059183


RHB
Right High Beam



Cav.	Wire	Colour	Gauge	Term. PN	Seal
A	BL-01B	BL	18	12077411	15324985
B	BK-01Q	BK	18	12077411	15324985

12059183

RLB
Righ Low Beam



Cav.	Wire	Colour	Gauge	Term. PN	Seal
A	GN-01E	GN	18	12077411	15324985
B	BK-01R	BK	18	12077411	15324985

12059183

ENG-TEMP
Engine Temperature



Cav.	Wire	Colour	Gauge	Term. PN
1	BEBL-01A	BE BL	18	1-160759-1


154719-0

PART NUMBER 600-0054

DESCRIPTION Harness, Main

Ontario Drive & Gear Limited
PH.(519)- 662-2840 FAX (519)- 662-2421
www.argoutv.com


Wiring Schematics:600-0246 (Models 650/700) Print To 11x17 Paper

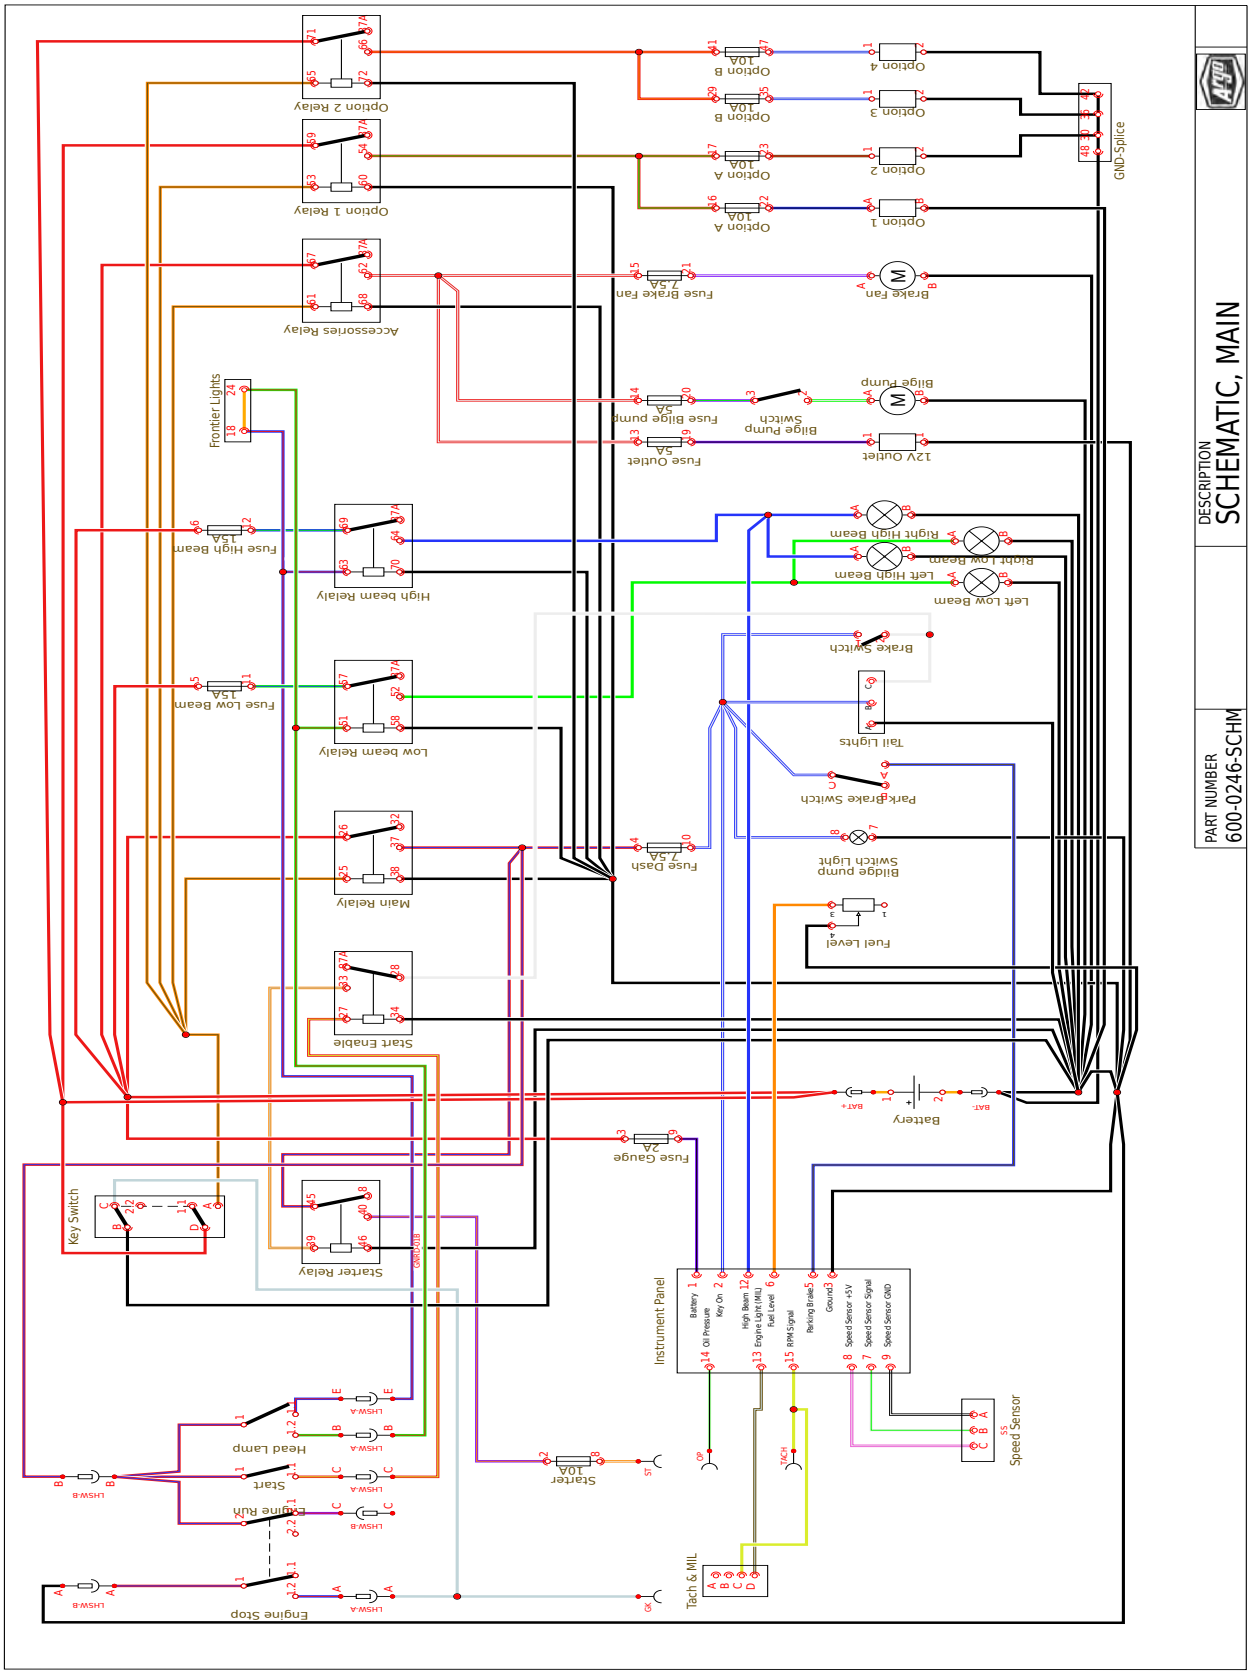


600-0246 Wire Harness Connectors and Colour Codes - Print To 11x17 Paper

PART NUMBER 600-0246 DESCRIPTION: HARNESS, MAIN


Wiring Schematics:600-0191 (Model 600's) Print To 11x17 Paper

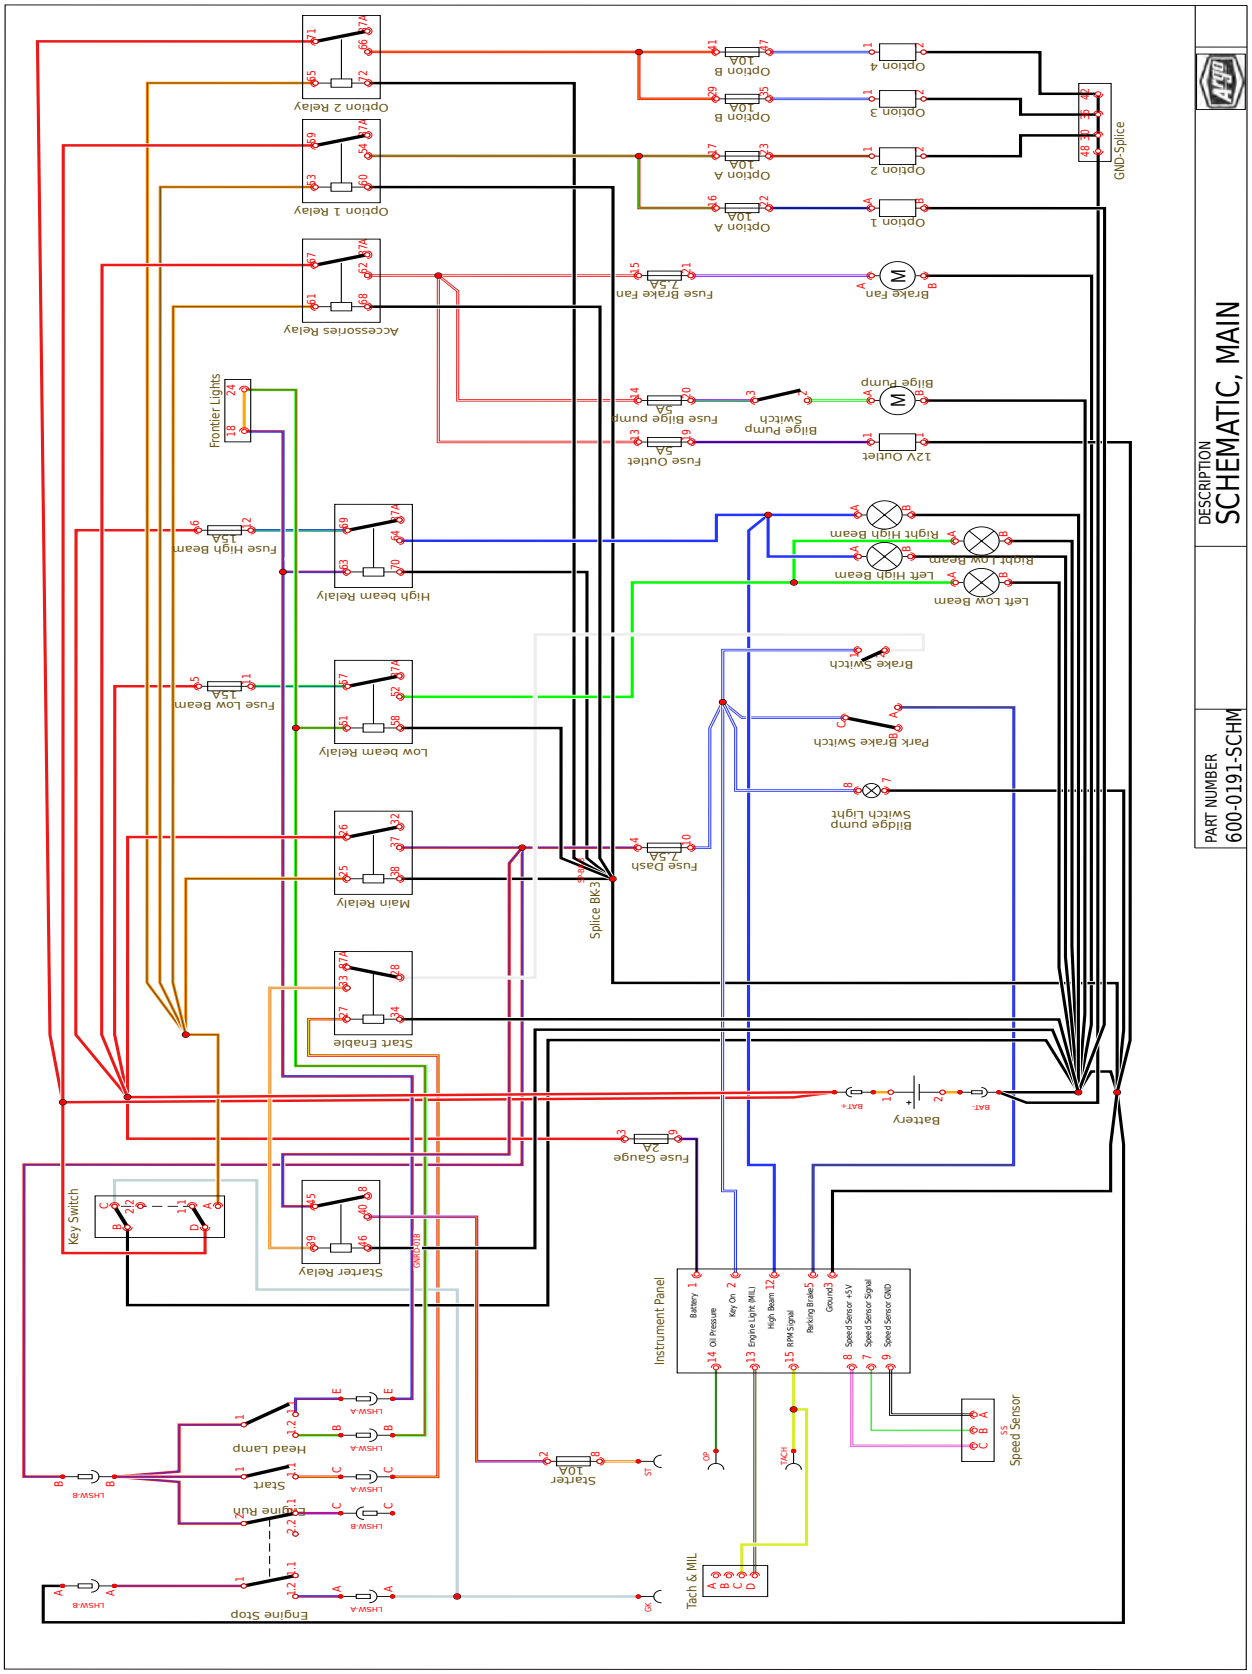

600-0191 Wire Harness Connectors and Colour Codes - Print To 11x17 Paper

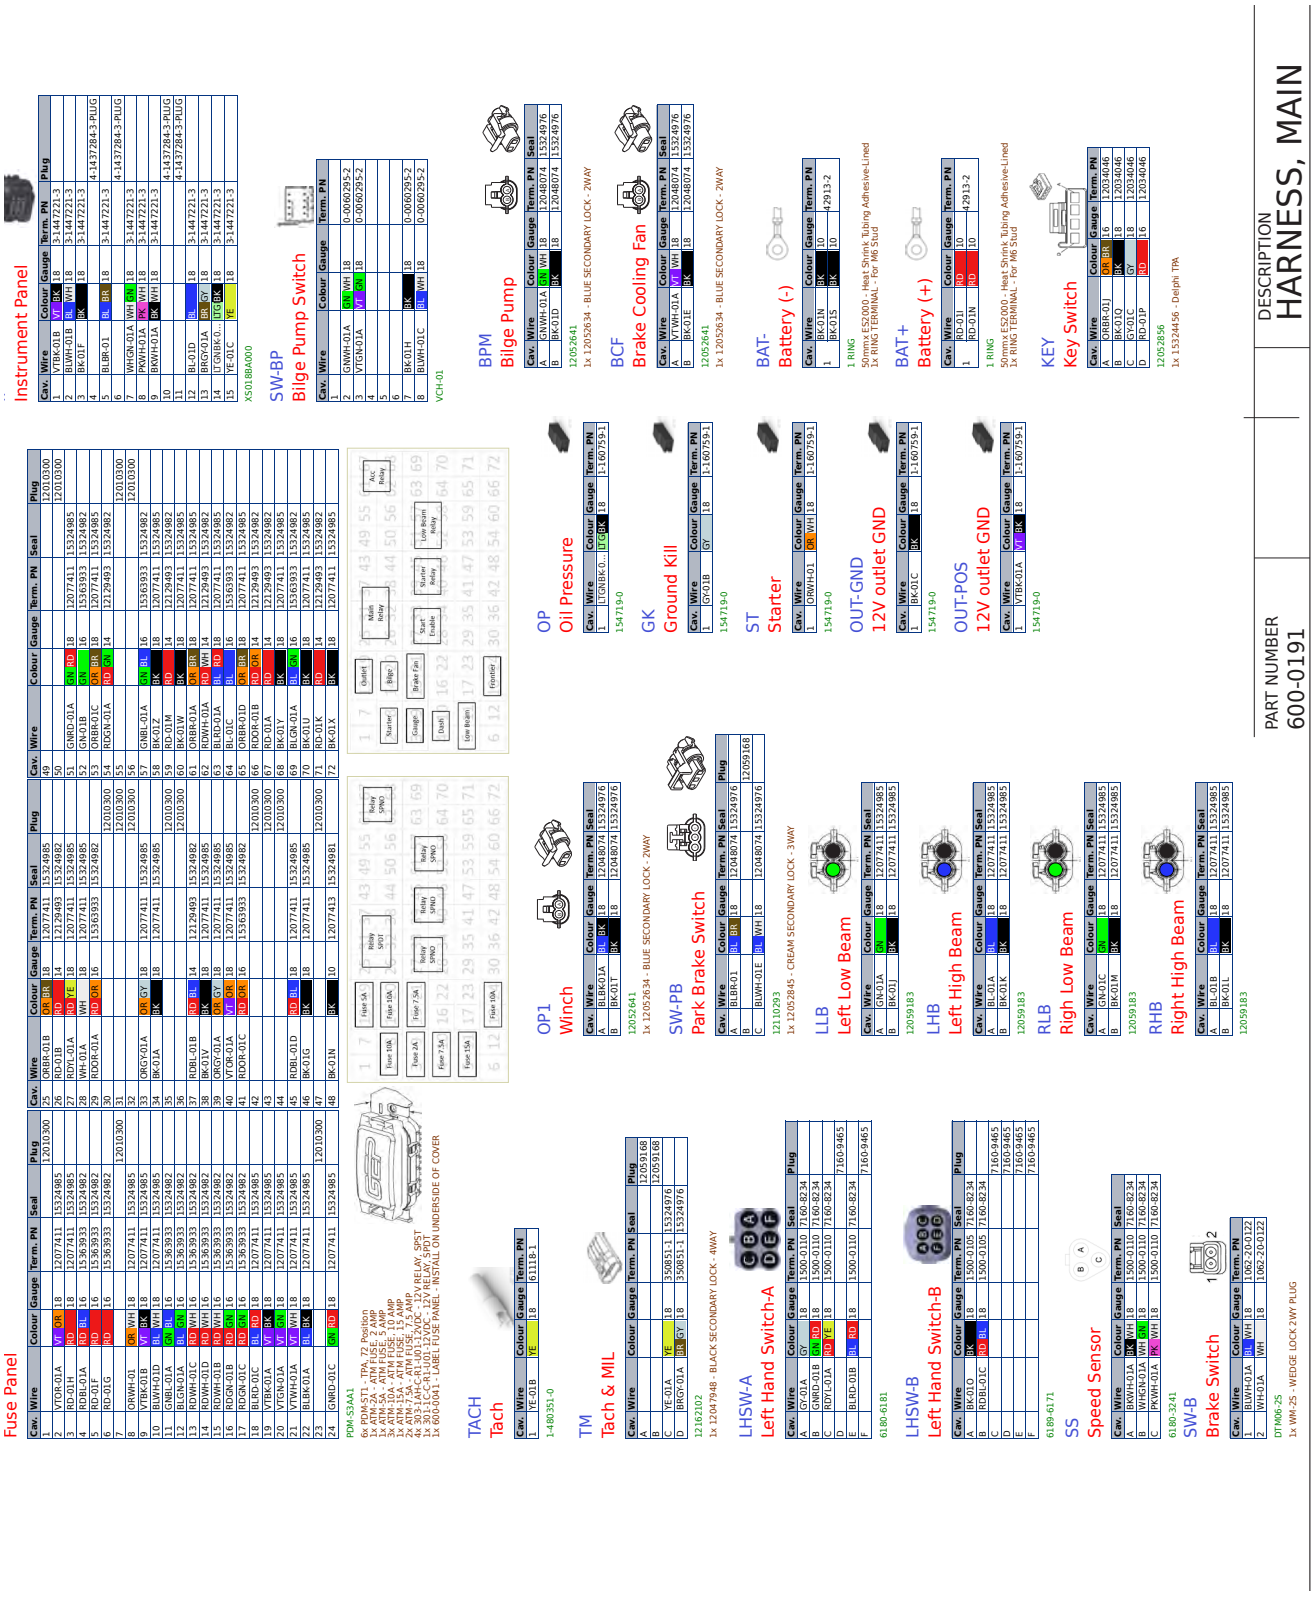

600-0008 EU Wire Harness Schematic (600 EU Models) - Print To 11x17 Paper

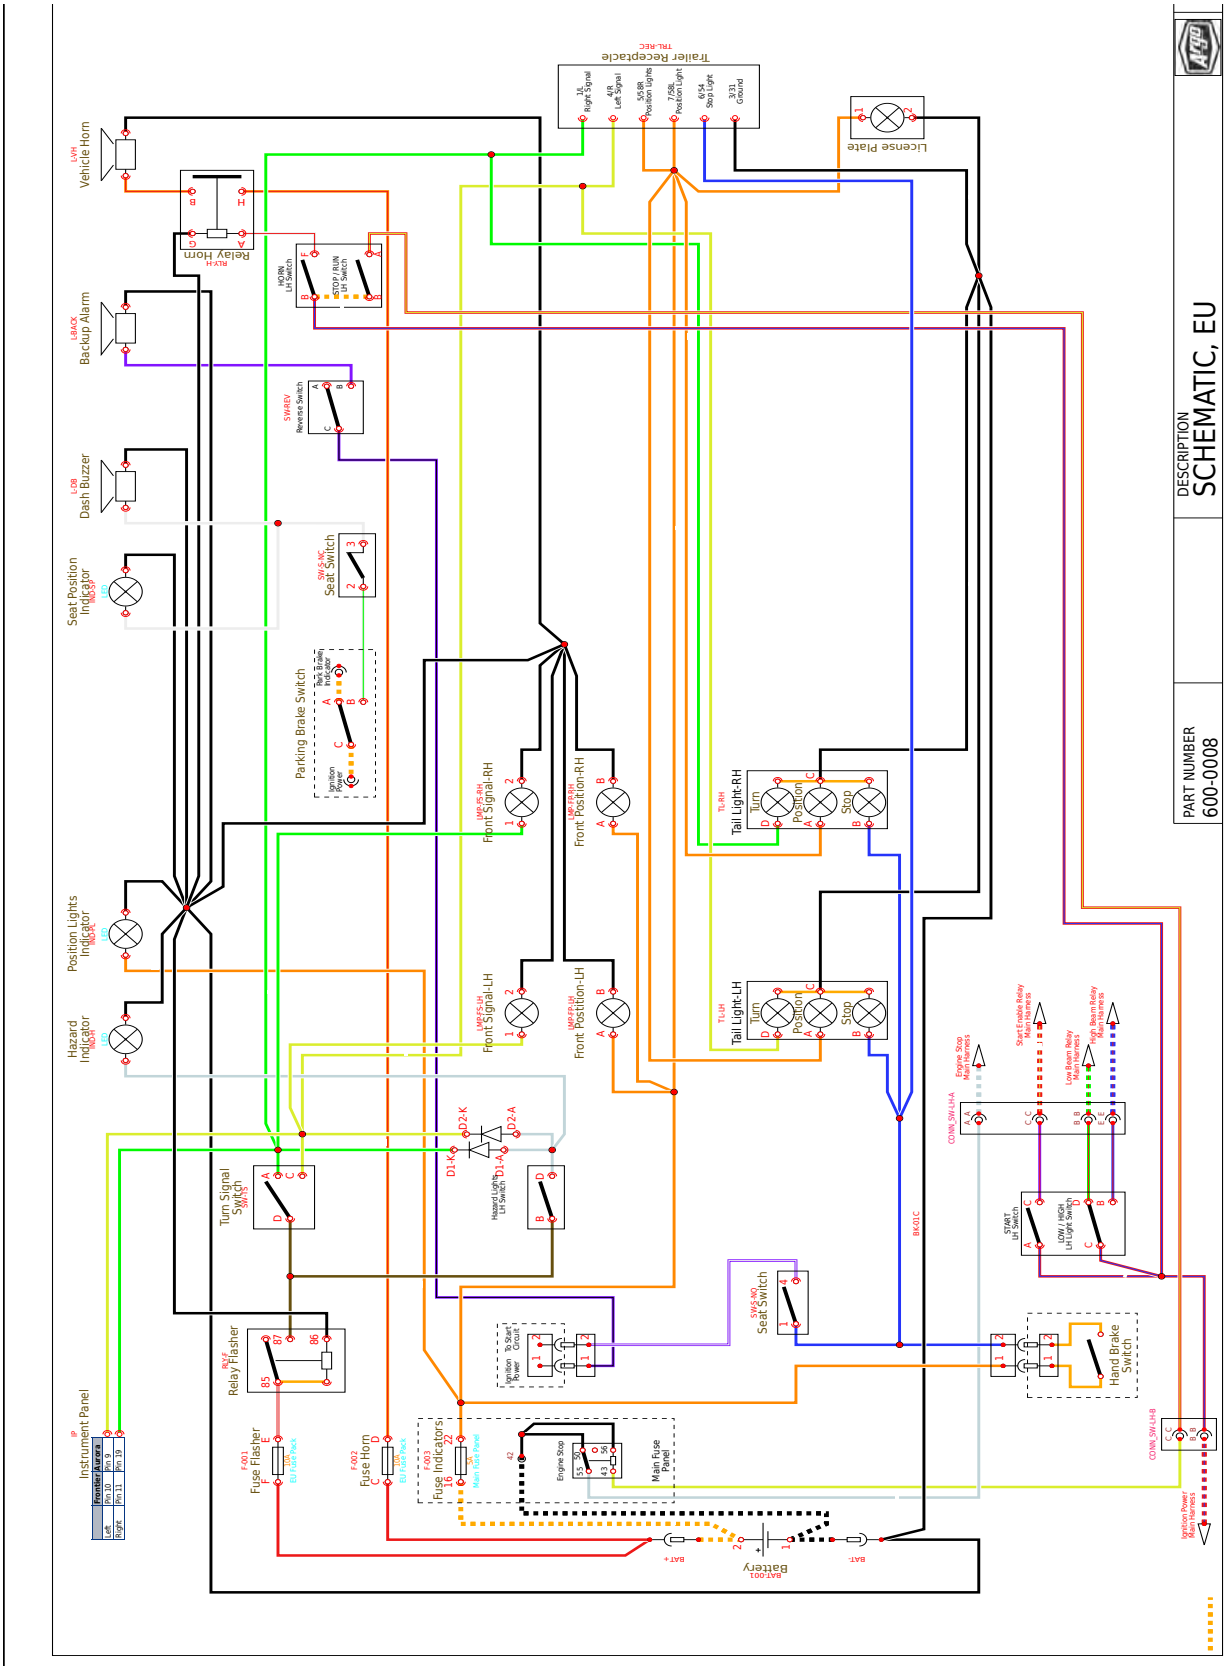

600-0008 EU Wire Harness Connectors and Colour Codes - Print To 11x17 Paper

FP
Main Fuse Panel

Cav.	Wire	Colour	Gauge	Term. PN	Seal
22	OR-01L	OR	16	15363933	15324982

PDM-S3AA1

1x NOTE - Terminal and Wire Seal Only

EU-F
EU Fuse Pack

Cav.	Wire	Colour	Gauge	Term. PN	Seal
A	WHRD-01A	WH RD	18	12077411	12089679
B	ORRD-01A	OR RD	16	12129493	12015323
C	RD-01B	RD	16	12129493	12015323
D	ORRD-01B	OR RD	16	12129493	12015323
E	RDWH-01A	RD WH	16	12129493	12015323
F	RD-01A	RD	16	12129493	12015323
G	BK-01A	BK	16	12077411	12089679
H	ORRD-01B	OR RD	16	12129493	12015323

CFH-AL5

1x 32006-A22 - Power Distribution Connecter Black

1x B151-71B4L - Power Distribution Cover Long

1x B028-7013-SRV - Power Distribution Bracket Side

IP
Instrument Panel

Wire	Colour	Gauge	Term. PN	Frontier	Aurora
YE-01A	YE	18	3-1447221-3	10	9
GN-01F	GN	18	3-1447221-3	11	19

3-1437290-7

1x NOTE - Terminal Only

RLY-FL
Flasher Relay

Cav.	Wire	Colour	Gauge	Term. PN
30				
85	RDWH-01A	RD WH	16	42100-2
86	BK-01A	BK	18	42100-2
87	BK-01B	BK	16	42100-2
87A				

3-334-485-008

L-VH+
Vehicle Horn (+)

Cav.	Wire	Colour	Gauge	Term. PN
1	ORRD-01A	OR RD	16	1-160759-1

154719-0

L-VH-
Vehicle Horn (-)

Cav.	Wire	Colour	Gauge	Term. PN
1	BK-01Q	BK	16	1-160759-1

154719-0

IND-H-
Hazard Indicator (-)

Cav.	Wire	Colour	Gauge	Term. PN
1	BK-01D	BK	18	1-160759-1

154719-0

IND-PL+
Position Lights Indicator (+)

Cav.	Wire	Colour	Gauge	Term. PN
1	OR-01J	OR	18	1-160759-1

154719-0

IND-PL-
Position Lights Indicator (-)

Cav.	Wire	Colour	Gauge	Term. PN
1	BK-01B	BK	18	1-160759-1

154719-0

IND-SP+
Seat Position Indicator (+)

Cav.	Wire	Colour	Gauge	Term. PN
1	WH-01B	WH	18	1-160759-1

154719-0

IND-SP-
Seat Position Indicator (-)

Cav.	Wire	Colour	Gauge	Term. PN
1	BK-01G	BK	18	1-160759-1

154719-0

L-DB+
Dash Buzzer (+)

Cav.	Wire	Colour	Gauge	Term. PN
1	WH-01C	WH	18	1-160759-1

154719-0

L-DB-
Dash Buzzer (-)

Cav.	Wire	Colour	Gauge	Term. PN
1	BK-01H	BK	18	1-160759-1

154719-0

IND-H+
Hazard Indicator (+)

Cav.	Wire	Colour	Gauge	Term. PN
1	GY-01D	GY	16	1-160759-1

154719-0

LMP-LP
License Plate Lamp

Cav.	Wire	Colour	Gauge	Term. PN
1	OR-01G	OR	18	8230-4282
2	BK-01E	BK	18	8230-4282

6187-2801

SW-SS
Seat Switch

Cav.	Wire	Colour	Gauge	Term. PN
1	RD-01D	RD	18	12034046
2	WHGN-01A	WH GN	18	12034046
3	WH-01A	WH	18	12034046
4	VTWH-01A	VT WH	18	12034046

96546

LMP-FS-RH
Front Signal-RH

Cav.	Wire	Colour	Gauge	Term. PN
1	GN-01B	GN	18	8230-4282
2	BK-01K	BK	18	8230-4282

6187-2801

LMP-FS-LH
Front Signal-LH

Cav.	Wire	Colour	Gauge	Term. PN
1	YE-01E	YE	18	8230-4282
2	BK01M	BK	18	8230-4282

6187-2801

TL-LH
Tail Light-LH

Cav.	Wire	Colour	Gauge	Term. PN
A	OR-01E	OR	18	1500-0110
B	BL-01A	BL	18	1500-0110
C	BK-01D	BK	18	1500-0110
D	YE-01F	YE	18	1500-0110

6180-4181

TL-RH
Tail Light-RH

Cav.	Wire	Colour	Gauge	Term. PN
A	OR-01K	OR	18	1500-0110
B	BL-01E	BL	18	1500-0110
C	BK01R	BK	18	1500-0110
D	GN-01D	GN	18	1500-0110

6180-4181

BAT-
Battery (-)

Cav.	Wire	Colour	Gauge
1	BK-01C	BK	12
1	BK-01J	BK	12

485029-1

50mm- ES2000 - Heat Shrink Tubing Adhesive-Lined

1x RING TERMINAL - For M6 Stud

BAT+
Battery (+)

Cav.	Wire	Colour	Gauge
1	RD-01A	RD	16
1	RD-01B	RD	16

485029-1

50mm- ES2000 - Heat Shrink Tubing Adhesive-Lined

1x RING TERMINAL - For M6 Stud

LMP-FP-RH
Front Position-RH

Cav.	Wire	Colour	Gauge	Term. PN	Seal
A	OR-01C	OR	18	12048074	15324976
B	BK-01K	BK	18	12048074	15324976

12052641

1x 12052634 - BLUE SECONDARY LOCK - 2WAY

LMP-FP-LH
Front Position-LH

Cav.	Wire	Colour	Gauge	Term. PN	Seal
A	OR-01F	OR	18	12048074	15324976
B	BK-01L	BK	18	12048074	15324976

12052641

1x 12052634 - BLUE SECONDARY LOCK - 2WAY

SW-KY-A

Cav.	Wire	Colour	Gauge	Term. PN	Plug
A	RDBL-01D	RD BL	18	1500-0110	
B	BR-01C	BR	16	1500-0110	
C	CTRD-01A	VT RD	18	1500-0110	
D	BR-01A	BR	16	1500-0110	
E					7160-9465
F	WHRD-01A	WH RD	18	1500-0110	

6180-6181

SW-KY-B

Cav.	Wire	Colour	Gauge	Term. PN
A	RDYE-01A	RD YE	18	1500-0110
B	RDBL-01B	RD BL	18	1500-0110
C	RDBL-01C	RD BL	18	1500-0110
D	GY-01B	GY	16	1500-0110

6180-4181

HB-B
Hand Brake (B)

Cav.	Wire	Colour	Gauge	Term. PN
1	BK-01A	BK	18	1062-20-0122
2	BL-01C	BL	18	1062-20-0122

DTM06-2S

1x WM-2S - WEDGE LOCK 2WY PLUG

D2-A

Cav.	Wire	Colour	Gauge
A	GY-01A	GY	16

1x 1N5406 - General purpose diode, 600V 3A Thru Hole

50mm- ES2000 - Heat Shrink Tubing Adhesive-Lined

D2-K

Cav.	Wire	Colour	Gauge
K	YE-01B	YE	18

50mm- ES2000 - Heat Shrink Tubing Adhesive-Lined

SW-LH-A

Cav.	Wire	Colour	Gauge	Term. PN	Plug
A					7160-9465
B	GNRD-01A	GN RD	18	1500-0105	
C	CTRD-01A	VT RD	18	1500-0105	
D					7160-9465
E	BLRD-01A	BL RD	18	1500-0105	
F					7160-9465

6189-6171

SW-LH-B

Cav.	Wire	Colour	Gauge	Term. PN	Plug
A					7160-9465
B	RDBL-01A	RD BL	18	1500-0110	
C	RDYE-01A	RD YE	18	1500-0110	
D					7160-9465
E					7160-9465
F					7160-9465

6180-6181

SW-KY-C

Cav.	Wire	Colour	Gauge	Term. PN
A	GN-01A	GN	16	1500-0110
B	BLRD-01A	BL RD	18	1500-0110
C	YE-01D	YE	16	1500-0110
D	GNRD-01A	GN RD	18	1500-0110

6187-4441

SW-PB
Park Brake Switch

Cav.	Wire	Colour	Gauge	Term. PN	Seal
A					
B	WHGN-01A	WH GN	18	12048074	15324976
C					

12110293

1x 12048074 - FEMALE METRI-PACK .150 TERMINAL

1x NOTE - ***Terminal and Wire Seal Only***

HB-A
Hand Brake (A)

Cav.	Wire	Colour	Gauge	Term. PN	Plug
1	VTBK-01A	VT BK	18	1062-20-0122	
2	VTWH-01A	VT WH	18	1062-20-0122	

DTM04-2P

1x WM-2P - WEDGE LOCK 2 WAY RECEPTACLE

D1-A

Cav.	Wire	Colour	Gauge
A	GY-01C	GY	16

1x 1N5406 - General purpose diode, 600V 3A Thru Hole

50mm- ES2000 - Heat Shrink Tubing Adhesive-Lined

D1-K


Cav.	Wire	Colour	Gauge
K	GN-01E	GN	16

50mm- ES2000 - Heat Shrink Tubing Adhesive-Lined

DESCRIPTION
HARNESS, EU


PART NUMBER
600-0008


600-0327 Tach Extension Wire Harness - Required For 600's SN 19801-19983

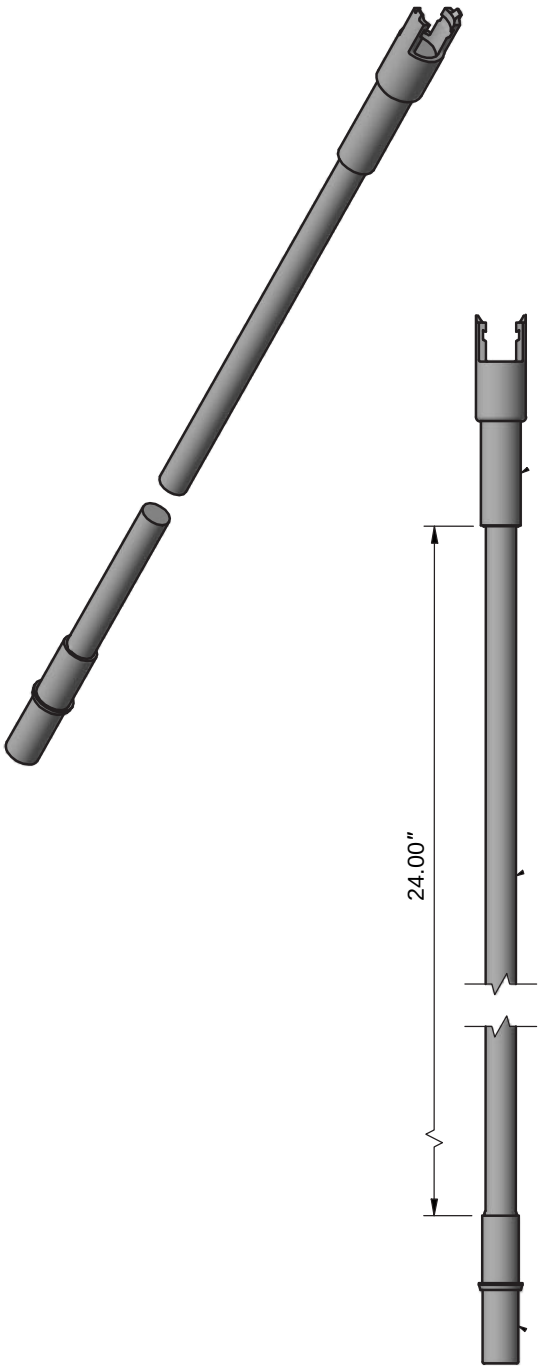



600-0237 HARNESS, TACH EXTENSIONN
(Req. for 600 vehicles from SN 19801-19983)

Frontier Gauge Plug Pin Map

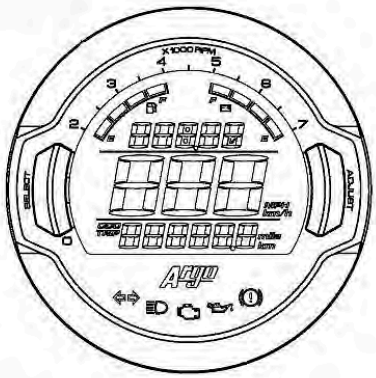

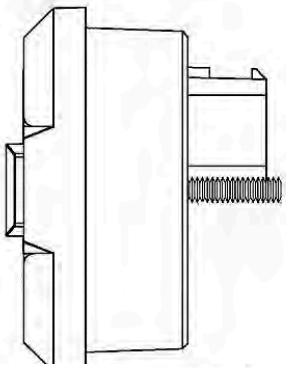


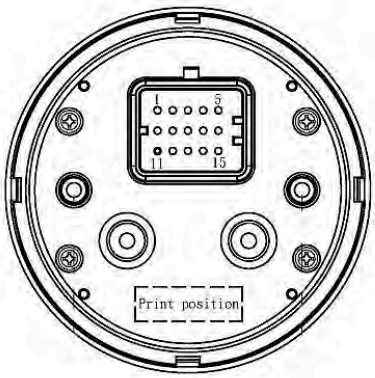


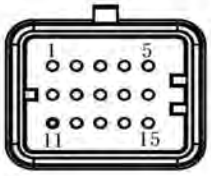



PIN1:Battery
PIN2:Key on
PIN3:GND
PIN4:X
PIN5:Parking Light
PIN6:Fuel
PIN7:Speed Signal
PIN8:Speed +5V
PIN9:Speed GND
PIN10:Left Indicator Light
PIN11:Right Indicator Ligl
PIN12:High Beam Light
PIN13:Engine Fault Light
PIN14:Oil reserve Light
PIN15:RPM

Aurora Gauge Plug Pin Map

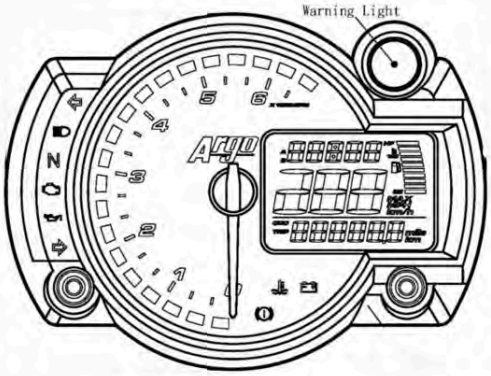

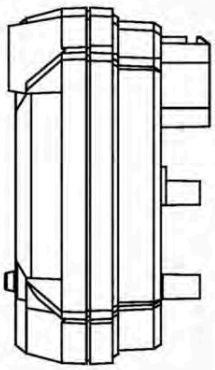

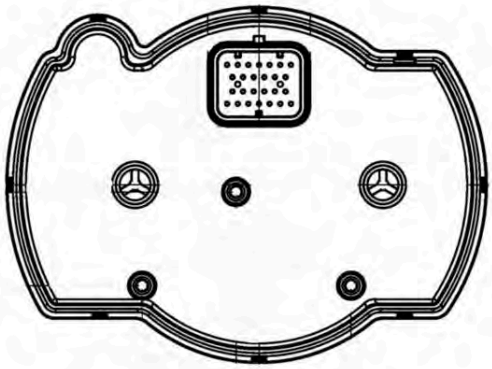

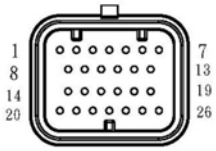

1. Parking light(+12V)
2. Speed Sensor Power(+5V)
3. X
4. X
5. X
6. Oil light(GND)
7. Engine Fault Light(GND)
8. X
9. Left Turn lignt(+12V)
10. Neutral light(+12V)
11. X
12. X
13. RPM INPUT
14. Battery(+)
15. Temperature input
16. X
17. Fuel level input
18. High beam light(+12V)
19. Right Turn lignt(+12V)
20. GND
21. KEY ON
22. Temperature Gnd
23. X
24. X
25. Speed Sensor Gnd
26. Speed Sensor single