Resource Identifier: 100342
Revision 1.0

Communicate
Without
Compromise

Domo Mesh Replay User Guide

Commercial in Confidence

0. Preface

0.1 About this Document

This document contains relevant information required to install and control the system.

The actual presentation may differ from those in this document due to hardware or software changes.

0.2 Notice about this Publication

While every attempt is made to maintain the accuracy of the information in this product manual, it is subject to change without notice.

All particulars are given in good faith, actual performance may vary.

0.3 Copyright

This document contains information that is proprietary to Domo Tactical Communications (DTC) Limited. Any copying or reproduction in any form whatsoever is prohibited without the written permission of DTC.

© 2024 Copyright Domo Tactical Communications (DTC) Limited. All rights reserved.

0.4 Document History

This is a controlled document, written and produced by the DTC Technical Publications team.

Revision	Date	Summary of Changes
1.0	02/12/2024	First release

CONTENTS

0. Preface 0-1
0.1 About this Document 0-1
0.2 Notice about this Publication 0-1
0.3 Copyright 0-1
0.4 Document History 0-1

1. Product Operation 1-1
1.1 Description 1-1
1.2 Installation 1-1
1.3 Mode Select 1-1
1.4 Recorder Mode 1-2
1.5 Player Mode 1-6

2. Appendix A: After Sales Support 2-10
2.1 Documentation and Software 2-10
2.2 Technical Support 2-10

Copyright © 2024 Domo Tactical Communications (DTC) Limited. All rights reserved.
Commercial in Confidence

1. Product Operation

1.1 Description

Domo Mesh Replay is an application which can record JSON files from an IP Mesh radio. The JSON files are saved in a zip file to a set location.

The saved recordings, or downloaded log files from a Mesh radio, can be played to a proxy web interface via the Domo Mesh Replay application.

1.2 Installation


Domo Mesh Replay comes as an executable installation file which is available from DTC's WatchDox facility, see *Section 2.1*. Double-click the executable file to begin the installation.

Follow the installation prompts, leaving settings at default (recommended). When the installation is complete, a shortcut icon will be placed on the PC desktop.



1.3 Mode Select

Double-click the desktop icon to open Domo Mesh Replay and select **Recorder** or **Player** from the Mode menu.

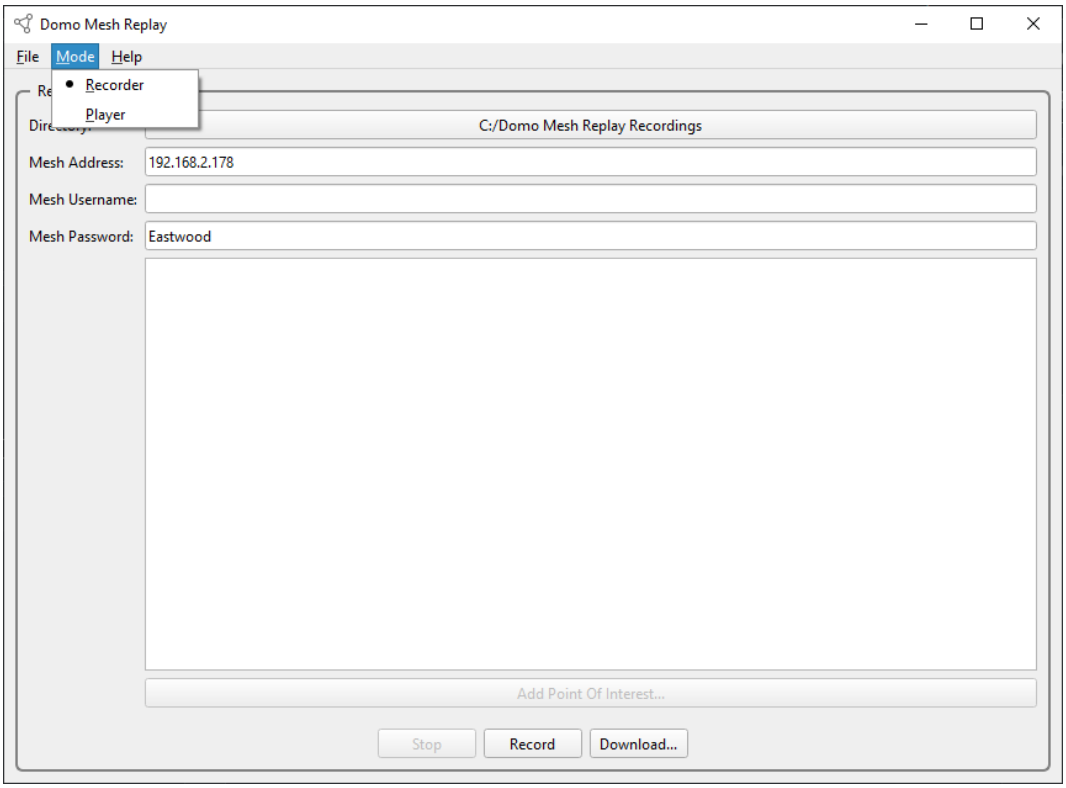

Copyright © 2024 Domo Tactical Communications (DTC) Limited. All rights reserved.
Commercial in Confidence


1.4 Recorder Mode

1.4.1 Setup

In Recorder mode, Domo Mesh Replay will save recorded JSON files in a zip file to a set directory.

Configure the **Directory** location you want to save files to and enter the **Mesh Address** and user credentials of the node to be recorded.


Default Mesh credentials are username blank, and password is *Eastwood*.

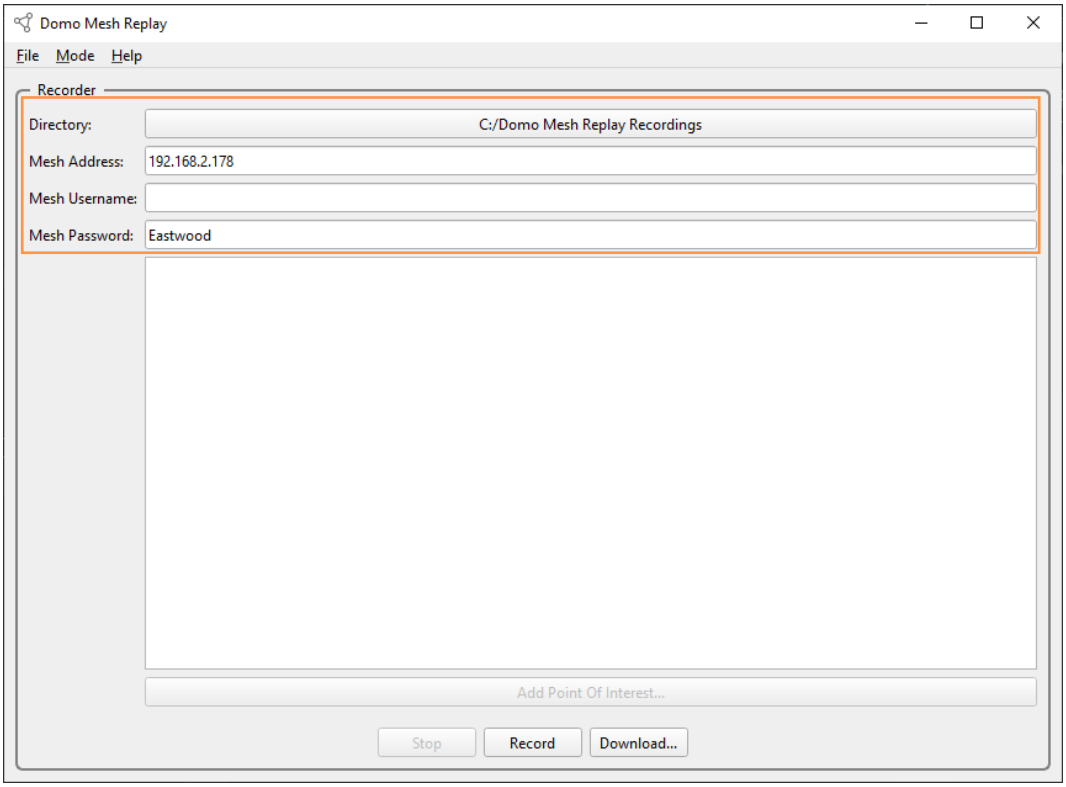


Copyright © 2024 Domo Tactical Communications (DTC) Limited. All rights reserved.
Commercial in Confidence

1.4.2 Recording

Click **Record** to begin recording and **Stop** to end the recording.

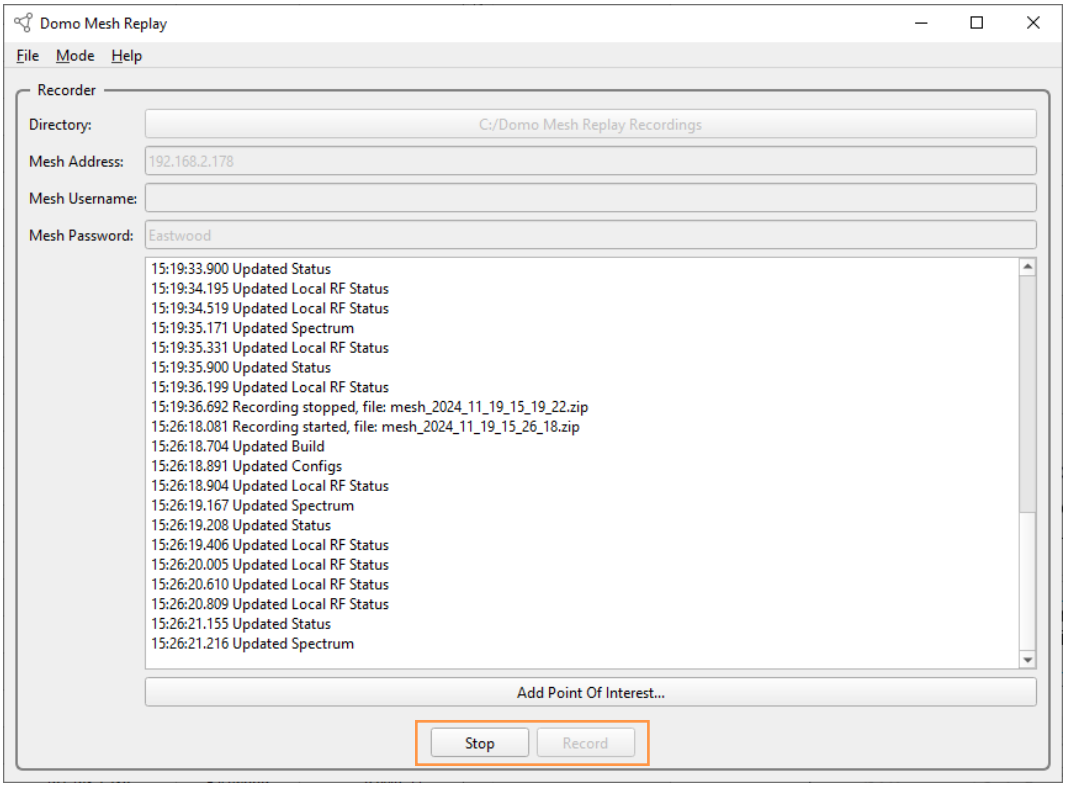

If an event occurs during the recording, a point of interest can be added which can be used as a time reference during playback.

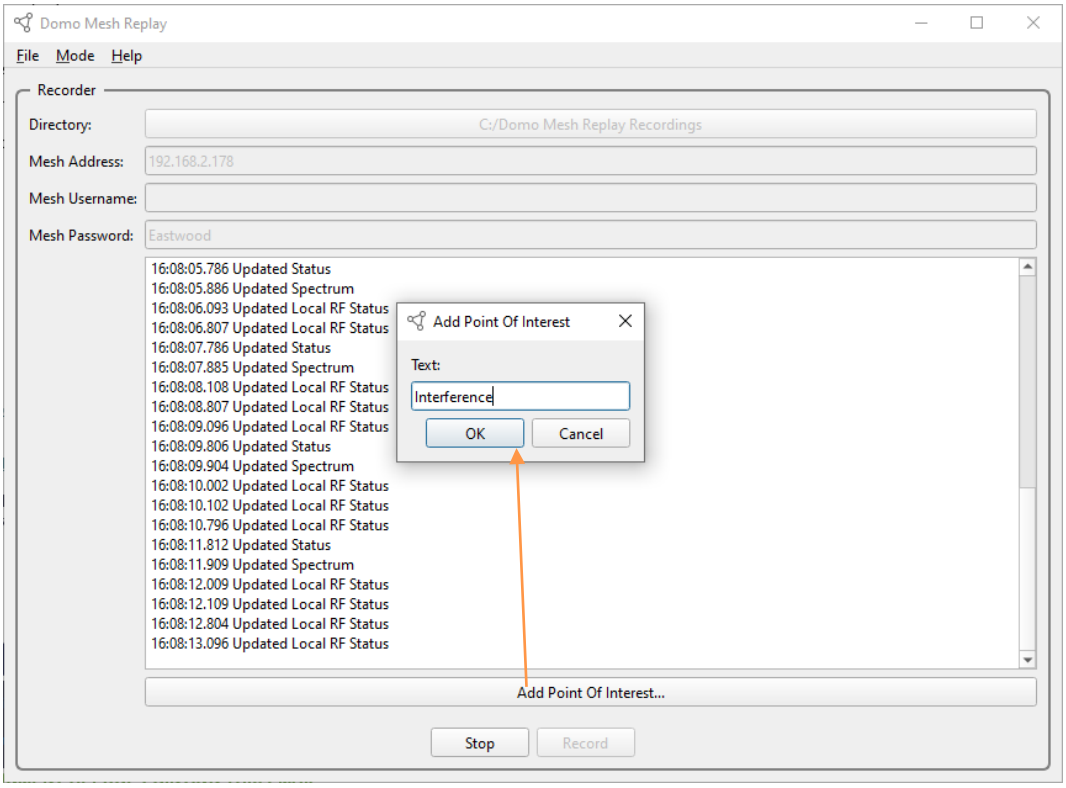

Copyright © 2024 Domo Tactical Communications (DTC) Limited. All rights reserved.
Commercial in Confidence

1.4.3 Saved Files

When a recording is stopped, a zip file will have been created with the JSON files saved during the period. A new zip file will be created for each recording period or if a recording exceeds 64,000 files.

Note: For details of JSON files, please read DTC's *IP Mesh Radio JSON Guide*.

If you browse to the saved directory, you will see the zip files will be given a default name which includes the ESN of the Mesh device, and the date and time of the start of the recording. For example:

- mesh_b38a49cfb6fd86ee_2024_11_28_14_45_22.zip
- mesh_3b5afe29e7f5cf42_2024_11_29_09_17_44.zip


The file names can be changed to improve referencing if required.

1.4.4 Download

Files can also be logged from a Mesh node's web interface.

Go to the **Global Setup>Advanced>JSON Logging** page. Set **Enable Logging** to **Yes** and click **Save** to begin logging. Log files will be saved to the node's internal SD card.


Status JSON files will always be logged but you can turn **local RF status** and **spectrum** logging off if required. The **Max Log File** size can be set **up to 512000MB**.

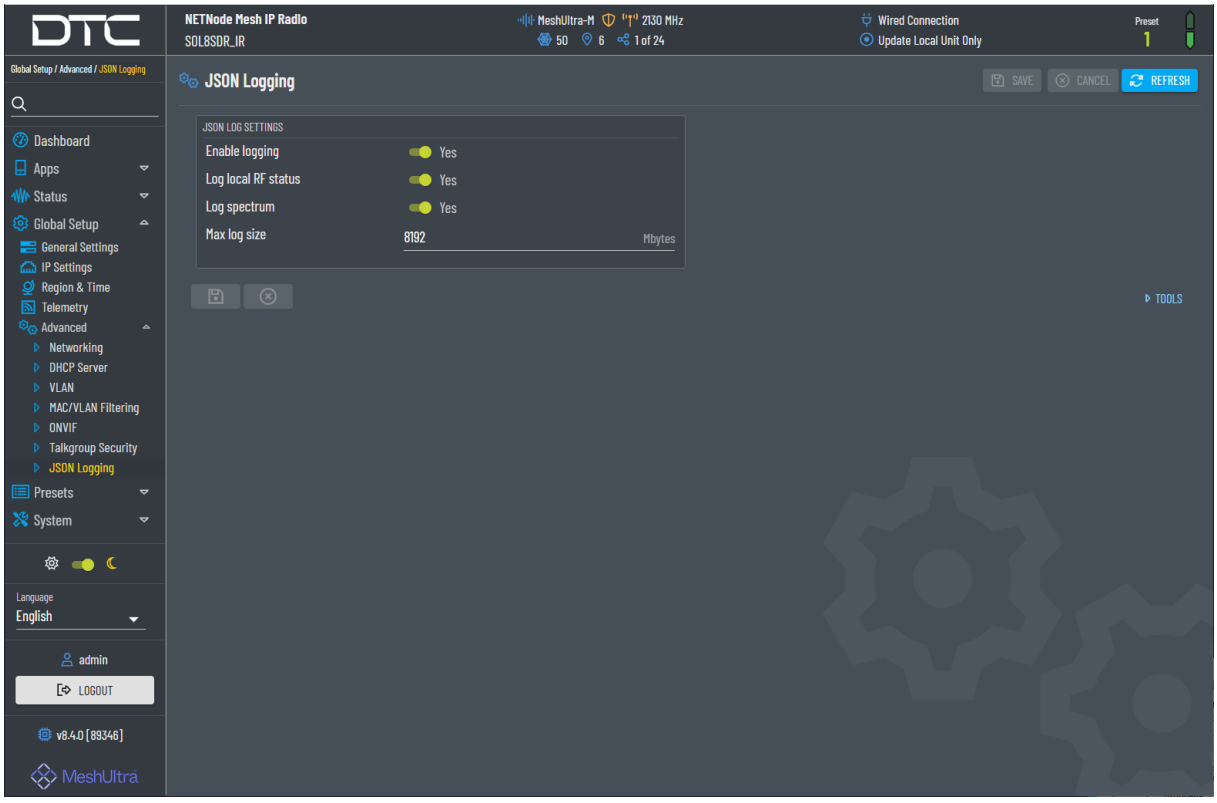

Copyright © 2024 Domo Tactical Communications (DTC) Limited. All rights reserved.
Commercial in Confidence

From the Record page, click the **Download** button to open download options.

Select files and click Download to save the selected files to the Directory location.

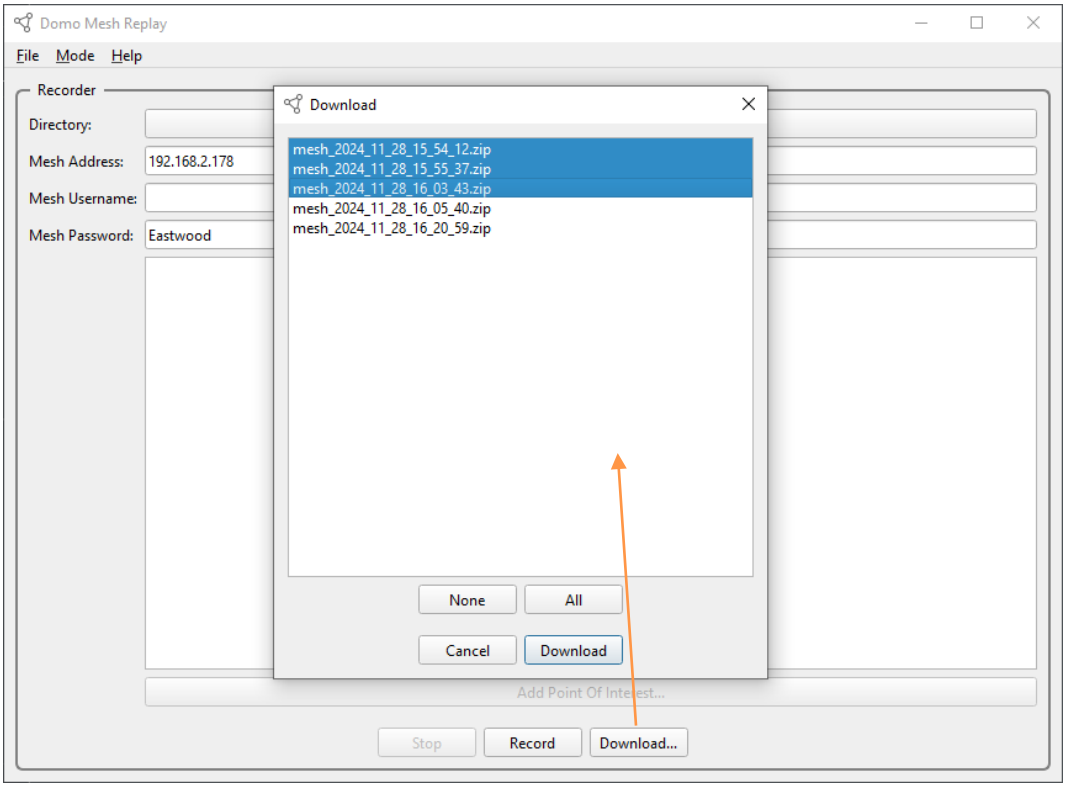

Copyright © 2024 Domo Tactical Communications (DTC) Limited. All rights reserved.
Commercial in Confidence


1.5 Player Mode

1.5.1 Setup

In Player mode, Domo Mesh Replay will play back the saved JSON files to a web interface.


When you initially switch to Play mode, the **File** directory will be automatically selected from the previously recorded or downloaded files. Alternatively, manually browse to the file location for the recordings to be played.


Note: Multiple files can be selected and played consecutively.

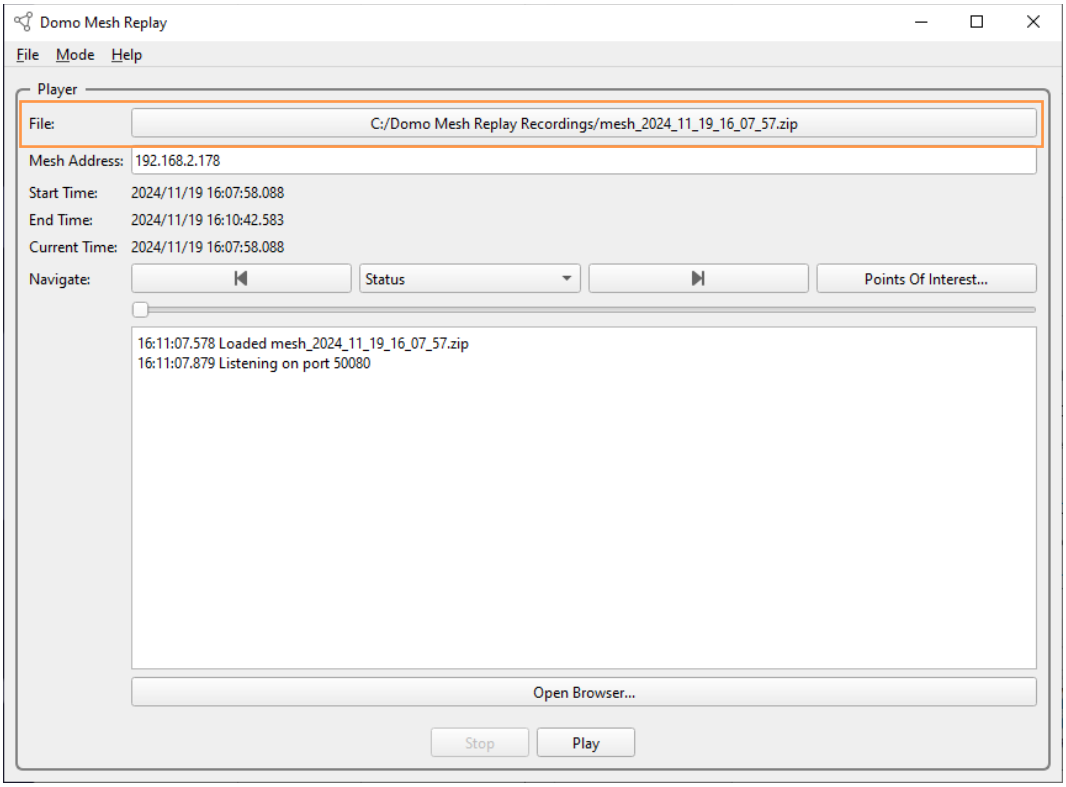

Copyright © 2024 Domo Tactical Communications (DTC) Limited. All rights reserved.
Commercial in Confidence

Add a **Mesh Address** of a connected node; this is necessary to act as a proxy web interface to allow the recorded files to be displayed. Click **Open Browser** to start the proxy connection; you may need to enter user credentials.

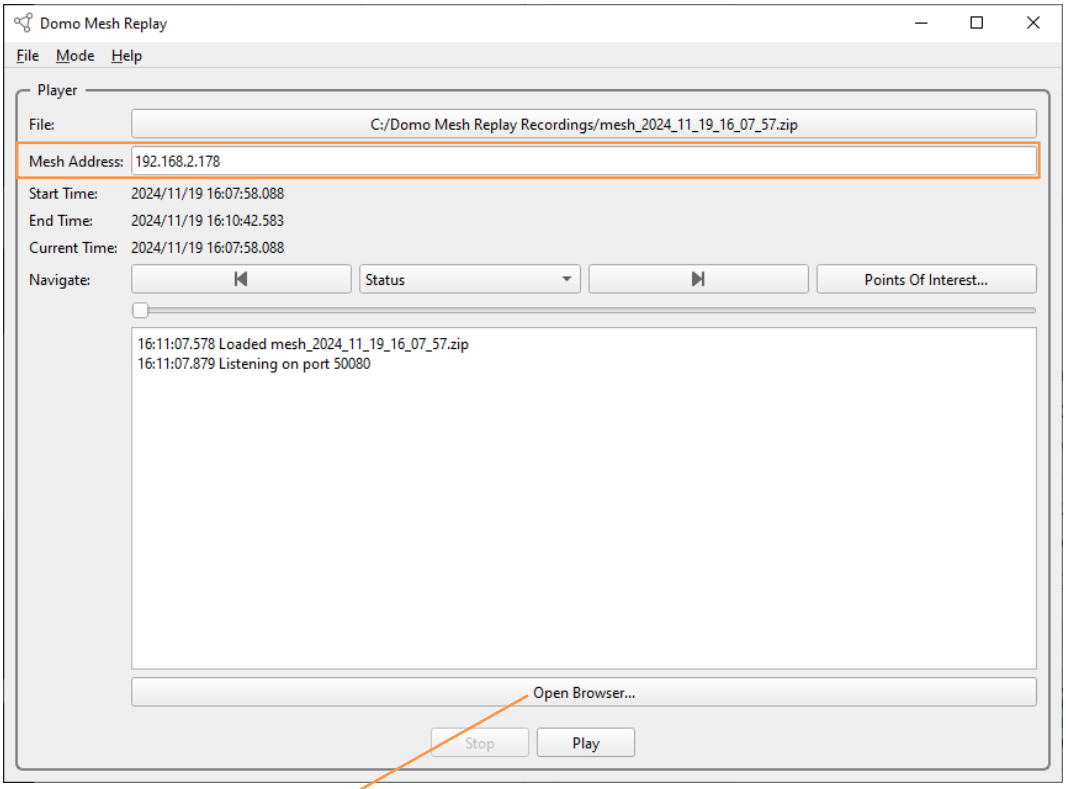

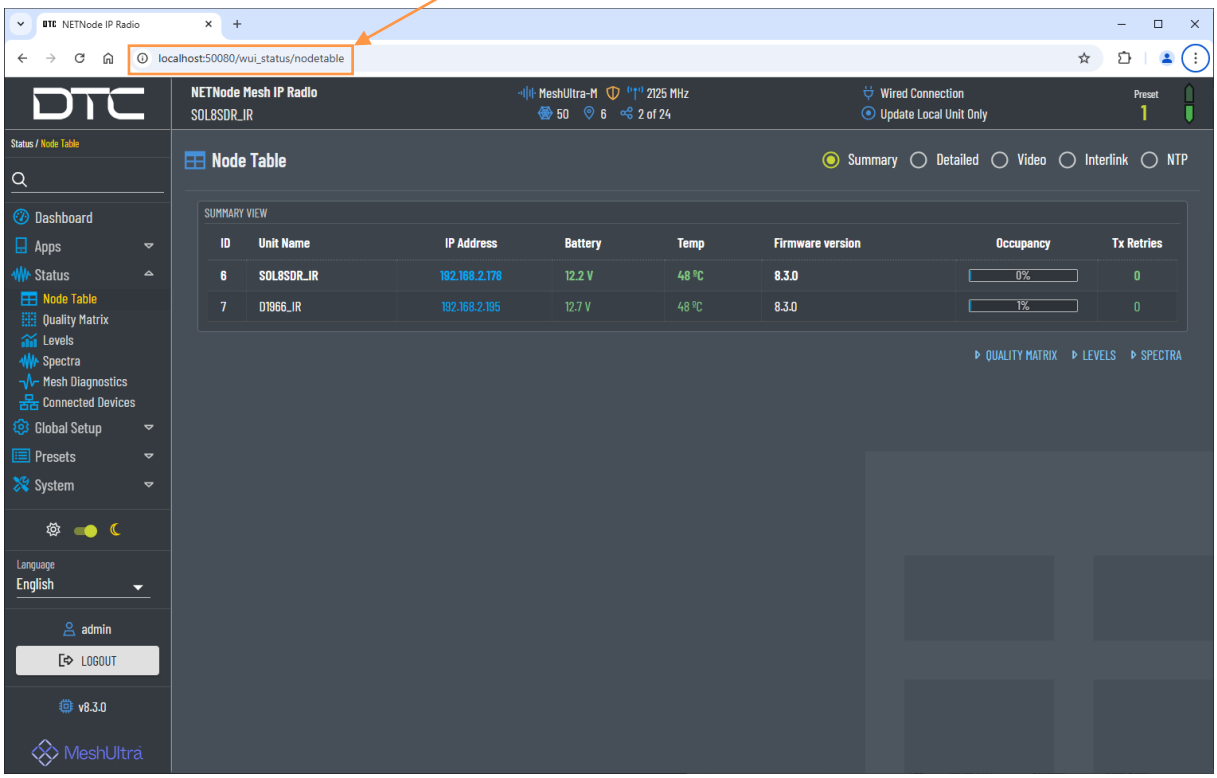



Copyright © 2024 Domo Tactical Communications (DTC) Limited. All rights reserved.
Commercial in Confidence

1.5.2 Play Back

Click **Play** to begin the playback in the web interface and **Stop** to pause or end the playback.


Note: The recordings are primarily intended for status parameters, therefore, please do not browse the Dashboard or Apps pages.

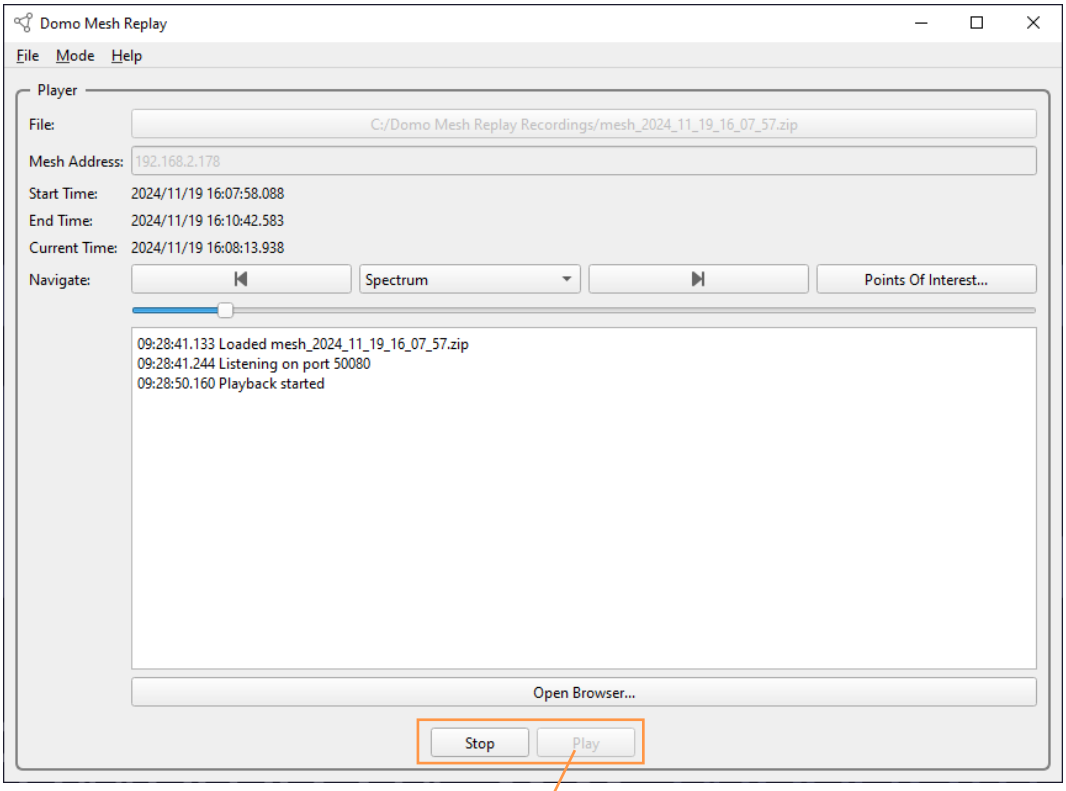

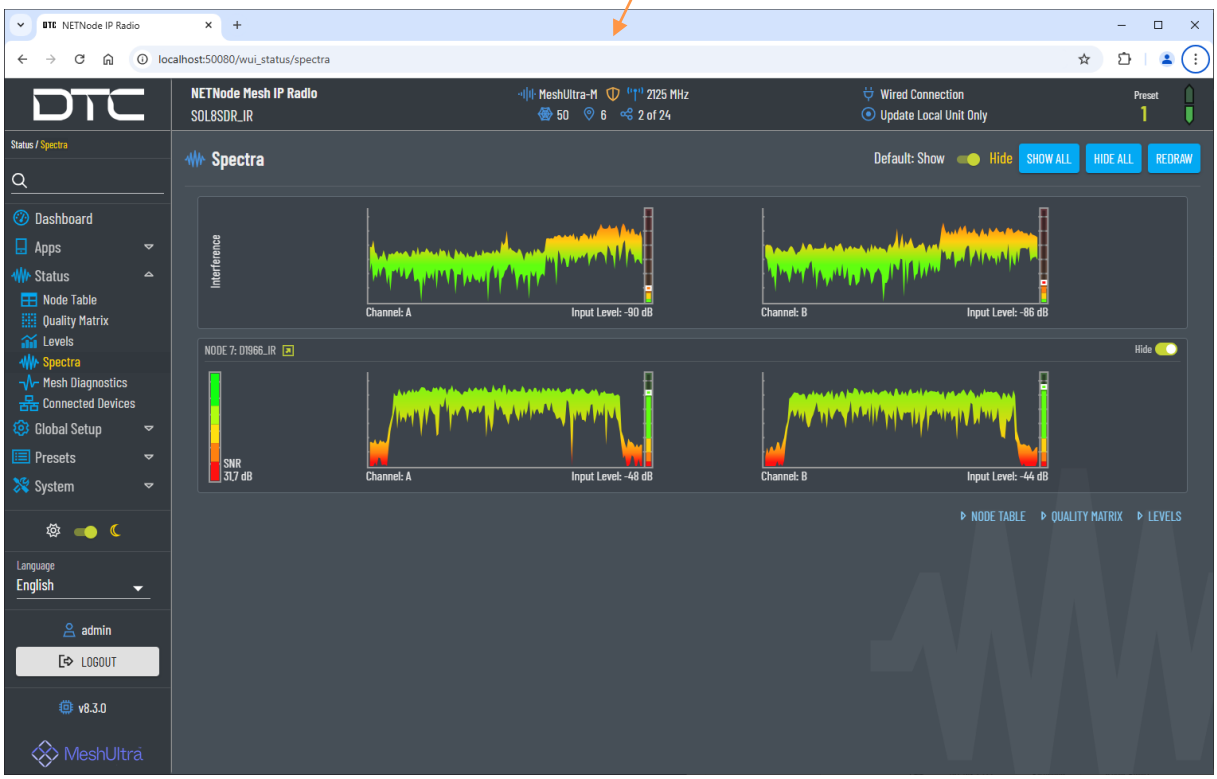

Copyright © 2024 Domo Tactical Communications (DTC) Limited. All rights reserved.
Commercial in Confidence

Some tools are provided to help search a recording whilst monitoring the WUI status pages.

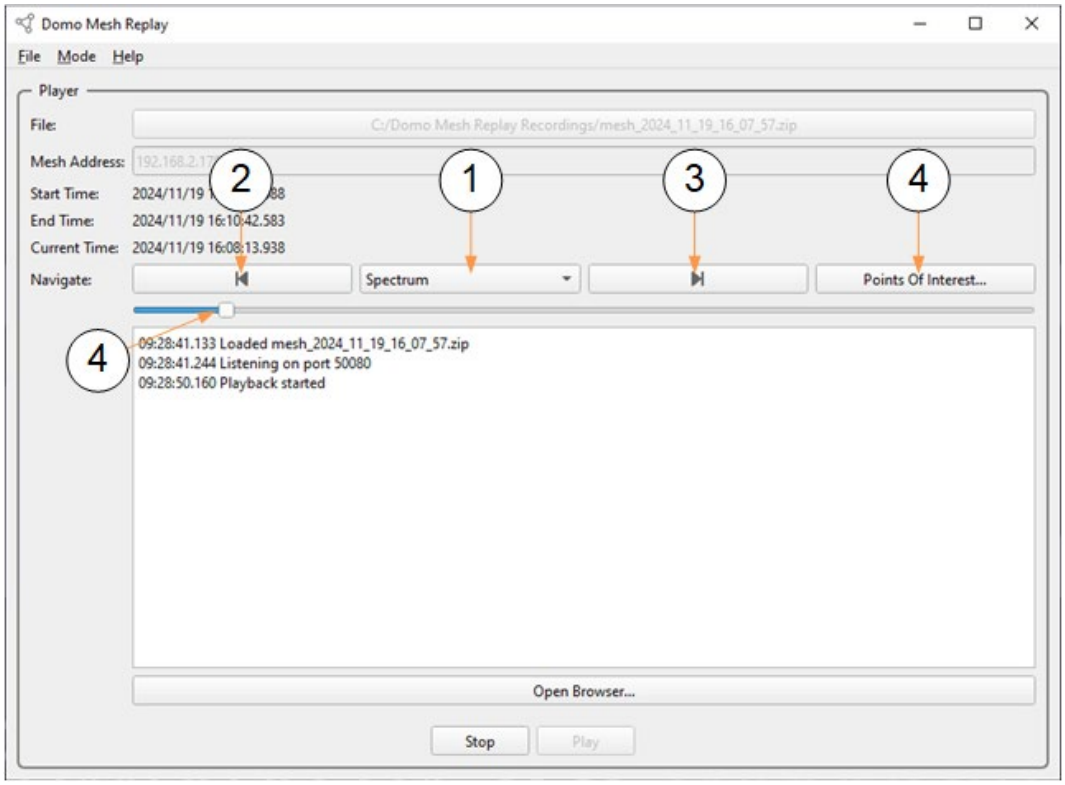

Item	Description
1	The JSON file selection determines the steps when navigating using the arrows. • Local RF Status: a fast updating subset of Status. • Spectrum: plotted values which are displayed on the **Status>Spectra** page. • Status: read only information that is displayed in the Status pages. **Note**: For details of JSON files, please read DTC's *IP Mesh Radio JSON Guide*.
2/3	Navigate in the direction of the arrows. The resolution is aligned with the JSON file selection.
4	**Points of Interest** are reference points that are added during recording, see *Section 1.4.2*. They can be used to jump to a particular point in the recording.
5	The time slider can be used to move through the recording to a particular moment. As the slider moves, this will be reflected in the **Current Time** value and when viewed in the web interface.

Copyright © 2024 Domo Tactical Communications (DTC) Limited. All rights reserved.
Commercial in Confidence

2. Appendix A: After Sales Support

2.1 Documentation and Software

It is DTC's practise to make the majority of our latest user guides and software available to customers online, by using our WatchDox facility. To access this site, please contact your Account Manager or send a request via DTC's support portal https://domotactical.my.site.com/Support/s/login/.

You will be sent a link where you can log in and create your own password followed by a confirmation email. Once you have done this, you can then log in to your account.

2.2 Technical Support

The Technical Support team can be accessed by one of the following:

- **Phone US**: +1 571 563 7077
- **Email US**: us.technical.support@domotactical.com (no restricted content)
- **Phone UK**: +44 1489 884 550
- **Support Portal ROW**: https://domotactical.my.site.com/Support/s/login/ (no restricted content)

Copyright © 2024 Domo Tactical Communications (DTC) Limited. All rights reserved.
Commercial in Confidence