Removing the Inner Bearing


1. Perform the servicing procedure, **Removing an Axle,** steps 1 through 8. The axle needs to be pulled from the inner bearing to be serviced. The axle assembly should be pulled completely at this point so that the old gasket at the outer bearing flange may be replaced with a new one.
2. Remove the inner bearing flange hardware securing the bearing to the frame and remove the assembly to a clean work surface.

Installing the Inner Bearing

Assembling the Inner Bearing and Flange Assembly

1. Place the bearing into the greasable flange with the set screw collar facing down. At the same time align the small hole in the bearing with the grease fitting in the flange.
2. Place regular flange to the top of the bearing.
3. Loosely install the bearing and flange assembly to the inner frame channel. Orient the grease fitting facing up.



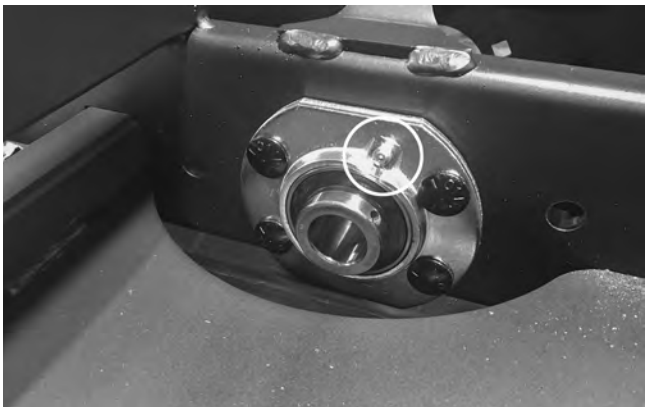

4. Perform the servicing procedure, **Installing an Axle.**
5. Perform the servicing procedure, **Drive Chain Installation.**

SECTION TR

Transmission

Table of Contents

GENERAL INSTRUCTION TR-2
TRANSMISSION OIL TR-3
OIL LEVEL INSPECTION TR-4
CHECKING THE TRANSMISSION OIL LEVEL (34-100) TR-4
CHECKING THE TRANSMISSION OIL LEVEL (34-200) TR-4
CHANGING THE TRANSMISSION OIL - 34-100 ..... TR-5
CHANGING THE TRANSMISSION OIL - 34-200 ..... TR-5
REMOVING THE TRANSMISSION (34-100) TR-6
TRANSMISSION DISASSEMBLY (34-100) Classic TR-6
SEPARATING THE TRANSMISSION (34-100) TR-7
DISASSEMBLING THE INPUT SHAFT (34-100) TR-10
DISASSEMBLE THE SPLINE SHAFT DRIVE GEAR ASSEMBLY (34-100) TR-11
DISASSEMBLING THE HOUSING COMPONENTS (34-100) TR-11
DISASSEMBLING THE DIFFERENTIAL (34-100)) TR-13
TRANSMISSION COMPONENT INSPECTION (34-100) TR-15
REASSEMBLING THETRANSMISSION (34-100) TR-18
ASSEMBLING THE IDLER GEAR BORE ASSEMBLY (34-100) TR-20
ASSEMBLING THE INPUT SHAFT (34-100) TR-22
ASSEMBLING THE DIFFERENTIAL (34-100) TR-26
ASSEMBLING TRANSMISSION COMPONENTS TO HOUSING (34-100) TR-31
TRANSMISSION DISASSEMBLY (34-200) ADMIRAL TR-44
DISASSEMBLING THE INPUT SHAFT (34-200) TR-57
DISASSEMBLING THE IDLER SHAFT (34-200) TR-60
DISASSEMBLING THE STEERING DIFFERENTIAL 934-200) TR-62
DISASSEMBLING THE IDLER SHAFT (34-200) TR-67
DISASSEMBLING THE LEFT HAND SIDE OUTPUT SHAFT DIFFERENTIAL (34-200) TR-68
DISASSEMBLING THE RIGHT HAND SIDE OUTPUT SHAFT DIFFERENTIAL (34-200) TR-70
REASSEMBLING THE TRANSMISSION (34-200) ADMIRAL TR-71
ASSEMBLING RIGHT OUTPUT SHAFT ASSEMBLY (34-200) ADMIRAL TR-72
ASSEMBLING LEFT OUTPUT SHAFT ASSEMBLY (34-200) ADMIRAL TR-75
ASSEMBLING THE STEERING DIFFERENSTIAL (34-200) ADMIRAL TR-79
ASSEMBLING THE INPUT SHAFT ASSEMBLY (34-200) ADMIRAL TR-86
ASSEMBLING THE REVERSE IDLER SHAFT ASSEMBLY (34-200) ADMIRAL TR-91
ASSEMBLING THE IDLER SHAFT ASSEMBLY (34-200) ADMIRAL TR-93
HOUSING COVER ASSEMBLY (34-200) ADMIRAL TR-96
HOUSING PRE-ASSEMBLY (34-200) ADMIRAL TR-99
TRANSMISSION ASSEMBLY (34-200) ADMIRAL TR-102
ASSEMBLING EXTERNAL SHIFT COMPONENTS TR-112
REMOVE AND REPLACE TRANSMISSION (34-200) ADMIRAL TR-116