
5. Install the 34-123 Drive gear to the top of the previously installed Reverse Gear.
6. Press on the 101-01 bearing to the end of the shaft, shielded side up.

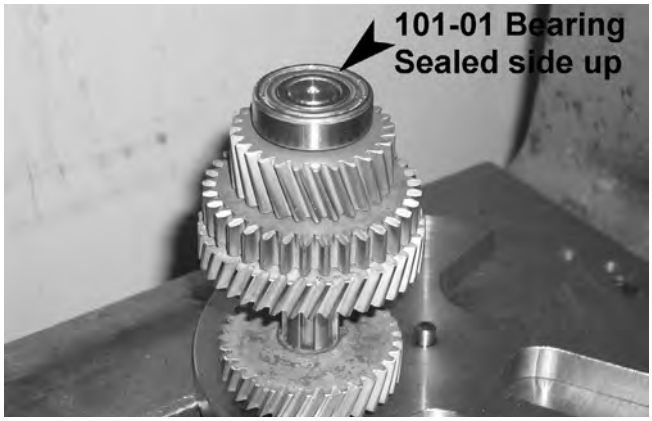



Do not install this 101-01 Bearing to the end of the shaft if the differential assembly has the high ratio 3.3 Gear Plate. This bearing should be installed to the housing at the same time as the 101-03 Bearing (step 28 of Assembling Transmission Components to Housing. Interference between this Bearing and Gear Plate teeth will be apparent later on when installing along side the differential assembly if this is not observed.




Reassembling the 34-130 Input Shaft

1. Install the first half of the **107-14 Retaining Ring** to the machined groove at the High Gear Pinion location.





2. Interlock the second half of the **107-14 Retaining Ring** into the previously installed one. ***Photo 3*** At the opposite side, squeeze the retaining ring assembly together to lock and seat securely into the machined groove.

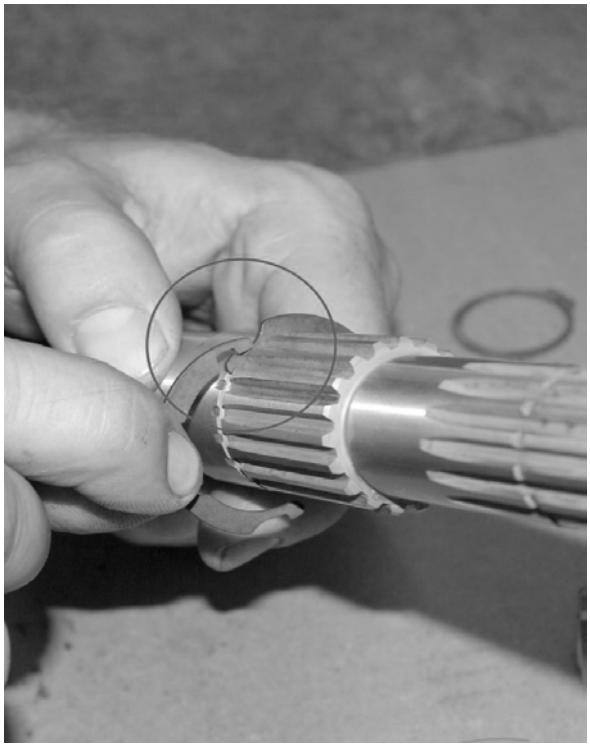





3. Locate the 108-85 Retaining Thrust Washer and slip it over the input shaft (cupped side towards retaining ring) and up against the retaining ring assembly.






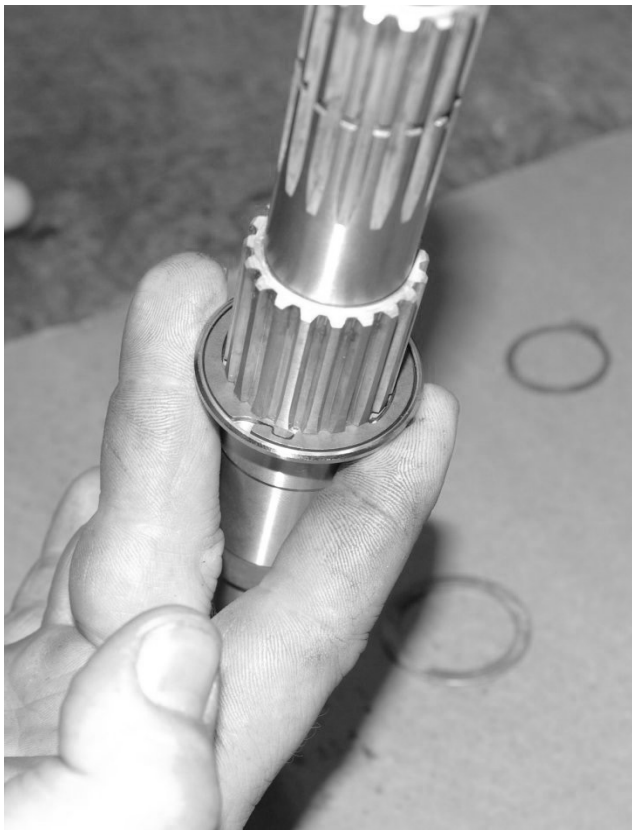


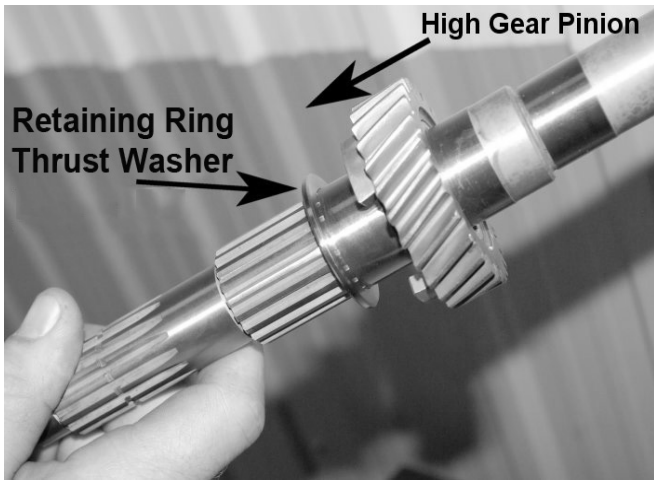

4. Install the **High Gear Pinion** on to the Input Shaft (dog teeth facing towards the Thrust Washer). Rest it against the Thrust Washer. ***Photo 8***

5. Slip a **108-79 Thrust Washer** to the other side of the High Gear Pinion and secure with a 107-02 Retaining Ring.

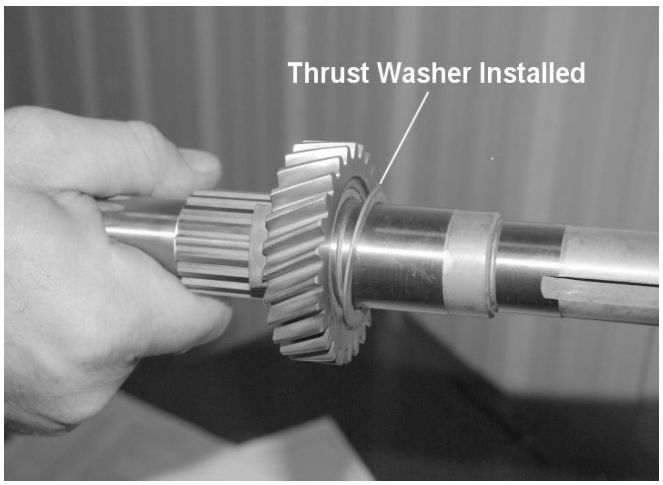

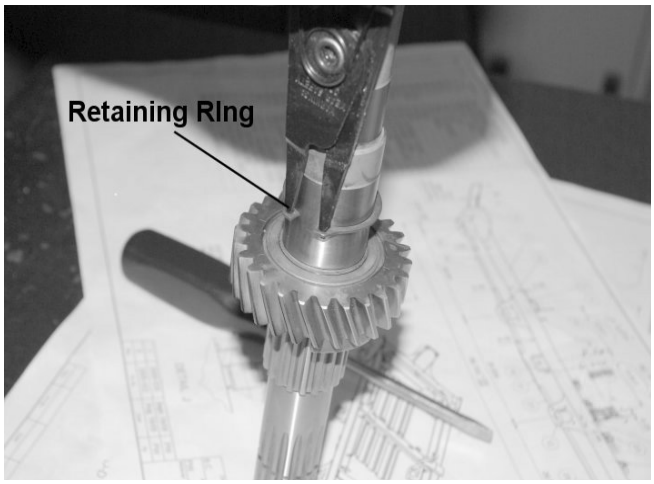


6. Slip the Dog Clutch to the Input Shaft.


IMPORTANT


The Dog Clutch needs to be oriented correctly when assembled to the Input Shaft. The dogs on one side of the clutch have a small machined shoulder. These dogs will engage with the Low Gear Pinion so they face away from the previously installed High Gear Pinion



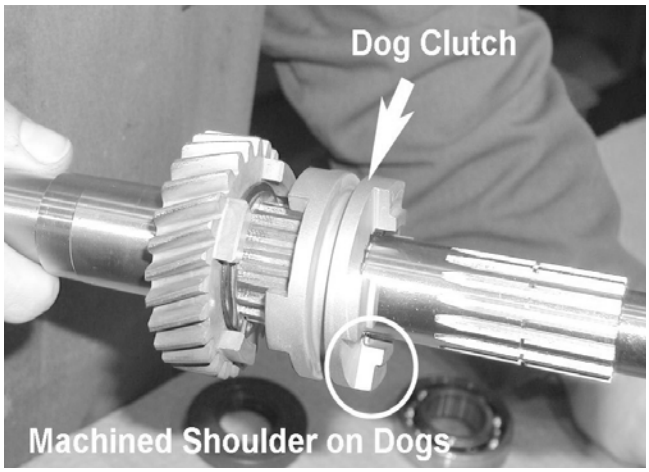



7. Install the Low Gear Pinion with the dogs facing towards the previously installed Dog Clutch. *See following page.*
8. Slip the Reverse Gear Pinion on to the Input Shaft and up against the Low Gear Pinion. Orient the Reverse Gear Pinion with the chamfered teeth facing up.

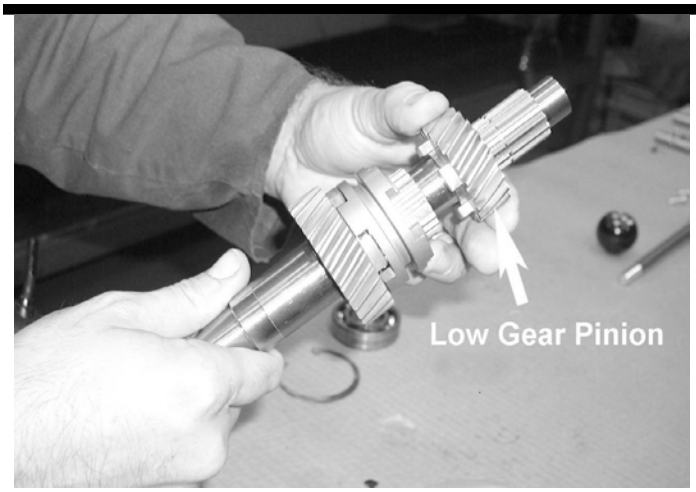


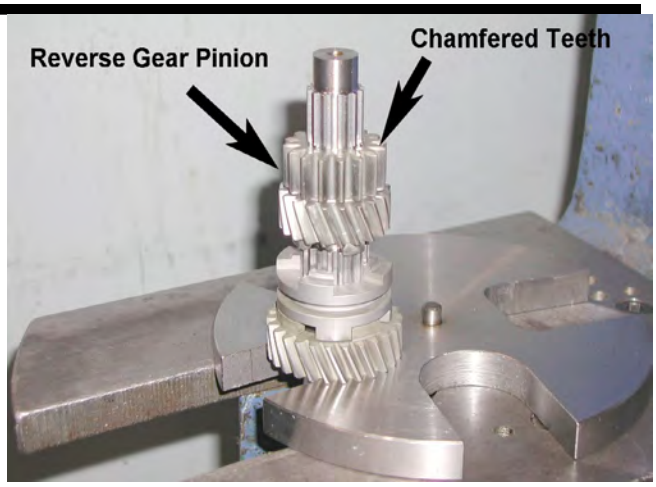

9. Secure the Reverse Gear Pinion with a **107-15 Retaining Ring.**

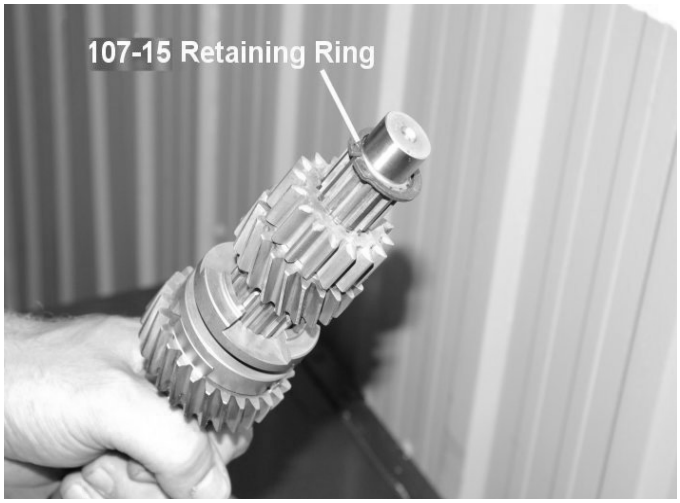

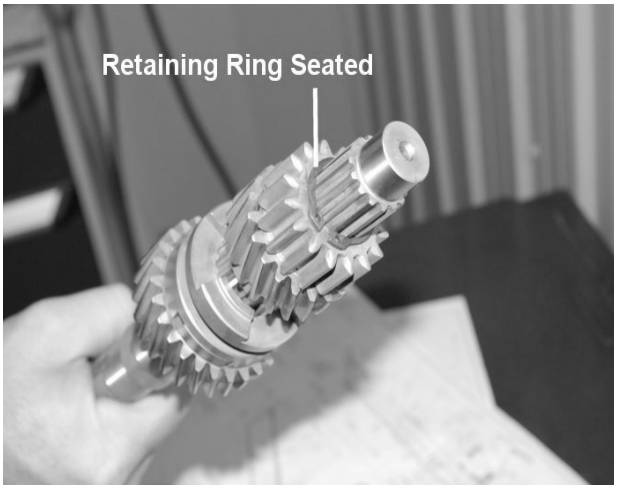


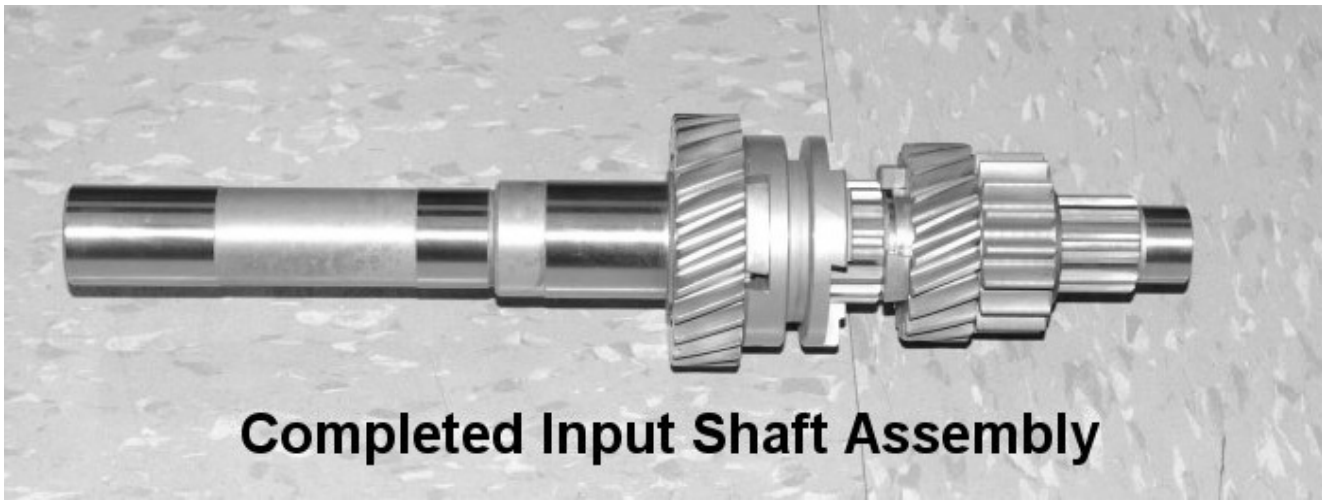

Assembling the Differential

1. Install all 105-03 Oilite Bushings into both 34-122 cage and 34-124 Gear Plate.
   Photo TR-58 & 59



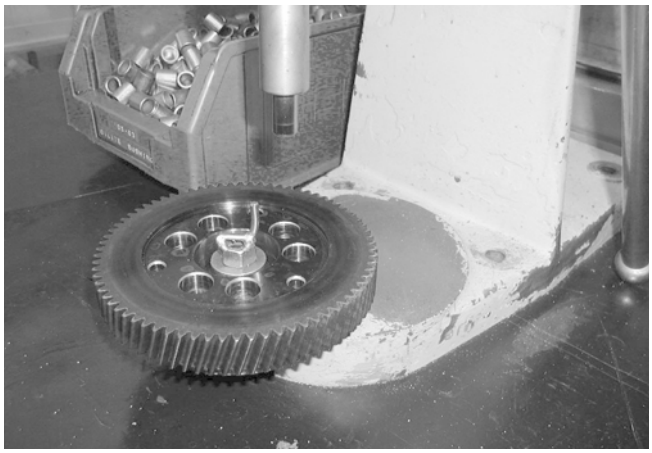


2. Blow all foreign debris from the Cage and Gear Plate.


3. Install the 101-15 Bearing into both Cage and Gear plate.

4. Wipe the 34-98 Output Shaft free of debris with a lint free rag. Install this Output Shaft into the Aluminum Cage. ***See Note following page.***



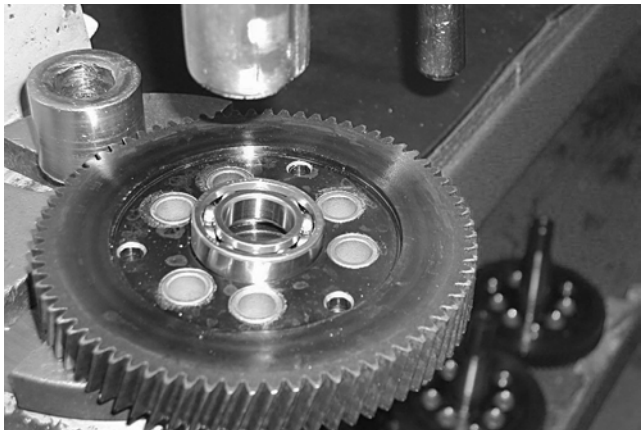




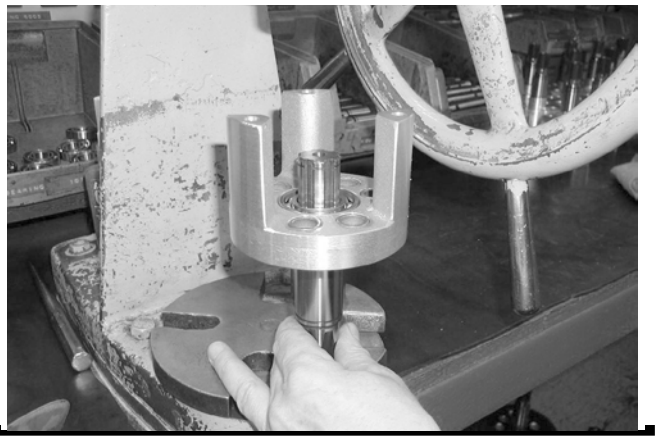


NOTE


Use a specialized spacing tool to secure the previously installed 101-15 Bearing inside the Aluminum Cage while the Output Shaft is press into place.

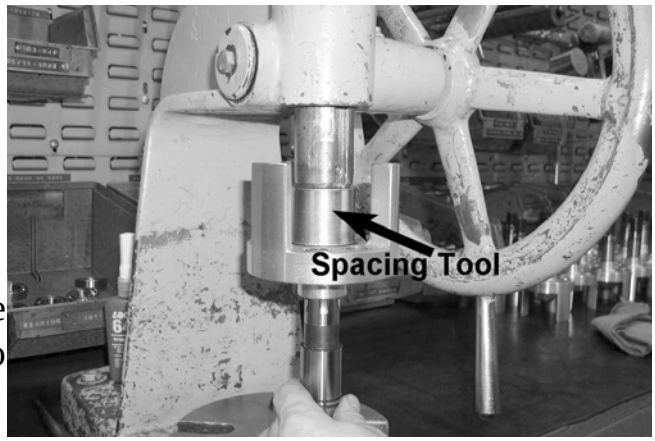


5. Orient the 34-14 Sun Gear as in with the higher shoulder side facing up. Install it to the splined end of the Output Shaft.

6. Secure the Sun Gear with a 107-04 Snap Ring.

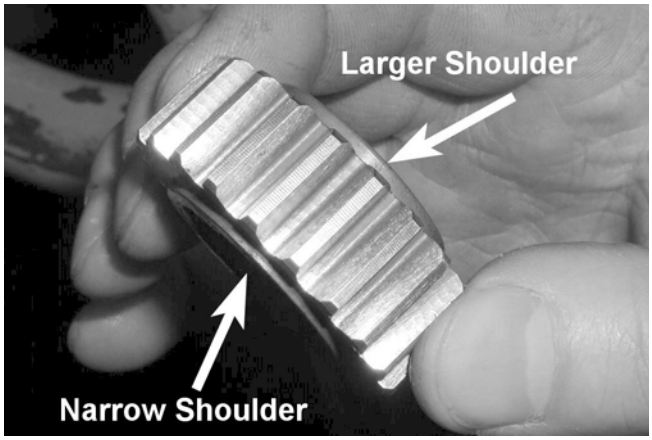

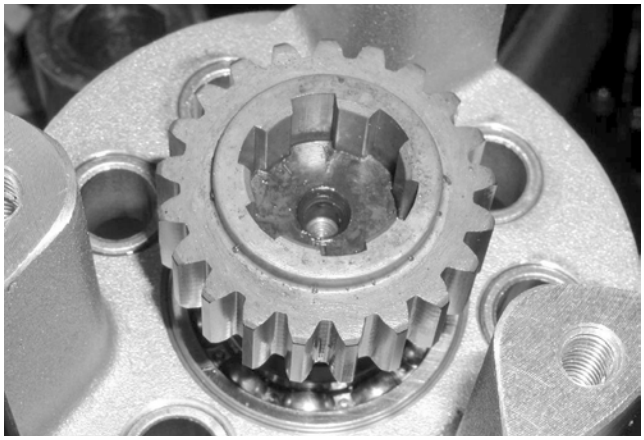



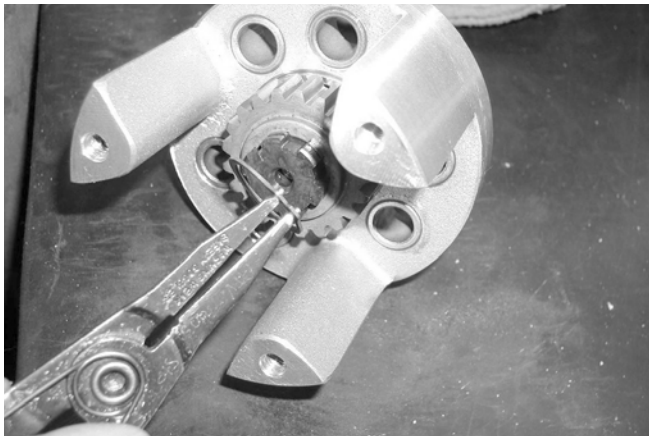

7. Be sure the Retaining Ring is properly seated to the machined groove of the Output Shaft. Press the Output Shaft from the inside of the cage to seat the Retaining Ring snuggly against the Sun Gear.