SERVICE MANUAL

2022



All 8X8 MODELS



All 6X6 MODELS

Manual No. TBD Printed in Canada 2022/01/01



How to use this manual

This manual is divided into general sections which are identified by a 2 letter designation. Find the section you want in the guide on this page, and then turn to the Table of Contents on page 1 of that section.

Each section begins with general information for servicing the assemblies listed in that section. The rest of the section outlines detailed servicing procedures and is accompanied by photographs & diagrams for easier use.

The PDF version of this service guide is hot linked. Hover over index titles for quick navigation

Service Guide

General Information.....GI

Engine.....EN

Electrical System.....ES

Brake System.....BR

Clutch System.....CS

Fuel System.....FS

Wheels,Axles&Chains.....WA

Transmission.....TR

*Specification used in this service guide are subject to change,



Argo Service Manual

SECTION GI

General Information

Table of Contents

FORWARD....GI-2
GENERAL INSTRUCTIONS....GI-3
AVAILABLE SERVICE INSTRUCTION....GI-4
ARGO MODEL SPECIFICATIONS....GI-5
IDENTIFICATION AND LOCATION OF CONTROLS (AURORA)....GI-10
IDENTIFICATION AND LOCATION OF CONTROLAS (FRONTIER)....GI-11
INFORMATION LABELS (8X8)....GI-12
INFORMATION LABELS (6X6)....GI-13
ARGO TORQUE SPECIFICATIONS....GI-14
MAINTENANCE CHARTS....GI-16
SPECIAL TOOLS....GI-18

Foreward

ARGO has prepared this service manual to assist qualified technicians of authorized ARGO dealers and distributors in providing fast and effective service and maintenance of the ARGO vehicle

Proper and regular maintenance is essential to prolonging the life of the ARGO and will result in satisfied ARGO customers. Please refer to this Service Manual before performing any servicing procedure on any of the above vehicles.

This ARGO Service Manual provides information on maintenance procedures, service operations, and on the removal, disassembly, reassembly, and installation of components, parts, and assemblies.

All information contained in this service manual is based on the product specification records of Ontario Drive & Gear Ltd. If the ARGO that you are servicing differs from the specifications contained in this manual, contact Ontario Drive & Gear for information. ODG reserves the right to alter servicing procedures at any time without obligation or prior notification.

Liability for any personal injury, or damage to property or an ARGO vehicle which is occasioned by the use of this ARGO Service Manual, is in no way assumed by Ontario Drive & Gear Ltd.



Read your owner/operators manual ***before*** you operate your ARGO. It contains safe operating instructions and warns the user about potential hazards that can result in personal injury.

Warnings are identified in the text by the following symbol:



Warning text warns the user about potential hazards that can result in personal injury or death.

Cautions are identified in the text by the following symbol:



Caution text contains cautions that can prevent damage to the vehicle.

This manual is based on the latest product information available at the time of printing. Ontario Drive & Gear Limited reserves the right to make changes at any time and without obligation.

Reproduction of any part of this publication is prohibited without prior written permission.

© Ontario Drive & Gear Limited, 2022

Other Available Service Manuals

Part number	**670-00**	**Service Manual for Models prior to 1977.**
Part Number	**673-00**	**Service Manual for Models to 1986**
Part Number	**673-01**	**Service Manual for 1987 Models**
Part Number	**673-02**	**Service Manual Supplement for NKB Models (1988)**
Part Number	**673-04-1**	**Service Manual for Models from 1992 - 2002**
Part Number	**673-11**	**Service Manual for Models from 2002 - 2017**

A MESSAGE FROM THE PEOPLE WHO BUILD THE ARGO

Ontario Drive & Gear Limited has been building ARGO vehicles since 1967. By listening carefully to our customers and responding to their needs, we have been constantly improving the ARGO and will continue to do so.





AURORA VEHICLE MATRIX ***Specifications subject to change**

Model		Aurora 800 SX	Aurora 800 SX-R	Aurora 800 SX Hunt Master	Aurora 850 SX	Aurora 850 SX-R (i)
Engine		Kawasaki 31HP Liquid Cooled Gas Eng EFI 4 Cycle 824 CC	Kawasaki 31HP Liquid Cooled Gas Eng EFI 4 Cycle 824 CC	Kawasaki 31HP Liquid Cooled Gas Eng EFI 4 Cycle 824 CC	Briggs (33 hp) EFI V-twin 4 cycle, air cooled	Briggs (33 hp) EFI V-twin 4 cycle, air cooled
Transmission		(ADMIRAL) Standard				
Clutch		Belt-driven, Continuously Variable Transmission (CVT) maximizes engine power to the transmission				
Fuel Capacity		32.2 L (8.5. U.S Gal.)				
Steering/Brakes		Argo Progressive Steering (APS) Hydraulic steering disc brakes with hydraulic disc stopping brakes				
Drive Chains		Double RC 50 & Single RC 60 Roller chain				
Electrical		12 volt D.C. AGM battery, 385 cold cranking amps at 0 F; 25 Amp charging system, electronic ignition			12 volt D.C. AGM battery, 385 cold cranking amps at 0 F; 20/50 Amp charging system, electronic ignition	12 volt D.C. AGM battery, 385 cold cranking amps at 0 F; 20/50 Amp charging system, electronic ignition
Load Capacity	Land	1100lbs. (499kg.)	1100lbs.(499kg.)	1000lbs.(454kg.)	1100 lbs.(499kg.	870lbs. (395 kg)
	Water	900lbs.(408kg.)	900lbs.(408kg.)	800lbs (363kg.)	900lbs. (408kg)	670lbs. (304 kg)
Seating Capacity	Land	4 persons				
	Water	4 persons				
Shipping Weight		1450lbs. (657 kg.)	1680lbs.(762kg.)	1550lbs (703kg)	1450lbs. (658 kg)	1680lbs. (762 kg.)
Accessory						
Brake Cooling		No	No	No	No	No
Tail lights		Yes	Yes	Yes	Yes	Yes
Brushguard		No	Yes	Yes	No	No
Drive Belt		127-159 Standard	127-159 Standard	127-159 Standard	127-159 Standard	127-159 Standard
Tires		ARGO XT117 25X12-9	ARGO XT117 25X12-9	ARGO XT117 25X12-9	ARGO XT117 25X12-9	ARGO XT117 25X12-9
Rims		Steel Offset Bead Lock	Steel Offset Bead Lock	Steel Offset Bead Lock	Steel Offset Bead Lock	Steel Offset Bead Lock
Hood Rack		No	No	Yes	No	No
Winch		No	No	Yes	No	No
Alternator Output		40 AMPS	40 AMPS	40 AMPS	20/50 AMPS	20/50 AMPS
ROPS		No	Yes	No	No	Yes
Cargo Liner		No	No	Yes	No	No
Bearing Extensions		Yes	Yes	Yes	Yes	Yes
Hood Extraction Fan		No	No	No	No	No
Stretcher Rack		No	No	No	No	No
Hitch Capacity Draw Bar Pull		N / LBS 8006/1800	N/ LBS 8006/1800	N / LBS 8006/1800	N / LBS 8006/1800	N / LBS 8006/1800
Hitch Capacity Vertical Tongue Load		N / LBS 445/100	N / LBS 445/100	N / LBS 445/100	N / LBS 445/100	N / LBS 445/100

*Load capacity in water is 100lbs. less if equipped with optional 24x10.00-8NHS tires.

AURORA VEHICLE MATRIX ***Specifications subject to change**

Model		Aurora 850 SX Huntmaster	Aurora 850 SX Responder	Aurora 850 SX-R Responder	Aurora 950 SX
Engine		Briggs (33 hp) EFI V-twin 4 cycle, air cooled	Briggs (33 hp) EFI V-twin 4 cycle, air cooled	Briggs (33 hp) EFI V-twin 4 cycle, air cooled s	Briggs (40 hp) EFI V-twin 4 cycle, air cooled
Transmission		(ADMIRAL) Standard			
Clutch		Belt-driven, Continuously Variable Transmission (CVT) maximizes engine power to the transmission			
Fuel Capacity		32.2 L (8.5. U.S Gal.			
Steering/Brakes		Argo Progressive Steering (APS) Hydraulic steering disc brakes with hydraulic disc stopping brakes			
Drive Chains		Double RC 50 & Single RC 60 Roller chain			
Electrical		12 volt D.C. AGM battery, 385 cold cranking amps at 0 F; 20/50 Amp charging system, electronic ignition			
Load Capacity	Land	1000lbs. (454kg)	960lbs.(435 kg)	730lbs (331kg)	1080lbs (490kg)
	Water	800lbs. (363kg)	760lbs. (345kg)	530lbs (240kg)	880lbs (400kg)
Seating Capacity	Land	4 persons			
	Water	4 persons			
Shipping Weight		1550lbs (703kg).	1590lbs./721kg.	1820lbs (240kg)	1470lbs (667kg)
Accessory					
Brake Cooling		No	No	No	No
Tail Lights		Yes	Yes	Yes	Yes
Brushguard		Yes	Yes	Yes	No
Drive Belt		127-159 Standard	127-159 Standard	127-159 Standard	127-159 Standard
Tires		ARGO XT117 25X12-9	ARGO XT117 25X12-9	ARGO XT117 25X12-9	ARGO XT117 25X12-9
Rims		Steel Offset Bead Lock	Steel Offset Bead Lock	Steel Offset Bead Lock	Steel Offset Bead Lock
Hood Rack		Yes	No	No	No
Gauge		Premium	Premium	Premium	Premium
Winch		Yes	Yes	Yes	No
Alternator Output		20/50 AMPS	20/50 AMPS	20/50 AMPS	20/50 AMPS
ROPS		No	No	Yes	No
Cargo Liner		Yes	No	No	No
Bearing Extensions		Yes	Yes	Yes	Yes
Hood Extraction Fan		No	No	No	Standard
Hitch Capacity Draw Bar Pull		N / LBS 8006/1800	N/ LBS 8006/1800	N / LBS 8006/1800	N / LBS 8006/1800
Hitch Capacity Vertical Tongue Load		N / LBS 445/100	N / LBS 445/100	N / LBS 445/100	N / LBS 445/100

*Load capacity in water is 100lbs. less if equipped with optional 24x10.00-8NHS tires.

AURORA VEHICLE MATRIX ***Specifications subject to change**

Model		Aurora 950 SX-R (i)	Aurora 950 SX Huntmaster	Aurora 950 Bigfoot MX8
Engine		Briggs (40 hp) V-Twin 4 cycle EFI.air cooled	Briggs (40 hp) V-Twin 4 cycle EFI.air cooled	Briggs (40 hp) V-Twin 4 cycle EFI.air cooled
Transmission		(ADMIRAL) Standard		
Clutch		Belt-driven, Continuously Variable Transmission (CVT) maximizes engine power to the transmission		
Fuel Capacity		32.2 L (8.5. U.S Gal).		
Steering/Brakes		Argo Progressive Steering (APS) Hydraulic steering disc brakes with hydraulic disc stopping brakes		
Drive Chains		Double RC 50 & Single RC 60 Roller chain		
Electrical		12 volt D.C. AGM battery, 385 cold cranking amps at 0 F; 20/50 Amp charging system, electronic ignition		
Load Capacity	Land	850lbs. (385 kg)	980lbs. (444 kg)	1060lbs. (481 kg)
	Water	650lbs. (295 kg)	780lbs. (354 kg)	860lbs. (390 kg)
Seating Capacity	Land	4 persons		
	Water	4 persons		
Shipping Weight		1700lbs. (771 kg)	1570lbs. (712 kg)	1490lbs. (676 kg)
Accessory				
Brake Cooling		No	No	No
Tail Lights		Yes	Yes	Yes
Brushguard		No	Yes	Yes
Drive Belt		127-159 Standard	127-159 Standard	127-159 Standard
Tires		ARGO XT117 25X12-9	ARGO XT117 25X12-9	ARGO XT117 25X12-9
Rims		Steel Offset Bead Lock	Steel Offset Bead Lock	Steel Offset Bead Lock
Gauge		Premium	Premium	Premium
Winch		No	Yes	Yes
Alternator Output		20/50 AMPS	20/50 AMPS	20/50 AMPS
ROPS		Yes	No	No
Cargo Liner		No	Yes	No
Bearing Extensions		Yes	Yes	Yes
Hood Extraction Fan		Yes	Yes	Yes
Hitch Capacity Draw Bar Pull		N / LBS 8006/1800	N / LBS 8006/1800	N / LBS 8006/1800
Hitch Capacity Vertical Tongue Load		N / LBS 445/100	N / LBS 445/100	N / LBS 445/100

*Load capacity in water is 100lbs. less if equipped with optional 24x10.00-8NHS tires.


FRONTIER VEHICLE MATRIX ***Specifications subject to change**

Model		Frontier 600 6X6	Frontier 650(i) 6X6	Frontier 700 6X6
Engine		Vanguard 18HP Twin Carburated Air Cooled	Vanguard 23 HP Air Cooled Gas Eng 4 Cycle 627 cc	Vanguard 23 HP Air Cooled EFI Gas Eng 4 Cycle 627 cc
Transmission		Classic Standard		
Clutch		Belt -driven, Continuously Variable Transmission (CVT) maximizes engine power to the transmission		
Fuel Capacity		32.2 L (8.5. U.S Gal).		
Steering/Brakes		Argo Progressive Steering (APS) Hydraulic steering disc brakes with hydraulic disc stopping brakes		
Drive Chains		Single RC60 Roller Chain		
Electrical		12 volt D.C. AGM battery 385 cold cranking amps at 0 F; 20A charging system		
Load Capacity	Land	254 kg. / 560 lbs.	254 kg. / 560 lbs.	243 kg. / 535 lbs.
	Water	163 kg./ 360lbs.	163 kg. / 360 lbs.	152 kg. / 335 lbs.
Seating Capacity	Land	2	2	2
	Water	2	2	2
Shipping Weight		445 kg. / 980 lbs.	445 kg. / 980 lbs.	456 kg. / 1005 lbs.
Accessory				
Brake Cooling		No	No	No
Tail Lights		No	Yes	Yes
Brushguard		No		
Gauge Package		Deluxe		
Drive Belt		Standard - 127-159		
Entry Step		No		
Rear Seats		Yes		
Tires & Rims		Steel Offset - ARGO XT115 24X10-8		
Bearing Extensions		No	No	Yes
Bilge Pump		Yes		
Skid Plate		Yes		
Winch		No		
Cargo Liner		No		
Hood Rack		No		
Hitch Capacity Draw Bar Pull		(N / lbs) 5337/1200		
Verticle Tonque Load		(N / lbs) 445/100		

FRONTIER VEHICLE MATRIX ***Specifications subject to change**

Model		Frontier 700 Scout 6x6	Frontier 700 8X8	Frontier 700 Scout 8X8	Frontier 650(i) 8x8
Engine		23 HP Air Cooled EFI Gas Eng 4 Cycle 627 cc	23 HP Air Cooled EFI Gas Eng 4 Cycle 627 cc	23 HP Air Cooled EFI Gas Eng 4 Cycle 627 cc	23 HP Air Cooled Gas Eng 4 Cycle 627 CC
Transmission		Classic STD			
Clutch		Belt -driven, Continuously Variable Transmission (CVT) maximizes engine power to the transmission			
Fuel Capacity		32.2 L (8.5. U.S Gal.)			
Steering/Brakes		Argo Progressive Steering (APS) Hydraulic steering disc brakes with hydraulic disc stopping brakes			
Drive Chains		Double RC50 & Single RC60 Roller Chain			
Electrical		12 volt D.C. battery 435 cold cranking amps at 0 F; 20A charging system			
Load Capacity	Land	206 kg. / 455 lbs.	386 kg. / 850 lbs.	385 kg. / 790 lbs.	392 kg. / 865 lbs.
	Water	116 kg. / 255 lbs.	340 kg. / 750 lbs.	313 kg./ 690 lbs.	347 kg. / 765 lbs.
Seating Capacity	Land	2	4	4	4
	Water	2	4	4	4
Shipping Weight		492kg. / 1085 lbs.	544 kg. / 1200 lbs.	572 kg. / 1260 lbs.	538 kg. / 1185 lbs.
Accessory					
Brake Cooling		No			
Tail Lights		Yes			
Brushguard		Yes	No	Yes	No
Gauge Package		Deluxe			
Drive Belt		Standard 127-159			
Entry Step		No			
Rear Seats		Side			
Tires & Rims		OS Steel - AT189-24"			
Bearing Extensions		Yes	Yes	Yes	No
Bilge Pump		Yes			
Skid Plate		Yes			
Winch		Yes	No	Yes	No
Cargo Liner		No	No	Yes	No
Hood Rack		Yes	No	Yes	No

IDENTIFICATION AND LOCATION OF CONTROLS - AURORA

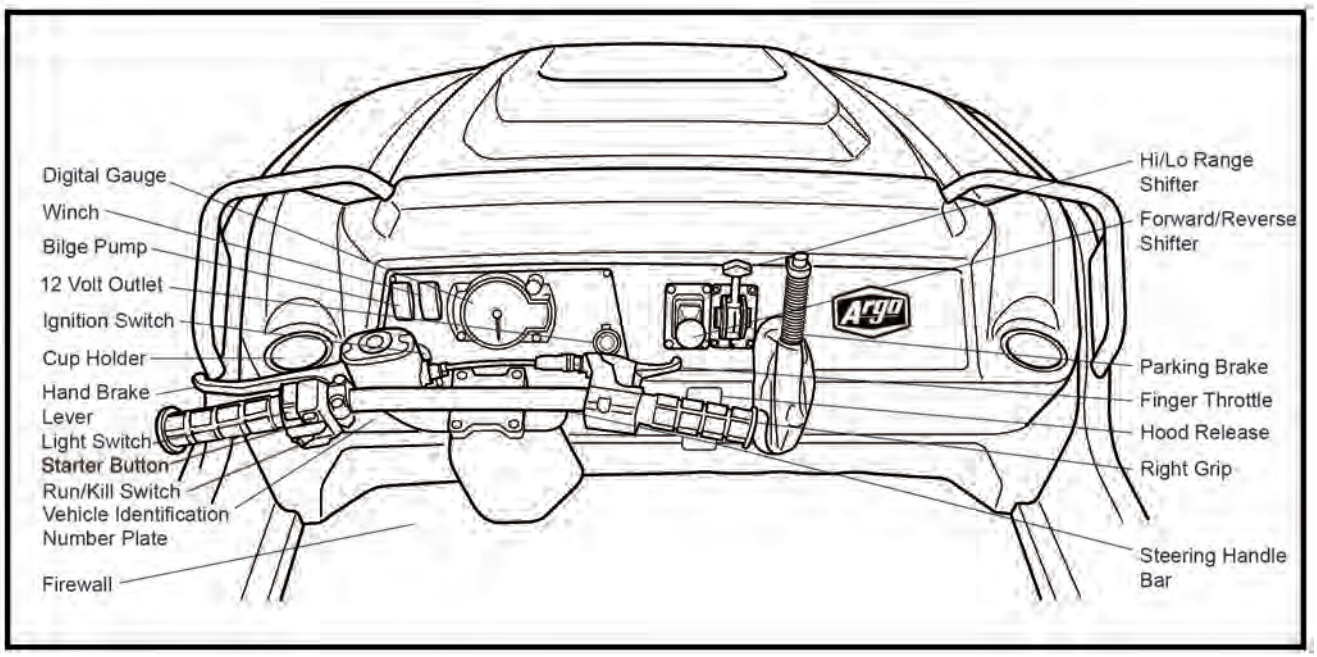

IDENTIFICATION AND LOCATION OF CONTROLS - FRONTIER

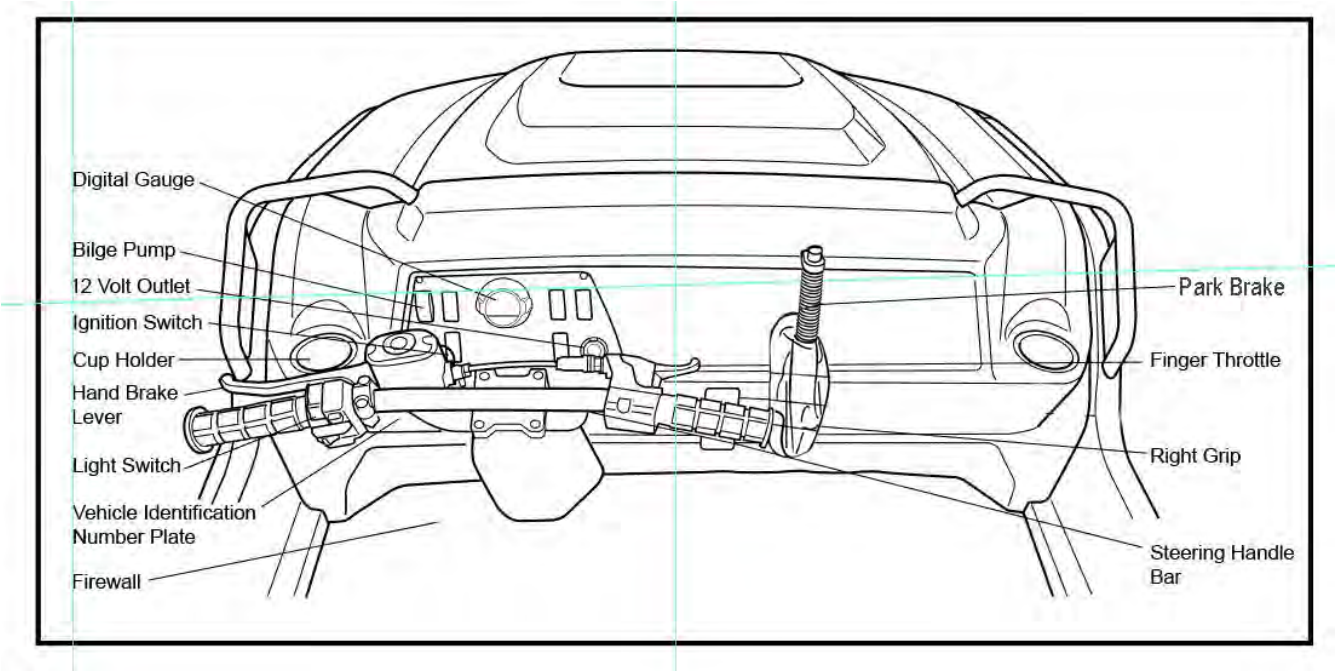


Figure 1 - Frontier 700 EFI

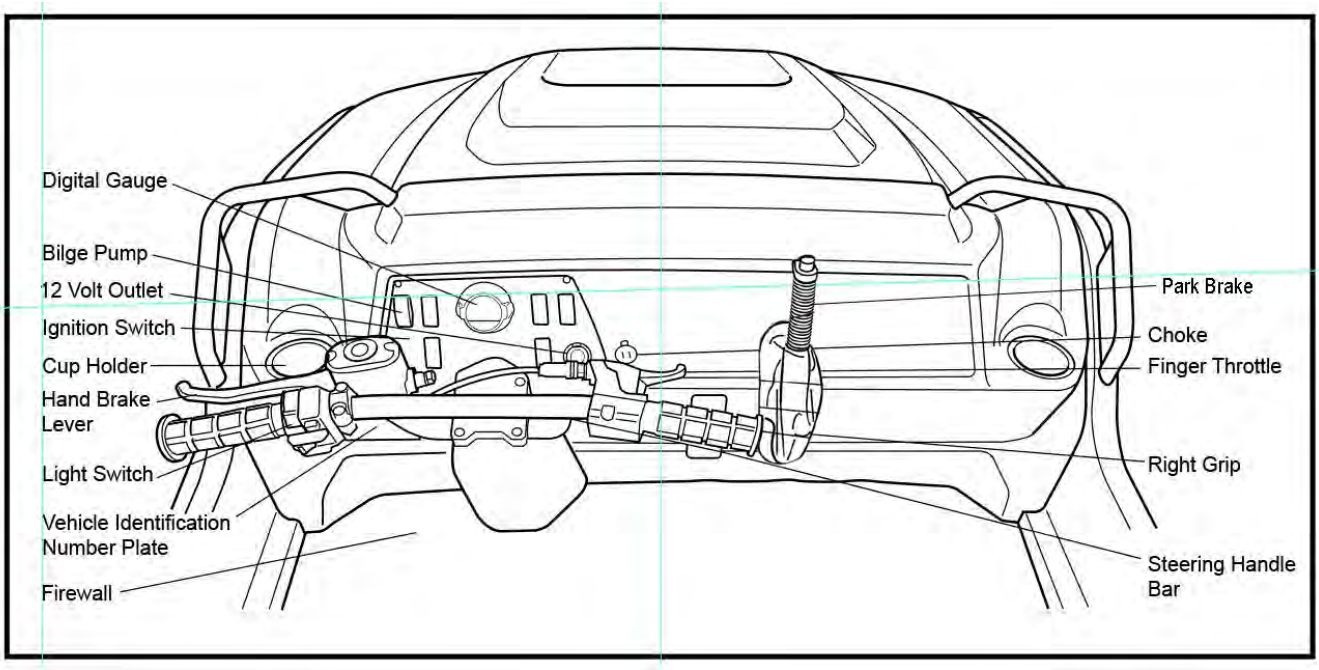


Figure 2 - Frontier 600 & 650 Briggs Carburated

INFORMATION LABELS - 8x8

There are labels on all models which indicate operating hazards and provide special operating instructions. Information about the use of the holding brake system, the use of the vehicle in water, correct fuelling procedures and placement of the floorpans has been provided on distinctive coloured labels fastened to the various locations on the Argo.

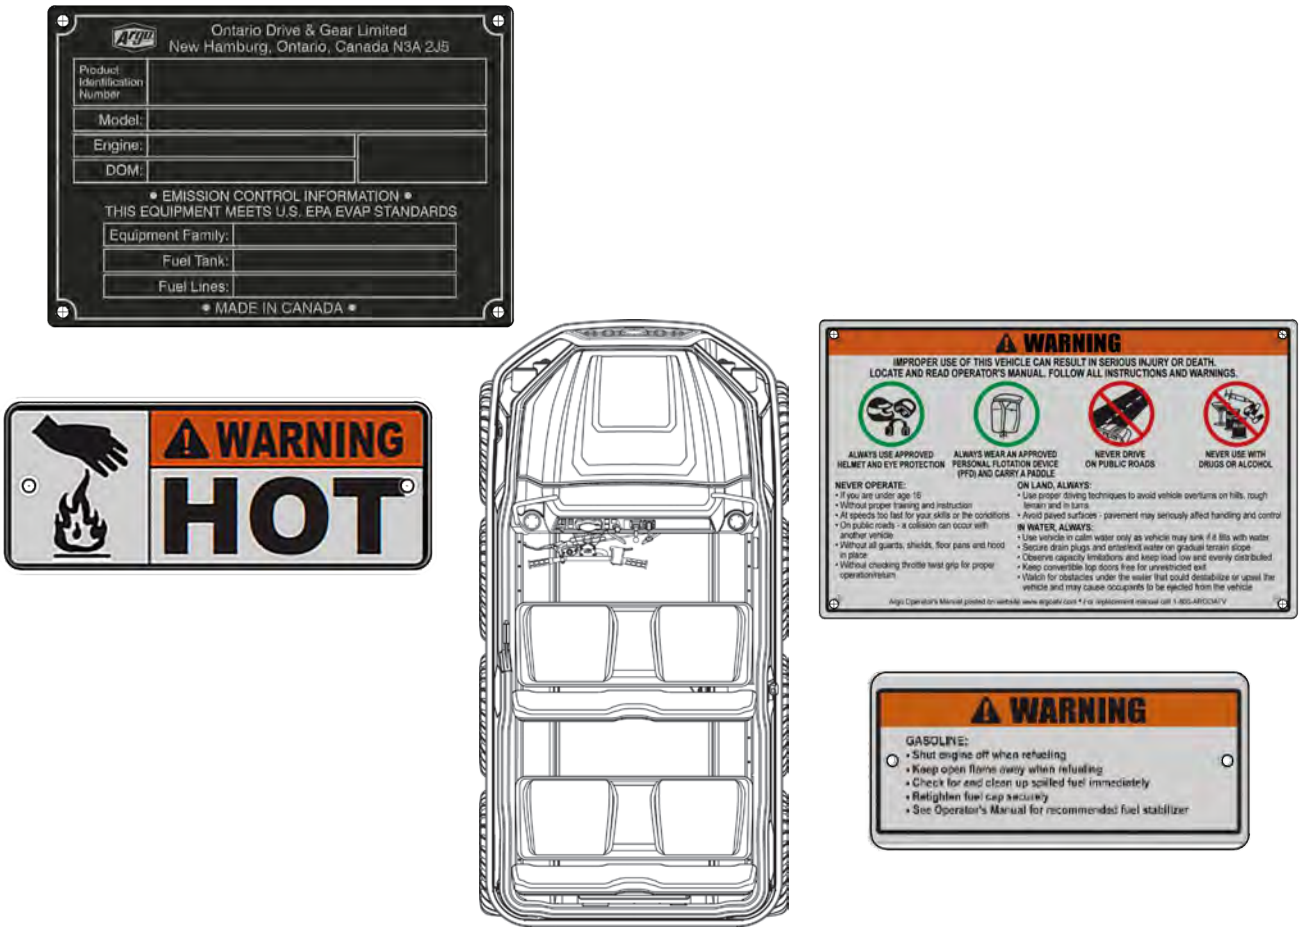


Figure 1-1 Location of Information Labels - All Models






INFORMATION LABELS - 6x6

There are labels on all models which indicate operating hazards and provide special operating instructions. Information about the use of the holding brake system, the use of the vehicle in water, correct fuelling procedures and placement of the floorpans has been provided on distinctive coloured labels fastened to the various locations on the ARGO.







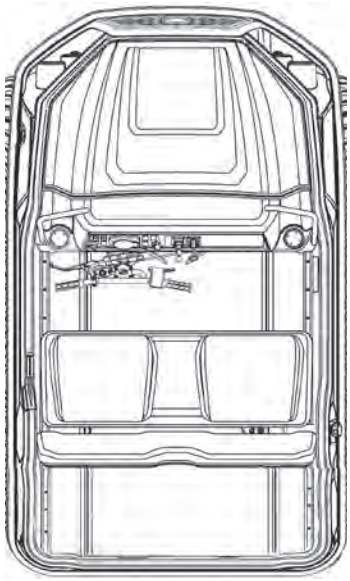







TORQUE SPECIFICATIONS

IMPORTANT

The following tables show "Standard" Torque Values for both imperial and metric fasteners. If there are any "Non-Standard" torque values specific to ARGO vehicle components, they will be called out during the service procedure in the related service section of this manual.

Standard Torque Values for Imperial Fasteners

FASTENER		THREAD SIZE - COARSE								THREAD SIZE - FINE							
TYPE/GRADE	CONDITION	1/4-20	5/16-18	3/8-16	7/16-14	1/2-13	9/16-12	5/8-11	3/4-10	1/4-28	5/16-24	3/8-24	7/16-20	1/2-20	9/16-18	5/8-18	3/4-16
Grade 5 SAE J429	Lubricated	76	157	23	37	57	82	113	200	87	174	26	41	64	91	127	223
	Anti-Seize, Threadlocker, or Plain Steel	86	178	26	42	64	92	128	227	99	197	30	47	72	103	144	253
	Zinc Plated	101	209	31	49	75	109	150	267	116	231	35	55	85	121	170	297
Grade 8 SAE J429	Lubricated	107	221	33	52	75	115	159	282	123	245	37	58	90	128	180	315
	Anti-Seize, Threadlocker, or Plain Steel	122	251	37	59	80	130	180	320	139	278	42	66	102	146	204	357
	Zinc Plated	143	295	44	70	90	154	212	376	164	327	49	78	120	171	240	420
Socket Head ASTM A574	Lubricated	125	258	38	61	93		179	317	143	286	43	68	105		210	367
	Anti-Seize, Threadlocker, or Plain Steel	142	292	43	69	106		203	360	162	324	49	77	119		238	416
	Zinc Plated	167	344	51	81	124		238	423	191	381	58	91	140		280	490
Grade C Nut Prevailing Torque	Min	93	192	28	45	69	100	138	245	90	180	27	43	66	94	132	231
	Max	144	251	37	59	90	130	180	320	131	261	40	62	96	137	192	336
Grade F Nut Prevailing Torque	Min	76	157	23	37	57	82	113	200								
	Max	96	198	29	47	72	103	143	253								
Grade G Nut Prevailing Torque	Min	107	221	33	52	80	115	159	282								
	Max	136	280	41	66	101	146	201	357								
18-8 & 316 Stainless Steel	Lubricated	57	118	17	28	43		85	113	65	131	20	31	48		107	126
	Plain/Dry	64	131	19	31	47		94	125	73	145	22	35	53		132	140

1. Values listed in red text represent inch-pounds
2. Values listed in black text represent foot-pounds
3. Lubricant is to be applied to male threads prior to tightening prevailing torque type nuts

TORQUE SPECIFICATIONS

Standard Torque Value for Metric Fasteners

FASTENER		THREAD SIZE - COARSE								THREAD SIZE - FINE							
TYPE/GRADE	CONDITION	M6x1.00	M8x1.25	M10x1.50	M12x1.75	M14x2.00	M16x2.00	M18x2.50	M20x2.50	M6x0.75	M8x1.00	M10x1.25	M12x1.50	M14x1.50	M16x1.50	M18x2.00	M20x2.00
Grade 8.8	Lubricated	70	169	28	49	78	121	167	236								
	Anti-Seize, Threadlocker, or Plain Steel	79	192	32	55	88	137	189	267								
	Zinc Plated	92	225	37	65	104	161	222	314								
Grade 10.9	Lubricated	100	242	40	70	111	173	239	337								
	Anti-Seize, Threadlocker, or Plain Steel	113	274	45	79	126	196	270	382								
	Zinc Plated	133	323	53	93	148	230	318	449								
Grade 12.9	Lubricated	117	283	47	81	130	202	279	394								
	Anti-Seize, Threadlocker, or Plain Steel	132	320	53	92	147	229	316	446								
	Zinc Plated	155	377	62	109	173	269	372	525								
A2 & A4 Stainless Steel	Lubricated	56	135	22	39	62	96	133	188								
	Plain/Dry	60	146	24	42	67	104	144	204								

1. Values listed in red text represent inch-pounds
2. Values listed in black text represent foot-pounds

AURORA MODELS

MAINTENANCE SCHEDULE

	BEFORE EACH USE	AFTER INITIAL			EVERY				
		2h	8h	20h	10h	25h	50h	100h	250h
Check Coolant Level (L/C Models)	X								
Check Fan Belt Tension (L/C Models)	X								
Check Fuel Level	X								
Check Tire Inflation	X								
Check Finger Throttle Operation	X								
Check Handlebar Travel	X								
Check Engine Intake/Exhaust For Obstructions	X								
Change That The Drain Plugs Are In Place	X								
Check Engine Oil Level	X								
Change Engine Oil And Filter				X				X	
Check Transmission Oil Level		X							
Change Transmission Oil				X				X	
Check Clean/Replace Air Filter								X	
Replace Fuel Filter (Models 850 & 950 Briggs)	Does NOT utilize inline fuel filter - No fuel filter replacement required								
Replace Fuel Filter Kawasaki 800 Models)	Does NOT utilize inline fuel filter - No fuel filter replacement required								
Service Driver And Driven Clutch									X
Lubricate Drive Chains					X				
Remove, Clean & Lube Drive Chains									X
Lubricate Outer Axle Bearings						X			
Lubricate Inner Axle Bearings							X		
Lubricate Output Shafts							X		
Lubricate Idler Shaft Bearings							X		
Clean Battery And Terminal Connections								X	
Clean Battery									X
Clean, Adjust/Replace Spark Plugs								X	
Check Drive Belt						X			
Check Nylon Sliders - Driven Clutch								X	
Check Slider Blocks - Chain Take-Up System					X				
Inspect Brake Pads						X			
Inspect/Adjust Emergency/Parking Brake						X			
Check Hydraulic Brake Fluid Level/Condition							X		
Check Fuel Tank Connection/Lines								X	
Inspect Wiring Harness								X	
Tighten Bearing Extension/Axle Flange Bolts					X			X	
Clean Out Spark Arrestor								X	

The intervals shown on the schedule are based on average operating conditions. Vehicles which are subjected to severe use and wet or dusty conditions will require more frequent servicing. Use only ARGO replacement parts to ensure safe operation of the vehicle and to comply with the warranty coverage.

We strongly recommend that an ARGO Dealer perform a complete check-over of your vehicle after the initial 20 hours of operation, then once each year. This will reduce maintenance costs over the life of your vehicle.

FRONTIER MODELS

MAINTENANCE SCHEDULE

	BEFORE EACH USE	AFTER INITIAL			EVERY				
		2h	8h	20h	10h	25h	50h	100h	250h
Check Fuel Level	X								
Check Tire Inflation	X								
Check Finger Throttle Operation	X								
Check Handle Bar Travel	X								
Check Engine/Intake Exhaust for Obstructions	X								
Check that the drain plugs are in place	X								
Check Engine Oil Level	X								
Change Engine Oil And Filter				X				X	
Check Transmission Oil Level		X							
Change Transmission Oil				X				X	
Check/Clean Replace Air Filter								X	
Service Driver And Driven Clutch									X
Lubricate Drive Chains					X				
Remove, Clean And Lube Drive Chains									X
Lubricate Outer Axle Bearings						X			
Lubricate Inner Axle Bearings							X		
Lubricate Idler Shaft Bearings							X		
Remove, Clean & Lube Idler Chains									X
Clean Battery Terminals & Connections								X	
Clean Battery									X
Clean, Adjust/Replace Spark Plugs								X	
Check The Drive Belt						X			
Check Nylon Sliders - Driven Clutch								X	
Check Sliders - Chain Take Up System					X				
Check & Adjust Idler Chains		X					X		
Inspect Brake Pads						X			
Inspect/Adjust Emergency/Parking Brake						X			
Check Hydraulic Brake Fluid Level/Condition							X		
Check Fuel Tank Connections/Line								X	
Inspect Wiring Harness								X	
Re-Torque Bearing Extension Bolts			X					X	
Clean Out Spark Arrestor							X		


The intervals shown on the schedule are based on average operating conditions. Vehicles which are subjected to severe use and wet or dusty conditions will require more frequent servicing. Use only ARGO replacement parts to ensure safe operation of the vehicle and to comply with the warranty coverage.


We strongly recommend that an ARGO Dealer perform a complete check-over of your vehicle after the initial 20 hours of operation, then once each year. This will reduce maintenance costs over the life of your vehicle.


SPECIALIZED TOOLS


1. 608-54 Bearing Removal Tool
2. 658-05 Needle Bearing Remover/Installer
3. 658-06 Output Shaft Puller
4. 658-07 Bearing Installer (101-15 Bearing)
5. 658-16 Right Angle Grease Fitting
6. 638-02 Oil Change Pump
7. 19352 Tang Bending Tool
7. 193889 Tiny Tach
8. 19545 Leak Down Tester - Briggs (can be used for all engines)
9. 619-10 Low Pressure Tire Gauge
10. 19626 Briggs Tiny Scan Code Reader
11. 19628 Briggs Diagnostic Software and Inter face Cable
12. 19624 Briggs Big Block Fuel Pressure Test Adapter
13. 19623 Briggs Noid Light (EFI)
14. 19627 Briggs Fuel Pressure Gauge
15. ST 270 12270 Cooling System Pressure Testing Kit (Available local Auto Parts)
16. 19625 Briggs Back Probe Wire Set
17. 19368 Briggs Spark Tester
18. 25 761 50 Kohler Diagnostic Software
19. 847252 EFI Diagnostic power harness
20. 5055- 0002 Clutch Assembly/Disassembly Tool


A pair of modified 7R Vice Grips is required to hold the ends of the drive chain together while inserting the connecting link. This tool can also be used to hold the ends of the idler chain together while inserting the connecting link. Grind the undercut and sides of the vice grip jaw to fit over 2 chain rollers. The undercut is approximately 1/4" radius.

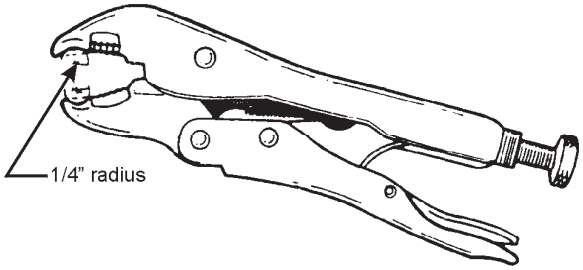


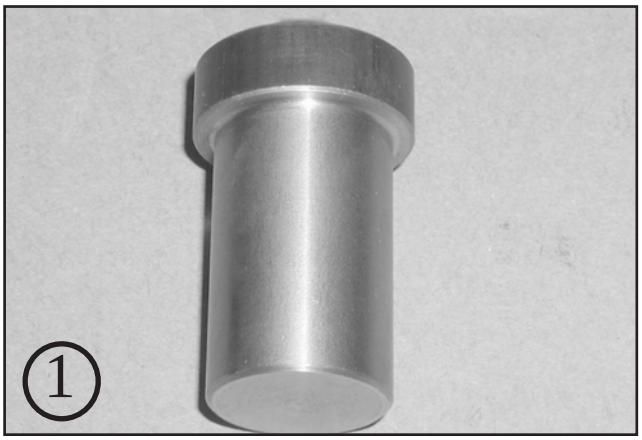

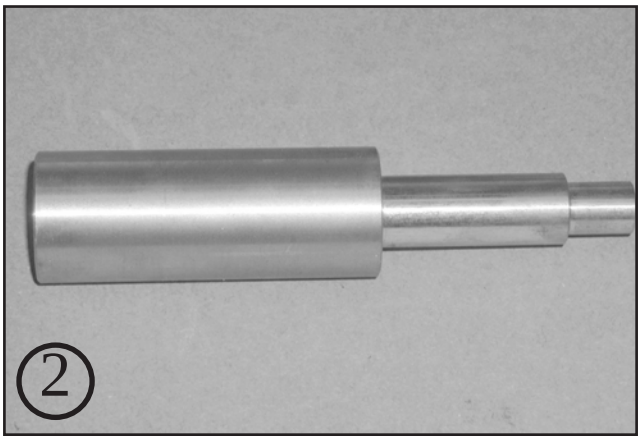


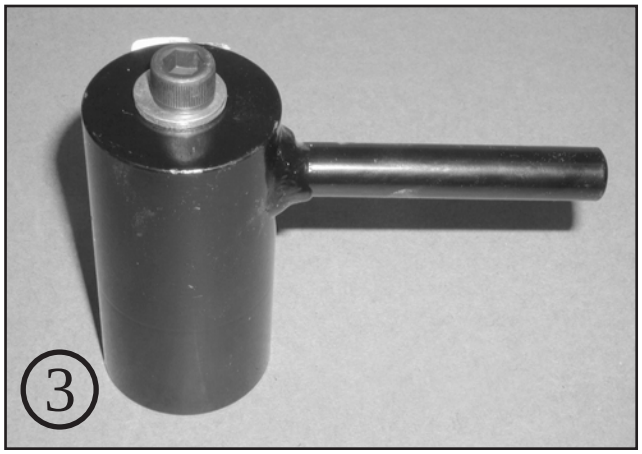

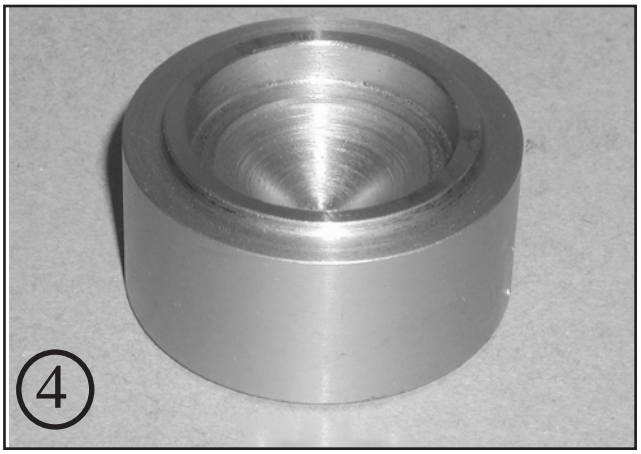

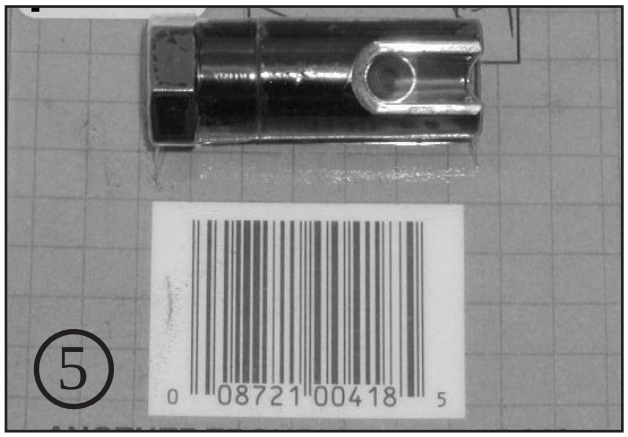
5
0 08721 00418 5


6

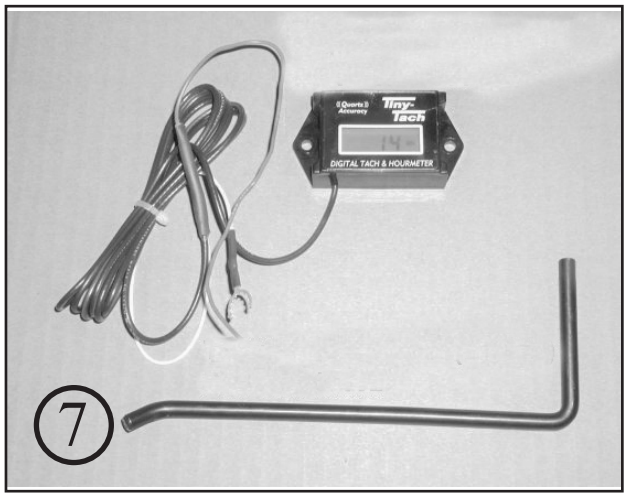
7
Tiny-Tach
DIGITAL TACH & HOURMETER


8


9
psi
kpa


10
Tiny-Scan

11




14



12



15

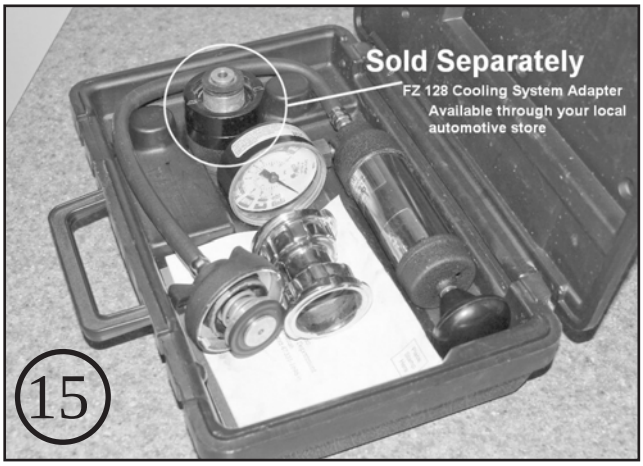


13





16




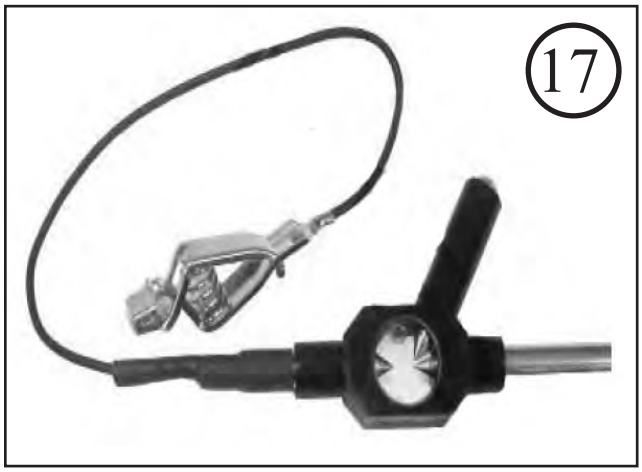



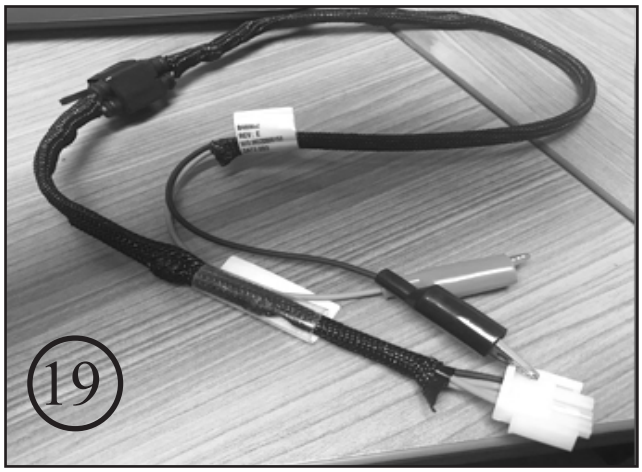

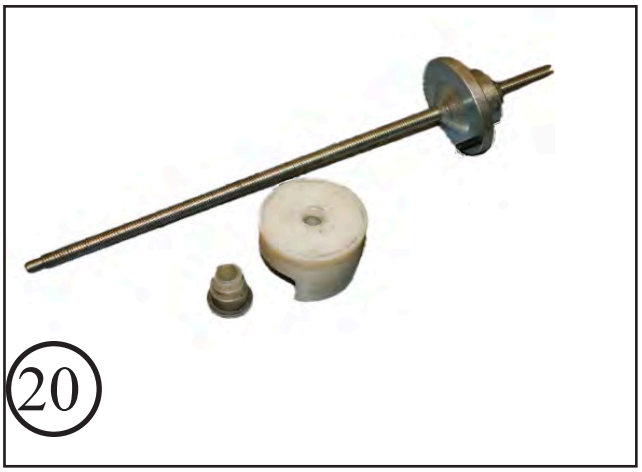

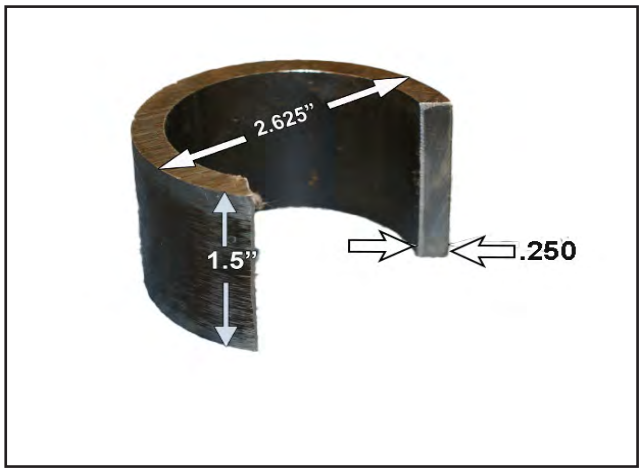

Extension Spacer Required for Invance Driven Clutch Disassembly/Reassembly. Used in conjuntion with 5055-0002 Clutch Tool. Make according to dimensions.

HDi ADMIRAL Transmission Specialized Tools

Specialized tools are now available for aiding in the disassembly and assembly of the ADMIRAL transmission.

1. TOOL, PLANET CARRIER PIN PRESS
2. TOOL, INPUT SHAFT PRESS
3. TOOL, OUTPUT SHAFT, COUPLER
4. TOOL, BEARING/SEAL PRESS,LARGE
5. TOOL, EXTENSION
6. TOOL, BEARING/SEAL PRESS,SMALL
7. MNT, ADM SERVICE
8. STUB SHAFT SOCKET TOOL

