




CAUTION

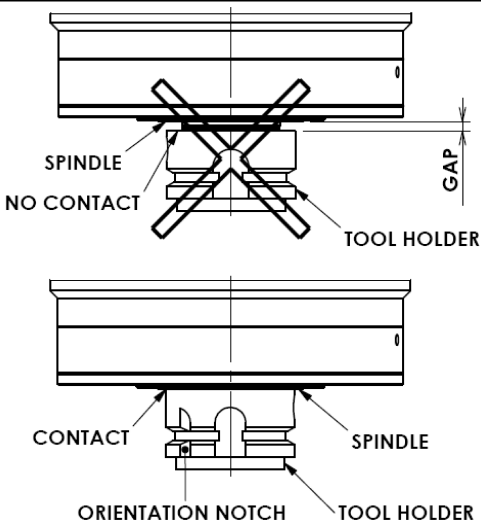

Orient the spindle before unclamping the tool.

For manual tool change orientation notch on the tool holder should come in front.