


DESi

utopic²


Utopic2 Smart Lock

USER MANUAL

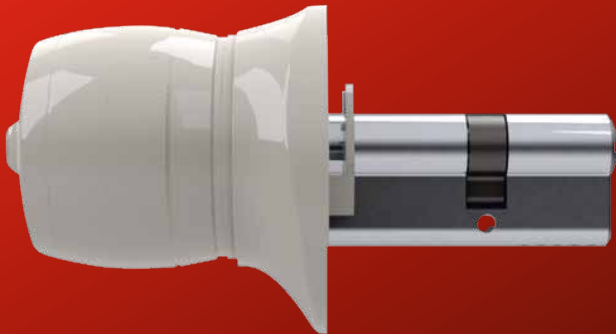

GENERAL INFORMATIONs and WARNINGS

- We recommend you to put the keys to an accessible place (like car, bag etc.) in an emergency condition.
- If there is any problem with door or locking mechanism, first of all, those problems need to be solved. Door's mechanical parts and locking mechanism should be working properly.
- Replace the batteries, if there is a battery warning. RECYCLE EMPTY BATTERIES!
- All the system need to be protected from water, direct sunlight and shocks.
- Place the batteries after installation of the system to the door. If the batteries are placed before the installation, auto-rotating parts may cause injuries. WATCH YOUR FINGERS!
- **For some doors, even if you remove cylinder screw, you cannot remove cylinder due to cramped installation of defender.** If this is the situation, follow the instructions below:
 - a- Untighten screws of cylinder defender (don't remove the screws)
 - b- Remove cylinder screw and take out the old cylinder.
 - c- Install the device after disassemble the motozied part from the cylinder. (see p. 4 and 5)

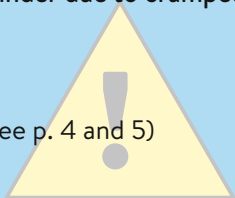

1. FEATURES OF THE DEVICE

Structure

Engraved Aluminum, ABS Plastic, Zamak

Cylinder Length

(outside) 31 mm x 37 mm (inside)

Inside part can extensile up to 43 mm

(Different cylinder lengths are available)

Batteries and Battery Life

5x AA size 1,5 V Alkaline or Lithium Batteries

On a 2 turns lock, with 10 operations per day;

300 days (if RF or Bluetooth is enabled)

200 days (if RF and Bluetooth are enabled)

Communication Capability

Bluetooth Low Energy

ISM RF 434 Mhz

Controlling Options and Compatible Accessories

Wireless Fingerprint Readers

Wireless Keypad

Wireless Auto-Locking Module

Wireless Home Automation Interface

Remote Controllers

Remote Access Module

BOX CONTENT


(May vary according to model number)

1x Smart Lock (with keys)

5x Alkaline Batteries

1x Installation screw and Hex key


2. PARTS OF DEVICE and INSTALLATION

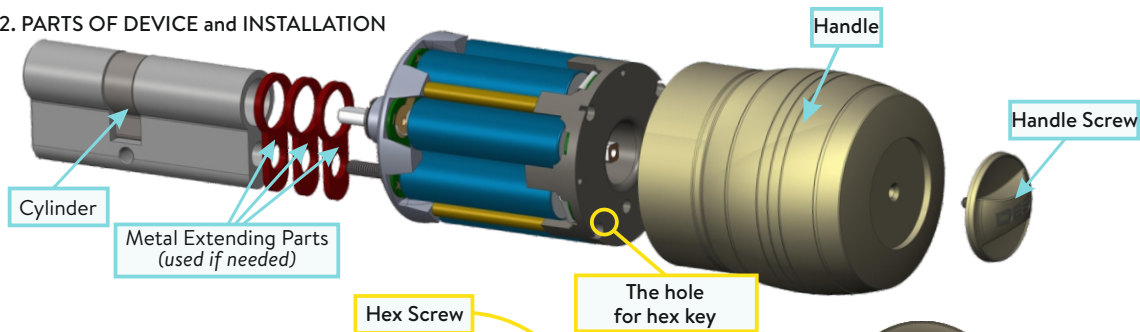

DEMOUNTING OF MOTOR AND CYLINDER

- Open "handle screw" and remove the handle by pulling.
- Remove the batteries.
- Rotate "hex screw" to counter-clock wise by using the hex key out of the box. You will see the cylinder will be disassembled from the motorized part.


To assemble two parts, combine cylinder and motorized part in a proper way and rotate hex screw to clock wise.

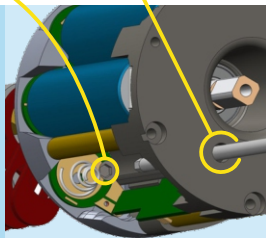

Plastic Cover



Cover Spring

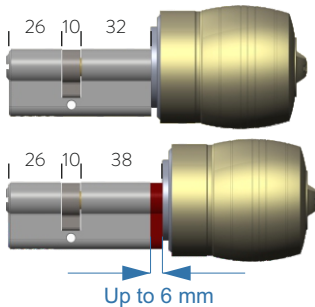


EXTENDING INSIDE PART OF THE CYLINDER *(if needed)*

If the door thickness is not suitable to the cylinder of the device, inside part of the cylinder may be extended up to 6 mm by 2 mm steps.

To extend the cylinder's inside part, follow the instructions below:

- Open "handle screw" and remove the handle by pulling.
- Remove the batteries.
- Rotate "hex screw" to counter-clock wise by using the hex key out of the box till the motorized part is disassembled from the cylinder.
- Add 2 mm metal extending parts as needed.
- Assemble cylinder and motorized part and rotate hex screw to clock wise direction.
- Install the batteries and check the device if it is working properly or not.

INSTALLATION OF MOTORIZED CYLINDER

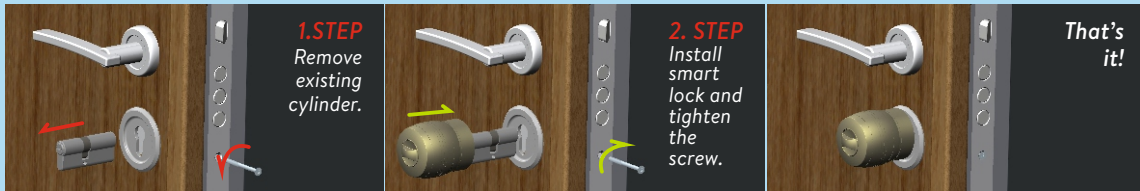

MOBILE APPLICATION


If you enroll your smart phone as first controller, it will be master controller of your smart lock.

Both master and user controllers can lock/unlock the smart lock. Besides, only the master controller can change settings of smart lock.

Before using your smart lock, you should adjust it properly by setting “locking way” and then “number of rotation” according to your lock.

If you want to change the master controller of smart lock, check “HOW TO RESET SMART LOCK” topic on page 18 or please click on the link to watch how to reset video <https://youtu.be/Z2caq6RQ8-U>

To use all available features of your device, **we highly recommend you to use a smartphone as master controller.**

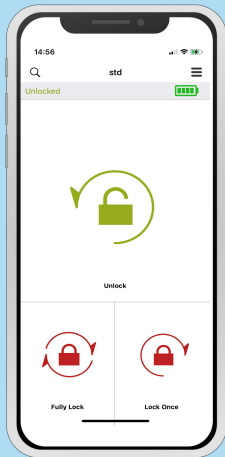


NOTE: For Android phones, when you are installing the app, it will ask permissions. You need to approve all the permissions asked. Otherwise, the application will not work properly. If you deny permissions, you will need to delete the application and install it again.

3.1. ENROLLING A MOBILE PHONE AS MASTER CONTROLLER

1. Search “Desi Utopic” on stores. Download, install and run the application.
2. Choose language and confirm.
3. Press and hold “set/reset button” on smart lock until you hear a long and short warning tone and then release button.
4. Touch “+” on the top left corner to see the list of Utopic smart locks around.
5. Touch to UTOPIC line and enter a name for your device and touch to green tick.
6. If the matching is successful, you will hear 2 short tones from motorized cylinder and your device will be master controller of motorized cylinder.

Please watch video for details <https://youtu.be/7iKNoLvvnN8>

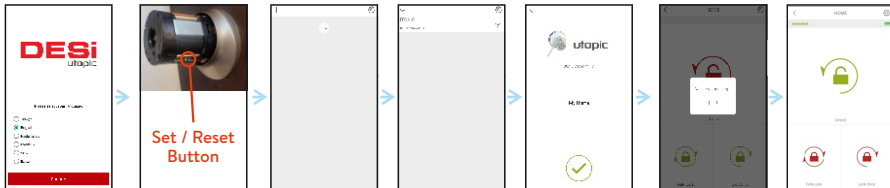

3.2. APPLICATION SETTINGS

If you touch to menu button on the top right corner when it is not connected to smart lock, you will reach to settings menu of application. Related menu items are as follows:

PASSWORD: You can disable, enable or change the password of application.

Also you can enable biometric login or face ID from that menu.


LANGUAGES: You can change language of the application.

SIRI SETTINGS: You can open your lock with voice commands (Only for Iphone)

APPLICATION INFO: You can see the version of installed application.

VIDEOS: You can see videos about usage of smart lock.

FAQ: You can see questions and answers about usage.

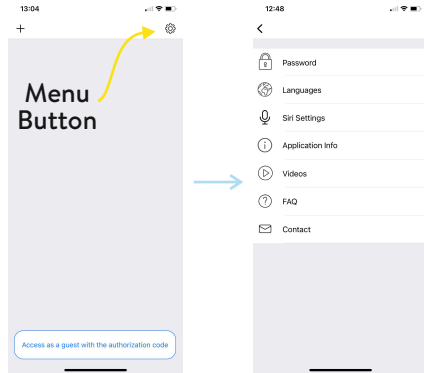

3.3. SMART LOCK SETTINGS / ADMINISTRATION MENU


If you touch the menu button in the top right corner when the application is connected to smart lock as master controller, you will reach to settings menu of connected smart lock. You can change settings of your smart lock and perform administrative activities via this menu.

Related menu has 4 tabs: **Device Info**, **Knob Settings**, **Users**, **Reports**.

5.3.1. DEVICE INFO TAB

In this tab, you can see following information:

- Device Name
- Favorite Device
- Battery Level
- Users - (Number of Enrolled Controllers)
- Operations- (Number of Locking or unlocking)
- Device Type
- Software version
- Button Mode

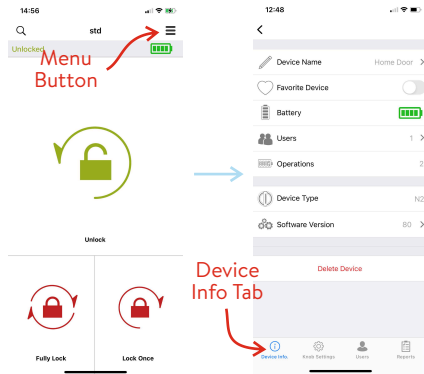

If you want to delete connected device from your mobile application, touch the “Delete Device” button in this menu.

NOTE 1: Blue colored menus and menu items are available for master phone only.

NOTE 2: Your device’s firmware can be updated via master phone. For details check page 26. (Only N2 devices with firmware 80)

TIP: To access settings without problem wait until the lock status (top left), battery status (top right) appear on the home screen.

3.3.2. KNOB SETTINGS TAB


In this tab, there are following menu items:

NIGHT MODE AVAILABILITY: Night mode is a security option which temporarily disables all controllers of motorized cylinder. In this way, the door can only be opened by knob or the key. If this feature is enabled, when you rotate your motorized cylinder through locking way 2 times, the device will shift to night mode till you rotate the knob or key through unlocking way. For shifting to night mode, Semi-Automatic Mode should be enabled.

SEMI-AUTOMATIC MODE: Your device has a semi-automatic feature which senses the knob / key rotation and continue to rotate automatically. On this menu item, you can enable / disable this feature.

AUTO LOCK*: Your device has an automatic locking feature which let the device locks itself -either one turn or full turns- automatically in 15, 30, 45 or 60 seconds after it is unlocked. If you enable auto-locking, you will see DAY MODE setting which gives flexible options for office use. If DAY MODE is enabled, you can define 1 or 2 periods for selected days, which Auto-Locking will not work.

Please watch video for details <https://www.youtube.com/watch?v=liVxwj-7yyI>

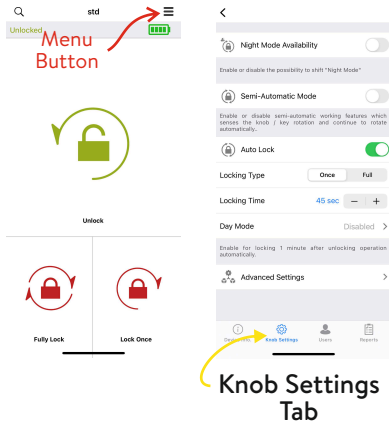

NOTE: Auto Lock feature is only available for device type N2 and firmware version is 87 or higher.

3.3.2.1. KNOB SETTINGS TAB/ADVANCED SETTINGS PAGE

BUZZER OF KNOB: You can enable / disable activation sounds coming from smart lock.

INVERT LOCKING WAY: You should set locking way of the device in accordance with your door's locking way.

ADJUST NUMBER OF TURNS: You should set how long the device will rotate to lock the door in accordance with your door's lock. For this purpose, close the door (do not lock) and then “Blue Rotating Arrow” button. The device will retract the latch, lock and then unlock the door.


LATCH RETRACTION PERIOD: You can adjust the time period which the smart lock keeps latch of the lock inside when it unlocks the door. (1 sec - 3 sec - 6 sec). 0 sec is for the doors without latch. **MOTOR**

POWER: You can adjust the power (and also speed) of motor in 4 different levels, adjust to the lowest level which can lock and unlock your door without any problem. Higher powers will decrease battery life.

MOTOR TYPE: If your smart lock is equipped with coreless motor, you need to change motor type to coreless. If you have a device with coreless motor and if it cannot keep the latch of the lock inside, enable “Power Hold” option.

NOTE 1: LATCH RETRACTION PERIOD, MOTOR POWER, MOTOR TYPE features are only available for device type N2 and firmware version is 87 or higher.

NOTE 2: Utopic2 Gold Edition models have coreless motor, please be sure that coreless motor is set. Otherwise your smart lock will not work properly.

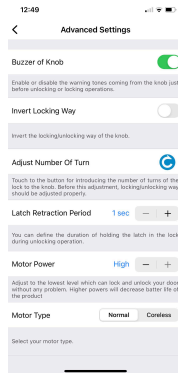


3.3.3. USERS TAB

In this tab, you can manage controllers of smart lock including auto-locking module, home automation interface, keypad, fingerprint reader, remote controllers etc. If you touch “Controllers” line, you can edit enrolled controllers. If you touch any user, you reach dedicated controller page which you can edit name or delete the controller one by one. In addition, you can apply time limited access to any user or controllers from this menu.

You can enroll new controller if you touch “Enroll New Controller” line, Please check next 2 pages for detailed explanation.

If you touch “Delete All Controllers” line, all enrolled controllers will be deleted.

*Please note that you cannot delete “Master Controller” till you **FACTORY RESET** the smart lock.*

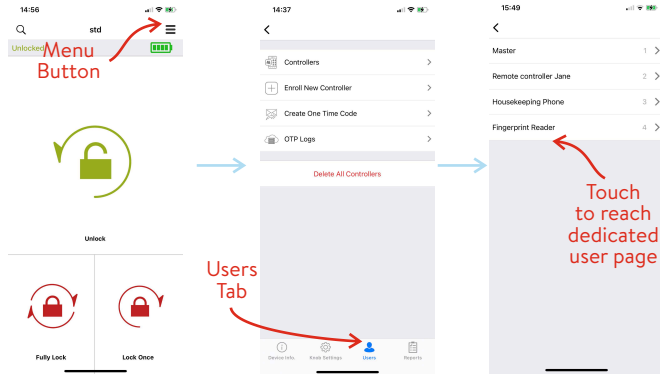


Besides managing controllers, you can generate and send “one time/limited time access passwords” by touching “Create One Time Code” line. Details will be explained on page 20, 21 and 22.

3.3.4. ENROLL NEW CONTROLLER:

Your smart lock may learn up to 39 controllers. To shift your smart lock to enrolling mode, touch “Green Plus” sign as shown and the smart lock will give a long then short warning tones. After the short tone, you need to send locking or unlocking signal via the new controller as explained below:

For how to video, please click on the link
<https://youtu.be/7iKNOLvvnN8?t=31>

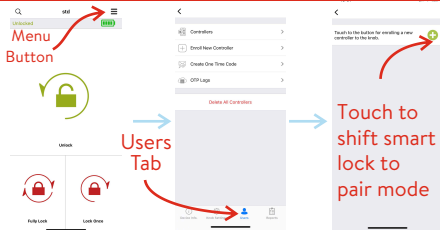

For fingerprint reader;



wake it up and touch the locking button.

For keypad;



wake it up and touch the locking button.

For remote controller;



press and hold any button.

For auto-locking module;



take the magnet closer to triangle sign and wait indicator is lit.

For home automation interface;



power up the device and short-circuit and then open-circuit yellow and black cables.

For **other controllers**, send locking or unlocking signal via related controller.

For enrolling a **new mobile phone**, please check next page.


3.3.5. GENERATING ONE TIME/LIMITED TIME ACCESS CODE VIA MASTER PHONE

If you are the master user of smart lock, you can let anybody unlock the door via application or wireless keypad, even if you are far away. Internet connection is not needed for this function to work.

3.3.5.a. ONE TIME ACCESS VIA APPLICATION (Generating One Time Access Code)

- Touch to “Settings” and go to “Users” tab then to “Create One Time Code”.
- If you want to limit the validity of the code by a period (you need to connect smart lock via bluetooth), enable “Time Limited Access” feature and set the beginning and ending date. (During defined period, the generated code **will work only 1 time** and if somebody tries to use generated code on a date which is not in defined period, it will not work.)
- After that, touch to “Create One Time Code”. Pop-up will appear which shows the generated code. You can touch to “Share” button to share related information.

NOTE: OTP feature is only available for device type N2 and firmware version is 87 or higher.

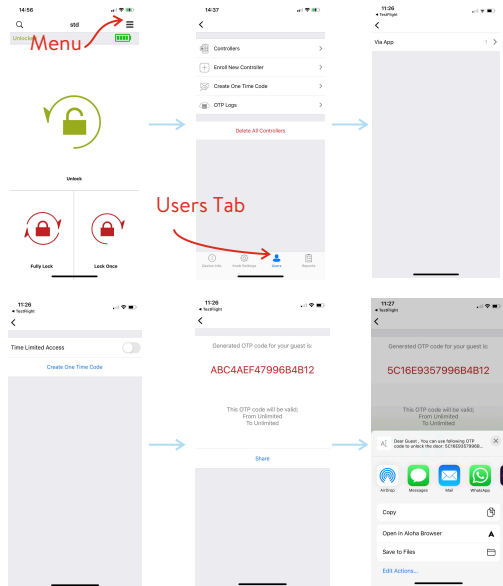


3.3.6. ENROLLING A NEW (USER) MOBILE PHONE VIA MASTER MOBILE PHONE

NOTE: For Android phones, all the requested permissions need to be given without any restriction during installation of app.

- With **NEW MOBILE PHONE**, search “Desi Utopic” on application stores. Download, install and run the application.
- Choose language and confirm.
- Connect to smart lock MASTER MOBILE PHONE, touch menu button in the top right corner and go to Users tab.
- On Users tab, touch “Enroll New Controller” line to go enrolling new controller page. After that touch to “Green Plus” sign next to “Enroll New Controller” line. Smart lock will give a long (5 sec.) and then a short warning tones.
- With **NEW MOBILE PHONE**, Touch “+” on the top left corner to see the list of Utopic smart locks around.
- Touch the UTOPIC line and enter a name and press green tick. When multiple warning tones heard, smart lock and new mobile phone paired successfully.

For how to video, please click on the link <https://youtu.be/wKUQSBkKHx4?t=50>

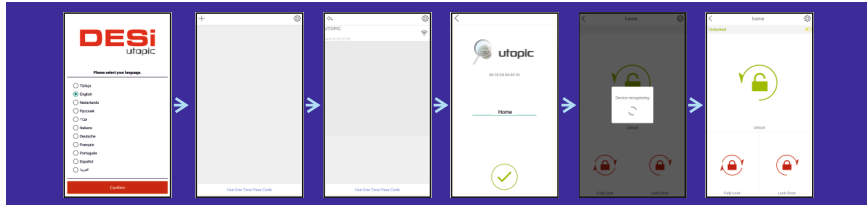

4. USAGE

4.1. UNLOCKING AND OPENING THE DOOR

If you touch to Unlock button on application screen, system automatically unlocks and opens the door.

You can unlock/open the door by using the knob or the key as well. If semi-automatic working is enabled, when you rotate the knob or the key to unlocking way, it will sense the movement and continue automatically.

4.2. LOCKING THE DOOR

If you touch to “Lock Once” button, system will automatically lock the door one turn.


If you touch to “Fully Lock” button, system will automatically lock all the turns.

You can lock the door by using the knob or the key as well. If semi-automatic working is enabled, when you rotate the knob or the key to locking way, it will sense the movement and lock the door one turn.

4.2.a NIGHT MODE

Night mode is a security option which temporarily disables remote controllers. In this way, the door can only be opened by knob or the key. To shift the motorized cylinder to night mode:

- Close the door and turn the knob through locking way. The motorized cylinder will lock the door one turn.
- Turn the knob again through locking way. It will lock all the turns.

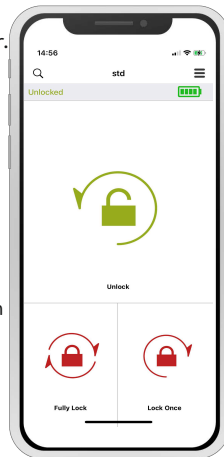

In this way, the motorized cylinder will shift to Night Mode. To exit from night mode, turn the knob through unlocking way. It will automatically unlock the door and shift to normal working mode. You can shift to or exit from night mode by using key as well.

To use Night Mode, **NIGHT MODE AVAILABILITY** and **ADJUSTING SEMI-AUTOMATIC WORKING** settings need to be enabled. If any of them is disabled, the motorized cylinder cannot shift to Night Mode.


5. MAINTENANCE

You can clean the surfaces with soft fabric. Do not use water or corrosive chemicals. Do not touch to electronic parts of the device with a conducting metal or sharp object.

5.1. REPLACING MOTORIZED CYLINDER'S BATTERIES

- The motorized cylinder uses 5x AA size 1,5 V Alkaline or Lithium batteries.
- Do not use old and new batteries or different types of batteries together.
- If you are changing batteries, change them all. Use high quality batteries.

If you hear triple warning tone after any operation (locking/unlocking), or if the motorized cylinder rotates too slowly, you need to replace the batteries. open knob screw and remove knob (pull outward), uninstall old batteries and install new batteries (watch polarities). Put knob back and tighten knob screw.

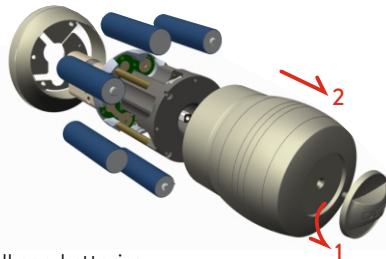


5.2. HOW TO RESET MOTORIZED CYLINDER

If you want to change master controller of motorized cylinder, you need to reset motorized cylinder. To do this, follow the steps below:

- Remove 1 battery of your motorized cylinder and press and hold “set/reset button”. Put the 5th battery. You will start to hear a long warning tone from motorized cylinder. Continue to hold the button till you hear two short tone after long warning tone.
- In this way, motorized cylinder will be reset and all the controllers, including master controller, enrolled to the device will be deleted.

Click on the link to watch how to reset video <https://youtu.be/Z2caq6RQ8-U>

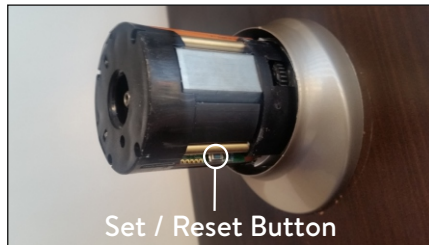


5.3. Unlocking The Door By Using Generated Code

- Copy the shared code to clipboard. (You can copy all the shared text. The app will filter the code automatically.)
- Install Utopic application to your mobile phone, launch the app, choose the language.
- Hold your mobile as close as possible to the door that smart lock is installed and on the main screen, touch to “Use One Time Pass Code” button located at the bottom of main screen.
- The application searches available smart locks around and when it finds, it will ask to use the code on the clipboard with a pop up. Touch the confirm button. When you see the code as it is written on the screen, touch to “Green Tick” to unlock the door.
- If the code is valid for the lock, the smart lock will unlock the door and you will see a confirmation pop-up.

5.3.3.3.b. TIME LIMITED ACCESS VIA WIRELESS KEYPAD *(The Wireless Keypad is sold separately as an accessory)* Before enrolling the wireless keypad to your smart lock, you need to enable “Time Limited Access” mode on keypad’s settings. To enable/disable “Time Limited Access” mode, follow the instruction below:

- Tap with your palm to wake up the device. Then touch the
- “SETTINGS” button. “MASTER” will be displayed on the screen.
- Enter 5 digit master password. “≡ ≡” symbol will appear on the screen.
- Touch the “0” button. “OTP” will appear on the screen. Touch the “SETTINGS” to enter menu.
- Touch the ‘LOCK’ to cycle through the selections; “ON” means
- OTP is on, “OFF” means OTP is off.
- Touch the “SETTINGS” to save your choice.

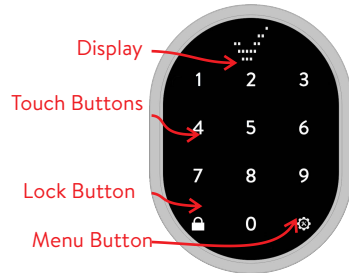

After enabling OTP mode on keypad, follow the steps below to enroll it to the smart lock:

- Launch the app on the master phone and connect to the smart lock.
- Touch to “Settings” icon located on upper right corner and go to “Users” tab.
- Touch to “Enroll New Controller” and then touch to “green plus” sign on the right. The smart lock will give a long and then a short warning tone.
- After warning tones, wake the keypad up by putting your palm to the touch keys and then enter “2222”.
- The smart lock will give multiple warning tones and the keypad will be enrolled to the smart lock. After that launch the app on master phone, connect to the smart lock, touch to “Settings” icon located on upper right corner and go to “Users” tab. If the enrolling process is successful, you will see “Via Keypad” line, besides “Via App” when you touch to “Create One Time Code” line.

Generating Time Limited Access Code To Use Via Keypad

- Launch the app on the master phone and choose the smart lock that you want to generate codes.
- Touch to “Settings” icon located on upper right corner and go to “Users” tab.
- Touch to “Create One Time Code” and then “Via Keypad”.
- To have an enhanced / explanatory usage log, choose one of the following roles for the time limited code: **Guest, Administrator, Room Service, Maintenance, Runner**
- After choosing the role, you will see following titles to set on coming page:
Check In & Out Time: Default check-in time is 14:00 and check-out time is 10:00. This period is valid for all the time limited access codes. (To change default values of this setting, you need to connect smart lock via bluetooth)
Usage: You can choose if the generated password will be a one time (single) or multi time usable during given period.

From: You can choose beginning date of the period which the generated password will be valid.

To: You can choose ending date of the period which the generated password will be valid.

After choosing desired settings, touch to “Create One Time Code” line.

- A pop-up will appear which shows 8 digit password. You can share generated information by touching related button.

Unlocking The Door Via Keypad By Using 8 Digit Time Limited Access Code

Wake the keypad up and enter the 8 digit code. If it is valid, the smart lock will unlock the door.

After first succesful usage of the 8 digit code, you can use last 4 digits of code during the period.

Besides, keypad has master password (and +1 user password, if enabled) for unlocking the smart lock. If you touch to Menu button after waking the keypad up, you can enter the master (or user) password to unlock the smart lock.

**Adjust
Before
Use**



You should change the default master password of the keypad before using it as mentioned below:

- Tap with your palm to wake up the device. Then touch the “SETTINGS” button. “MASTER” will be displayed on the screen.
- Enter “12345” as the default password. “≡ ≡” symbol will appear on the screen.
- Touch the “7” button. “PASSWORD” will appear on the screen. Touch the “SETTINGS” button to enter menu.
- When the “MASTER” appears, touch the “SETTINGS” button again.
- Enter your new 5-digit master password when “NEW PASS” is displayed on the screen. When “REPEAT” is displayed, re-enter the 5 digit password. Thus, your master password will be changed.

IMPORTANT NOTES

- You can generate time limited access codes while you are away. Bluetooth or internet connection is not necessary. Besides, if you want to change check-in/out times, you should connect to the smart lock via bluetooth.
- “Single” usage codes can be used “1 time only”. “Multi” usage code will be valid during selected period.
- You can generate both “single” or “multi” usage codes for the same date.

- If you generate two different multi usage codes whose periods have intersection and if the code which has a recent beginning date is used, it cancels the code which has a former beginning date, as explained below:

Let's say you generate a code which is valid from 20th to 25th of September (**1st code**)

After that, you generate another code which is valid from 23th to 25th of September (**2nd code**)

On 23th of September, if you use **1st code**, it unlocks the smart lock.

On 23th of September, if you use **2nd code**, it unlocks the smart lock and cancels **1st code**. After the first usage of **2nd code**, **1st code** will not unlock the smart lock anymore.

- If you generate a multi usage code whose validity interval begins in a month and ends in next month and if the code is not used in first month, it will be cancelled automatically, as explained below:

Let's say you generate a code which is valid between 30th of September to 5th of October.

If the code is used on 30th of September, it unlocks the smart lock and will be valid till 5th of October. If the code is not used in September, it will be cancelled automatically. So it will not work in October too.

5.3.4. REPORT TAB

In this tab, you can see which user unlocked or locked the device with time and date information.

6. TROUBLESHOOTING

SMART LOCK CANNOT FULLY LOCK/UNLOCK THE DOOR

- There can be high friction on the lock or latch bolt. It may be caused by sag of the door or unadjusted locking mechanism. Check if you can open the lock and the latch with a key easily. If there is a problem on door or lock, that need to be fixed.
- Batteries of smart lock may be weak. Recharge the batteries.
- The smart lock need to be adjusted according to the lock after installing your smart lock. Please check page 12.

THE LOCK IS NOT UNLOCKED/LOCKED EVEN THE SMART LOCK IS ROTATING

- There would be a problem related with connection between motor and rotating shaft. Call your dealer and ask for service.

THE CONTROLLERS CANNOT OPERATE THE SMART LOCK

Child lock would be activated. To deactivate child lock, press two buttons on smart lock and wait till you hear 3 short warning tones.

I CANNOT ADJUST THE SETTINGS OF SMART LOCK WITH MY PHONE

The phone is not enrolled to the smart lock as master controller. If you want to change the master controller of smart lock, check “HOW TO RESET SMART LOCK” topic on the page 18.

I CANNOT ENROLL MY PHONE AS THE MASTER CONTROLLER

There would be a controller which is already enrolled to smart lock. If you want to change the master controller, first you need to reset the smart lock (check page 18) and then enroll your mobile phone (check page 13). If you reset the smart lock, all the controllers including auto-locking module, keypad, fingerprint reader etc. need to be reenrolled to the smart lock after enrolling new master phone.

MY PHONE CANNOT CONNECT TO THE DEVICE

- For Android smartphones, all the permissions (e.g. location, bluetooth etc.) requested during installation of application need to be given without any restriction. If you did not allow the app to reach requested permission, you need to uninstall, then reinstall the application and allow the requested permissions during installation.
- If you have this issue during enrolling your phone to the smart lock, maybe you forgot to shift the smart lock to enrolling mode. Please check pages 8, 14, and 16 for details about enrolling your phone to smart lock.

Please see the FAQ section for more <http://en.desi.com.tr/faqutopicr.pdf>

I FORGOT THE PASSWORD OF MOBILE APPLICATION

If you forget your password, there is no chance to get it back. As a solution, you need to delete the application and reinstall it. However, in this case, your phone will not recognize your smart lock. You must reset your smart lock and enter the smart lock to the pair mode.

I CANNOT ADJUST THE MOTOR POWER

If your smart lock software/firmware version is below 80, you cannot change motor power even though you see the that setting. To use this feature, you need to upgrade your smart lock to latest firmware. (please check page 27)

I CANNOT GENERATE A TEMPORARY ACCESS CODE / ONE TIME ACCESS CODE

If your smart lock software/firmware version is below 87, you cannot create a temporary access code via application. To use this feature, you need to upgrade your smart lock to latest firmware.

Please see the FAQ section for more <http://en.desi.com.tr/faqutopicr.pdf>

7. HOW TO UPDATE FIRMWARE OF SMART LOCK

Please follow the steps below:

- Connect to the smart lock via master phone and touch to menu button.
- On “Device Info” tab, touch to “Software Version” line.
- If a new firmware is available, the application will inform you.
- Touch the Start button and follow the instructions on application.


For how to video, please click on the link

<https://www.youtube.com/watch?v=WloejfIEWF4>

NOTE: Update feature is only available for device type N2 and firmware version is 80 or higher.

IMPORTANT NOTES:

- Make sure master phone and smart lock charge level are at least 50% during the update process.
- To prevent interruptions, it is recommended to switch master phone to flight mode before launching the app for updating firmware.
- The update process will take approximately 10 minutes. During this time, keep the phone close to smart lock.
- Make sure that the Bluetooth connection does not lost and the application does not close. If your phone has an automatic screen lock, always turn off this feature during the update.

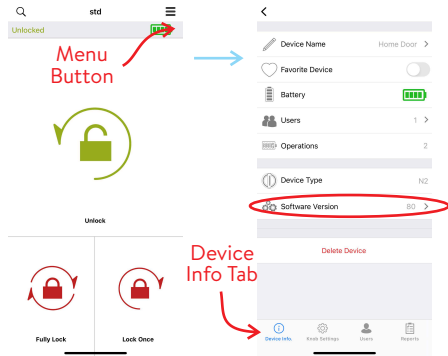

8. HOW TO FIX CONNECTION PROBLEM IN SOME ANDROID PHONES

Some Android phones may have problems when pairing to the smart lock for the first time. These problems are due to the difference of Android versions. To solve this problem, just follow the steps below.

1. Go to Settings of Android device
2. Select “Application Manager”
3. Click the 3 dots in the top right corner and select All System Apps
4. Select Bluetooth from the large list of Applications
5. Force Stop
6. Select Storage
7. Clear Data
8. Clear Cache
9. Restart the mobile phone

Note: In Android 11 versions, instead of the 3 dots in the top right corner, there is a small icon with down arrow and a lines located at the bottom in the middle sections.

A solid red vertical bar on the left side of the page.

DESi

www.desi.com.tr

copyright © DESi Alarm and Security Systems Inc.