

Control Desk

Introduction

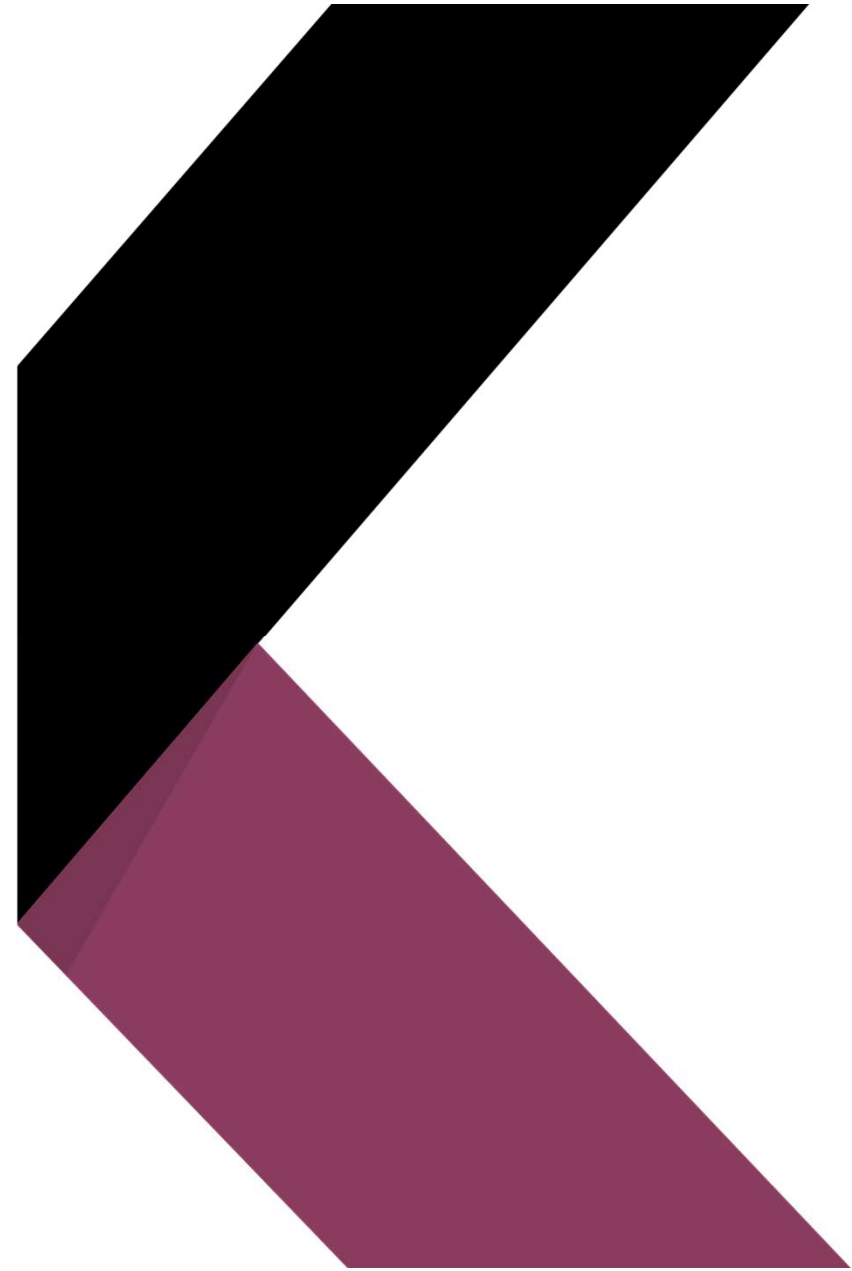


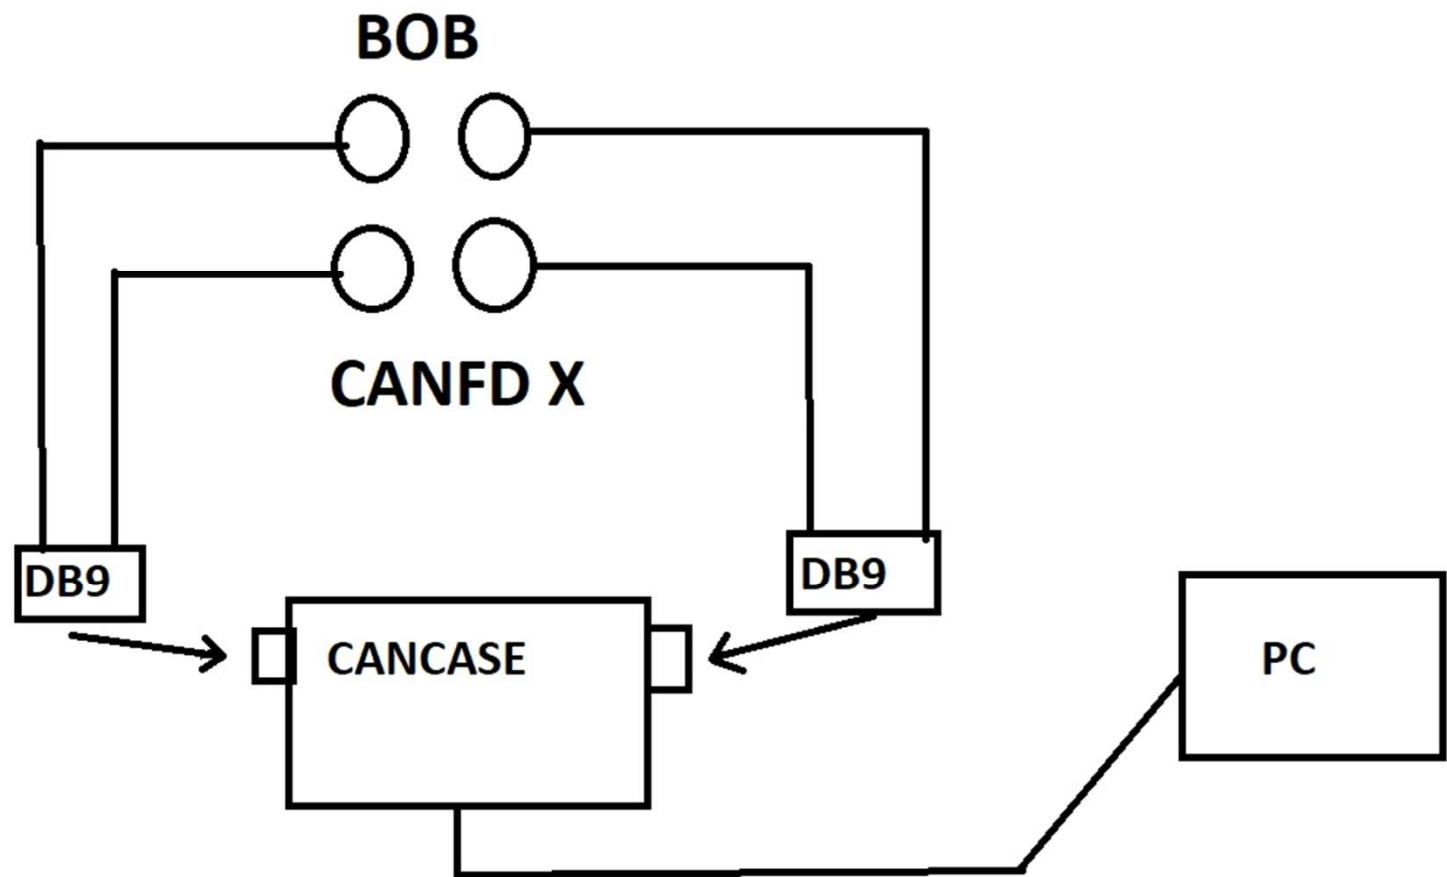


Table of Contents

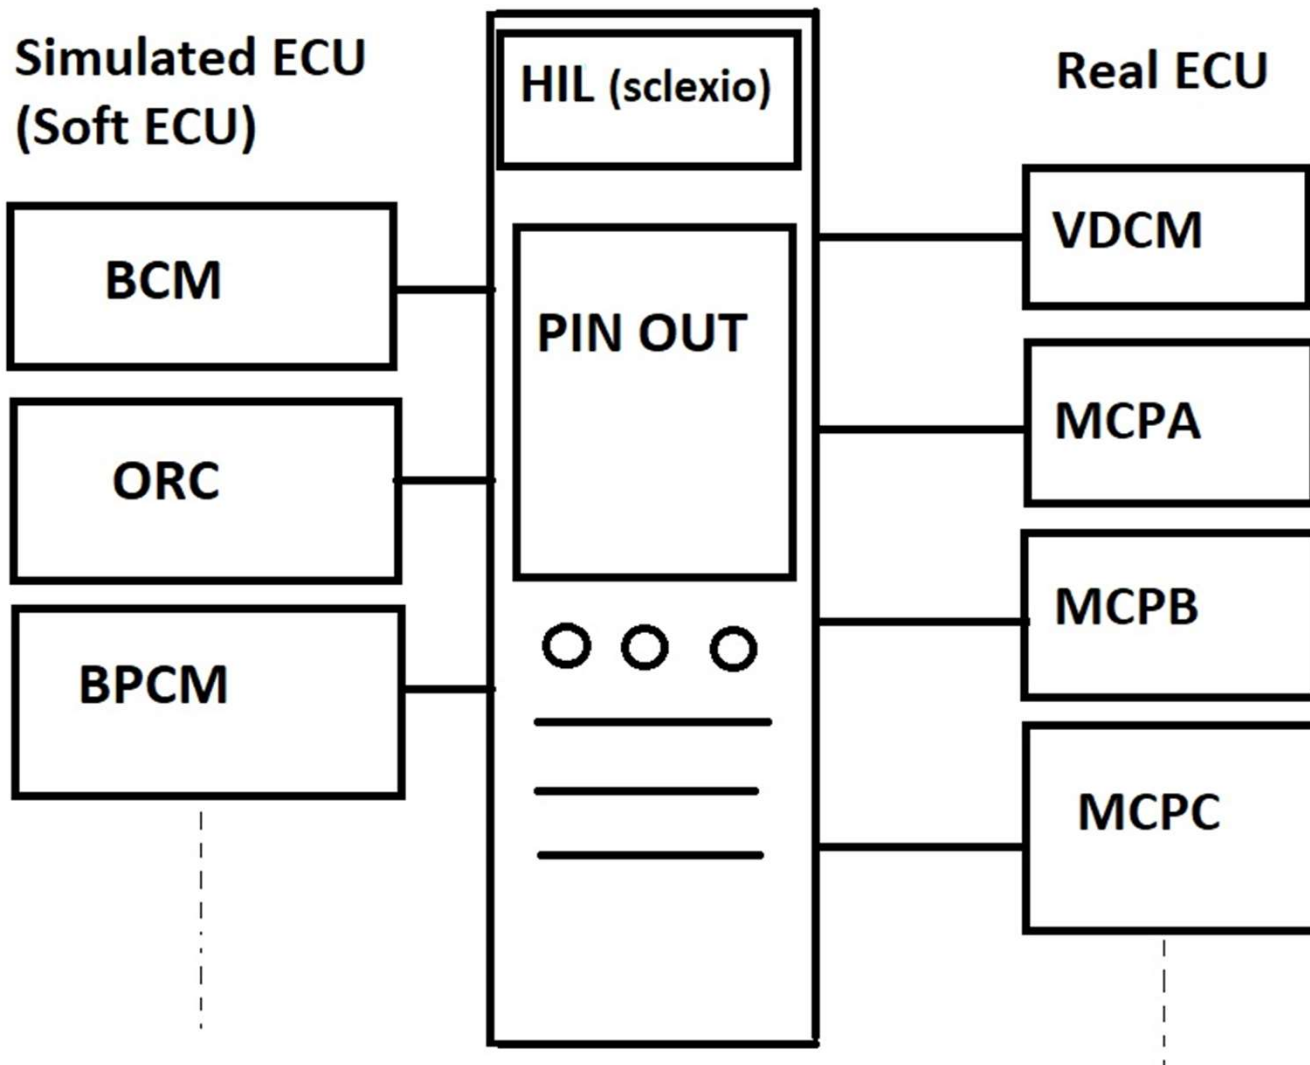
- ☐ Gateway on Vehicle
- ☐ HIL configuration
- ☐ Hardware for signal acquisition
- ☐ Control desk
 - ☐ Basics
 - ☐ Relod model
 - ☐ Bus Navigator (CAN Frames)
 - ☐ CAN Monitoring
 - ☐ FIU (Fault Injection Unit)



Introduction



Gateway on Vehicle






Simulated ECU (Soft ECU)

BCM

ORC

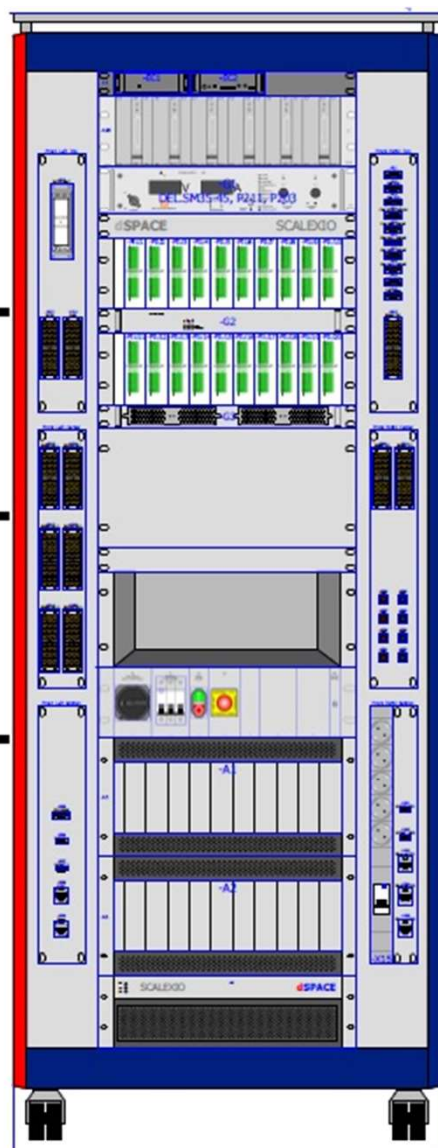BPCM



Real ECU

VDCM

MCPA

MCPB

MCPC





- Save Project
- Close Project
- Save As
- Open
- Recently Used
- New
- Help
- Licenses
- Options
- Exit

Recent Projects and Experiments

Project Name	Experiment Name	Path
ESIL_10	M189_BEV	D:\Work\Projects\HIL_CM1\Instrumentation\WCH

Size of recent experiments list:

36

Recent Files

Size of recent files list:

20



The screenshot displays the ControlDesk software interface, which is used for monitoring and controlling a vehicle system. The main dashboard features several sections:

- Top Bar:** Contains menu items like File, Home, Layouting, Signal Editor, XIL API EESPort, Automation, Platforms, View, and AppTools: XILMapper.
- Platform Management:** A section on the left with buttons for Register Platforms, Manage Platforms, Refresh Platform Configuration, Refresh Interface Connections, Clear System, and Platform Management.
- Vehicle Status Indicators:** A row of buttons for MCPA, MCPB, MCPC, VDCM, BPCM, APM, and OBCM, each with a status indicator (e.g., Simulated, Real).
- Gauges and Meters:**
 - A large speedometer showing 0 to 300 km/h.
 - Three smaller RPM meters (x 1000) for Front eMotor Torque, Rear eMotor Torque, and Rear Left eMotor Torque.
 - A pressure gauge for Ambient Pressure (bar).
- VDCM Power Supply:** A section showing various power supply readings like Acc Pedal Supply1 M, Acc Pedal Supply1 M, PLock Supply M, PLock2 Supply M, EAC Pressure Snsr Solv M, and Ride Height Snsr Supply M.
- VDCM Park Lock:** A section with buttons for Real PLOCK and PLock2 End Stoo M.
- EVSE (Electric Vehicle Service Equipment):** A section on the right with buttons for Charge Port, UnPlugged, CPIM Button, and AC/AC 3xPhase indicators.

At the bottom, there is a **Platforms/Devices** tree view showing the system architecture, including a host, a SCALEXIO_3 board, and several DS6241 D/A Boards and DS6301 CAN/LIN Boards. A context menu is open over the SCALEXIO_3 board, showing options like Register Platforms..., Manage Recent Platform Configuration..., Refresh Platform Configuration, Create Support Info, Assembly View, Start, Stop, Reload, Reload and Start, and Unload.

Bus Navigator

Search or filter text... by Name

Name Identity

- Bus Navigator
 - System [Platform]
 - Platform_2 [1]
 - RT-CANHW
 - CAN_FD1
 - CAN_FD1 [PMASAH_E2A_R4_...]
 - CAN_FD11
 - Monitor1_CAN_FD11
 - CAN_FD11 [PMASAH_E2A_R4_...]
 - CAN_FD14
 - Monitor1_CAN_FD14
 - CAN_FD14 [PMASAH_E2A_R4_...]
 - CAN_FD3
 - Monitor1_CAN_FD3
 - CAN_FD3 [PMASAH_E2A_R4_...]
 - CAN_FD5
 - Monitor1_CAN_FD5
 - CAN_FD5 [PMASAH_E2A_R4_...]
 - CAN_H2H
 - RT-LINHW [dSPACE_HIL.dbc]
 - RT-LINHW
 - VDCM_LIN1
 - VDCM_LIN1 [pmasah_e1a_r5_...]
 - VDCM_LIN2
 - VDCM_LIN2 [pmasah_e1a_r5_...]
 - VDCM_LIN3
 - VDCM_LIN3 [pmasah_e1a_r8_...]
 - Platform_3 [2]
 - RT-CANHW
 - V2G_CP
 - Monitor1_V2G_CP
 - Platform_4 [3]
 - RT-CANHW
 - V2G_EVSE [V2G_API.dbc]

RAKE_FD_20x102CAN TXELATCH10x240CAN#1 SignalSet13 AirSpringDamping.xml [EESPort2] Monitor1_CAN_FD11 Monitor1_CAN_FD14 Monitor1_CAN_FD3 Monitor1_CAN_FD5 Monitor1_VDCM_LIN2 Monitor1_VDCM_LIN3 Monitor1_V2G_CP

PA MCPB MCPC VDCM BPCM APM OBCM

Simulated Simulated Simulated Real Simulated Simulated Simulated

Normal_Operation Normal_Operation Normal_Operation

Idle_ASC Idle_ASC Idle_ASC

Front eMotor Torque [Nm] Rear eMotor Torque [Nm] Rear Left eMotor Torque [Nm]

0.00 0.00 0.00

VDCM Power Supply

Acc Pedal Supply1 M 4979

Acc Pedal Supply1 M 4990

PLock Supply1 M 4953

PLock2 Supply1 M 4991

EAC Pressure Snsr Solv M 4977

Ride Height Snsr Supply M 4978

Air Pressure Snsr Supply M 4980

PWM Cooling Fan

99.99 [Hz] 90.01 [%]

VDCM Park Lock

Real PLOCK

PLock2 End Stop M 0.000

Simu PLOCK Out1 M 0.000

Real PLOCK Out1 M 4041

Simu PLOCK Out2 M 0.000

Real PLOCK Out2 M 2017

EVSE

Charge Port

UnPlugged

CPIM Button

CPIM_IND_Color_Fdk

No_C 2

PwrLev/Value

EVSE READY

AC

AC 3xPhase

TimeReset [ms]Value 50

TimeReset [ms]1Value 1

Cabin Target Temp [K] 298.15

HtrCorTemp_InTgtValue 0

Thrgn_CorTemp_InTgtValue 30

RX/HtrCorTemp_InTgt 0

T1 Heater Core Inlet Coolant Temp [K] MDL 0 °C

T2 Battery Inlet Coolant Temp [K] MDL 0 °C

T3 Battery Outlet Coolant Temp [K] MDL 0 °C

T4 CPV5 Inlet Coolant Temp [K] MDL 0 °C

T5 Radiator Outlet Coolant Temp [K] MDL 0 °C

T6 Heater Core Outlet Coolant Temp [K] MDL 0 °C

T7 DCDC Inlet Coolant Temp [K] MDL 0 °C

START STOP ENGINE

off on Crk

e-Paddles

DownShift UpShift

VDCM CAN Sig

Ready to Drive

HVBatteryShutOff

PrepSysAct

HV Battery

HV DC Bus Voltage [V] 705

GFD OK

TRAC_CNTR_CLOSE

Voltage [V] 705

SOC 50

Cell Temp. AVG [°C] 27

CHARG_CNTR_OPEN

Current [A] 1

Override

Cell Voltage AVG [V] 705

DC_CHARG_CNTR_OPEN

The screenshot displays the ControlDesk software interface for a vehicle simulation. The main dashboard features several key components:

- Top Bar:** Contains menu options like File, Home, Layouting, Signal Editor, XIL API EESPort, Automation, Platforms, View, and AppTools XILMapper.
- Left Panel (Bus Navigator):** Lists various system components and modules. A context menu is open, showing options like "Expand All", "Case-Sensitive Search", "Generate RX Layout", "Generate TX Layout", and "Locate Generated Layout".
- Main Dashboard:**
 - ECU Status:** A row of buttons indicating the status of different ECUs: RAKE, MCPB, MCPC, VDCM (Real), BPCM, APM, and OBCM.
 - Gauges:** Three large circular gauges showing RPM (x1000) for Front, Rear, and Rear Left eMotors.
 - Torque Readouts:** Three rectangular displays showing Front eMotor Torque [Nm], Rear eMotor Torque [Nm], and Rear Left eMotor Torque [Nm].
 - VDCM Power Supply:** A section displaying various power supply values like Acc Pedal Supply1 M, Acc Pedal Supply1 M, PLock Supply M, PLock 2 Supply M, EAC Pressure Snsr Solv M, Ride Height Snsr Supply M, and Air Pressure Snsr Supply M.
 - VDCM Park Lock:** A section showing Real PLOCK, PLock2 End Stoo M, Simu PLock Out1 M, Real PLock Out1 M, Simu PLock Out2 M, and Real PLock Out2 M.
 - EVSE (Electric Vehicle Service Equipment):** A section with a Charge Port status (UnPlugged), CPIM Button, CPIM_IND_Color_Fdk, PwrLev/Value, and EVSE READY/AC/AC 3xPhase indicators.
 - HV Battery:** A section displaying HV DC Bus Voltage [V], GFD OK, TRAC_CNTR_CLOSE, Voltage [V], SOC, Cell Temp. AVG [°C], CHARG_CNTR_OPEN, Current [A], Override, Cell Voltage AVG [V], and DG_CHARG_CNTR_OPEN.
 - Temperature Readouts:** A table showing various temperature readings (T1 Heater Core Inlet Coolant Temp [K], T2 Battery Inlet Coolant Temp [K], T3 Battery Outlet Coolant Temp [K], T4 CPV5 Inlet Coolant Temp [K], T5 Radiator Outlet Coolant Temp [K], T6 Heater Core Outlet Coolant Temp [K]) along with their MDL, Value, and Unit.
- Bottom Panel:** Includes a "Board Name: SCALEXIO Processing Unit Edrive)" and a "Devices" section with "Interpreter" and "Messages" tabs.

ControlDesk Project: ESIL_10 Experiment: M189_BEV - [TXAPM_VDCM0x0FACAN*]

File Home Layouting Signal Editor XIL API EESPort Automation Platforms View AppTools XILMapper

Refresh Platform Configuration Create Support Info File Assembly View
Refresh Interface Connections Network View
Register Platforms Manage Platforms Clear System Insert Platform
Platform Management Views Experiment

481CAN TXBRAKE_FD_20x102CAN TXELATCH10x240CAN#1 SignalSet13 AirSpringDamping.xml [EESPort2] Monitor1_CAN_FD11 Monitor1_CAN_FD14 Monitor1_CAN_FD3 Monitor1_CAN_FD5 Monitor1_VDCM_LIN2 Monitor1_VDCM_LIN3 Monitor1_V2G_CP TXAPM_VDCM0x0FACAN*

Bus Navigator Array: CAN_FD11 - APM_VDCM (0x0FA)

MESSAGE : APM_VDCM ID : 0x0FA

☒ GlobalEnable ☒ GlobalEnableTX ☒ ECUEnable ☒ Enable ☒ Cyclic

CRC

CRC CRCAlgorithm
☒ General_Case

TX Timing

Cycle Time (s) Delay Time (s)
0.02 0 Kickout

RX Times

RX Time RX Delta Time
5328... 0.0200

Identification/Length

Length
32

Signals

Signal Name	Source	Constant	Constant	Signal Value	Signal value
CRC_APM_VDCM		0		47	-
MessageCounter_APM_VDCM	Counter	0		0	-
APM_HvVsetPFdbk	Input	0		0	V
APM_OutputPower	Input	0		654	W
APM_InputPower	Input	0		726	W
APM_DeratingPower	Input	0		0	W
APM_UtilPctOIDCDC	Input	0		17	%
APM_TempColdPlate	Input	-15		37	degC
APM_IdChvSetPFdbk	Input	104.2		0	Amp
APM_EstPwrLoss	Input	0		72	W
APM_FailureReason	Input	0	No_Failure	0	No_Failure

The screenshot displays the ControlDesk software interface. The top menu bar includes File, Home, Layouting, Signal Editor, XIL API EESPort, Automation, Platforms, View, and ApplTools XILMapper. The main workspace is divided into several panes. On the left, the 'Bus Navigator' pane shows a tree view of the system components, including 'RT-CANHW' and 'CAN' nodes. A context menu is open over the 'CAN' node, with options like 'Expand All', 'Collapse All', 'Case-Sensitive Search', 'Add Monitor', 'Add Logger', 'Add Filter', and 'Add Replay'. The 'Add Monitor' option is highlighted. The central pane shows 'SignalSet13' and a list of monitoring tabs: 'Monitor1_CAN_FD11', 'Monitor1_CAN_FD14', 'Monitor1_CAN_FD3', 'Monitor1_CAN_FD5', 'Monitor1_VDCM_LIN2', 'Monitor1_VDCM_LIN3', 'Monitor1_V2G_CP', and 'TXAPM_VDCM0FACAN*'. The right pane shows the 'TXAPM_VDCM0FACAN*' signal set, which is currently selected. It displays a list of signals and their values, including 'CRC', 'TX Timing', 'RX Times', 'Identification/Length', and 'Signals'. The 'Signals' section shows a table with columns for 'Instant', 'Constant', 'Signal Value', and 'Signal value'. The bottom status bar indicates 'No filter is active' and 'Online'.

ControlDesk Project: ESIL_10 Experiment: M189_BEV - [Monitor1_CAN_FD11]

File Home Layouting Signal Editor XIL API EESPort Automation Platforms View AppTools XILMapper

Refresh Platform Configuration Create Support Info File Assembly View Network View Insert Platform Experiment

Register Platforms Manage Platforms Clear System Platform Management Views

Bus Navigator Instrument Navigator

Static View Tail Scrolling ID ID Data CAN

Identifier	Monitor Time	ID	Controller ID	Name	Dir	Delta Time	DLC	Data
[+] 0x73B [0x5, Tx, 1]	1.5469997	0x73B	5	HVBATTERY_RM_CELLS7	Tx	0.9996179	64	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00...
[+] 0x73C [0x5, Tx, 1]	1.5473840	0x73C	5	HVBATTERY_RM_CELLS8	Tx	0.9996179	64	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00...
[+] 0x73D [0x5, Tx, 1]	1.5442198	0x73D	5	HVBATTERY_RM_CHARGING1	Tx	0.9997206	32	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00...
[+] 0x72F [0x5, Tx, 1]	1.5404251	0x72F	5	HVBATTERY_RM_MODS1	Tx	0.9962332	48	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00...
[+] 0x765 [0x5, Tx, 1]	1.5481010	0x765	5	HVBATTERY_RM_MODS2	Tx	0.9999506	48	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00...
[+] 0x407 [0x5, Tx, 1]	1.8353019	0x407	5	HV_CHARGER1	Tx	0.1000053	64	00 00 07 D0 20 00 00 00 01 F4 24 FA 00 00 00 01...
[+] 0x62A [0x5, Tx, 1]	1.5381644	0x62A	5	HV_CHARGER2	Tx	0.5008212	32	CE 1F 00 00 00 00 00 00 00 00 00 00 00 11 0C 80...
[+] 0x1DE [0x5, Rx, 1]	1.8287741	0x1DE	5	HYBRID_CHARGING_COMMAND	Rx	0.0200024	32	00 00 00 00 00 00 06 00 00 00 71 40 00 00 00 7F...
[+] 0x62B [0x5, Rx, 1]	1.6936796	0x62B	5	HYBRID_CHARGING_STATUS	Rx	0.5000225	32	00 7E 00 00 00 00 00 80 00 00 00 00 00 00 00 00...
[+] 0x65A [0x5, Rx, 1]	1.6019927	0x65A	5	IMPACT_INFO	Rx	0.5000228	32	00 00 00 00 00 00 00 00 00 00 00 02 00 00 00 00...
[+] 0x0F1 [0x5, Tx, 1]	1.8398066	0x0F1	5	INVT_ALIVE	Tx	0.0024425	8	80 08 00 3E 80 40 00 11
[+] 0x0EA [0x5, Tx, 1]	1.8392875	0x0EA	5	INVEL_ALIVE	Tx	0.0021451	8	80 08 00 3E 80 40 07 42
[+] 0x0EB [0x5, Tx, 1]	1.8399984	0x0EB	5	INVR_ALIVE	Tx	0.0021451	8	80 08 00 3E 80 40 0E B7
[+] 0x0EC [0x5, Rx, 1]	1.8387920	0x0EC	5	INVTARGET	Rx	0.0018804	12	80 08 00 80 08 00 80 08 00 00 06 24
[+] 0x725 [0x5, Rx, 1]	1.5379254	0x725	5	IPC_FD_1	Rx	1.0001574	32	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00...
[+] 0x5A4 [0x5, Tx, 1]	1.5552873	0x5A4	5	MCPA_DATA	Tx	1.0001285	16	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00...
[+] 0x426 [0x5, Tx, 1]	1.8359146	0x426	5	MCPA_DATA2	Tx	0.1000047	64	40 40 3D 40 00 00 00 00 00 00 00 00 00 00 00 00...
[+] 0x5AE [0x5, Tx, 1]	1.5556697	0x5AE	5	MCPB_DATA	Tx	0.9994562	16	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00...
[+] 0x427 [0x5, Tx, 1]	1.8362975	0x427	5	MCPB_DATA2	Tx	0.1000047	64	20 20 1E A0 00 00 00 00 00 00 00 00 00 00 00 00...
[+] 0x5B5 [0x5, Tx, 1]	1.5563850	0x5B5	5	MCPC_DATA	Tx	0.9997894	16	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00...
[+] 0x1E364095 [0x5, Rx, 1]	1.0256504	0x1E3640...	5	NM_VDCM	Rx	0.0000000	2	95 00
[+] 0x1F2 [0x5, Tx, 1]	1.8331724	0x1F2	5	OBCM_VDCM	Tx	0.0199979	48	00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00...
[+] 0x220 [0x5, Tx, 1]	1.8349287	0x220	5	OBCM_VDCM2	Tx	0.0199984	64	00 00 00 00 00 00 00 00 82 00 00 00 00 00 00 00...
[+] 0x1E360063 [0x5, Tx, 1]	1.5577770	0x1E3600...	5	PDC_INFO_FD_APM	Tx	0.9994885	12	00 00 00 00 00 00 00 00 00 00 00 00
[+] 0x1E360046 [0x5, Tx, 1]	1.5484084	0x1E3600...	5	PDC_INFO_FD_BPCM	Tx	0.9992616	12	18 44 00 00 00 00 00 00 00 00 00 00
[+] 0x1E360058 [0x5, Tx, 1]	1.5574303	0x1E3600...	5	PDC_INFO_FD_MCPA	Tx	0.9998166	12	00 44 00 00 00 00 00 00 00 00 00 00
[+] 0x1E360059 [0x5, Tx, 1]	1.5576036	0x1E3600...	5	PDC_INFO_FD_MCPB	Tx	0.9994884	12	00 44 00 00 00 00 00 00 00 00 00 00
[+] 0x1E360049 [0x5, Tx, 1]	1.5485813	0x1E3600...	5	PDC_INFO_FD_OBCM	Tx	0.9914750	12	00 00 00 00 00 00 00 00 00 00 00 00
[+] 0x1E360095 [0x5, Rx, 1]	1.1040985	0x1E3600...	5	PDC_INFO_FD_VDCM	Rx	0.9997688	48	A0 45 01 00 00 00 00 00 00 00 01 00 00 00 00 00...
[+] 0x0F2 [0x5, Tx, 1]	1.8399180	0x0F2	5	PIM_F	Tx	0.0101580	64	00 00 3F F0 00 10 00 80 00 00 E1 38 51 34 4D 11...
[+] 0x0F0 [0x5, Tx, 1]	1.8395092	0x0F0	5	PIM_RL	Tx	0.0101580	48	00 00 00 02 00 1C 27 0A 26 89 A2 2E 00 00 00 00...
[+] 0x104 [0x5, Tx, 1]	1.8317372	0x104	5	PIM_RR	Tx	0.0104385	64	00 00 40 00 00 1C 27 0A 26 89 A2 2E 00 00 00 00...
[+] 0x0EE [0x5, Rx, 1]	1.8328530	0x0EE	5	VDCM1	Rx	0.0100076	32	20 00 00 00 00 16 08 49 0C 3E 80 20 00 00 00 00...
[+] 0x1F6 [0x5, Rx, 1]	1.8340278	0x1F6	5	VDCM_OBCM	Rx	0.0199984	48	00 00 00 00 00 00 00 00 00 00 00 01 10 00 40 00...
[+] 0x222 [0x5, Rx, 1]	1.8220041	0x222	5	VDCM_OBCM2	Rx	0.0193684	64	30 00 00 00 00 00 00 07 37 1C 7A 84 D1 4E 29 C5...
[+] 0x11C [0x5, Rx, 1]	1.8324412	0x11C	5	VDCM_PWT3	Rx	0.0100597	64	00 00 00 00 00 00 00 60 D1 00 00 00 00 00 00 00...
[+] 0x069 [0x5, Rx, 1]	1.3048897	0x069	5	VDCM_PWT3	Rx	0.1016629	64	00 00 00 00 00 00 00 FF FF 00 00 00 00 00 00 00...
[+] 0x41D [0x5, Rx, 1]	1.8356847	0x41D	5	VIN	Rx	0.1000053	32	00 00 00 00 00 00 00 00 00 00 04 33 37 39 00 00...

00:00:02 | Running | 0.0 frames/s | 12 frames | 10000

Platforms/Devices

Variables | Measurement Data Pool | Platforms/Devices | Interpreter | Messages

Online

ErrorSet 1

Signal 1

EESPort2													
BMS													
TempSnr1	BMS\TempSnr1	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
TempSnr1_Ref	BMS\TempSnr1_Ref	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
Wake_Up	BMS\Wake_Up	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
TempSnr2	BMS\TempSnr2	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
TempSnr2_Ref	BMS\TempSnr2_Ref	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
TempSnr3	BMS\TempSnr3	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
TempSnr3_Ref	BMS\TempSnr3_Ref	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
CoolTemp1	BMS\CoolTemp1	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
CoolTemp1_Ref	BMS\CoolTemp1_Ref	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
CoolTemp2	BMS\CoolTemp2	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
CoolTemp2_Ref	BMS\CoolTemp2_Ref	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
F_MFR	BMS\F_MFR	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
HVIL1In	BMS\HVIL1In	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
HVIL1Out	BMS\HVIL1Out	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic
HVIL2In	BMS\HVIL2In	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	Simple, Dynamic

Properties

Search properties

General

Error category: Interrupt

Error type: Interrupt

Custom Properties

Key: Pin to Pin, Short to Ground, Short to UBatt, Short to Potential, Interrupt at position, Interchanged



ControlDesk Project: ESIL_10 Experiment: M189_BEV - [ErrorConfiguration3.xml [EESPort2]]

File Home Layouting Signal Editor XIL API EESPort Automation Platforms View AppTools XILMapper

Insert EESPort... Configure Disconnect Insert ErrorConfiguration Download Activate Trigger Update Deactivate Unload

EESPorts Error Configurations


TXELATCH10x240CAN#1 SignalSet13 AirSpringDamping.xml [EESPort2] Monitor1_CAN_FD11 Monitor1_CAN_FD14 Monitor1_CAN_FD3 Monitor1_CAN_FD5 Monitor1_VDCM_LIN2 Monitor1_VDCM_LIN3 Monitor1_V2G_CP TXAPM_VDCM

Bus Navigator Instrument Navigator

ErrorSet 1

BMS\TempSnr1

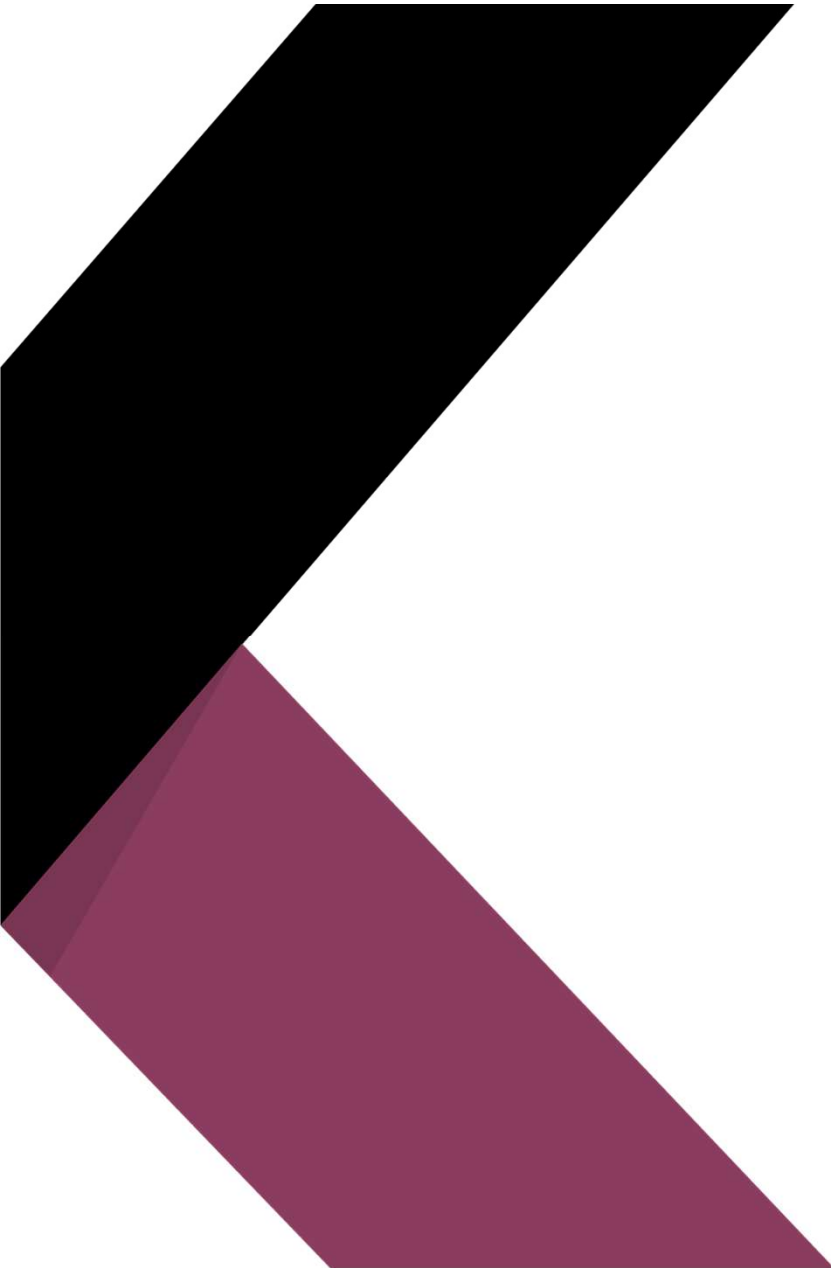EESPort Configurations



CONTACTS

Ahmed Eldray

Ahmed.eldray@kineton.it

Via E. Gianturco, 23
(presso complesso Mecfond)
80146 Napoli

www.kineton.it

