


EMENTION

invent *life*


Technical Information

QUAIL EGG HATCHER

PT-12

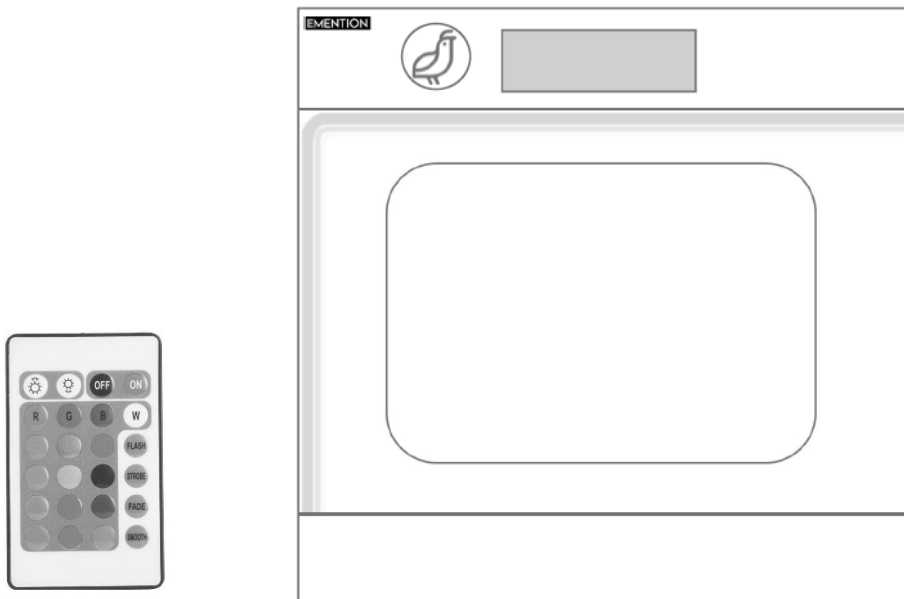

- ✓ **Interactive Multi-interior LED colours interchange**
- ✓ **Small DC Voltage supply**
- ✓ **Portable**
- ✓ **For 12 quail eggs**

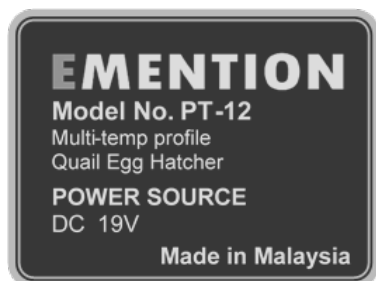

Please read this information carefully before use.
Please read "Safety Precautions" carefully before use.

Table of Content Page

• Safety Precaution	2
• Product Description	2
• Block Diagram	2
• Bill of Material	2
• Schematic Diagram	3
• System Flowchart	3
• Part Names	3
• Setting Up	4
• Troubleshooting	4
• Contact Information	4

SAFETY PRECAUTION

WARNING!

This product contains a heating element about 50°C that is dangerous if touched.



This product only requires 19Vdc input. Different voltages can reduce the life of the product.

WARNING!


Keep the product away from children.

PRODUCT DESCRIPTION

Automatic Quail Egg Hatcher is an egg hatcher that is able to change the temperature profile according to the egg hatching phase, especially quail eggs. Setting the temperature and humidity according to the phase is very important so that the eggs can hatch easily and reduce the probability of the eggs dying. In the egg hatching phase, there are 3 important phases which are the first, second and third phases. The first phase maintains the temperature at 38.5 °C and the humidity at 50% to 60%. In the second phase, the temperature is maintained at 38.5 °C and the humidity at 60% - 65% while in

the third phase, the temperature is maintained at 38.5 °C and the humidity at 60% - 65%. In the third phase the humidity is increased so that the quails can easily come out of their own eggs.


BLOCK DIAGRAM

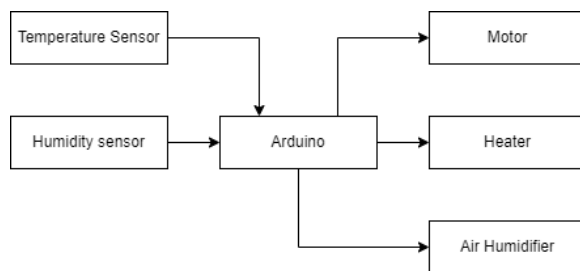


BILL OF MATERIAL

No.	Component	QTY
1	Arduino Nano	1
2	LED	20
3	Kanthal Wire	1
4	DC Fan	1
5	DS3231	1
6	LLC	1
7	ESP8266	1
8	Buck Converter	1
9	AMS1117	1
10	Capacitor	2
11	K7017 MOSFET	2
12	BC547 Transistor	1
13	Resistor	3
14	XH 2.54 Connector	4
15	I ² C LCD	1
16	Rotary Encoder	1
17	PCB	1
18	DC Jack	1
19	Power Supply	1


SCHEMATIC DIAGRAM

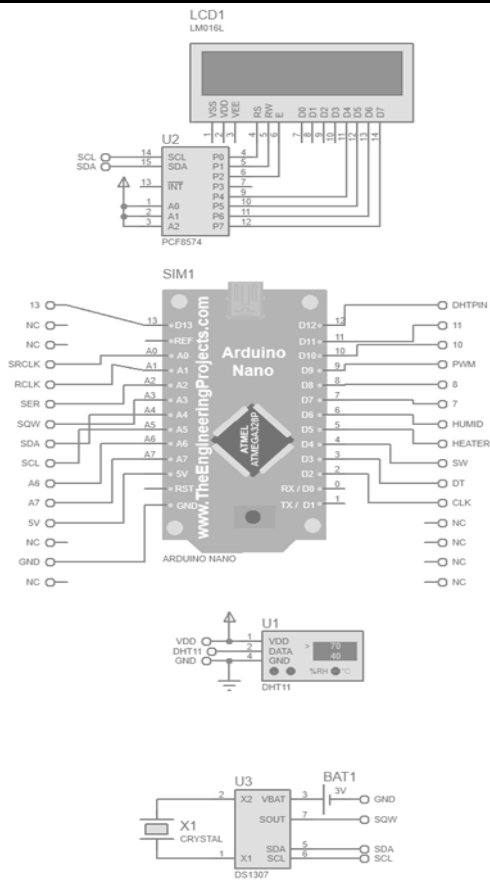

SYSTEM FLOWCHART

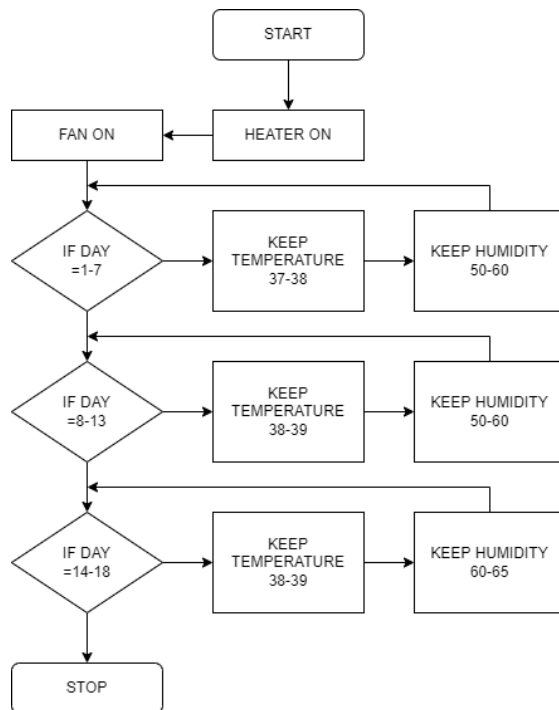


PART NAMES

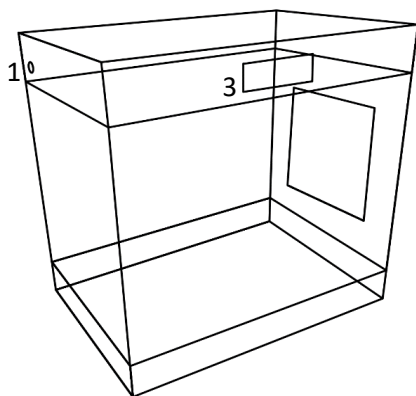


Labels:

- 1 : Power Supply
- 2 : Water Tank
- 3 : LCD Display

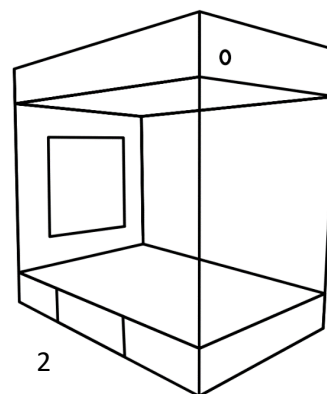


SETTING UP

1. Turn on the incubator by inserting the power supply adaptor (included) into the power supply jack and connecting it to Wi-Fi.
2. Fill the water tank with purify water with maximum 50ml.

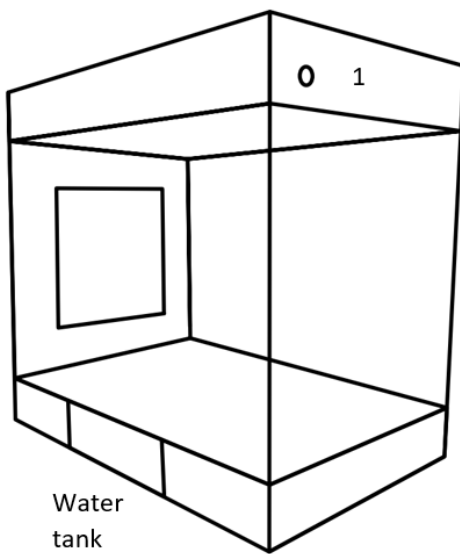

3. Set the start date by selecting Set Start Date on the menu provided.

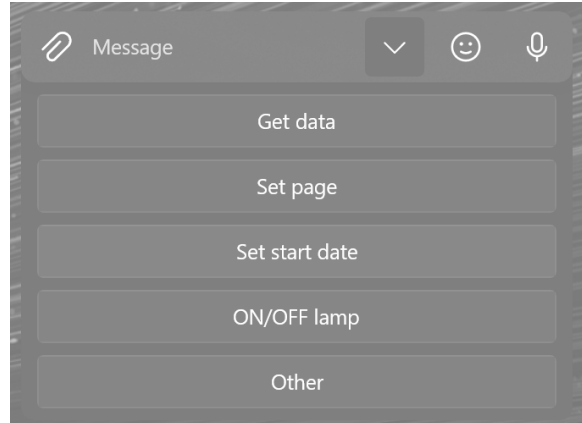

4. Put the egg in the place provided.

TROUBLESHOOTING

Humidifiers do not emit mist

- Check the water in the water container

Humidity is too high

- Unplug and plug in all power supplies.

Did not receive a message from the incubator

- Check internet connection

CONTACT INFORMATION

Ts. Wan Mohd Rumaizi bin Wan Taib
rumaizi@pis.edu.my

Muhammad Hafizin bin Saibol Jahar
muhammadhafizin78@gmail.com

POLITEKNIK IBRAHIM SULTAN

EMENTION
 invent *life*