

WAVE SYNC

IONSPLICE
ENGINEERING®

RF-LINKED ALARM CLOCK

USER MANUAL



Contents

1. Introduction

2. Package Contents

3. Safety Information

4. System Overview

4.1. Master Unit

4.1.1. Getting Started

4.1.2. Settings

4.1.2.1. Time Settings

4.1.2.2. Alarm Settings

4.1.3. Alarm Function

4.1.4. Care and Maintenance

4.1.5. Battery Replacement

4.1.6. Reset

4.2. Receiver Unit

4.2.1. Getting Started

4.2.2. Settings

4.2.3. RF Range and Placement Guidelines

4.2.4. Maintenance

5. Technical Specifications

6. Regulatory and Compliance

7. Warranty and Support

8. Disclaimer

1. Introduction

We appreciate you buying the RF-Linked Alarm Clock System.

One Master Alarm Clock unit and one or more Receiver Alarm units make up this system. All connected Receiver units will wirelessly sound an alert when the Master unit triggers one.

This product is intended for use in multi-room alert applications, homes, and offices.

2. Package Contents

Please verify the contents of the package:

Master Unit Package

- 1 × Master Alarm Clock Unit
- 1 × Power Adapter
- 1 × User Manual

Receiver Unit Package

- 1 × Receiver Alarm Unit
- 1 × Power Adapter

(Receiver units may be sold separately.)

3. Safety Information

Important Safety Instructions

- Use only the specified power supply
- Do not expose the device to water or moisture
- Do not disassemble the device
- Keep away from extreme heat or open flames
- This device is not a medical emergency system

4. System Overview


4.1 Master Unit

The Master unit:

- Displays the current time
- Allows setting of alarm time
- Transmits a wireless alarm signal

4.1.1 Getting Started


- Open the battery compartment and insert new 9 V battery, polarity as illustrated.
- When powered, the device will automatically turn on and the digits will illuminate.
- Close the battery compartment again.
- 00:00:00 appears on the display.

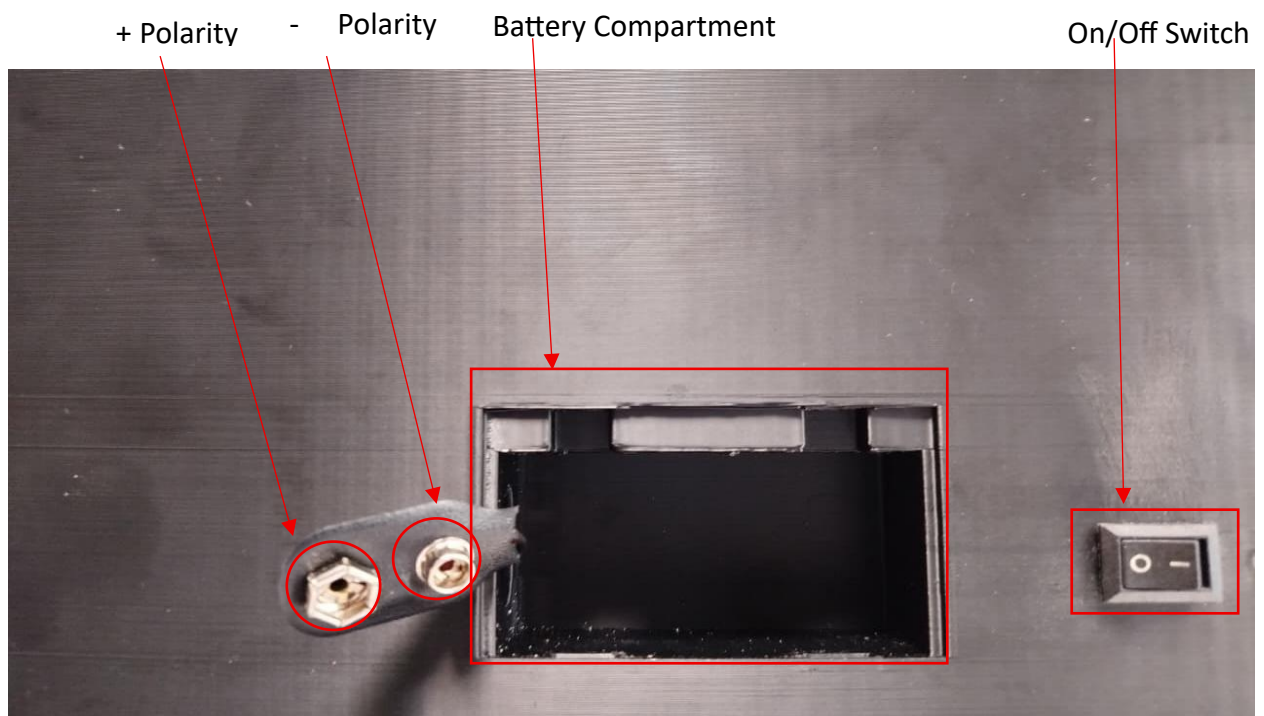

4.1.2 Settings


4.1.2.1 Time Setting

- Press the Time Setting button to enter time adjustment mode.
- Press the Minutes button to increase the minutes one step at a time with each press.
- Press the Hours button to increase the hours one step at a time with each press.
- Continue adjusting the hours and minutes until the current time is correctly set.

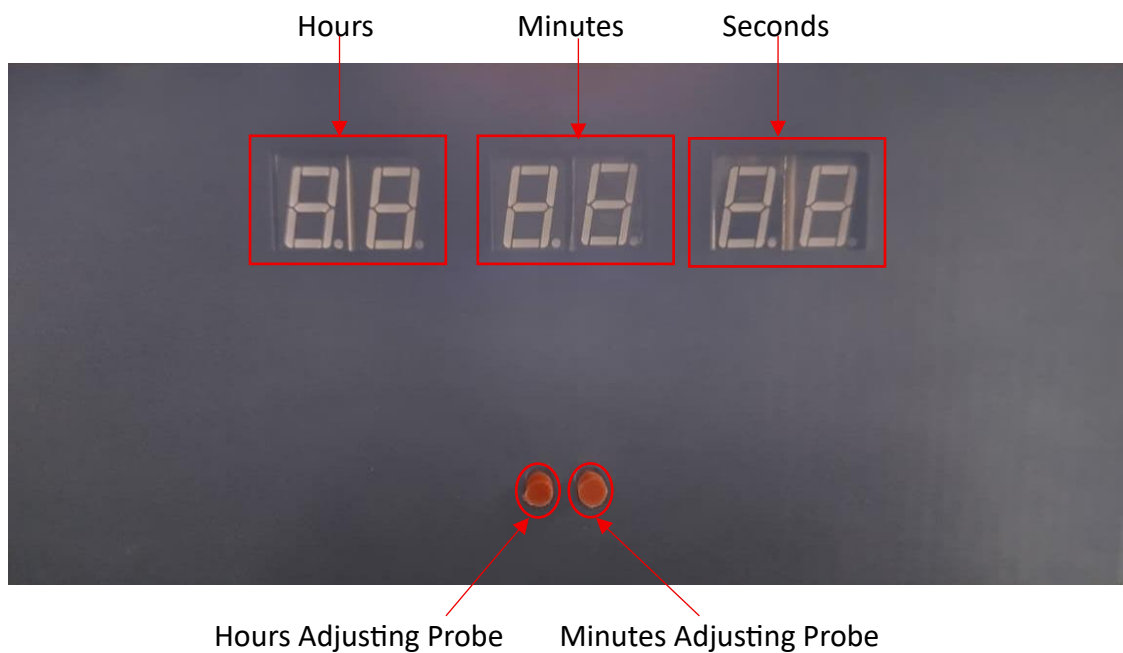

4.1.2.2 Alarm Time Setting

- Use the **Alarm Setting probes on the top** to configure your desired alarm time.
- Adjust the alarm using the **four setting probes**:
 - **Hours Tens**
 - **Hours Ones**
 - **Minutes Tens**
 - **Minutes Ones**
- Rotate each probe to increase its corresponding digit by one step.

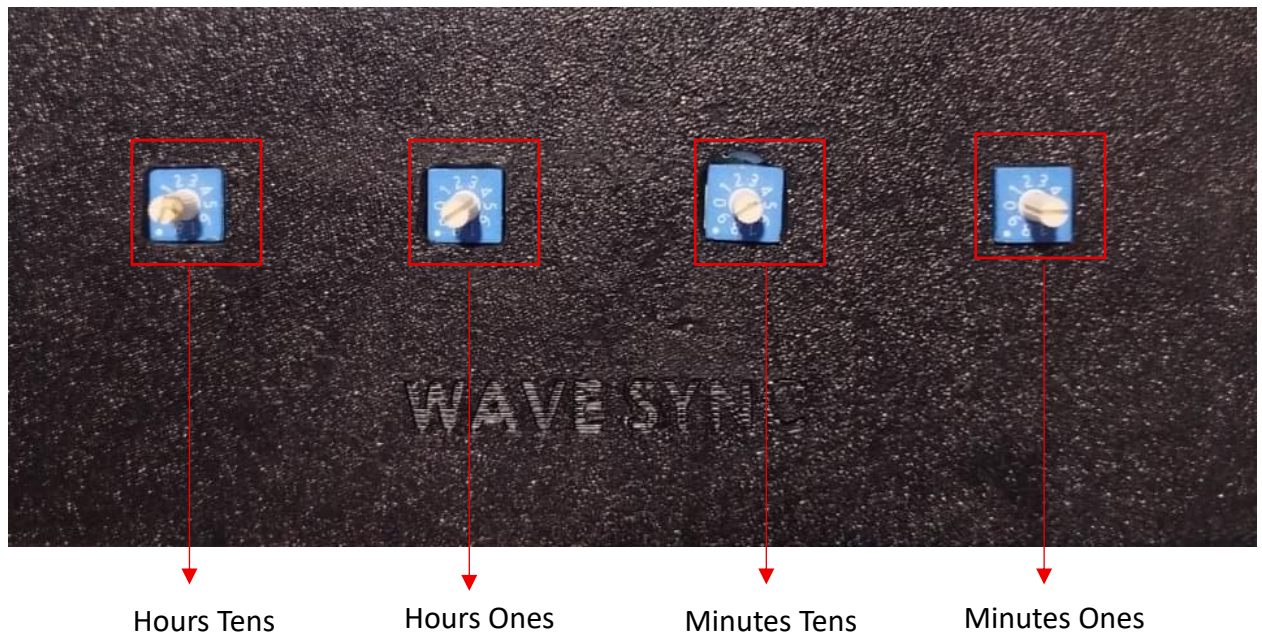

- Continue adjusting the digits until the alarm time is set to your preference.

4.1.3 Alarm Function

- After the alarm time is set, the clock will resume normal operation.
- When the programmed alarm time is reached, the internal transmitter sends a wireless signal.
- The receiving unit detects this signal and activates the alert tone.
- The alert tone will sound for approximately **one minute** unless manually stopped.

4.1.4 Care and Maintenance

- Clean the device with soft damp cloth. Do not use solvents or scouring agents.
- Remove the batteries if the device will not be used for an extended period of time.
- Keep the device in a dry place.

4.1.5 Battery Replacement

- Change the batteries when the device functions become weak.
- Open the battery compartment and insert a 9 V battery, polarity as illustrated.
- Close the battery compartment again.

4.1.6 Reset

- If the unit does not work properly use a pin to press RESET button, then the clock will return to the initial mode.

4.2 Receiver Unit

The Receiver unit:

- Continuously listens for alarm signals
- Activates an audible alert when triggered
- Requires no time configuration

4.2.1 Getting Started

- Open the battery compartment and insert new 9 V battery, polarity as illustrated.
- When powered, the device will automatically turn on and the led indicator will light up.
- Close the battery compartment again.

4.2.2 Settings

- No setup required
- Automatically responds to Master unit alarm
- Alarm stops when the stop button is pressed or power is removed

4.2.3 RF Range and Placement Guidelines

- Place units away from metal surfaces
- Avoid placing near Wi-Fi routers or large appliances
- Typical indoor range: 20–60 m
- Open-space range: up to 100 m

4.2.4 Maintenance

- Clean with dry cloth
- Do not use solvents
- Replace batteries when required

5. Technical Specifications

Master Unit

- Supply Voltage: 5-12 V
- RF Frequency: 433.92 MHz

Receiver Unit

- Supply Voltage: 9 V
- Sound Level: ~85 dB @ 1m

(For detailed specifications, refer to the product datasheet.)

6. Regulatory & Compliance

- Operates in the 433 MHz ISM band
- Intended for indoor use
- Subject of local RF regulations

7. Warranty & Support

This product is provided as-is for consumer and educational use.

For support, contact:

Manufacturer: IonSplice Engineering®

Location: Sri Lanka

8. Disclaimer

This device is intended for general alerting purposes only. The manufacturer is not responsible for missed alarms due to power failure, RF interference, or misuse.