
KTS USER GUIDE

CONTENTS

- DESCRIPTION OF COMPONENTS
- PRENCIPLE OF WORK
- ASSEMBLING FIGURE
- PRENCIPLE OF CONNECTION
- METHOD OF PROGRAMMING
- PROGRAMMING PARAMETERS
- PROGRAMMING TABLE
- MEANING OF ERROR CODES
- APPENDIX
- ELECTRICAL CHARACTERISTICS
- PROJECT'S SYMBOL AND MEANING
- APPLICATION PROJECTS

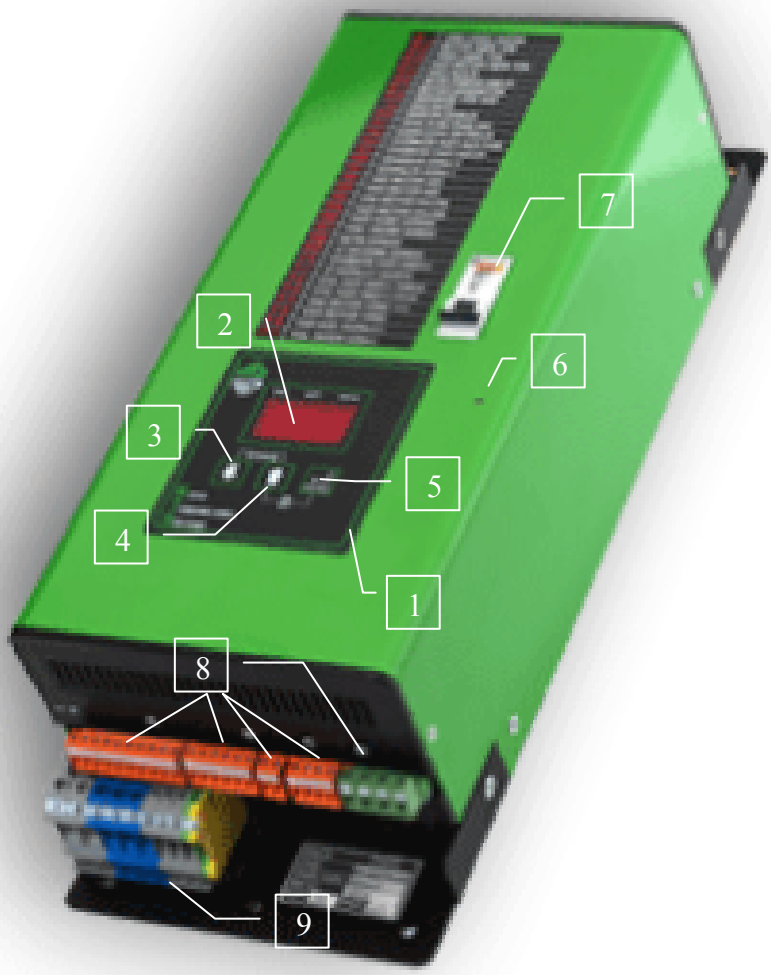

1. **CONTROL PANEL**
2. **DISPLAY INDICATOR**
3. **DOWN BUTTON**
4. **UP BUTTON**
5. **ENTER BUTTON**
6. **TURNING SETUP**
7. **FUSE**
8. **INSTALLATION TERMINAL GROUPS**
9. **POWER TERMINAL GROUPS**

A1	STOP TURNINGS WAY TO CONTROL PANEL .
A2	STOP TURNING WAY TO KTS THAT IT COMES FROM SHAFT
A3	LOCK CONTACT TURNING WAY TO KTS THAT IT COMES FROM SHAFT
A4	LOCK CONTACT TURNING WAY TO CONTROL PANEL
A5	JF (ON THE LEVEL) SIGNAL GOING TO CONTROL PANEL
A6	JF (ON THE LEVEL) SIGNAL GOING WAY TO KTS THAT IT COMES FROM SHAFT
A7	JF (ON THE LEVEL) SIGNAL TURNING WAY TO KTS THAT IT COMES FROM SHAFT
A8	JF (ON THE LEVEL) SIGNAL TURNING TO CONTROL PANEL
A9	CONTROL PHASE (R) OF CONTROL PANEL INPUT TO KTS
A10	CONTROL PHASE (R) OF CONTROL PANEL OUTPUT TO CONTROL PANEL

B1	CONTROL PHASE (S) OF CONTROL PANEL INPUT TO KTS (IF TRANSPORMER IS 380V AC)
B2	CONTROL PHASE (S) OF CONTROL PANEL OUTPUT TO CONTROL PANEL
B3	TALKING CIRCUIT SIGNAL OUTPUT (NO CONTACT)
B4	REVISION SWITCH (HAND COMMAND) SIGNAL INPUT
B5	UPPER LIMIT SWITCH SIGNAL INPUT
B6	LOWER LIMIT SWITCH SIGNAL INPUT
B7	REVISION SWITCH (HAND COMMAND) SIGNAL GROUND
B8	TALKING CIRCUIT SIGNAL OUTPUT (NO CONTACT)

C1	BRAKE BOBBIN (-) (2000) WAY TO KTS
C2	BRAKE BOBBIN (-) (2000) WAY TO CONTROL PANEL
C3	BRAKE BOBBIN (+) (840) WAY TO CONTROL PANEL
C4	BRAKE BOBBIN (+) (840) WAY TO KTS

D1	R PHASE WAY TO KTS
D2	S PHASE WAY TO KTS
D3	T PHASE WAY TO KTS
D4	NOTR WAY TO KTS

E1	BATTERY (-)
E2	BATTERY (+66V)
E3	R PHASE OUTPUT FOR ELEVATOR ENGINE TO U1
E4	S PHASE OUTPUT FOR ELEVATOR ENGINE TO V1
E5	T PHASE OUTPUT FOR ELEVATOR ENGINE TO W1
E6	R PHASE OUTPUT FOR AUTOMATIC DOOR ENGINE TO U
E7	S PHASE OUTPUT FOR AUTOMATIC DOOR ENGINE TO V
E8	T PHASE OUTPUT FOR AUTOMATIC DOOR ENGINE TO W
E9	EARTH

PRINCIPLE OF WORK


Emergency rescue unit(KTS) works when electric cut off for the elevator system. And stop the possiblity not to be stuck in the elevator. When the electric shut off it gets the elevator nearest to the floor and if there is automatic door it opens the door and stop.


KTS comes in use in case of any phases cut, when elevator is between two floors and car door is close. When provisions come true panels phase cut down by KTS. At the end of the time which set on the surface of KTS opens the mechanic brakes produce 3 phases voltage gives motor a way and one way movement tested. If it can't turn that way it stops, wait 3 seconds and tried other way. In these tries elevator must move to a way. If in all tries elevator don`t move, then there is mechanic tightness, brake bobbin or motor breakdown. In this position KTS gives panel's phase and quit from the circuit.


If the door opens when moving to any direction (no security) movement, it quickly stop at that time and wait about 10 sec. The door closes.

All outputs of KTS's has short circuit security. If there is short circuit in the brake, motor or nominal current over it has shown as error in the indicators. It will show the same error when electricity come. It will not come into service without deleting the error even if the electric is turned off and on again. To delete error message and to turn the KTS to off position up arrow button along with enter button must be press and hold for 3 seconds. To turn it on again, same buttons must be used for 3 seconds.

ASSEMBLING FIGURE

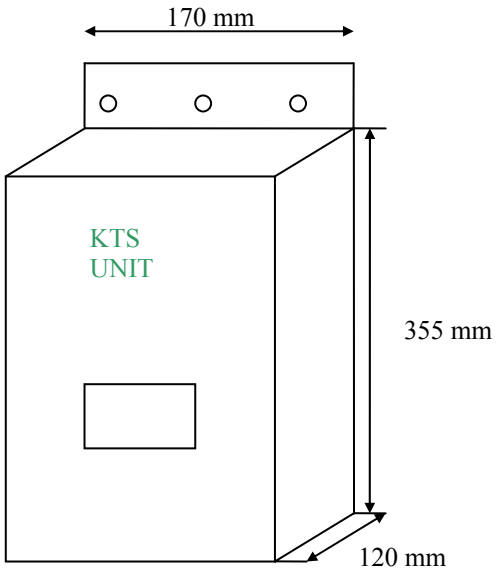

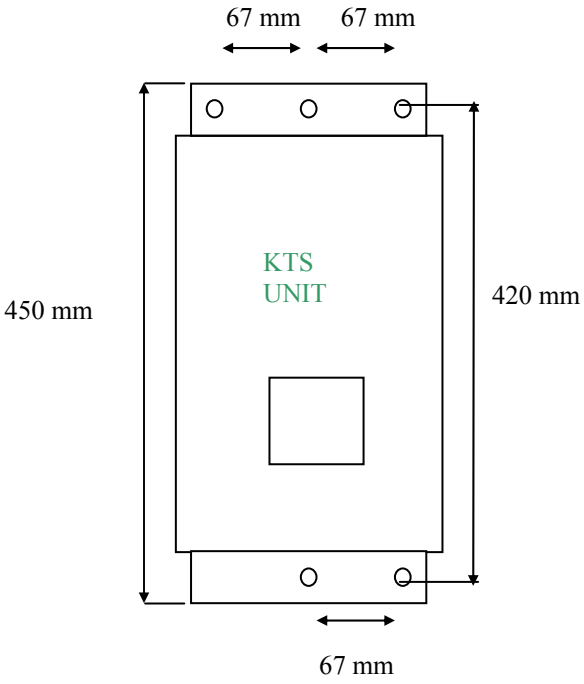

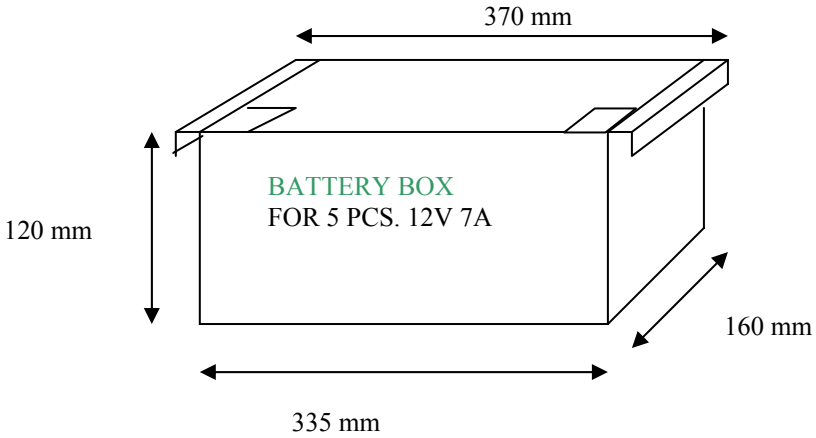

TO BE PUT INTO USE

1. LOOK TO THE KTS`S MOUNTING AND MOUNT IT ON A WALL OR CONTROL PANEL.
2. DOOR PLUG COMING FROM SHAFT`S OUTPUT PULL OUT FROM PANEL TERMINAL(120).CONNECT IT ON A2 TERMINAL AT KTS. (WITH 0,75 mm CABLE)
3. CONNECT A1 TERMINAL ON THE KTS TO THE STOP TURNING ON THE CONTROL PANEL(120) (WITH 0,75 mm CABLE)
4. PULL UP THE DOOR CONTACT SIGNAL TURNING FROM SHAFT FROM CONTROL PANEL TERMINAL. (130) KTS CONNECT A3 TERMINAL. (WITH 0,75 mm CABLE)
5. CONNECT A4 TERMINAL ON THE KTS PLUG TURNING ON THE CONTROL PANEL.(130) (WITH 0,75 mm CABLE)
6. PULL OUT FLOOR SIGNAL OUTPUT COMING FROM THE SHAFT(140) FROM CONTROL PANEL TERMINAL CONNECT IT A6 TERMINAL ON KTS. (WITH 0,75 mm CABLE)
7. CONNECT A5 TERMINAL ON KTS TO THE FLOOR SIGNAL ON THE CONTROL PANEL.(140) (WITH 0,75 mm CABLE)
8. FLOOR SIGNAL COMING FROM THE SHAFT (JF-142) TURNING FROM PANEL TERMINAL (142) PULL OUT AND CONNECT IT TO A7TERMINAL. (WITH 0,75 mm CABLE)
9. CONNECT A8 TERMINAL ON KTS TO FLOOR SIGNAL TURNING ON THE CONTROL PANEL(142) (WITH 0,75 mm CABLE)
10. AT CONTROL PANEL`S PHASE`S(R)FUSE OUTPUT PUT OUT ALL CONNECTION.CONNECT IT TO TRD SIGNED TERMINAL.OUTPUT OF FUSE IN CONTROL PHASE ADDED UNDER THE TRG TERMINAL. (WITH 0,75 mm CABLE)
11. CONNECT TRG AND TRD TERMINALS TO A9-A10 TERMINALS ON KTS. (LOOK PROJECT PAGE 2/2)
12. IF CONTROLS PANEL`S SUPPLY TRANSFORMER 380V AC THE TERMINALS YOU ADDED SHOULD BE 4 PEACES.CONNECT TRD,TRG TERMINALS TO A9 AND A10 TERMINALS ON KTS,TSG AND TRD TERMINALS TO B1,B2 TERMINALS. (WITH 0,75 mm CABLE)
13. REVISION BUTTON ON THE CONTROL PANEL(869)TERMINAL AND B4 TERMINAL ON KTS CONNECT THEM PARALLEL. (WITH 0,75 mm CABLE) UPPER LIMIT SWITCH ON THE CONTROL PANEL KSR2 TURNING(818) TERMINAL AND B5 TERMINAL ON KTS CONNECT PARALLEL EACH OTHER . (WITH 0,75 mm CABLE). LOWER LIMIT SWITCH ON THE CONTROL PANEL KSR1 TURNING(817) TERMINAL AND B6 TERMINAL ON KTS CONNECT PARALLEL EACH OTHER . (WITH 0,75 mm CABLE)
14. BRAKE BOBBIN OUT POINT (840-2000) PULL OUT ON THE CONTROL PANEL C1 AND C4 TERMINALS ON KTS. C2 AND C3 TERMINALS ON KTS .CONNECT BRAKE BOBBIN OUTPUT TERMINAL (840-2000) ON THE CONTROL PANEL. (WITH 0,75 mm CABLE)

TO ENTER THE PROGRAMMING MODE

To enter programming mode or to quit programming mode you must touche up and down button (on the control panel) together for 3 seconds.
The characters on the display shown if three characters it shows the level , if two characters it shows data of the level.
To change the parameters the security codes C00 and C01 respectively entered correctly. If you can not enter codes correctly you can not change the parameters.for the safety of the system there are two security code.

ENTERING THE SECURITY CODE

When you see the C00 on the display press the enter button once. You see 00 on the display . If you didn't change the security codes and press the enter button again . If you have changed the security codes you can use the down or up button to enter old security codes (which you know respectively and correctly). If you do the same process C01 you can reach the parameters.

CHANGING THE SECURITY CODES

After you reach the parameters C00 is your first security code, C01 is the second security code.
To change P00 when there is P00 on the display press the enter button once. You will see old security code on the display. You can change the code with up or down buttons. Then press enter button to save it. If you want to change P01 you can do the same process for it. When you quit the programming mode all the parameters are saved.

EXAMPLE OF CHANGING PARAMETER:

TRAVELLING TIME

After entering the programing mode and passed security codes to change the travelling time use the up button to display P08 code . Press enter button you will see 60 on the display if it hasn't changed. Using the up and down button to come your choice.then press enter button to save it. It will not be active so that even quit the programmin mode.

PROGRAMMING PARAMETERS

P00	FIRST SECURITY CODE DEFAULT VALUE IS "00"
P01	SECOND SECURITY CODE DEFAULT VALUE IS "00"
P02	AFTER THE ELEVATOR MOTOR START IT DETERMINE ITS SPEED AND TURNING TORQUE. HIGH VALUE GIVE, LOW SPEED HIGH POWER AND VICE VERSA. DEFAULT VALUE IS 40.
P03	AFTER THE ELEVATOR DOOR MOTOR START IT DETERMINE ITS SPEED AND TURNING TORQUE. HIGH VALUE GIVE, LOW SPEED HIGH POWER AND VICE VERSA. DEFAULT VALUE IS 10.
P04	IT DETERMINE ELEVATOR`S PRE-TORQUE. HIGH VALUE GIVES LOW SPEED AND HIGH TORQUE. DEFAULT VALUE IS 60.
P05	IT DETERMINE ELEVATOR DOOR MOTOR`S PRE-TORQUE. HIGH VALUE GIVES LOW SPEED AND HIGH TORQUE. DEFAULT VALUE IS 25.
P06	IT DETERMINE DOOR OPENING TIME STEP. STEP VALUE IS 0.45 SECONDS TIME FOUND BY MULTIPLYING WITH ADJUSTED VALUE. STEP VALUE IS 0.45 SECONDS. DEFAULT VALUE IS 15 SECONDS . MAXIMUM VALUE IS 15 SECONDS.
P07	IT DETERMINES THE TIME VALUE AFTER WHICH KTS WILL BECOME ACTIVE WHEN ELECTRIC CUT OFF. DEFAULT VALUE 1 SECOND. MAXİMUM VALUE 99 SECONDS.
P08	IT DETERMINE THE TIME TO REACH TO THE FLOOR. IT SHOULD BE SET FOR THE DISTANCE BETWEEN THE FLOORS. STEP VALUE IS 2 SECONDS AND DEFAULT VALUE 120 SECONDS, MAXIMUM VALUE IS 198 SECONDS.
P09	IT DETERMINES STOP TIME AFTER THE SIGNAL FROM THE FLOOR COMES. WHEN KTS IS PUT INTO USE IT WORKS UNTIL IT COMES TO THE FLOOR. BUT KTS WORKING SPEED UNDER THE MOTOR`S NORMAL SPEED MAY SEE THE MAGNETIC ON THE FLOOR AND CAN`T REACH THE FLOOR. AFTER THE FLOOR SIGNAL CAME IT`S CAN BE SET AND YOU CAN STOP IT AT THE FLOOR.STEP VALUE 0.35 DEFAULT VALUE IS 0,35 SECOND. MAXIMUM VALUE 35 SECOND.
P10	IF THE AUTOMATIC DOOR IS WORKING WITH 220V AC (LIKE COLLAPSIBLE DOOR) THIS PARAMETER MUST BE 1. DC (AS DIAGRAM) ,380V AC (LIKE SELCOM) OR IF THERE IS NO AUTOMATIC DOOR ON ELEVATOR IT MUST BE "0".
P11	IF ELEVATOR COMES TO THE LEVEL IN THE LEVEL BISTABLE SWITCH IS OPEN OR CLOSE AS THE CONTROL PANEL. THIS PARAMETER MUST BE IF BISTABLE SWITCH CLOSED "1" IF BISTABLE SWITCH OPEN "0"
P12	IT SHOWS THE AUTOMATIC DOOR. IF THERE IS AUTOMATIC DOOR 1 IF NOT 0.
P13	IT SHOWS THE TYPE OF AUTOMATIC DOOR. IF AUTOMATIC DOOR IS 380V AC IT SHOULD BE "1" IF NOT "0".
P14	IN EXPERIMENT WHEN KTS PUT INTO USE IT IS FOR GIVING THE WAY. IF FIRST WAY UP 1 IF DOWN "0". IF ADJUSTMENT NOT TRUE IN THE DOWN AND UP LIMIT SWITCH KTS WILL TRY ON THE REVERSE WAY.
P15	DOOR MOTOR TRIES TO FIRST DIRECTION. FACTORY VALUE IS "0" BUT AFTER CONNECTION WHEN PUT INTO USE WANT TO CLOSE YOU SHOULD DO "1".
P16	WHEN ELEVATOR IS IN THE UPPER OR LOWER LIMIT SWITCH. IF BISTABLE SWITCH CLOSED "1" IF BISTABLE SWITCH OPEN "0"
P17	RE-INSTALL FACTORY VALUES. SELECT 1 AND PRESS ENTER IT AUTOMATICLY RE-INSTALL FACTORY DEFAULT VALUES.
P18	IF REVISION MODE SWITCH IS OPEN IN THE NORMALLY MODE THIS PARAMETER MUST BE "0" ELSE "1"

KTS PROGRAMMING TABLES

PROGRAM NO	EXPLANATION	DEFAULT	STEPS	STEP VALUE
P 00	SECURITY CODE 0	0	0...99	1
P 01	SECURITY CODE 1	0	0...99	1
P 02	MOTOR WORKING FREQUENCY	40	5...99	1
P 03	DOOR MOTOR WORKING FREQUENCY	10	5...99	1
P 04	MOTOR PRETORQUE DOWN LIMIT	60	0...99	1
P 05	DOOR MOTOR PRETORQUE DOWN LIMIT	2	0...99	1
P 06	AUTOMATIC DOOT OPENING TIME	33	0...32	0,45
P 07	MOVE DELAY TIME	1	0...99	1 s
P 08	TRAVELLING TIME	60	0...99	2
P 09	ON THE LEVEL SIGNAL DELAY TIME	1	0...99	0.35
P 10	IF AUTOMATIC DOOR TYPE IS MONO PHASE (1=HAVE 0=HAVEN'T)	0	0-1	1
P 11	ON THE LEVEL SIGNAL POSITION WHEN ELEVATOR GONE ON THE LEVEL (1= NORMAL CLOSE 0= NORMAL OPEN)	0	0-1	1
P 12	AUTOMATIC DOOR (1=HAVE 0=HAVEN'T)	0	0-1	1
P 13	AUTOMATIC DOOR TYPES (1=380 V AC 0=DC)	0	0-1	1
P 14	MOTOR FIRST DIRECTION (1= UP 0= DOWN)	0	0-1	1
P 15	DOOR MOTOR FIRST DIRECTION (1= FORWARD 0= REVERSE)	0	0-1	1
P 16	LIMIT SWITCH POSITION WHILE ON THE UPPER OR LOWER LIMIT (0= NORMAL CLOSE 1= NORMAL OPEN)	1	0-1	1
P 17	LOAD DEFAULTS (1=YES 0=NO)	0	0-1	1
P 18	REVISION SWITCH POSITION WHILE ON THE REVISION MODE (1= NORMAL CLOSE 0= NORMAL OPEN)	0	0-1	1

KTS ERROR CODES

Er1: UPPER AND LOWER LIMIT SWITCH CHOICE IS MISTAKE OR THERE IS WRONG CONNECTION.

Er2: OVER LOAD OR SHORT CIRCUIT ON ELEVATOR ENGINE.

Er3: OVER LOAD OR SHORT CIRCUIT ON BRAKE BOBBINE.

Er4: OVER LOAD OR SHORT CIRCUIT ON ELEVATOR DOOR ENGINE.

Er5: IT SHOWS DOOR OPEN WHILE ELEVATOR IS GOING.

Er6: IT SHOWS THAT TRAVELLING TIME IS FULL BUT ELEVATOR IS NOT ON THE LEVEL THAT YOU CAN SET IT ON PROGRAMMING.

Er7: IT SHOWS THAT KTS PERCEIVED THAT ELEVATOR MACHINE ISN'T TURNING.

Er8: IT SHOWS THAT ELEVATOR DİDN'T GONE BOTH DIRECTIONS.

Lo : BATTERY IS LOW.

onH: IT SHOWS THAT ELEVATOR IS ON REVISION MODE(ON HAND COMMAND).

KTS FUNCTIONS CODES

Fo0 : ELECTRIC CUTED OFF
Fo1 : RESCUE BEGIN
Fo2 : THE CAR ON THE LEVEL
Fo3 : AUTOMATIC DOOR IS OPENNING
Fo4 : AUTOMATIC DOOR OPENED

KTS ORDER CODE APPENDIX

KTS XX XX XX

MONTAGE TYPE
PI - MODULAR
PD – WALL CABINET

AUTO DOOR TYPE
ST – WITHOUT AUTO DOOR
TM – 3 PHASE OR MONO PHASE
RO - VVVF DOOR

MODUL TYPE
25 : 10 hp motor max.
35 : 15 hp motor max.
50 : 20 hp motor max.

EXAMPLES

KTS 25 ST PD 10 hp motor wall cabinet type without auto door

KTS 25 RO PI 10 hp motor modular type VVVF auto door

KTS 50 TM PI 20 hp motor modular type 3 phase or mono phase auto door

- **Standart break coil voltage is 180 V DC**

ELECTRICAL CHARACTERISTICS

NO	CHARACTERISTICS	WORK AREA	TOLERANCE
1	Work temparature	0°C,+50°C	Min-Max
2	Input supply voltage	220 V AC	-+%10
3	Input supply current	50 mA	Max.
4	Input three phase voltage	380 V AC	-+%10
5	Output voltage (1 Phase)	220 V RMS	-+%10
6	Output voltage (3 Phase)	48 V RMS	-+%10
7	Output current	17 A	Max
8	Battery voltage	60 V DC	-+%10
9	Battery current	7 Amper	
10	Charge voltage	68 V DC	-+%10
11	Input frequency	50 Hz	-+%10
12	Output frequency (1 Phase)	50 Hz	-+%1
13	Output frequency (3 Phase)	2-30Hz	-+%1
14	Isolation resistance	5 MOhm	Min.
15	Isolation voltage limit	1885 V AC	1 minute

PROJECT SYMBOL AND MEANING

100 : 24 V DC SINYALIZATION SUPPLY

101 : 48 V DC SAFETY CIRCUIT

120 : STOP RETURN (48 V DC)

130 : DOOR CONTACT RETURN (48 V DC)

140 : DOOR LOCK RETURN (48 V DC)

142 : JF (IN THE LEVEL)RETURN (48 V DC)

102 : AUTO DOOR LEVEL SIGNAL (48V DC)

651 : AUTO DOOR LEVEL SIGNAL RETURN (48V DC)

817 : LOWER LIMIT SWITCH RETURN (48V DC)

818 : UPPER LIMIT SWITCH RETURN (48V DC)

840 : BRAKE BOBIN OUTPUT (180V DC)

869 : INSPECTION SWITCH RETURN(HAND COMMAND) (48 V DC)

1000 : PANELS GROUND (0V DC)


2000 : BRAKE BOBIN OUTPUT (0V DC)

K16 : DOOR OPEN LIMIT SWITCH RETURN (48V DC)

K19 : DOOR CLOSE LIMIT SWITCH RETURN (48V DC)

K20 : FOTOSEL INPUT (24 V DC)

K T S MONTAGE APPLICATION

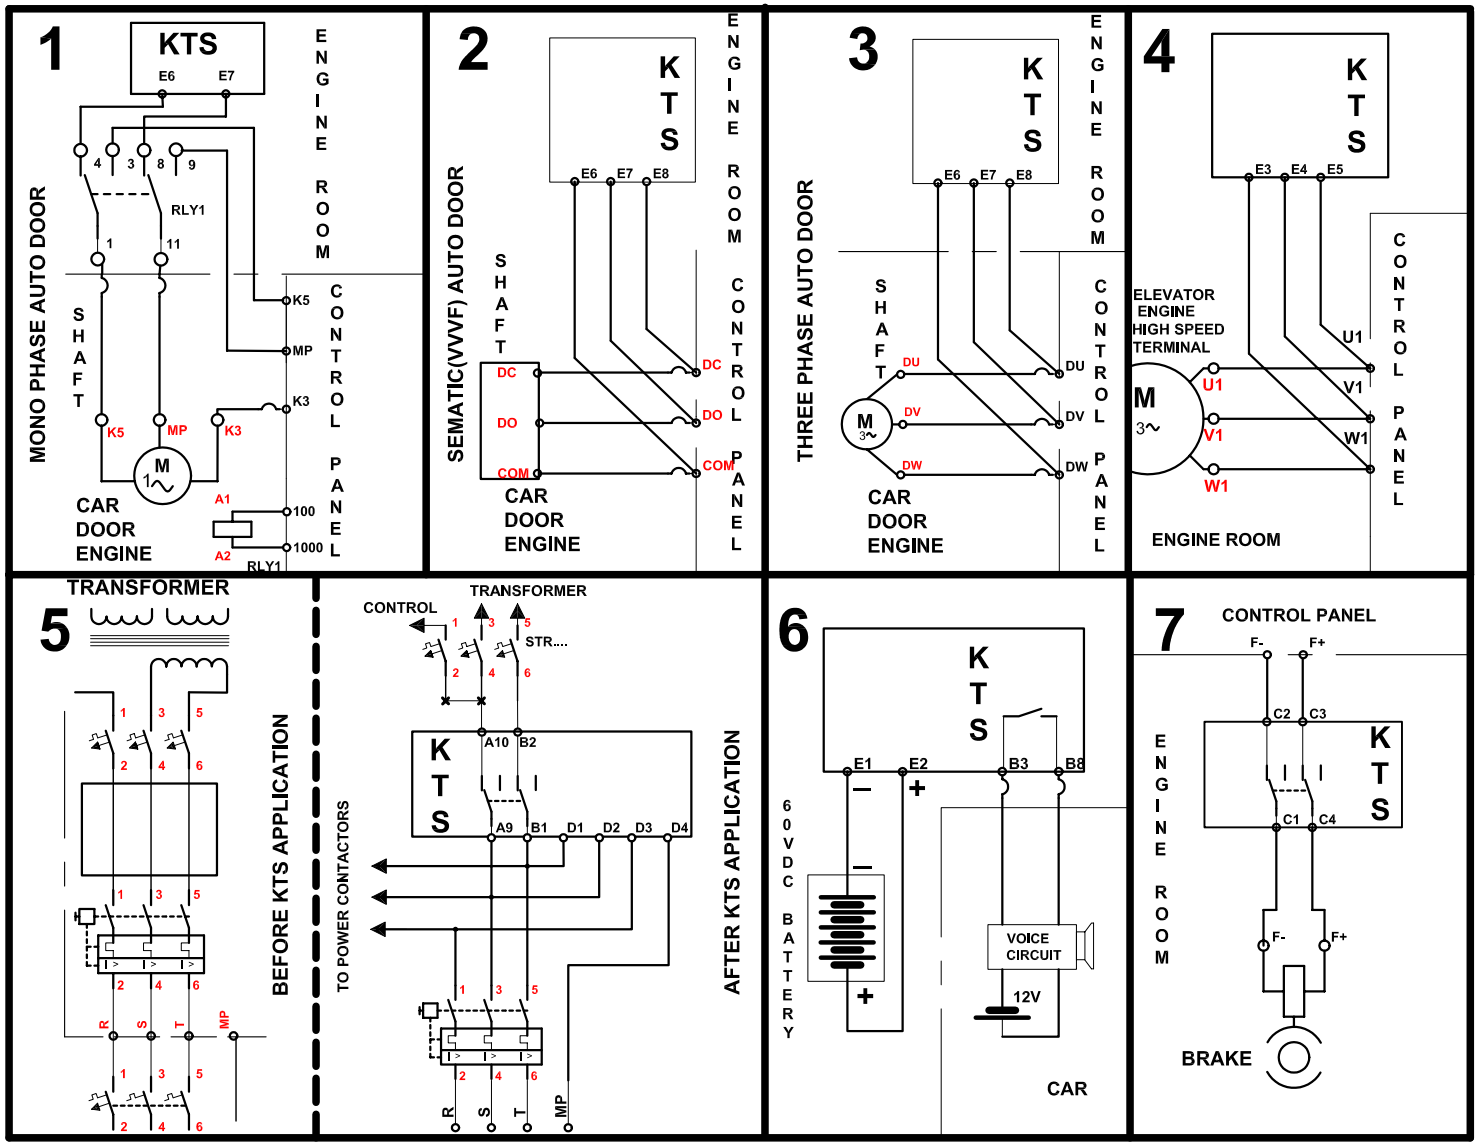

DATE	21.08.2003
DRAW	H. AKSU
CONTROL	O. Nuri ÇALIK

HAKON MÜHENDİSLİK SAN.TİC.LTD.ŞTİ.
www.hakon.com.tr
info@hakon.com.tr
ikitelli / İSTANBUL


CUSTOMER

SUBJECT


AUTOMATIC DOOR TYPES EMERGENCY RESCUE UNIT APPLICATIONS

Revision no	0 0
page no	1 / 2

K T S MONTAGE APPLICATION

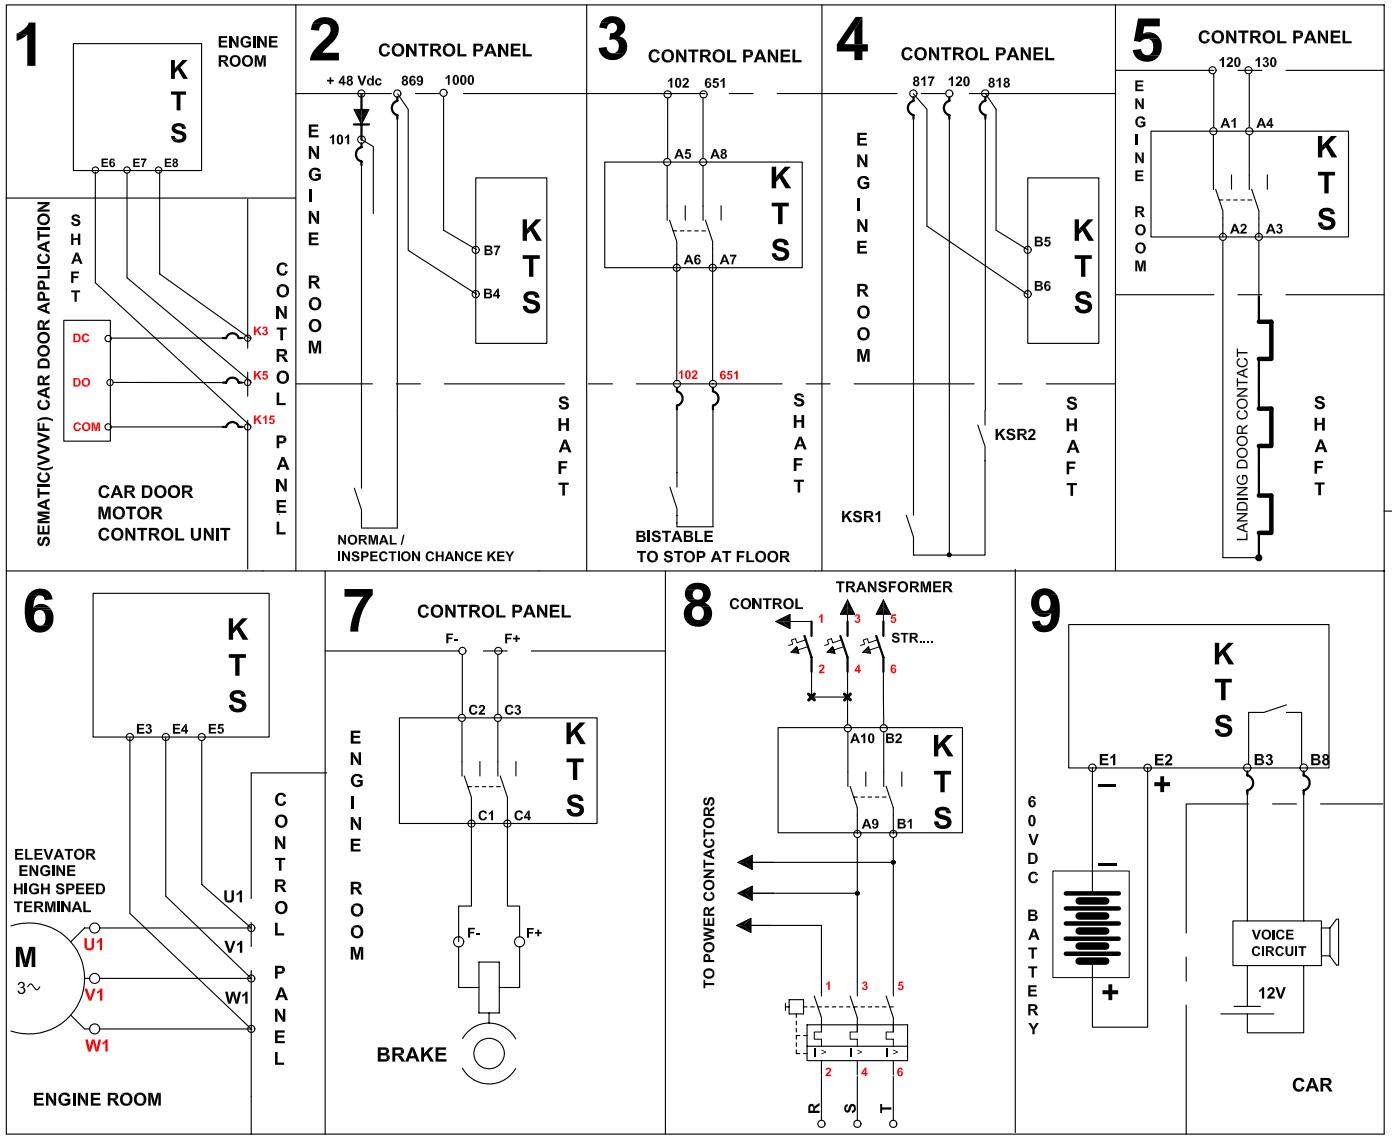


NORMAL APPLICATION

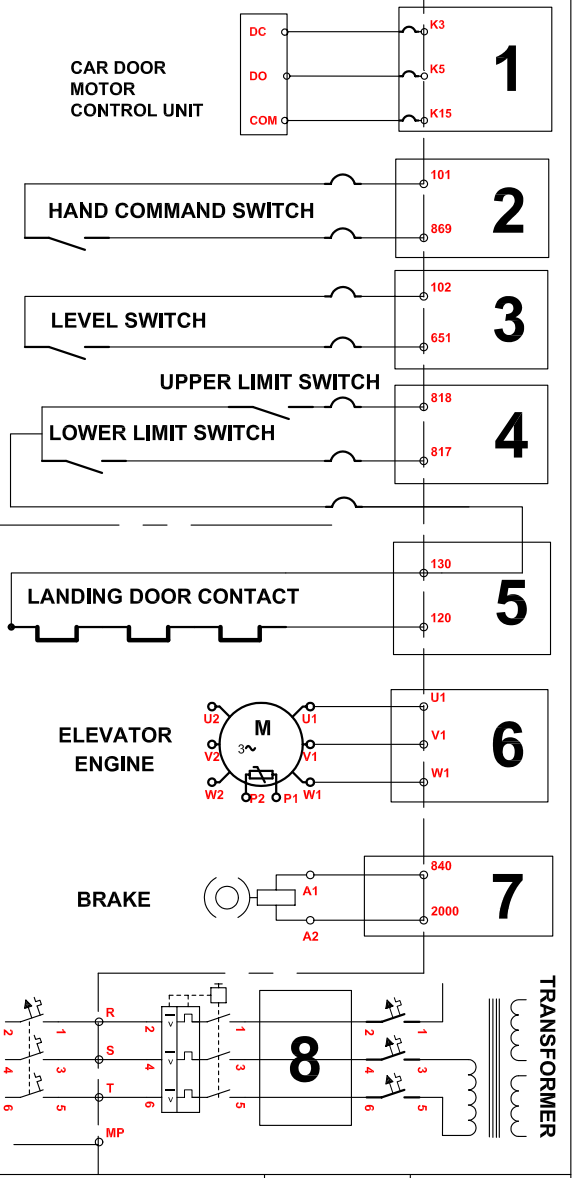


DATE		HAKON MÜHENDİSLİK SAN.TİC.LTD.ŞTİ.	CUSTOMER	SUBJECT	Revision no 0 0
DRAW	H. AKSU	www.hakon.com.tr		THE ELEVATOR WITH SEMATIC (VVVF) AUTOMATIC DOOR EMERGENCY RESCUE UNIT APPLICATION BRAKE BOBIN 180V DC	page no 1 / 2
CONTROL	O. Nuri ÇALIK	info@hakon.com.tr ikitelli / İSTANBUL			

K T S MONTAGE APPLICATION

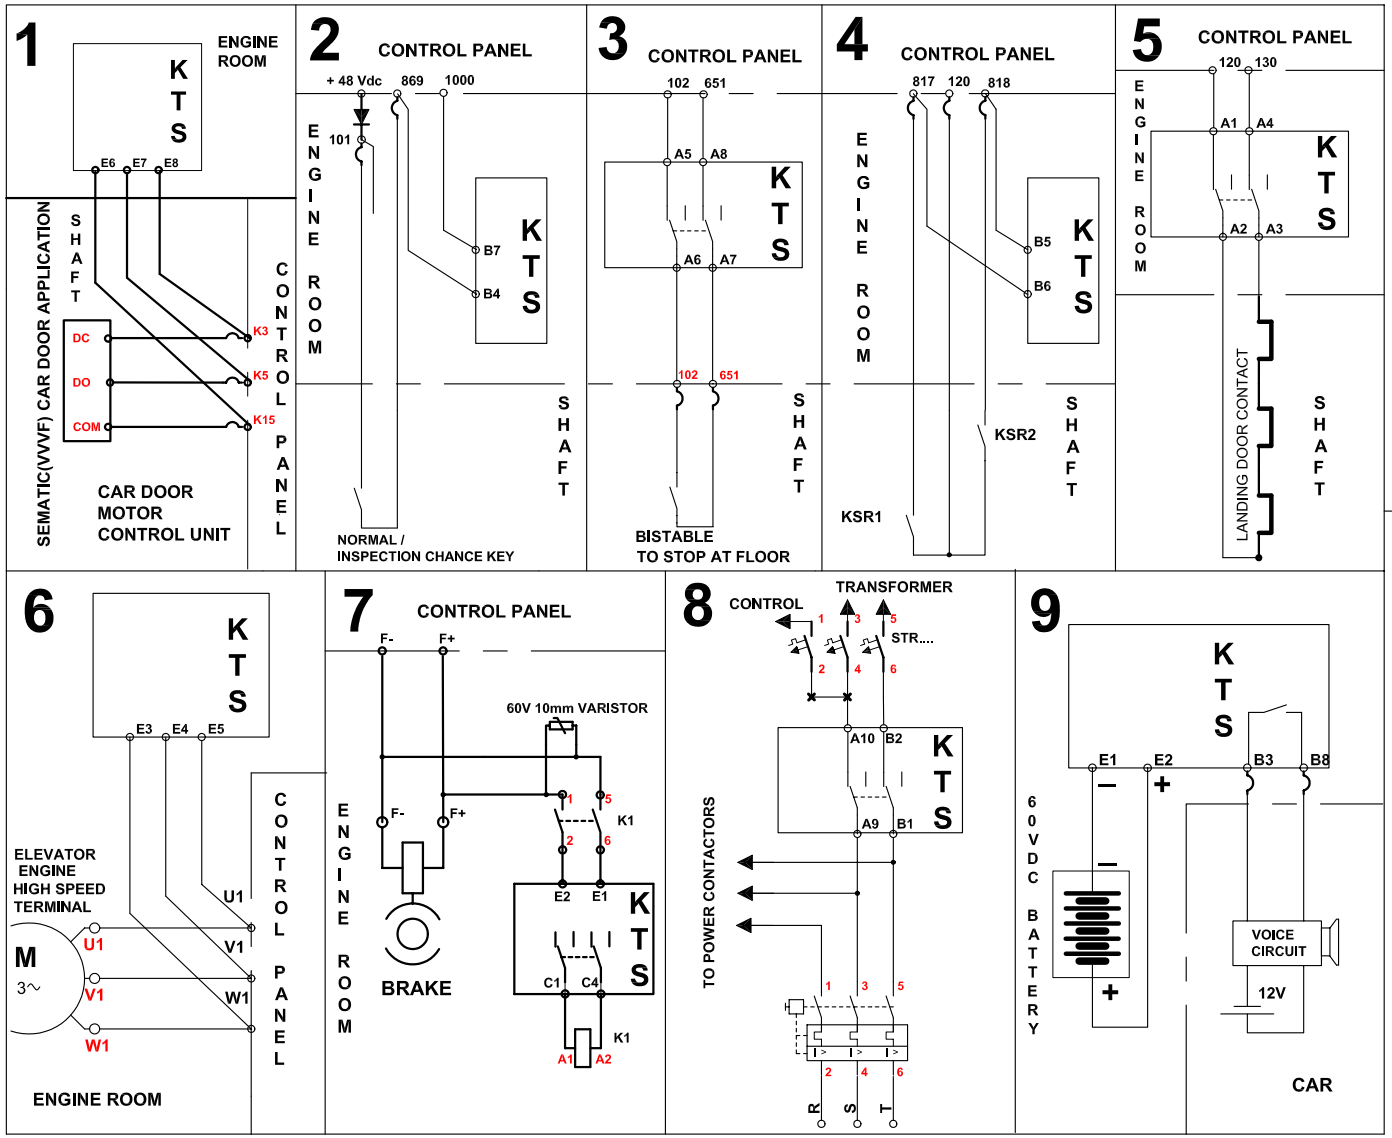


NORMAL APPLICATION

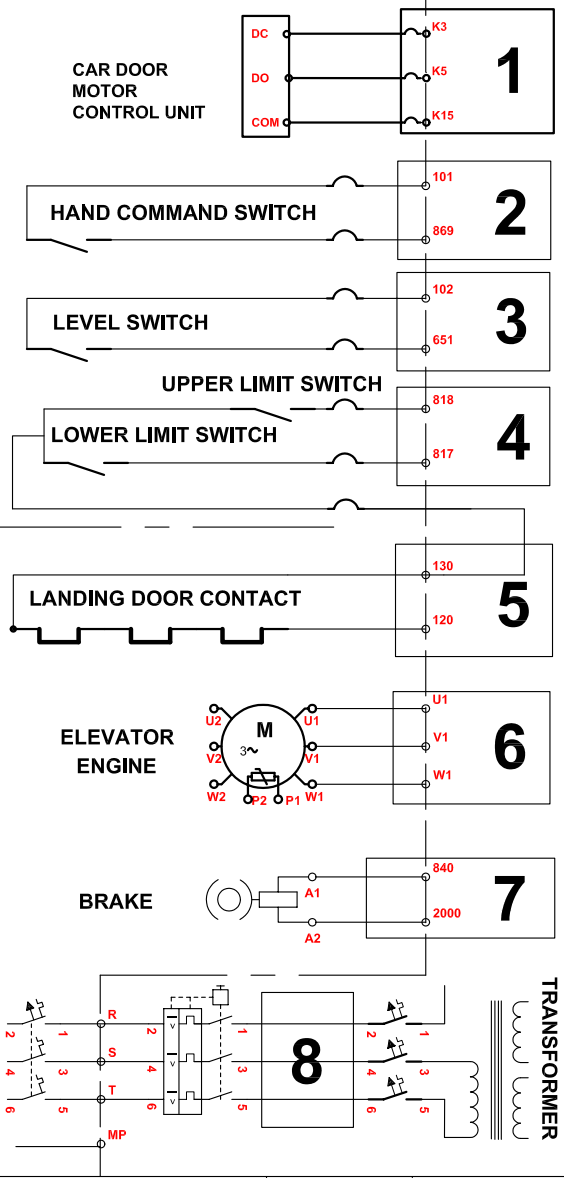


DATE	20.02.2003	HAKON MÜHENDİSLİK SAN.TİC.LTD.ŞTİ.	CUSTOMER	SUBJECT	Revision no 0 0
DRAW	H. AKSU	www.hakon.com.tr		THE ELEVATOR WITH SEMATIC (VVVF) AUTOMATIC DOOR EMERGENCY RESCUE UNIT APPLICATION BRAKE BOBIN 60V DC	page no 1 / 2
CONTROL	O. Nuri ÇALIK	info@hakon.com.tr ikitelli / İSTANBUL			

K T S MONTAGE APPLICATION

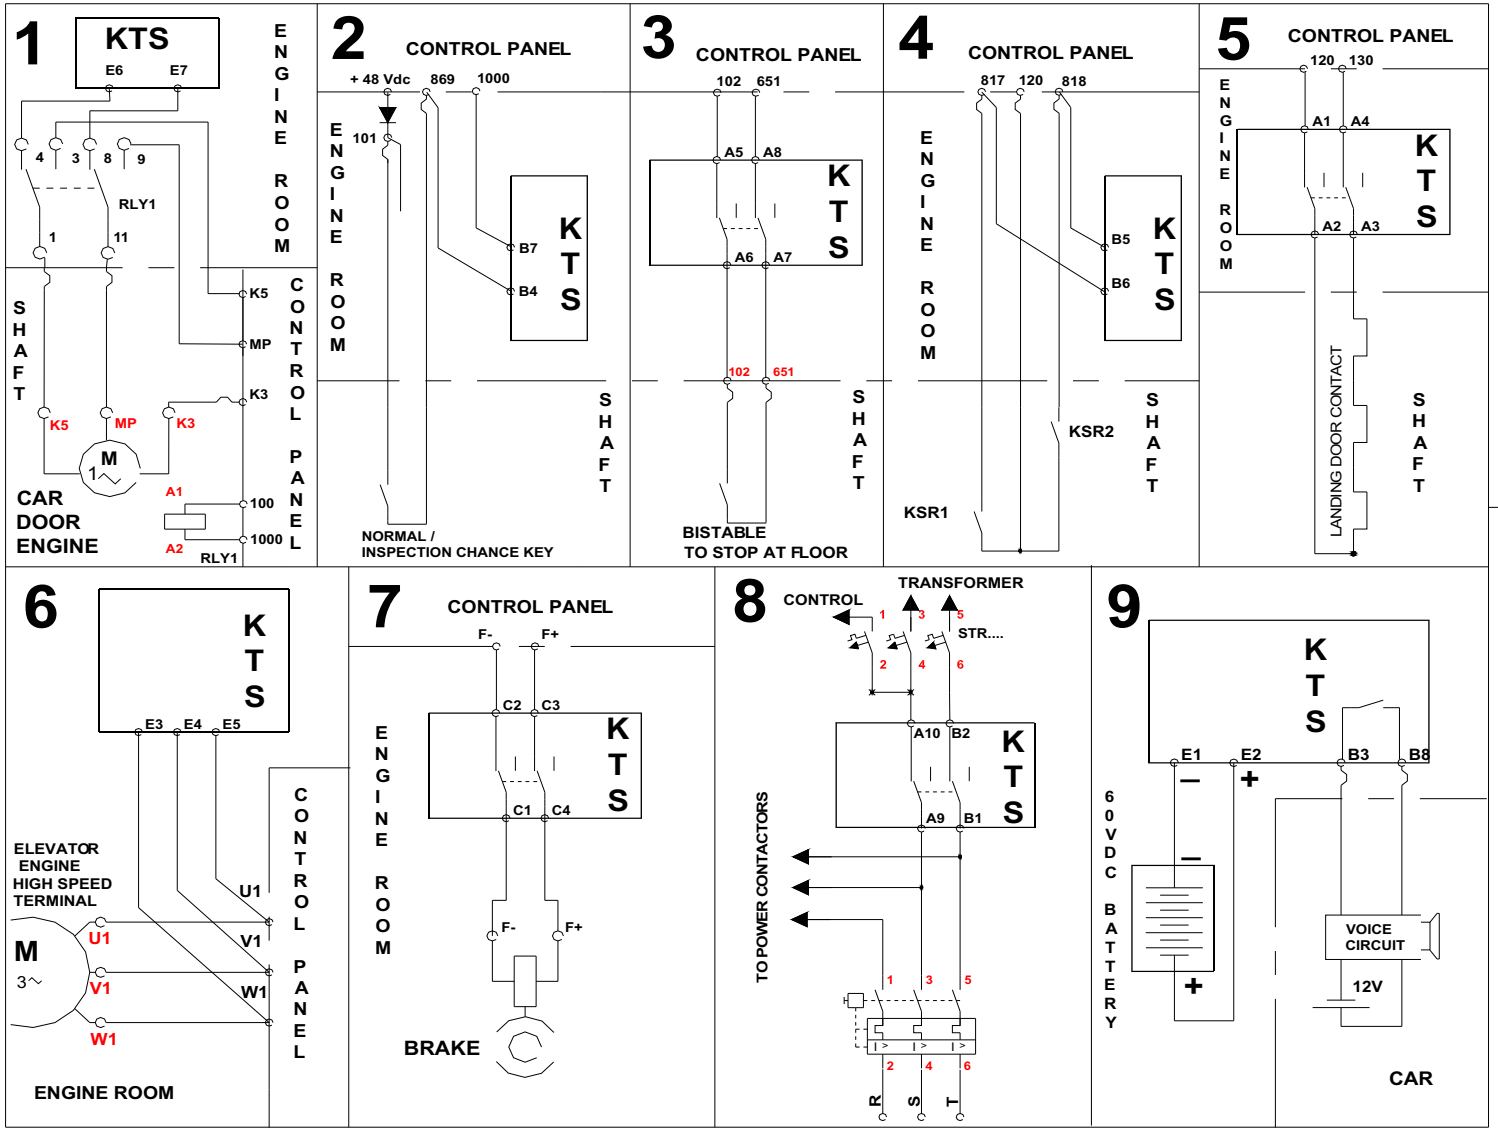


NORMAL APPLICATION

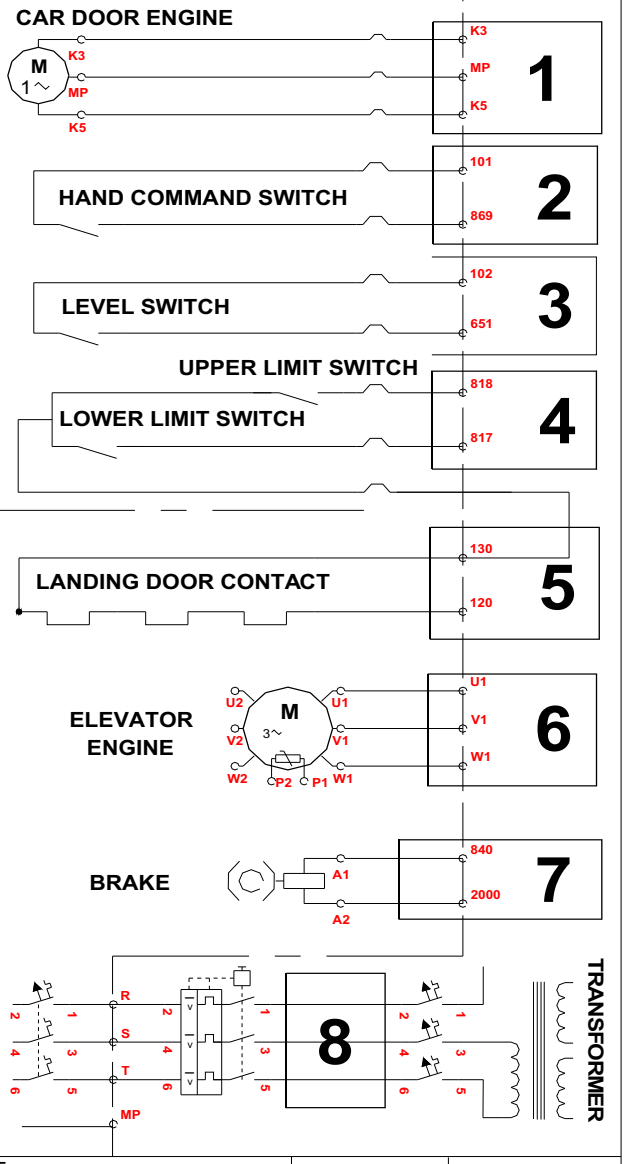


DATE		HAKON MÜHENDİSLİK SAN.TİC.LTD.ŞTİ.	CUSTOMER	SUBJECT	Revision no 0 0
DRAW	H. AKSU	www.hakon.com.tr		THE ELEVATOR WITH MONO PHASE AUTOMATIC DOOR EMERGENCY RESCUE UNIT APPLICATION BRAKE BOBIN 180V DC	
CONTROL	O. Nuri ÇALIK	info@hakon.com.tr ikitelli / İSTANBUL			page no 1 / 1

K T S MONTAGE APPLICATION

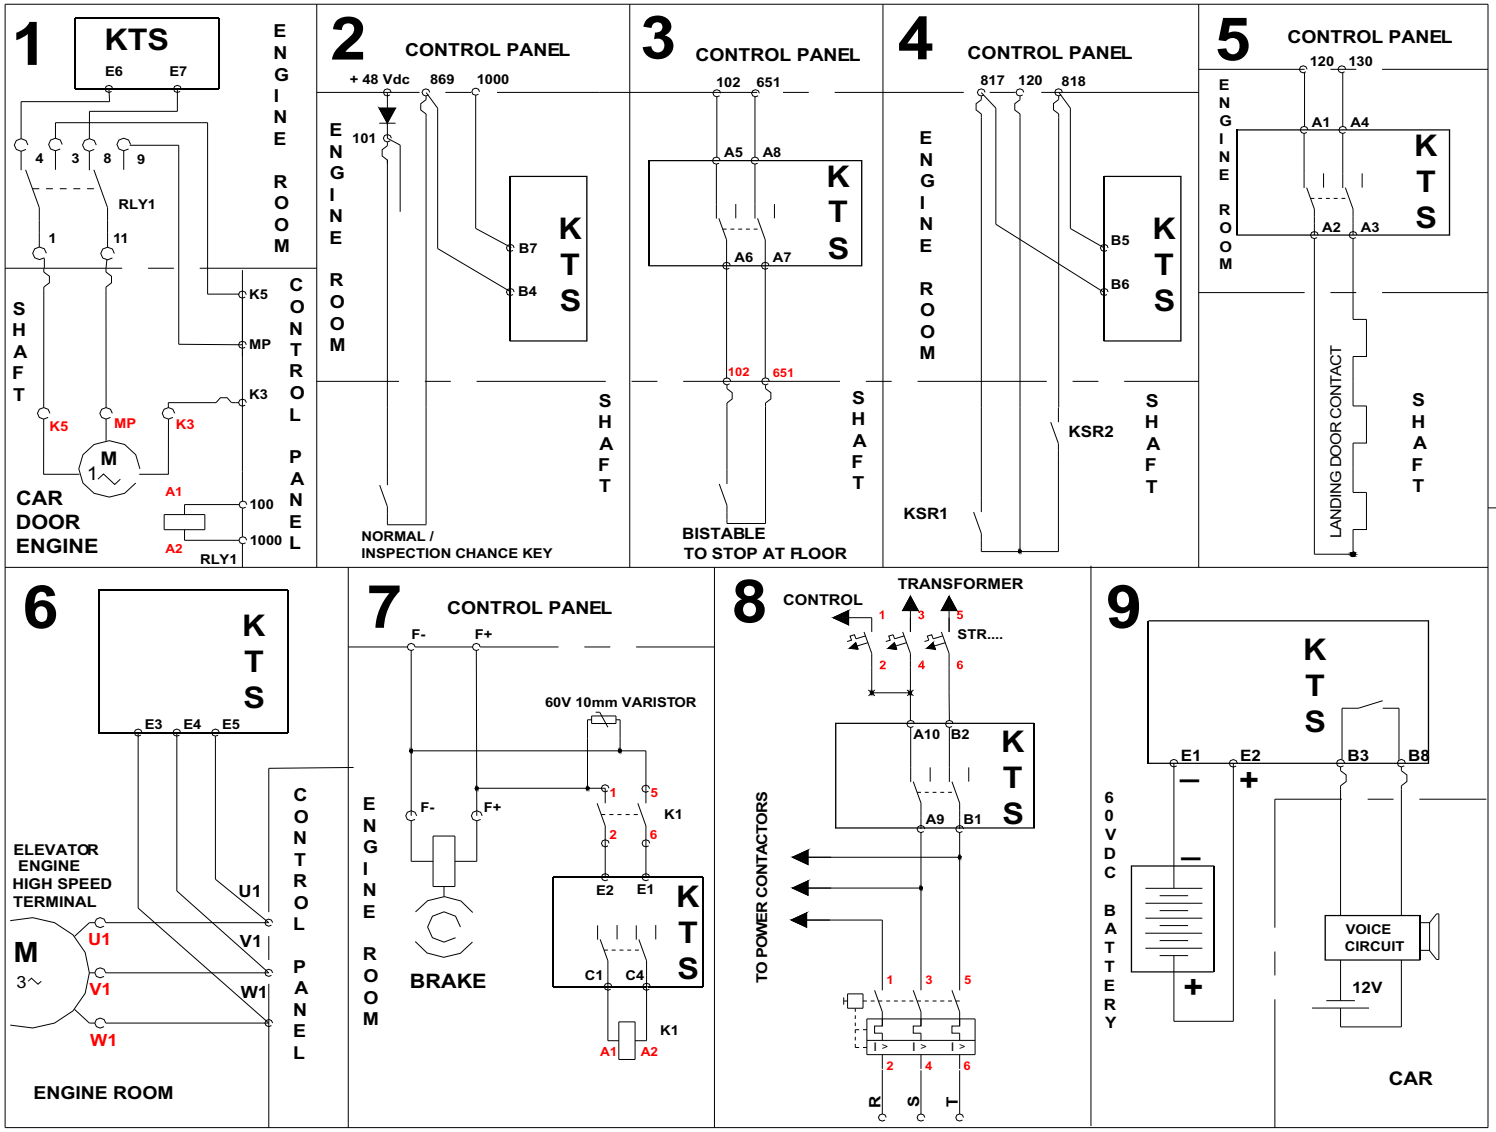


NORMAL APPLICATION

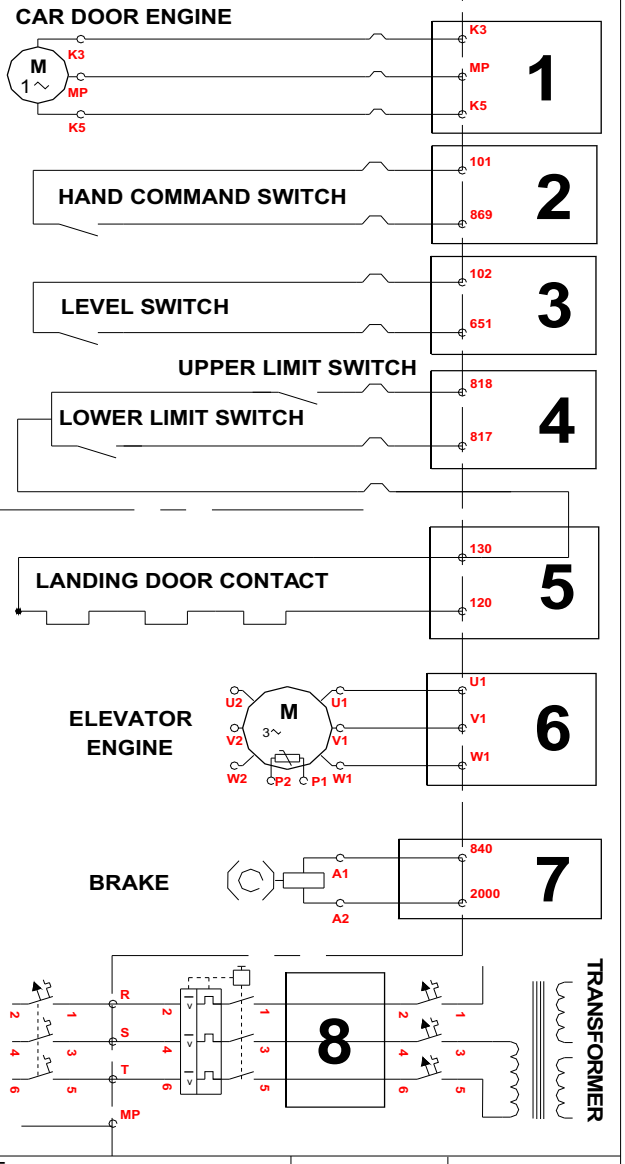


DATE		HAKON MÜHENDİSLİK SAN.TİC.LTD.ŞTİ.	CUSTOMER	SUBJECT	Revision no 0 0
DRAW	H. AKSU	www.hakon.com.tr		THE ELEVATOR WITH MONO PHASE AUTOMATIC DOOR EMERGENCY RESCUE UNIT APPLICATION BRAKE BOBIN 60V DC	page no 1 / 1
CONTROL	O. Nuri ÇALIK	info@hakon.com.tr ikitelli / İSTANBUL			

K T S MONTAGE APPLICATION

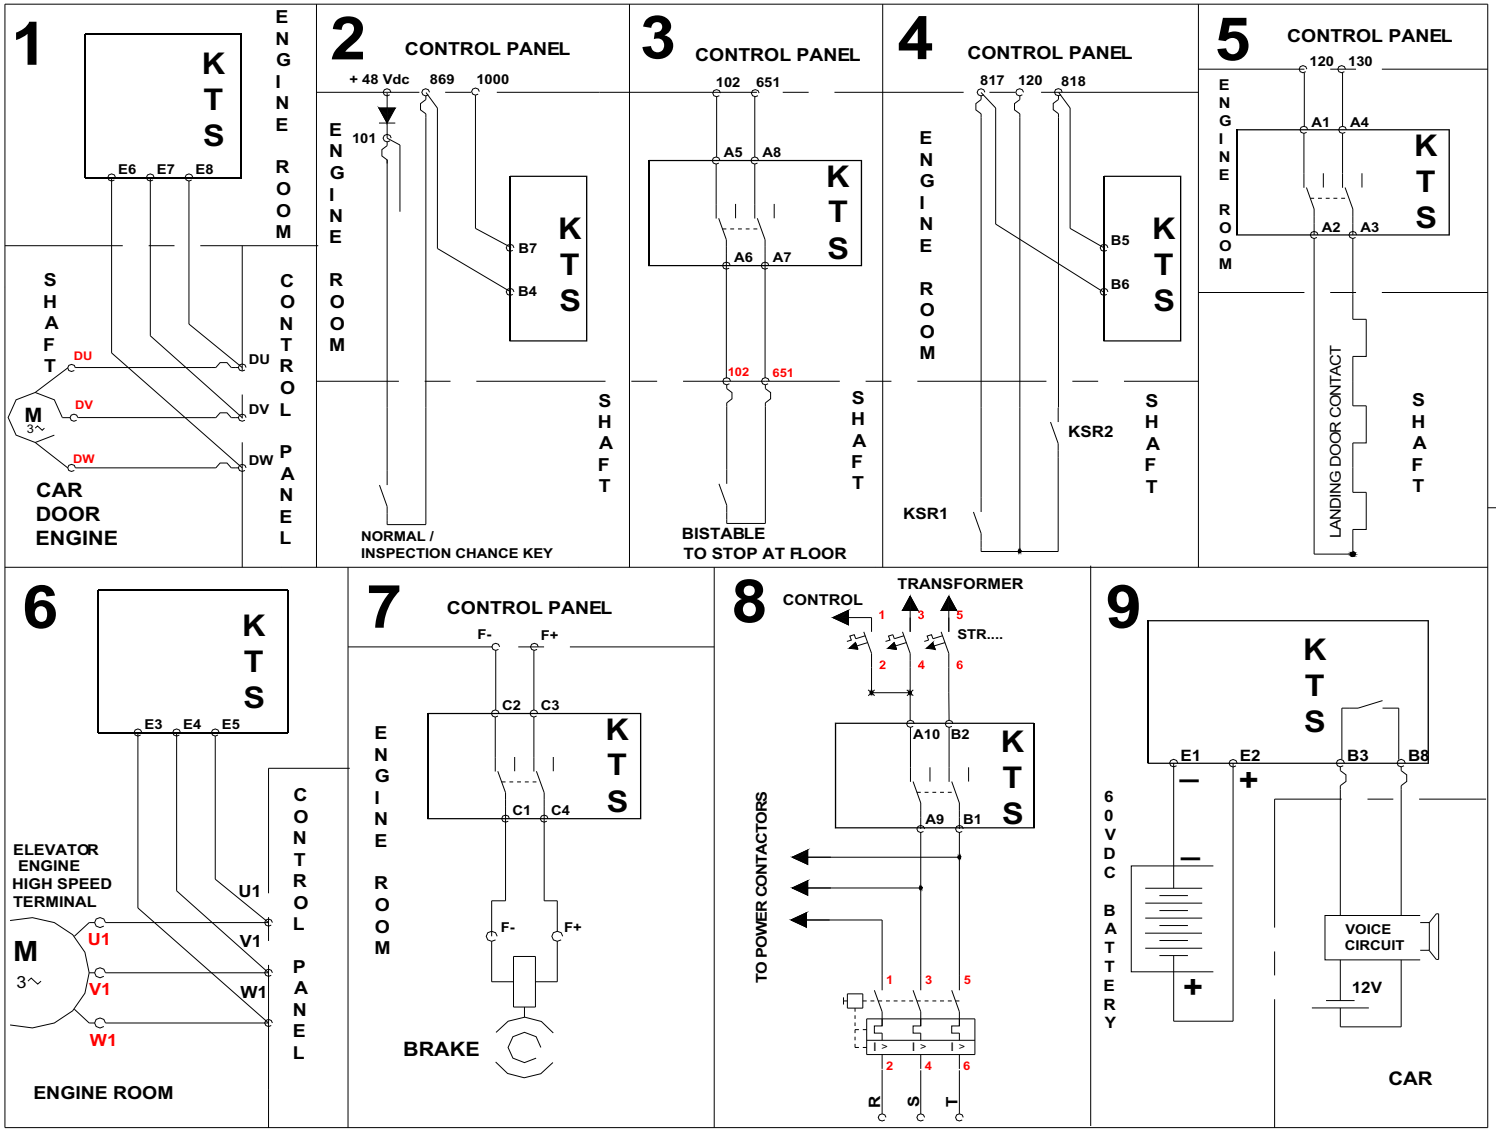


NORMAL APPLICATION

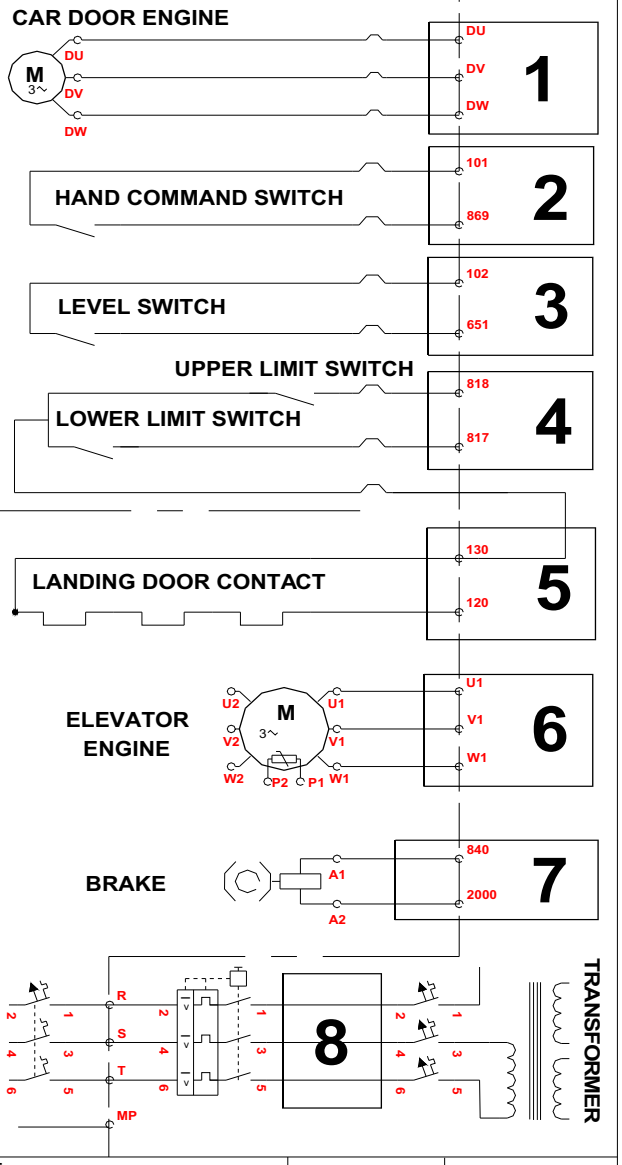


DATE		HAKON MÜHENDİSLİK SAN.TİC.LTD.ŞTİ.	CUSTOMER	SUBJECT	Revision no 0 0
DRAW	H. AKSU	www.hakon.com.tr		THE ELEVATOR WITH THREE PHASE AUTOMATIC DOOR EMERGENCY RESCUE UNIT APPLICATION BRAKE BOBIN 180V DC	page no 1 / 1
CONTROL	O. Nuri ÇALIK	info@hakon.com.tr ikitelli / İSTANBUL			

K T S MONTAGE APPLICATION

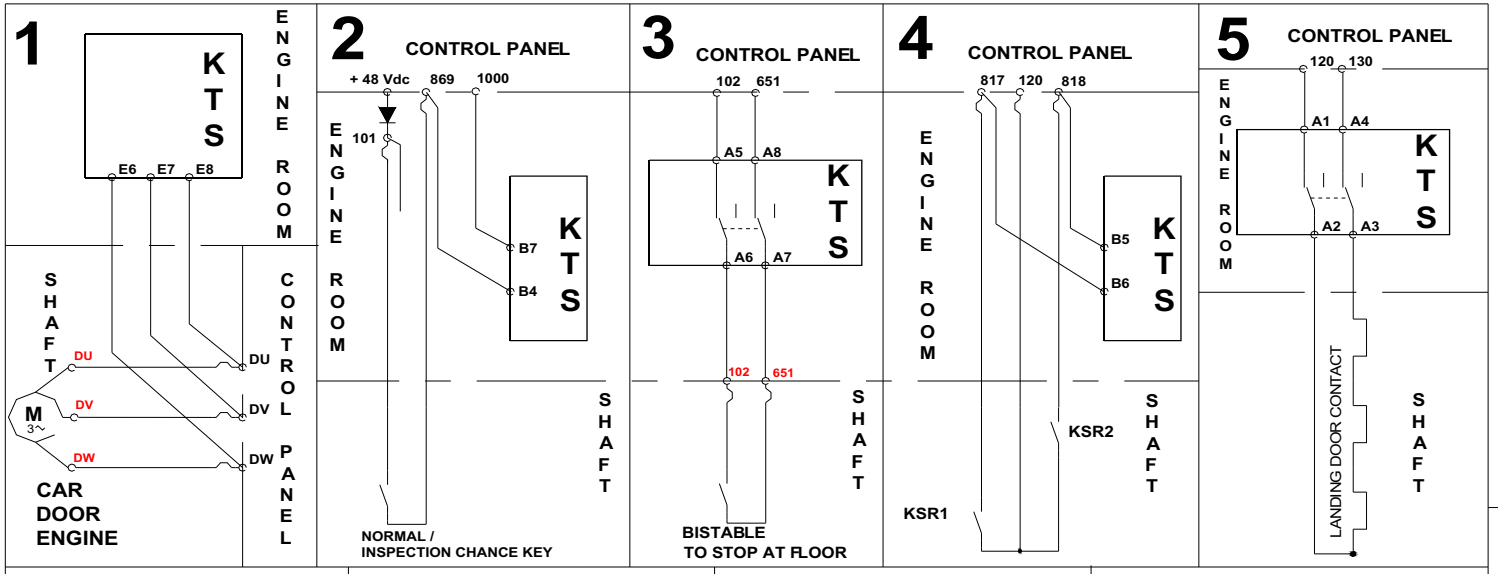


NORMAL APPLICATION

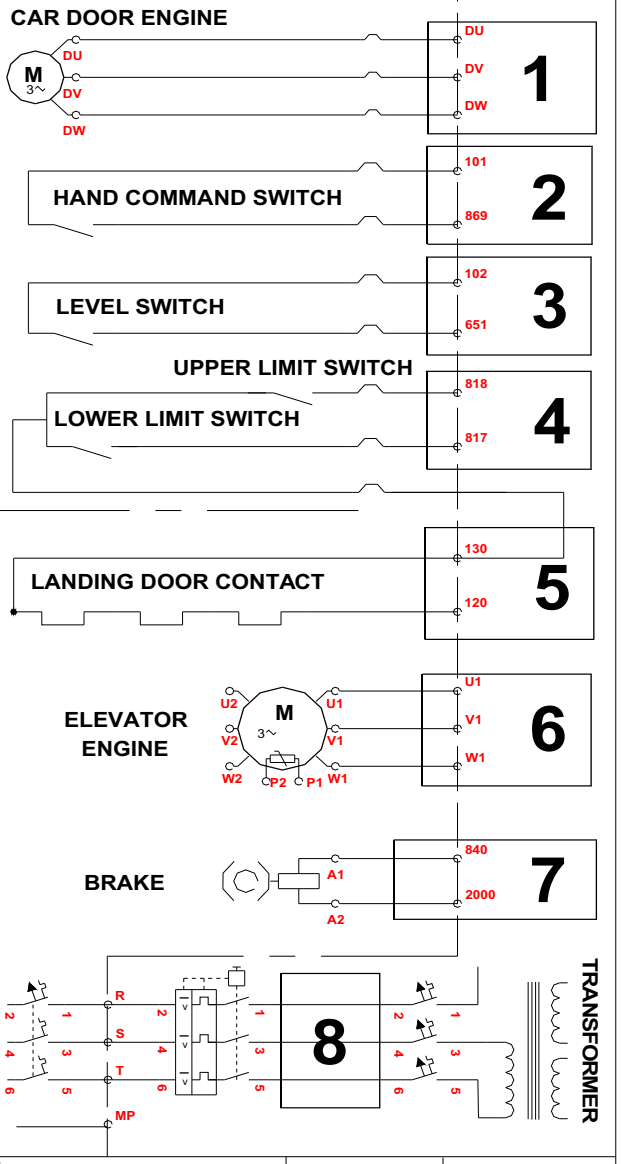


DATE		HAKON MÜHENDİSLİK SAN.TİC.LTD.ŞTİ.	CUSTOMER	SUBJECT	Revision no 0 0
DRAW	H. AKSU	www.hakon.com.tr		THE ELEVATOR WITH THREE PHASE AUTOMATIC DOOR EMERGENCY RESCUE UNIT APPLICATION BRAKE BOBIN 60V DC	page no 1 / 1
CONTROL	O. Nuri ÇALIK	info@hakon.com.tr ikitelli / İSTANBUL			

K T S MONTAGE APPLICATION

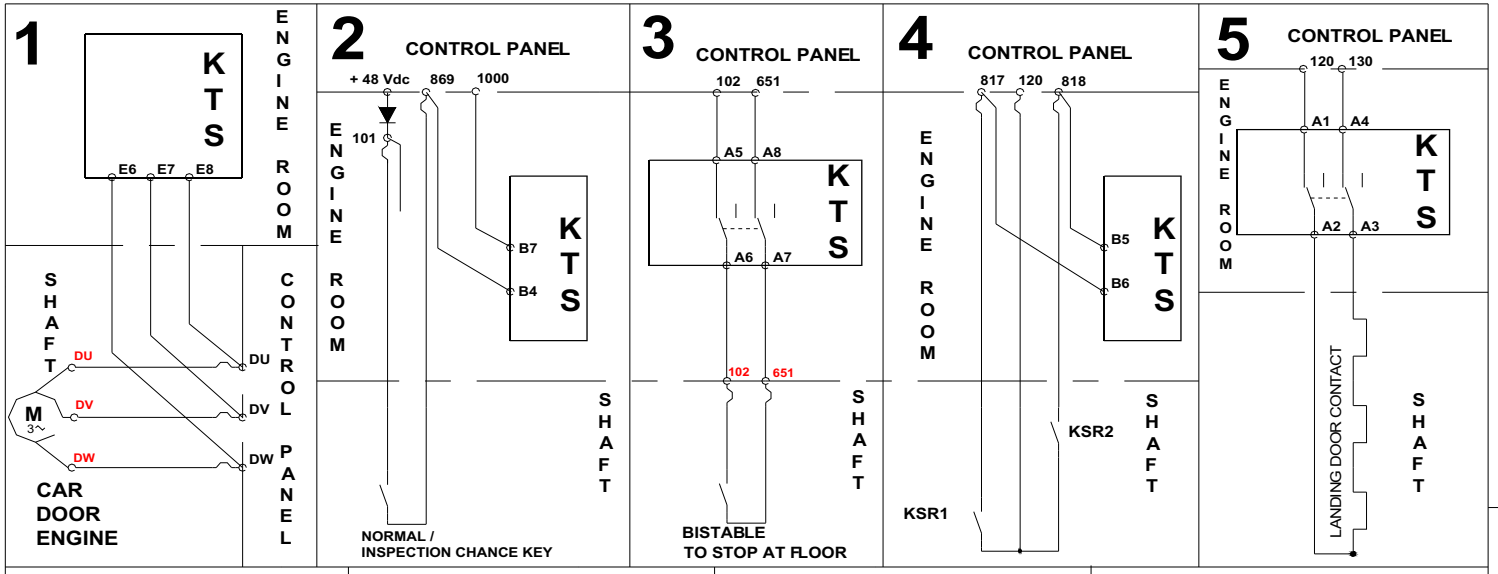


NORMAL APPLICATION

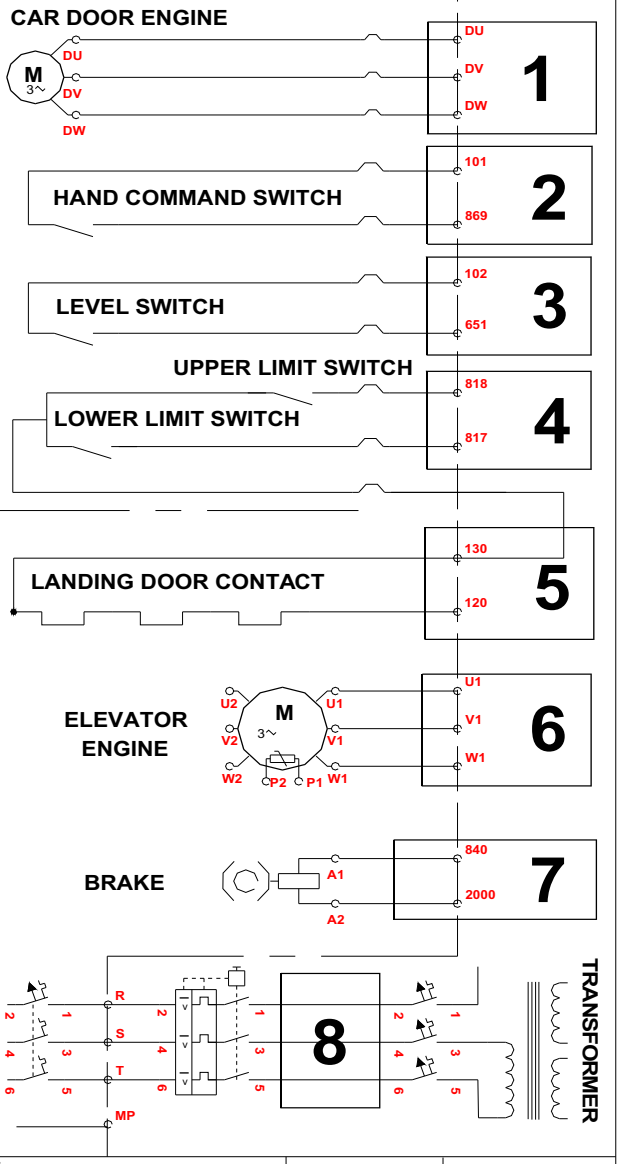


DATE		HAKON MÜHENDİSLİK SAN.TİC.LTD.ŞTİ.	CUSTOMER	SUBJECT	Revision no 0 0
DRAW	H. AKSU	www.hakon.com.tr		THE ELEVATOR WITH THREE PHASE AUTOMATIC DOOR EMERGENCY RESCUE UNIT APPLICATION BRAKE BOBIN 60V DC	page no 1 / 1
CONTROL	O. Nuri ÇALIK	info@hakon.com.tr ikitelli / İSTANBUL			

K T S MONTAGE APPLICATION

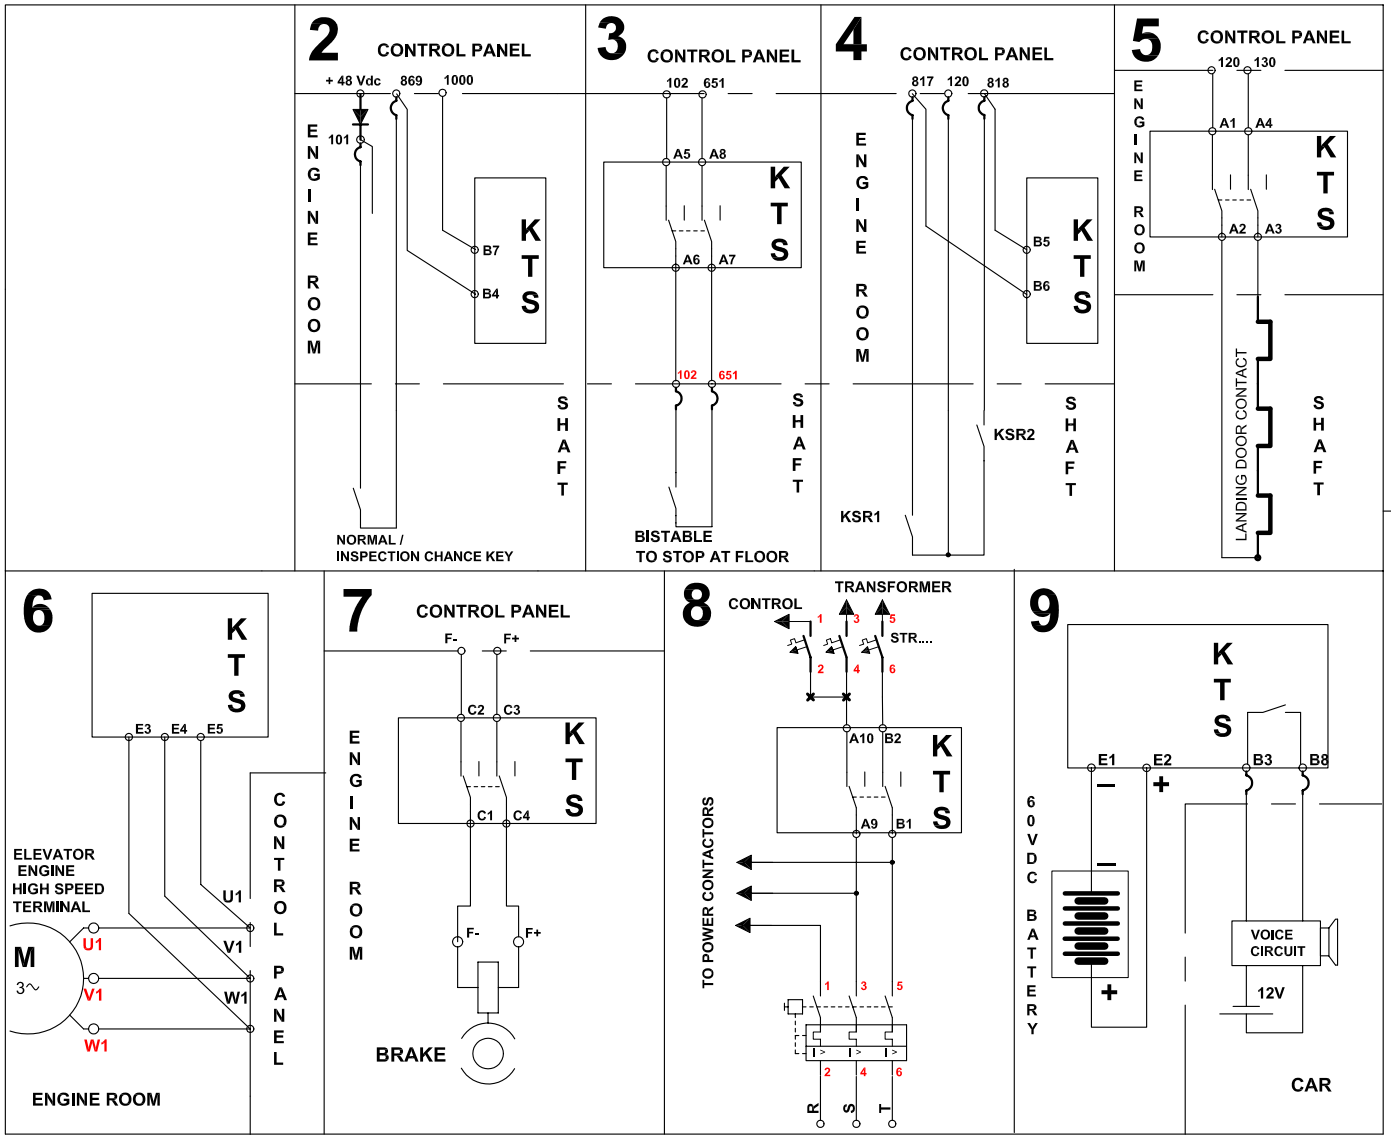


NORMAL APPLICATION

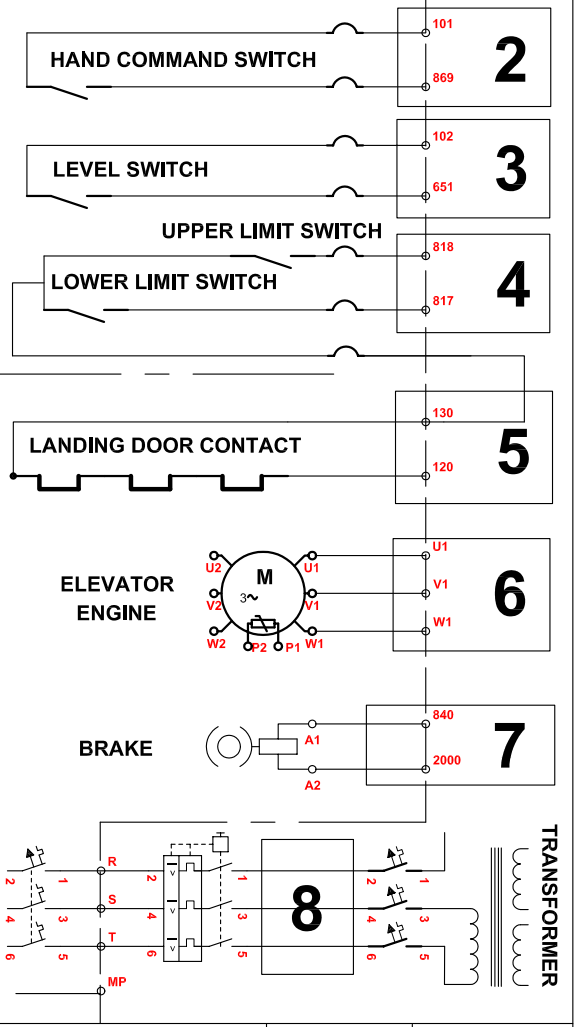


DATE	20.02.2003	HAKON MÜHENDİSLİK SAN.TİC.LTD.ŞTİ. www.hakon.com.tr info@hakon.com.tr ikitelli / İSTANBUL	CUSTOMER	SUBJECT THE ELEVATOR WITHOUT AUTOMATIC DOOR EMERGENCY RESCUE UNIT APPLICATION BRAKE BOBIN 180V DC	Revision no 00
DRAW	H. AKSU				page no 1 / 1
CONTROL	O. Nuri ÇALIK				

K T S MONTAGE APPLICATION

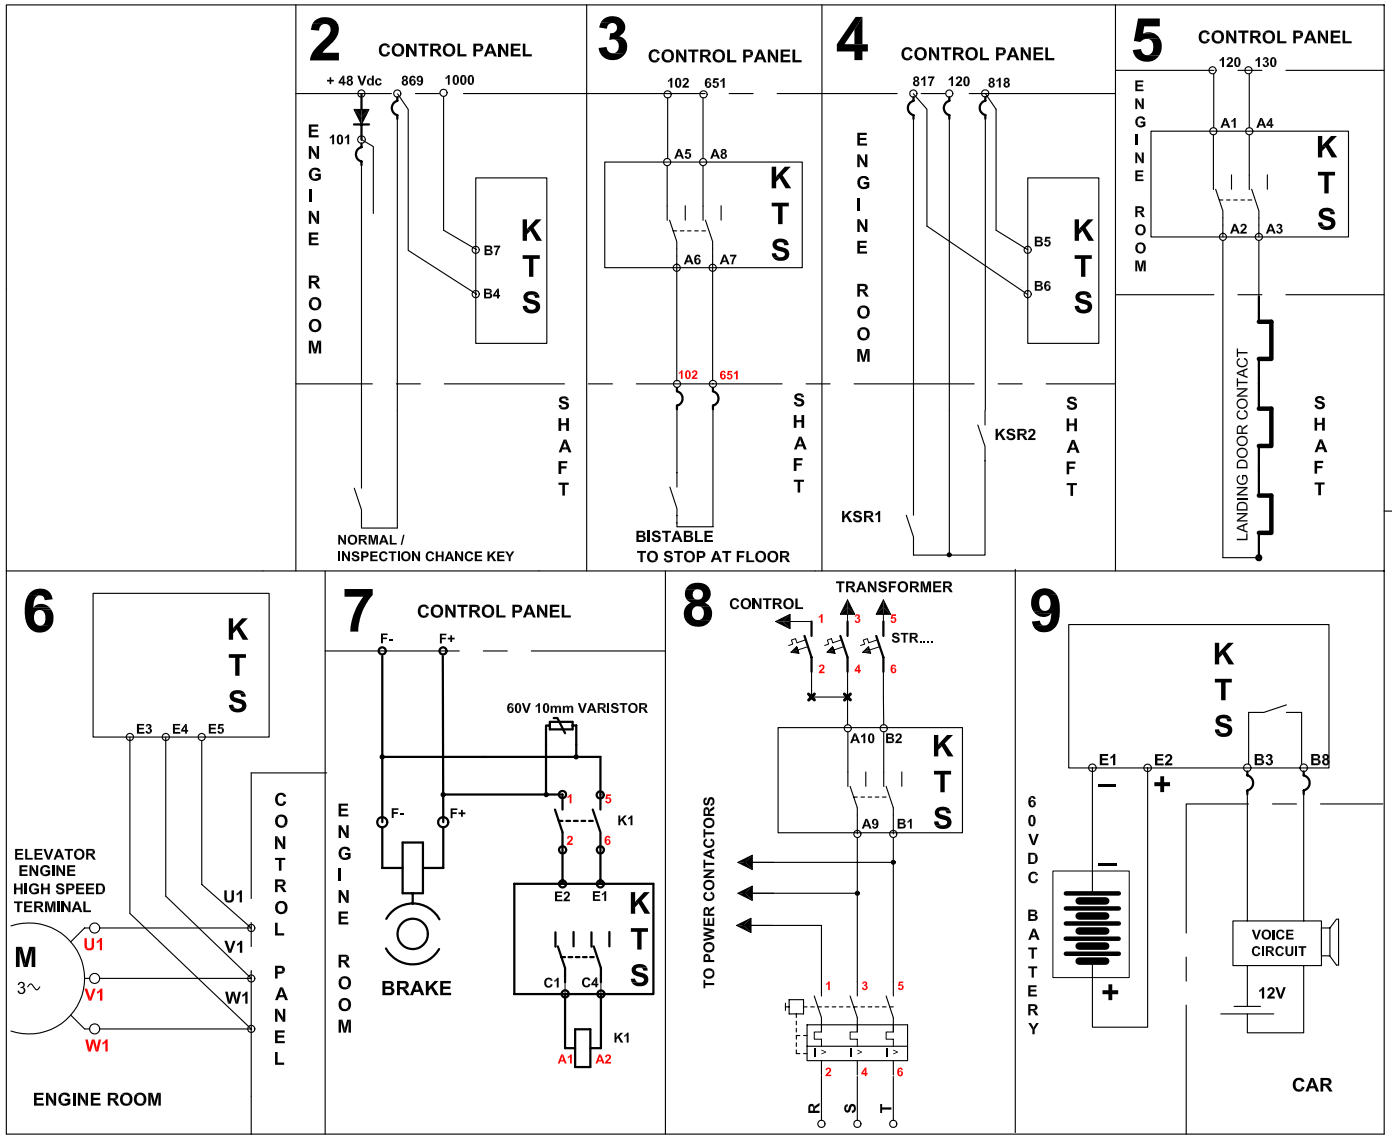

NORMAL APPLICATION

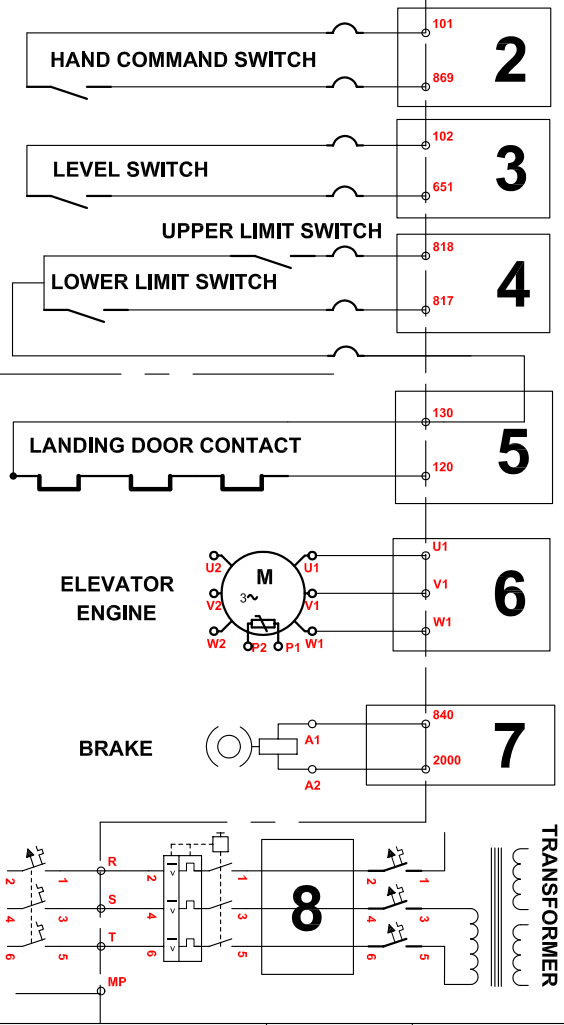

DATE	20.02.2003	HAKON MÜHENDİSLİK SAN.TİC.LTD.ŞTİ.	CUSTOMER	SUBJECT	Revision no 0 0
DRAW	H. AKSU	www.hakon.com.tr		THE ELEVATOR WITHOUT AUTOMATIC DOOR EMERGENCY RESCUE UNIT APPLICATION BRAKE BOBIN 60V DC	page no 1 / 1
CONTROL	O. Nuri ÇALIK	info@hakon.com.tr ikitelli / İSTANBUL			