


Trailer 24 V and 12 V branch protection


Positive-side protection path shown. Negative returns go to the matching negative bus and are omitted for clarity.

24 V house distribution

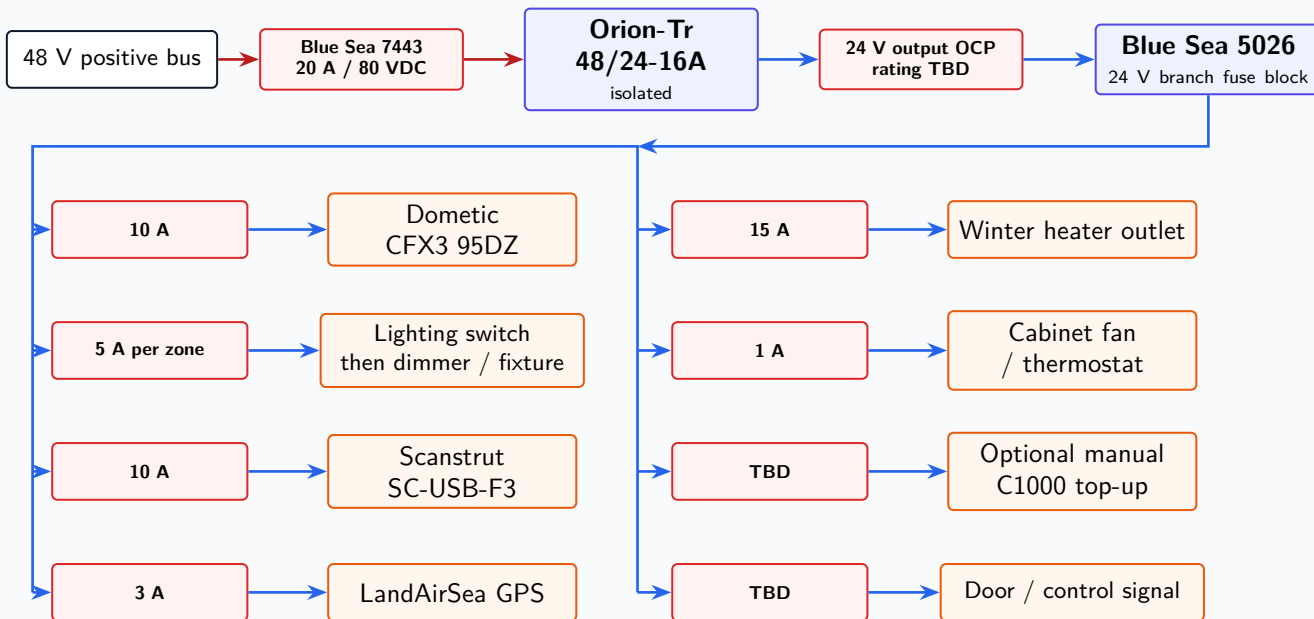

The red branch boxes are fuse positions inside the Blue Sea 5026. The lighting entry represents separate fused zones: INTERIOR, CURB FLOOD, ROAD FLOOD, NOSE FLOOD, REAR FLOOD, and AWNING. Confirm the final fuse-block allocation before wiring; do not hide multiple unfused branches behind one label.

Local 12 V auxiliary distribution

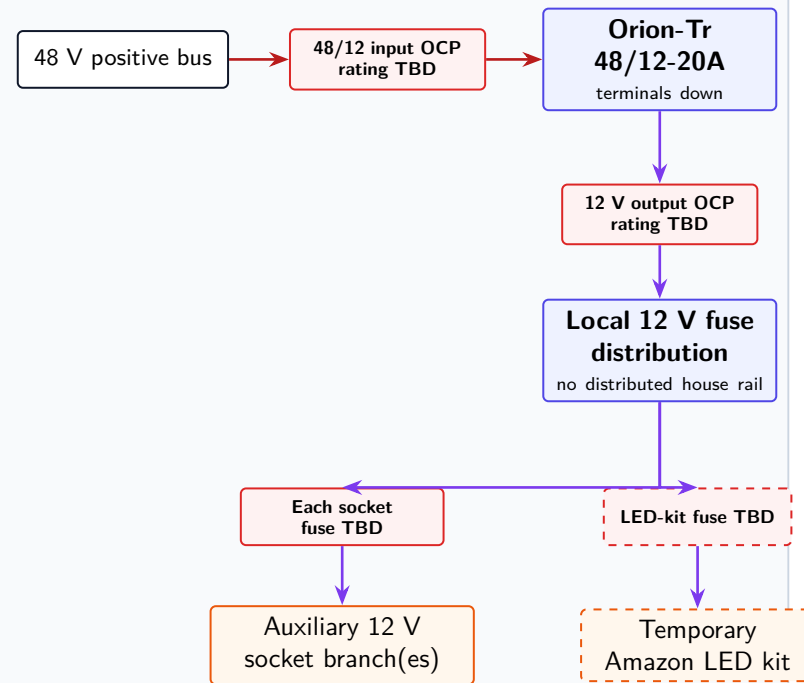

The red branch boxes are fuse positions in the local 12 V distribution. Each socket and the temporary light kit gets its own fuse. Ratings stay TBD until documented. Label this rail AUXILIARY 12 V ONLY; never backfeed another system.