

P7 PRO USER'S GUIDE



TRIPLE SCREEN

LAPTOP SCREEN EXTENDER

Friendly Reminders:

1. Ensure a secure connection of the Type-C data cable to the device interface.
2. When connecting to the laptop's USB-A port, an external adapter must be utilized to supply power to the device, ensuring its proper functionality.
3. When utilizing the full-featured TYPE-C interface for laptop connectivity, in the event of insufficient screen brightness or operational instability, it is recommended to employ an external adapter to provide power supply to the device.

Windows

Mac

Product Introduction

The P7 PRO is a desktop large-size dual-screen portable monitor featuring foldability, multi-scenario, and multi-application capabilities. It helps you quickly set up a personal mobile workstation, providing laptop users with perfect multi-screen mirroring and extended display solutions. This can boost work efficiency by up to 50%, enabling highly efficient multitasking.

The P7 PRO stand is easy to use. Prop it up on your desk, close to your computer screen, and it can be easily secured. It supports laptop shells up to 17.3 inches. The screen comes with its own built-in support stand, adjustable to different angles, offering varied experiences for professionals, office workers, gamers, stock traders, entrepreneurs, programmers, and students.

The P7 PRO screen allows you to adjust brightness, volume, contrast, and other parameters. It is equipped with a full-featured Type-C and PD power supply interface, enabling diversified video and data expansion without the need for a docking station. It supports lighting up two screens with a single cable, as long as your laptop (running macOS or Windows) has a Type-C port that supports both signal and power transmission. In addition, devices with a USB-A output interface (such as desktop computers, laptops) can also be connected directly. However, please note that an external power supply is required to light up the screen (using the included USB-A to Type-C cable to connect the monitor to the computer).

Finally, the P7 PRO screen supports 180-degree rotation, allowing you to freely adjust it to the optimal viewing angle for an ultimate visual experience.

Contents of Instruction

Product Attributes

1. Product host	1
2. Accessories	1
3. Parameters	1

Installation and stowing Mode

1. Opening mode	2
2. Outrigger stretch	2
3. Fixing mode of device	2
4. Opening mode when it is working	3
5. Stowing of dual screen	3

Key Definitions	3
-----------------------	---

Connection Mode

1. Driver Installation	4
2. Connect P7 PRO With Laptop	4

Audio Settings

1. Change sound settings of Windows 10 / Windows 11	6
2. Change sound settings of MAC OS PC	7


Display Mode

1. Windows 10 / Windows 11 Display Settings and Configuration	8
2. MacOS 13 Ventura Display Settings and Configuration	9

Transportation, Storage and Safety Information	10
--	----

Product Attributes

1. Product host

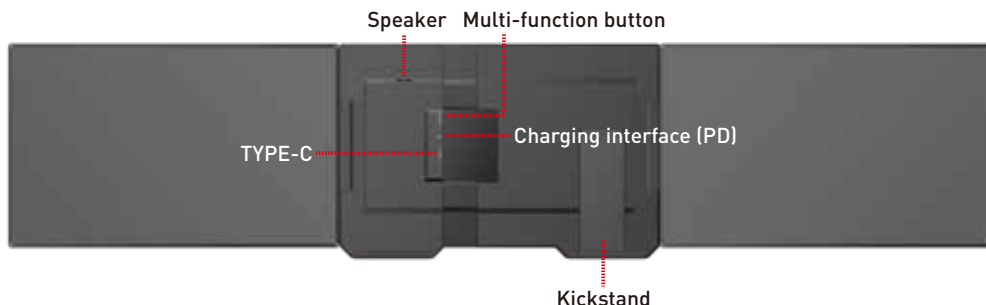

2. Accessories



Monitor



Bag



USB-C to USB-C *2



USB-A to USB-C *1



USB Flash Disk



Power Adapter

Note: The included adapter is only suitable for powering this product. Please do not use it to power other devices.


3. Parameters

Weight:	1.82Kg	Screen Size:	15.6 Inches
Size:	381*238.5*22.1MM	Average Brightness:	280cd/m ²
Refresh Rate:	60Hz	Type-C Input:	5V-20V / 5A Max
Resolution:	1920x1080	Type-C Output:	5V-20V / 4A Max
Speaker:	1	Ports:	TYPE-C*1+TYPE-C(PD Power Supply)

Installation and Stowing Mode


1. Opening mode

The screen is facing up

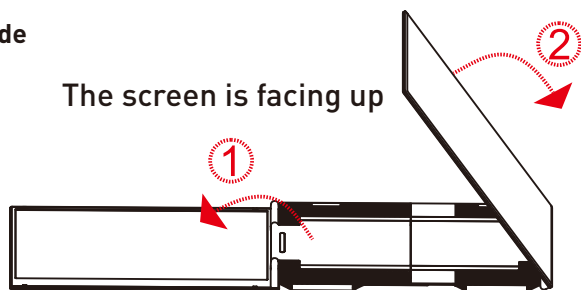


Opening Sequence: Slowly open the left screen first, then slowly open the right screen.
The screen supports a maximum folding angle of 180 degrees.

2. Outrigger stretch

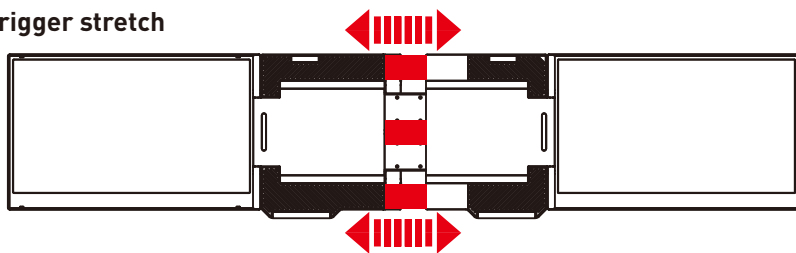


Compatible with the largest 17.3-inch laptop



3. Fixing mode of device

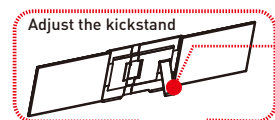

The maximum opening angle of the support rod is 90 degrees, and excessive folding will damage the support rod.

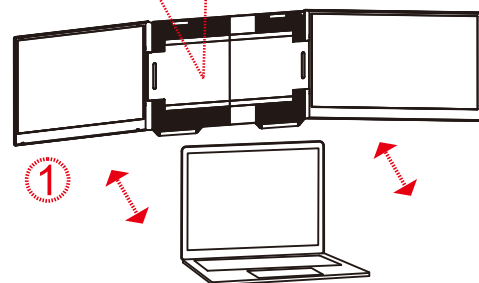


For optimal user experience, grip the central stand firmly before adjusting the screen angle.

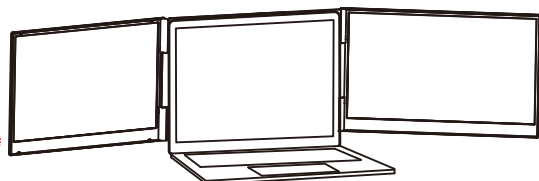

*Note: Open the stand, adjust it to the appropriate supporting angle, place it behind the computer screen, and complete the installation of the dual-screen support.


Installation and Storage

4. Opening Sequence

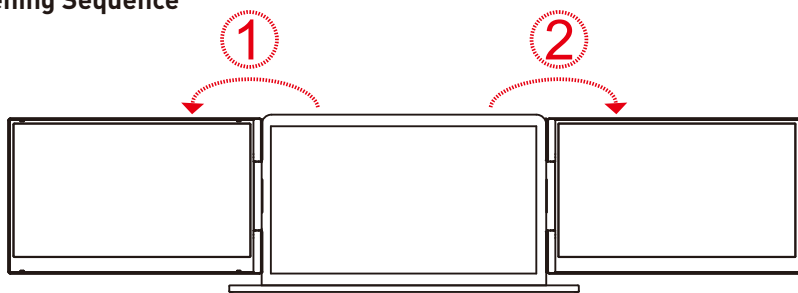


Note: Please follow the sequence of opening and closing to avoid damage of the device.


5. Closing Sequence

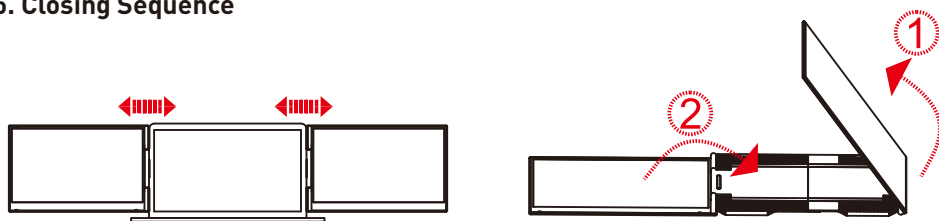

Note: Please follow the sequence of opening and closing to avoid damage of the device.




Key Definitions

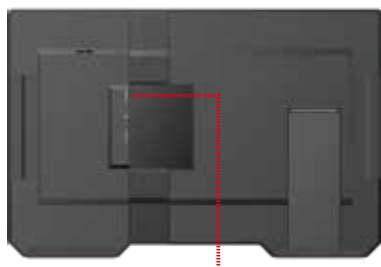

Menu/Selection/Confirmation Button
Press and hold for 2 seconds to return
Press and hold for 3 seconds to shut down


Upwards "Plus"
Volume Adjustment

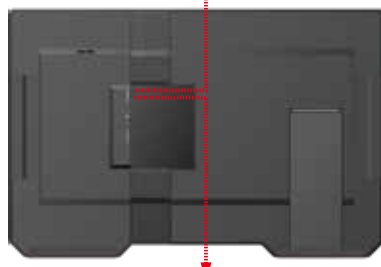

Downwards "Minus"
Backlight Adjustment

Driver Installation

1.Driver Installation for Computers

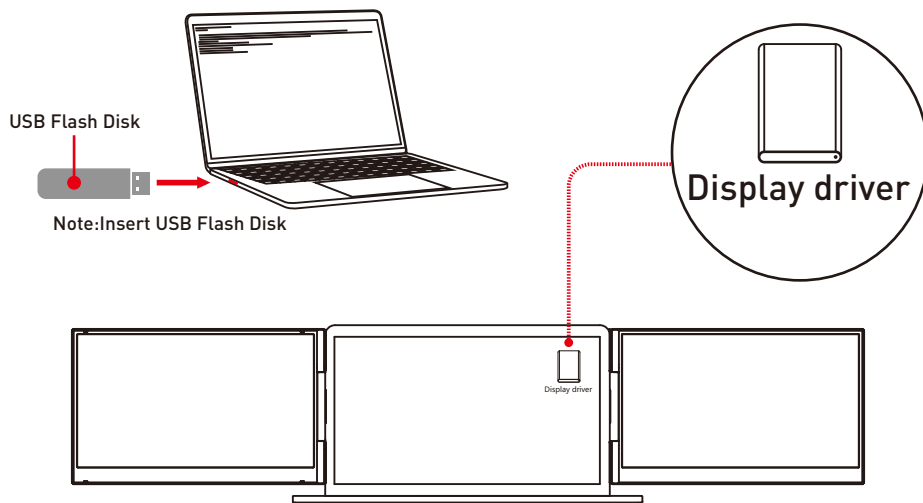

Note: When connected, your laptop will automatically install the necessary drivers. To manually install, run the SMIUSBdisplaysW.exe file located in the USB Flash Disk drive. For MacOS Systems, install the appropriate InstantView.exe driver and follow the on-screen instructions.

Connection Mode


2. Connect P7 PRO with Laptop

2.1 Type-C Connection:

If your laptop has a TYPE-C port, you can directly connect the P7 PRO to the laptop's TYPE-C port with a USB-C TO USB-C cable.



Hoe type terminal head, connected in the direction shown in the figure.

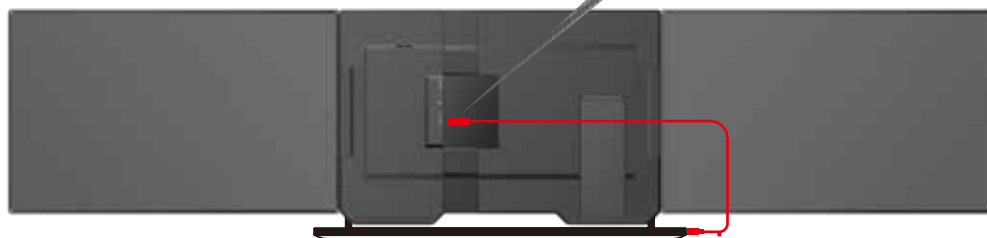


Note: Before using the product, install the driver first.



Connection Mode

If your laptop has a USB-A port, you can directly connect the P7 PRO to the laptop's USB-A port with a USB-A TO USB-C cable. please connect an external adapter to the product's PD interface for power supply. The adapter is included in the package.

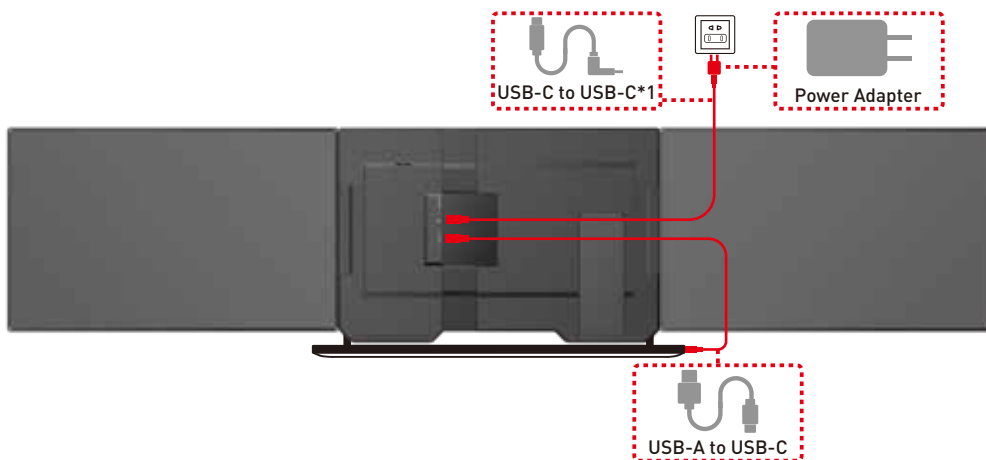


Note: The included adapter is only suitable for powering this product. Please do not use it to power other devices.

Note: If the product does not function properly or the brightness is insufficient during use, please connect a 5V/3A or higher adapter to the power supply interface of the product.

2.2 Product External Power Connection Method:

If your laptop's TYPE-C port has a power supply capacity of $\leq 10W$, please connect an external adapter to the product's PD interface for power supply. The adapter is included in the package.

The product requires a 5V/3A or higher external adapter connected to its power interface.

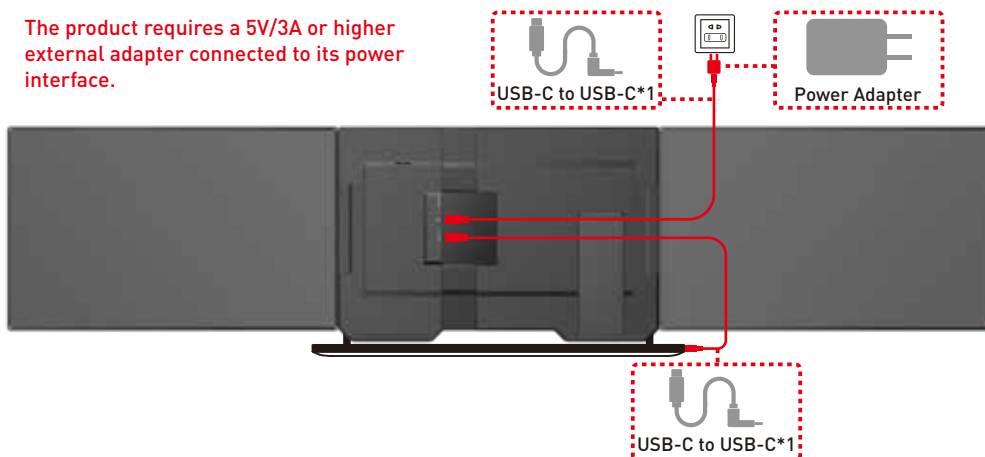

Note: If the product does not function properly or the brightness is insufficient during use, please connect a 5V/3A or higher adapter to the power supply interface of the product.

Note: The included adapter is only suitable for powering this product. Please do not use it to power other devices.

Audio Settings

1. Change sound settings of Windows 10 / Windows 11

1.1 Right click the loudspeaker icon located in the bottom-right corner.



1.2 Select "switch on sound " in pop-up dialog box.

1.3 Left click "turn on sound settings" and pop-up the box as provided.

Here users can set about sound

1. Master volume;
2. Select output device: { SMI USB Audio / Speaker };
3. Device attributes.



Audio Settings


2. Change sound settings of MAC OS PC

2.1. Choose Apple menu > System Settings



2.2. Click on "Output" and then choose the desired device from the list of available sound output options.

Output devices: { SMI USB Audio / Speaker }

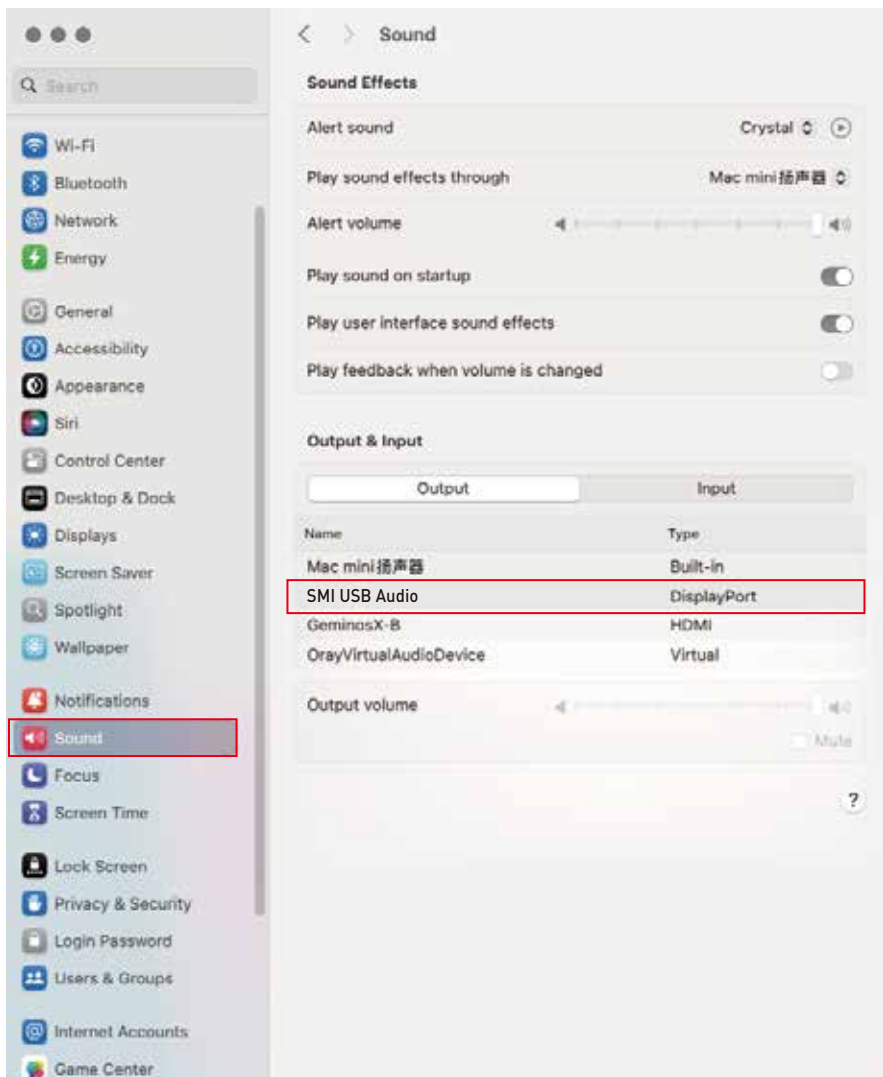


Display Mode

1. Windows 10 / Windows 11 Display Settings

1.1 Right-click a blank area of the desktop. Select 'Display Settings' from the pop-up dialogue box.

Left click "Display Settings" to open the settings dialogue box, shown in the figure:

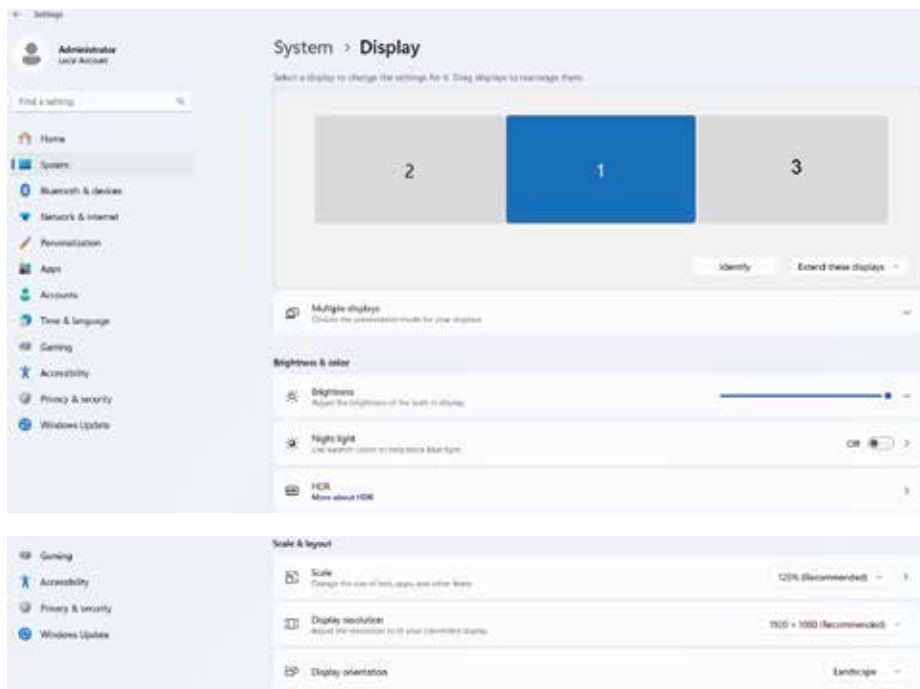

1.2 Under the "Rearrange displays" section, drag and drop each display to rearrange them according to their physical layout of your desktop. Scroll down to the bottom of the page to further configure the display for extended or mirrored mode.


2. MacOS 13 Ventura Display Settings

2.1 Enter the "System Preferences" menu



2.2 Configure your monitor

In this menu, you can set the resolution and mirror/extend the display you want.

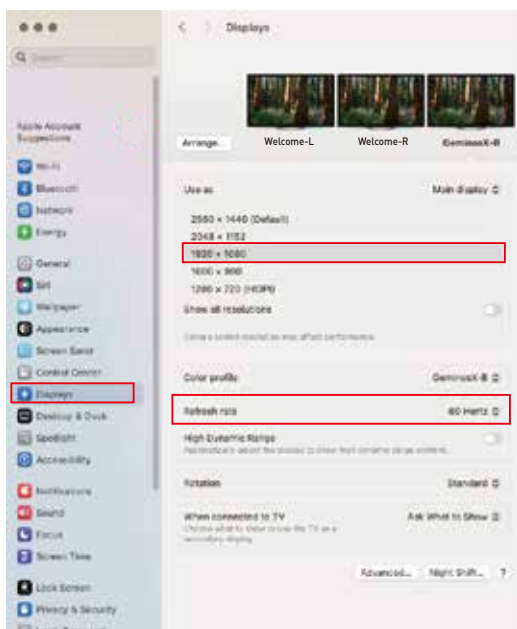

2.3 Arrange Displays

To rearrange displays, drag them to the desired position.

To mirror displays, hold Option key while dragging them on top of each other.

To relocate the menu bar, drag it to a different display.



Transportation, Storage and Safety Information

To ensure the safe and proper use of this product and prevent accidents such as electric shock or fire, please read and understand all use requirements and operation procedures before using.

Please adhere strictly to the following guidelines:

1. Before use, remove the protective film from the screen surface.
2. This product requires a DC power supply through an AC/DC power adapter. Ensure that the adapter is placed away from heat sources in a well-ventilated location. The AC power socket and AC power line should be adequately grounded to handle the current demands.
3. The DC power input required for this product is $5V-20V \pm 2V$.
4. Take precautions to prevent excessive humidity and dust accumulation, as they can lead to circuit corrosion and malfunction.
5. Avoid subjecting the screen surface to external forces or impacts.
6. Do not use sharp tools that may damage the screen surface.
7. This product is suitable for general business and domestic use, and it is recommended to operate it within an ambient temperature range of -20°C to 60°C . Please turn off the power when you stop using produce.
8. Remember to power off the device by disconnecting the power source when not in use.

