

P7 USER'S GUIDE



TRIPLE SCREEN

LAPTOP SCREEN EXTENDER

Friendly Reminders:

1. Ensure a secure connection of the cable to the device interface.
2. This product seamlessly supports all Type-C functions, including charging and video, through a single integrated cable. In the event of screen power issues or restart difficulties, kindly plug external power of 5V/3A (20V/5A max).

Windows

Mac

Android

Product Introduction

P7 is a desktop large-size triple-screen portable monitor with foldable, multiscene, and multi-application functions. It helps you quickly set up a personal mobile workstation, providing laptop users with perfect multi-screen mirroring and extended display solutions. This can boost work efficiency to 300%, enabling highly efficient multitasking. It supports screen sharing for some brands like Samsung and Huawei, and is also compatible with the mirror mode of smartphone systems for data, audio and video transmission.

The P7 stand is easy to use. Prop it up on your desk, close to your computer screen, and it can be easily secured. It suits all sizes of laptops. The screen comes with its own built-in support stand, adjustable to different angles, offering varied experiences for professionals, office workers, gamers, stock traders, entrepreneurs, programmers, and students.

The P7 screen allows adjustment of parameters like brightness, volume, and contrast. It is equipped with full-featured Type-C ports with PD power delivery, enabling video and data expansion without the need for a docking station. Simply connect to a laptop's full-featured Type-C port (which has the symbol of Thunderbolt ⚡ or DisplayPort ) for seamless connection and display. Additionally, devices with an HDMI output port (such as desktop computers, laptops, mini PCs, set-top boxes, game consoles, etc.) can also be connected directly. Please note: the screen requires an external power source to function (use the included custom HDMI-to-Type-C cable to connect the monitor to the HDMI ports of your devices).

Finally, the P7 screen supports 180-degree rotation, allowing you to freely adjust it to the optimal viewing angle for an ultimate visual experience.

Contents of Instruction

Product Attributes

1. Product host	1
2. Accessories	1
3. Parameters	1

Installation and stowing Mode

1. Opening mode	2
2. Outrigger stretch	2
3. Fixing mode of device	2
4. Opening mode when it is working	3
5. Stowing of dual screen	3

Key Definitions	3
-----------------------	---

Connection Mode

1. Connect P7 With Laptop	4
2. Device power supply connection mode	6

Audio Settings

1. Change sound settings of Windows 10 / Windows 11	7
2. Change sound settings of MAC OS PC	8


Display Mode

1. Windows 10 / Windows 11 Display Settings and Configuration	9
2. MacOS 13 Ventura Display Settings and Configuration	10

Transportation, Storage and Safety Information	11
--	----

Product Attributes

1. Product host

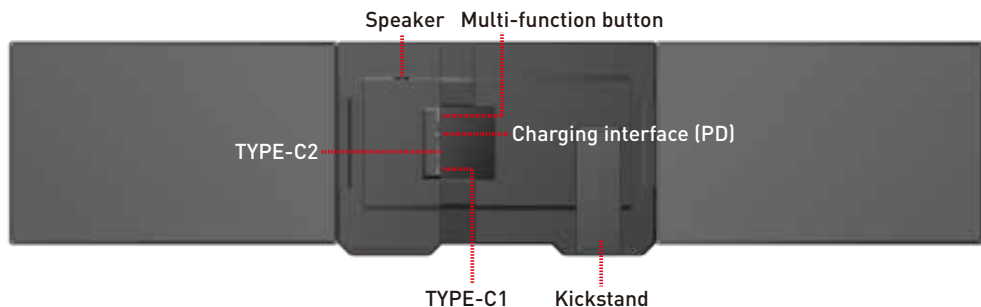

2. Accessories



Monitor



Bag



USB-C to USB-C



USB-A to USB-C



HDMI to TYPE-C



Power Adapter

Note:

1. The included adapter is only suitable for powering this product. Please do not use it to power other devices.


3. Parameters

Weight:	1.82Kg	Screen Size:	15.6 Inches
Size:	381*238.5*22.1MM	Average Brightness:	280cd/m ²
Refresh Rate:	60Hz	Type-C Input:	5V-20V / 5A Max
Resolution:	1920x1080	Type-C Output:	5V-20V / 4A Max
Speaker:	1	Ports:	TYPE-C*2+TYPE-C(PD Power Supply)

Installation and Stowing Mode


1. Opening mode

The screen is facing up

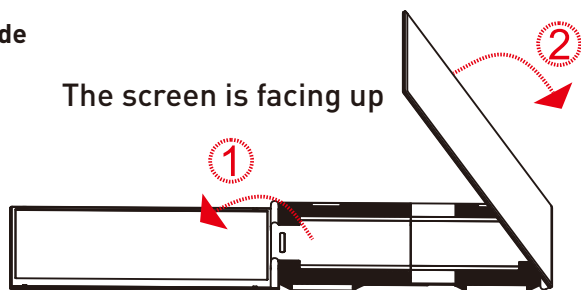


Opening Sequence: Slowly open the left screen first, then slowly open the right screen.
The screen supports a maximum folding angle of 180 degrees.

2. Outrigger stretch

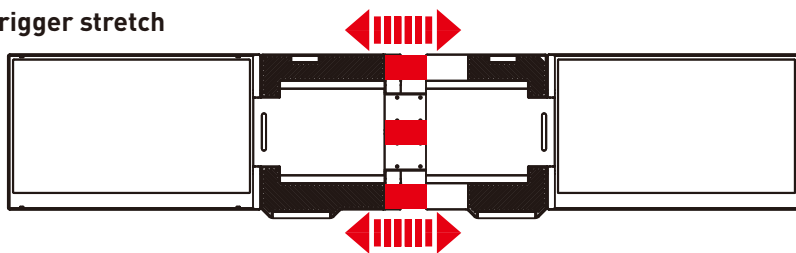


Compatible with all sizes of laptops



3. Fixing mode of device

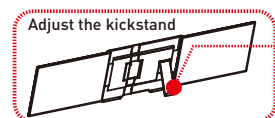

The maximum opening angle of the support rod is 90 degrees, and excessive folding will damage the support rod.

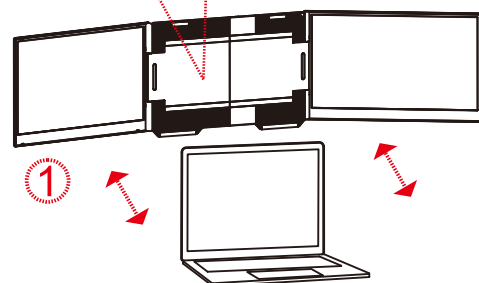


For optimal user experience, grip the central stand firmly before adjusting the screen angle.

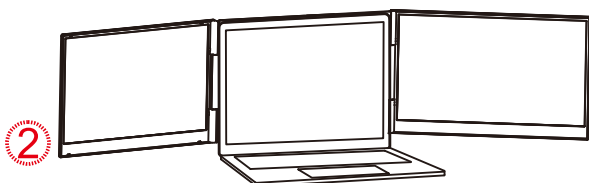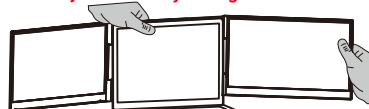

*Note: Open the stand, adjust it to the appropriate supporting angle, place it behind the computer screen, and then complete the installation of the triple screen extender.


Installation and Storage

4. Opening Sequence

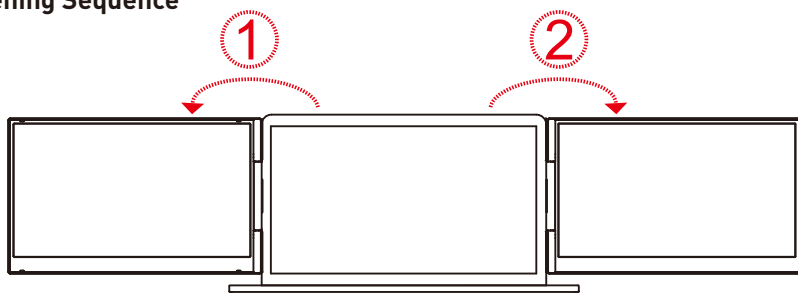


Note: Please follow the sequence of opening to avoid damage of the device.


5. Closing Sequence

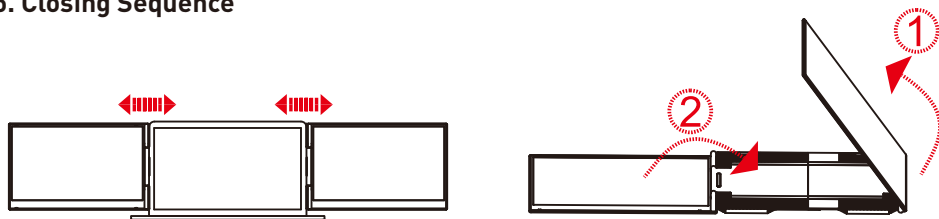

Note: Please follow the sequence of closing to avoid damage of the device.

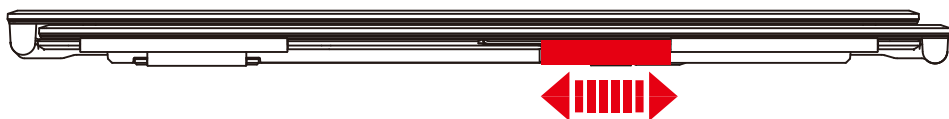


Key Definitions

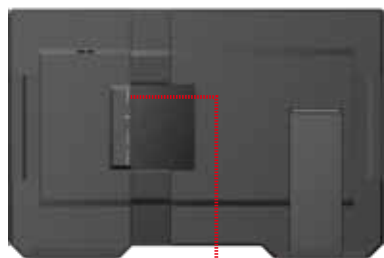

Menu/Selection/Confirmation Button
Press and hold for 2 seconds to return
Press and hold for 3 seconds to shut down

Upwards "Plus"
Volume Adjustment

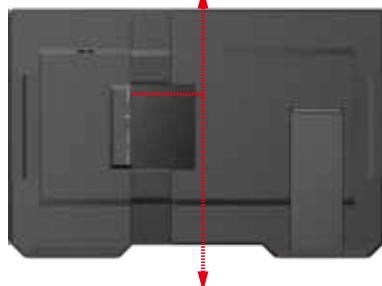

Downwards "Minus"
Backlight Adjustment

Connection Mode

1. Connect P7 with Laptop

To start, determine how many video output ports your laptop has. It is important to note that only full-featured USB Type-C and HDMI ports are compatible with this setup. Full-featured Type-C ports can transfer power, video, and data simultaneously. Below are the available options based on your laptop's ports:

1.1 Two Full-Featured Type-C Connection:

Please note that two USB-C to USB-C cables will be required.




Full-Featured USB-C



Not
Full-Featured USB-C



Hoe type terminal head, connected in the direction shown in the figure.

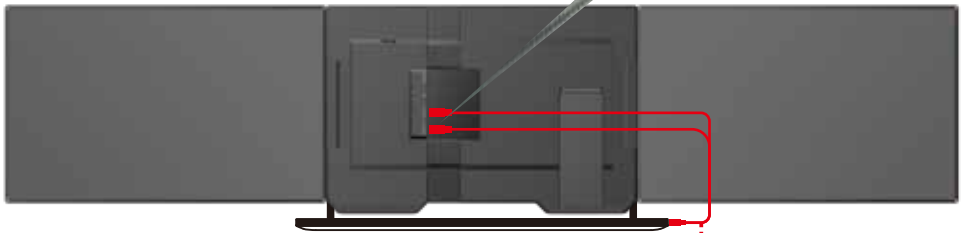


Note:

1. If the product does not function properly or the brightness is insufficient during use, please connect a 5V/3A or higher adapter to the charging interface of P7.
2. The included adapter is only suitable for powering this product. Please do not use it to power other devices.
3. If you need to power your laptop through the P7 screen extender during use, please connect an external PD adapter 65W or higher (not included) to the P7's power port and connect P7 to the Type-C port of your laptop using a USB-C to USB-C cable.

Connection Mode

1.2 One Full-Featured Type-C and One HDMI Connection:

Please note that you will need one USB-C to USB-C cable and one HDMI cable.

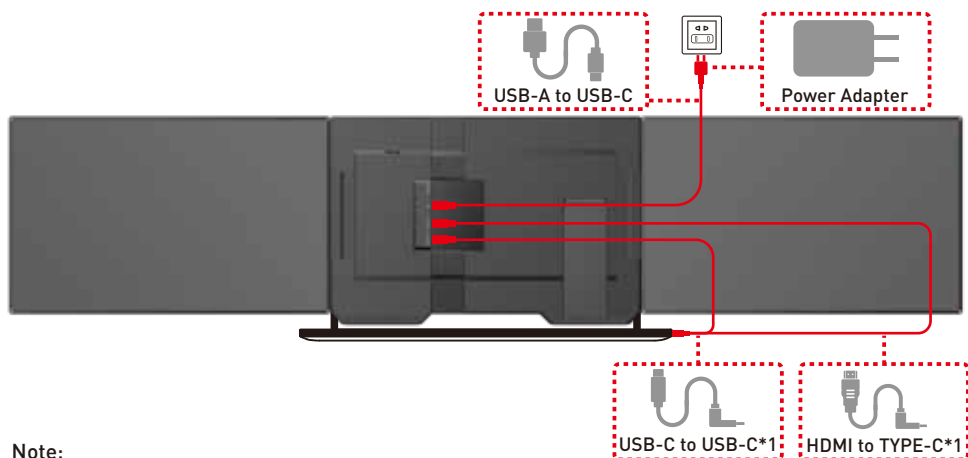


Note:

1. The included adapter is only suitable for powering this product. Please do not use it to power other devices.
2. If the product does not function properly or the brightness is insufficient during use, please connect a 5V/3A or higher adapter to the power supply interface of the product.

1.3 No Full-Function Type-C Connection:

In this case, your laptop must have two HDMI ports. Please use the HDMI to Type-C cable for connection, and P7 must be powered by an external 5V/3A or higher adapter.

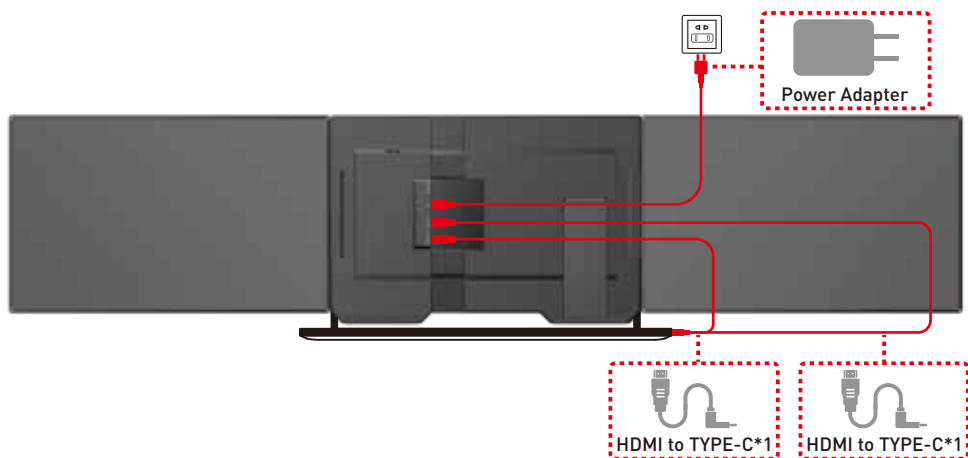

Connection Mode

2. Connect P7 with Mobile Phone with Other Devices



Mobile phone connection mode
(External power supply required)



Switch connection mode
(External power supply required)

Note: When connecting to the Nintendo Switch, a PD power supply must be used to power the device for proper video output

Audio Settings

1. Change sound settings of Windows 10 / Windows 11

1.1 Right click the loudspeaker icon located in the bottom-right corner.




1.2 Select "switch on sound" in pop-up dialog box.

1.3 Left click "turn on sound settings" and pop-up the box as provided.

Here users can set about sound

1. Master volume;
2. Select output device: { Welcome / Speaker };
3. Device attributes.

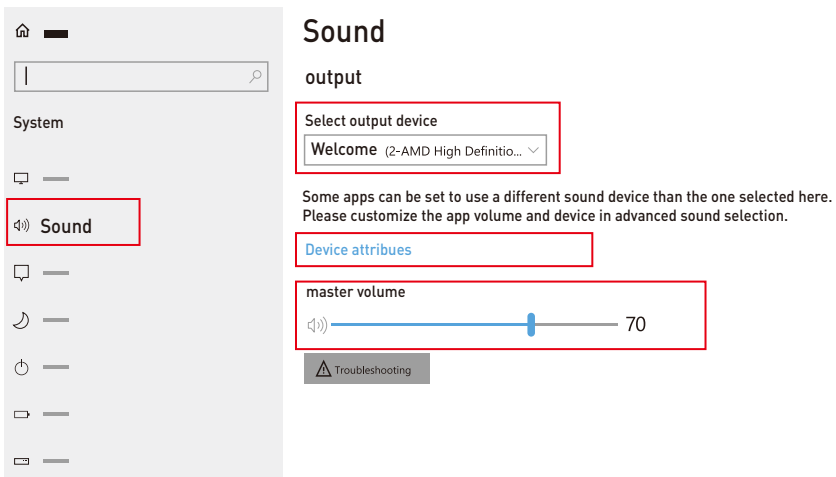

Audio Settings


2. Change sound settings of MAC OS PC

2.1. Choose Apple menu > System Settings



2.2. Click on "Output" and then choose the desired device from the list of available sound output options.

Output devices: { Welcome / Speaker }

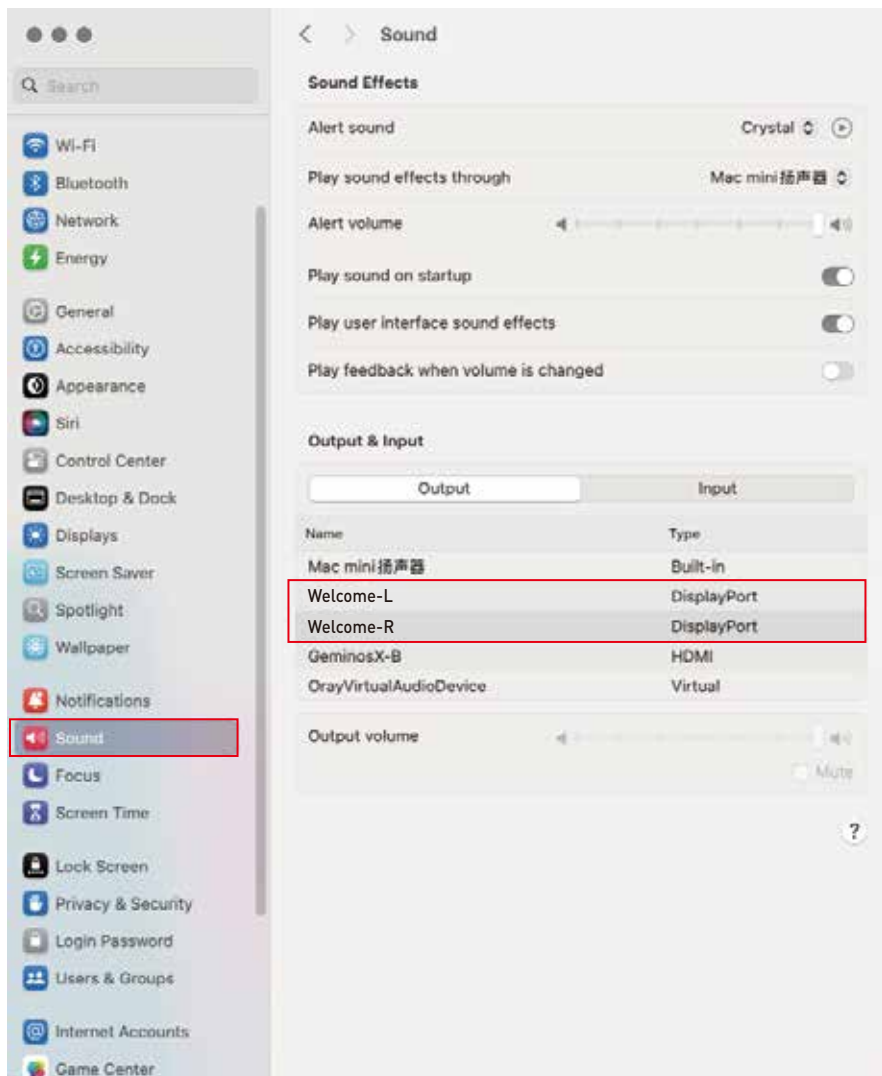


Display Mode

1. Windows 10 / Windows 11 Display Settings

1.1 Right-click a blank area of the desktop. Select 'Display Settings' from the pop-up dialogue box.

Left click "Display Settings" to open the settings dialogue box, shown in the figure:

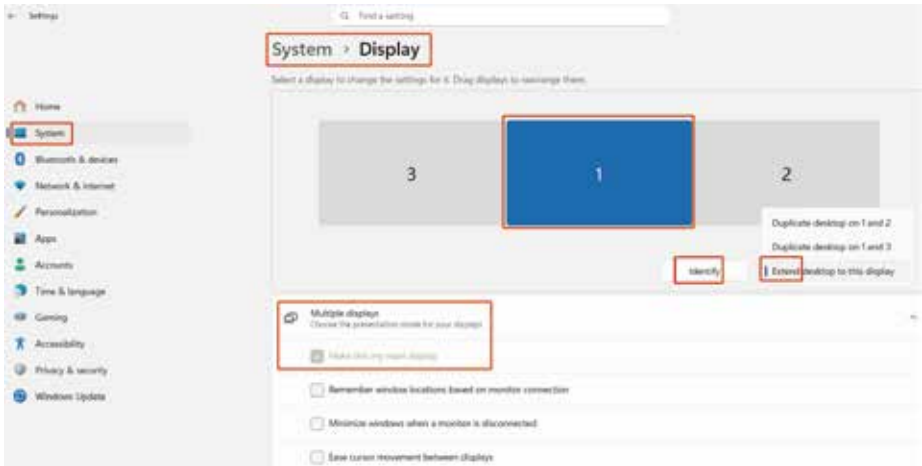

1.2 Under the "Rearrange displays" section, drag and drop each display to rearrange them according to their physical layout of your desktop. Scroll down to the bottom of the page to further configure the display for extended or mirrored mode.


2. MacOS 13 Ventura Display Settings

2.1 Enter the "System Preferences" menu



2.2 Configure your monitor

In this menu, you can set the resolution and mirror/extend the display you want.

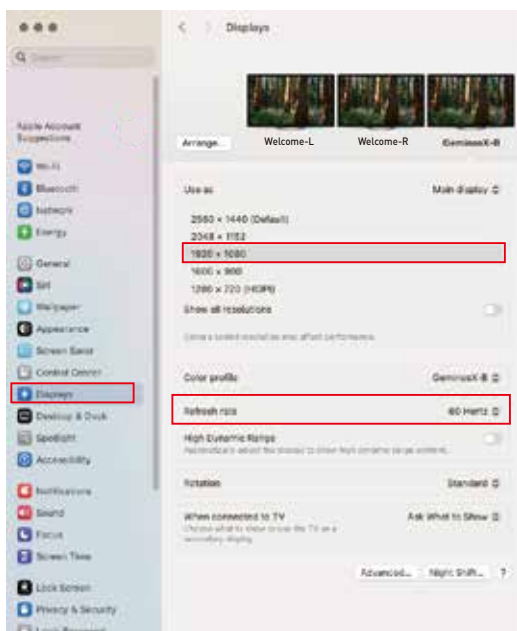

2.3 Arrange Displays

To rearrange displays, drag them to the desired position.

To mirror displays, hold Option key while dragging them on top of each other.

To relocate the menu bar, drag it to a different display.



Transportation, Storage and Safety Information

To ensure the safe and proper use of this product and prevent accidents such as electric shock or fire, please read and understand all use requirements and operation procedures before using.

Please adhere strictly to the following guidelines:

1. Before use, remove the protective film from the screen surface.
2. This product requires a DC power supply through an AC/DC power adapter. Ensure that the adapter is placed away from heat sources in a well-ventilated location. The AC power socket and AC power line should be adequately grounded to handle the current demands.
3. The DC power input required for this product is $5V-20V \pm 5V$.
4. Take precautions to prevent excessive humidity and dust accumulation, as they can lead to circuit corrosion and malfunction.
5. Avoid subjecting the screen surface to external forces or impacts.
6. Do not use sharp tools that may damage the screen surface.
7. This product is suitable for general business and domestic use, and it is recommended to operate it within an ambient temperature range of -20°C to 60°C . Please turn off the power when you stop using produce.
8. Remember to power off the device by disconnecting the power source when not in use.

