
Height Adjustable Desk

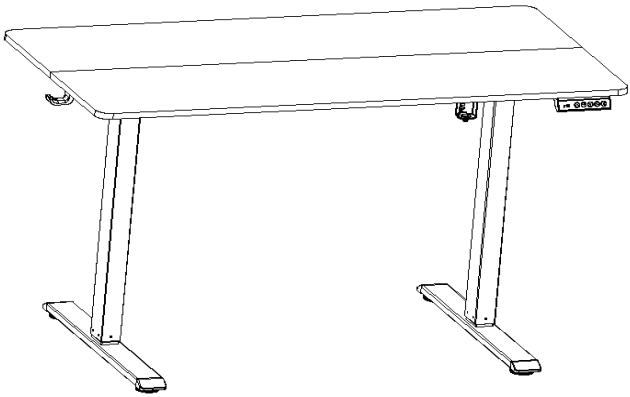

For more details, product information, and installation instructions, please scan the QR code

JG-HAT-SM01-R01


User Manual

Specifications

Number of Stage Column	2
Max. Load	60 kg (132.27 lb)
Max. Speed	18mm/s (0.71 " /s)
Input Voltage	AC 100 V - 240 V
Numerical Height Display	720-1200 mm (28.35 " - 47.25 ")
Duty Cycle	10% (2 Min ON, 18 Min OFF)
Working Temperature	32°F - 104°F (0°C - 40°C)

Parts List


A(4pcs)	B(19pcs)	C(4pcs)	D(4pcs)	E(8pcs)	F1(1pcs)
					
M6-10	ST5-14	Wooden wedges	M6-12	M6-30	Hex key-4
F2(1pcs)	J(2pcs)				
					
Cable tie	T-Connector				

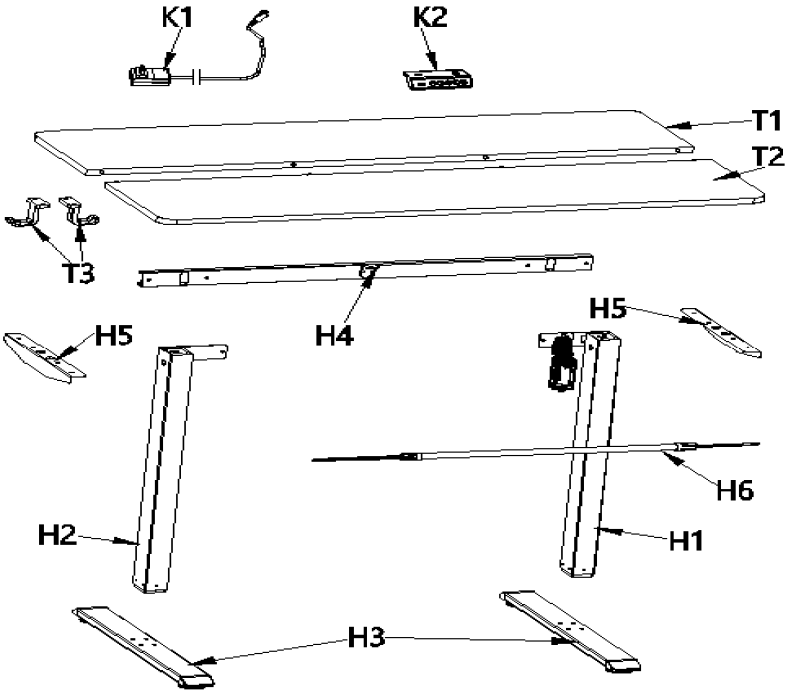

This manual primarily describes product installation and operation. Illustrations may differ from the actual product.


Step 1

A(4pcs)	F1				
					

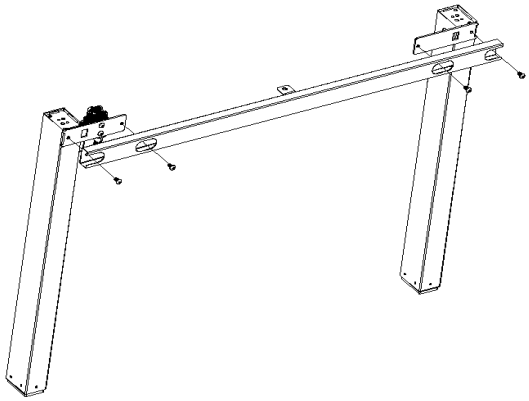


Step 2

D(4pcs)	F1				
					

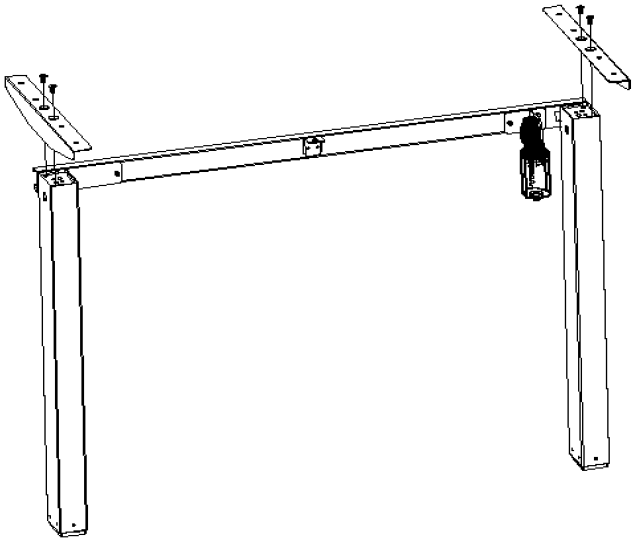


Step 3


E(8pcs)	F1				
					

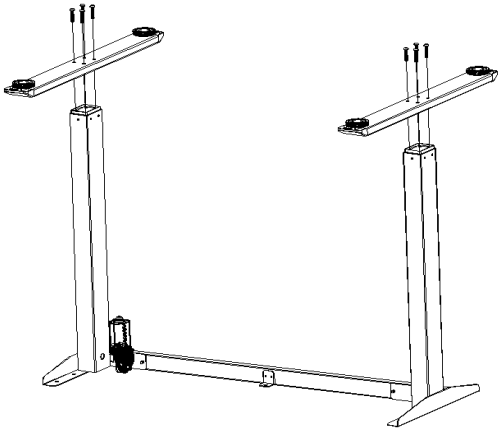


Step 4

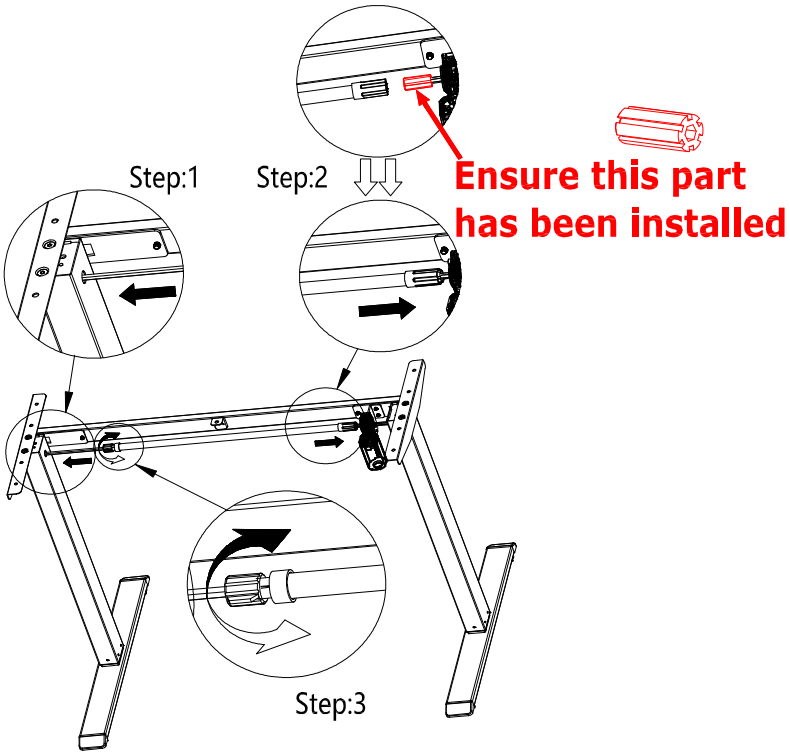


Step 5					
B(8pcs)	F1	C(4pcs)	J(2pcs)	T3（2pcs）	
					

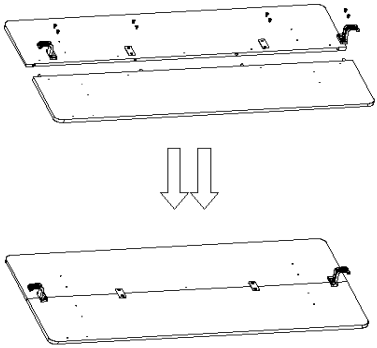

Step 6					
B(11pcs)	F1	F2(1pcs)			
					

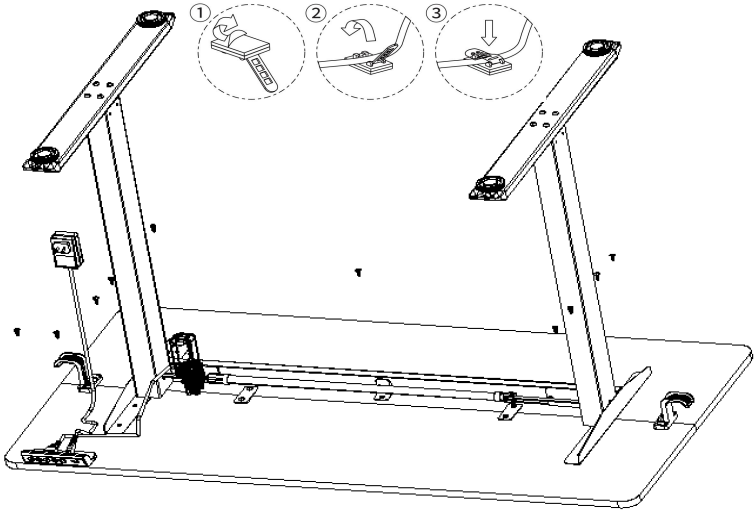

Controller Instructions

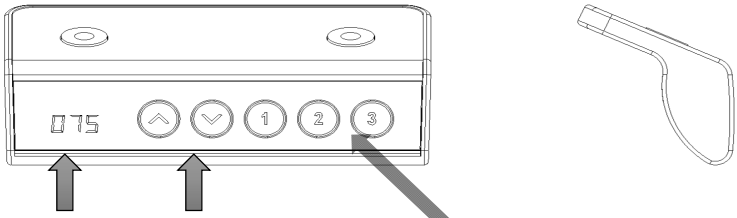

Display Lifting Buttons Memory Function

· Product First Use

Before using the desk for the first time, perform a reset operation.

· Height Adjustable Function

Press the " ^ " or " v " button to adjust the height . The LED display shows the current height .

· Height Memory Function:

a) Press and hold the button "1" for more than 2 seconds, the current height is successfully saved to the button "1".

b) Short press button "1" and the desktop will run to the height saved in the button "1".

Note: Buttons and have the same operation as Button "1".

· Reset Operation:

When "E10" is displayed or the desktop is at the lower limit position, press and hold the button "v" for more than 5 seconds until "Res" is displayed and release the key, the system has entered the reset preparation state, press and hold the button "v" again , the desktop begins to descend to the bottom of the machine and bounces to a certain height. After the reset is completed, the lowest height is displayed, and the button "v" can be released.

· Anti-Collision Protection:

During the lifting process of the stand desk, it will stop lifting immediately when it is hit by collision, vibration or the desktop is tilted, and it will automatically stop after a certain distance of reverse movement. It should be ensured that the stand desk will not vibrate greatly, hit obstacles or tilt before running it.

· Overheating Protection:

"Hot" is displayed. When the desktop is continuously raised and lowered too frequently, it will cause the movement to overheat. To avoid damage to the movement, it will be forced to prohibit lifting and lowering operations within 15 minutes.

· Motor Abnormal Protection

LED shows "E10", it should be powered off, check and ensure that the connection between the motor and the Handset is reliable, and the motor speed signal can be correctly transmitted to the controller, then power on again, and operate the desk to reset.

Troubleshooting

This list is used for checking and solving common faults and errors . Please contact the manufacturer if problem you encounter is not on the list below.

Problem	Solution
Pressing the up or down button has no response.	1. Check whether the wire connection is normal. 2. Try to reset the operation. 3. Contact the dealer or manufacturer.
Slow rise speed.	1. Check whether it is overloaded. 2. Contact the dealer or manufacturer.
1. Can only go down, not up. 2. Bracket sliding down.	1. Check whether it is overloaded. 2. Try to reset the operation. 3. Contact the dealer or manufacturer.
Often automatically enters the reset state.	1. Check whether it is overloaded. 2. Contact the dealer or manufacturer.
Motor work timeout.	Use it after 15 minutes of suspension.
The lifting distance is not accurate	1. Try to reset the operation. 2. Contact the dealer or manufacturer.