


cy83rd3ck — PCB FLOORPLAN (CONCEPT, NOT ROUTED)

FRONT-FACING (switches, sliders, display connectors)BACK-SIDE (compute, logic ICs, power, connectors)

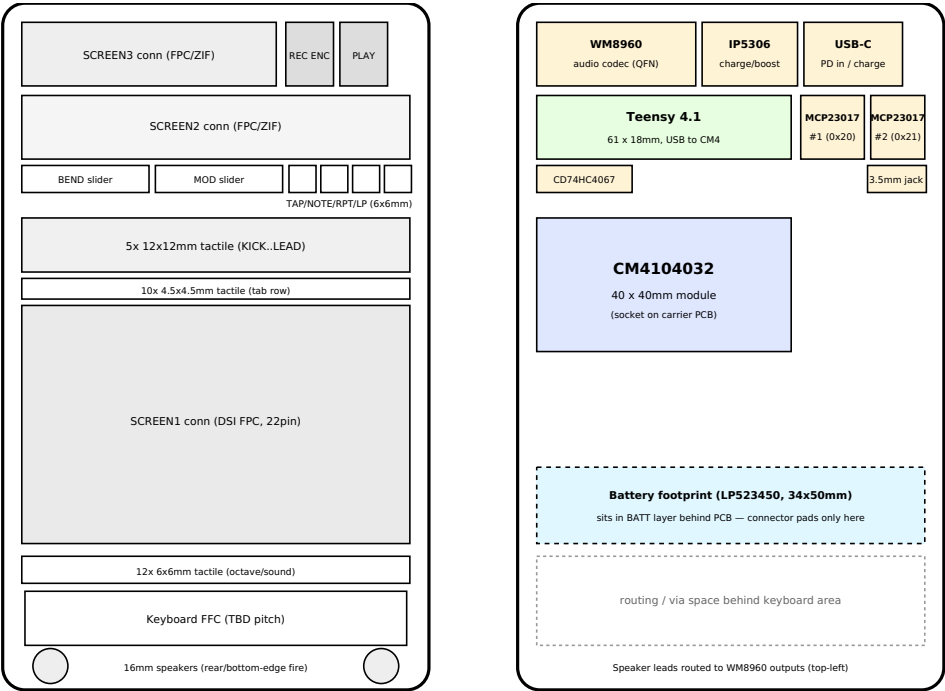

Notes: This is a single PCB with components on both sides — front side carries switch/slider footprints and display FPC/ZIF connectors aligned to the front-panel layout; back side carries the CM4 module socket, Teensy 4.1, audio codec, power management, GPIO expanders/mux, and the USB-C/3.5mm connectors (positioned at the top edge for enclosure cutout access). The CM4 (40x40mm) is placed behind the track-button row where there's a large open area; Teensy 4.1 (61x18mm) sits behind Screen 2. The battery sits in its own depth layer behind the PCB — only its connector pads are on the PCB, in the area behind Screen 1's lower portion. Keyboard ribbon connector placement is TBD pending donor inspection.

Next step for an actual routable board: import this floorplan into KiCad, place real footprints (CM4 castellated-edge socket, Teensy headers, SSOP/QFN/SOIC packages for the ICs, FPC/ZIF connectors, switch/slider THT or SMD footprints), then route power (5V/3.3V rails) and signal nets (SPI, I2C, GPIO matrix, analog) per the pin-wiring table.