STATEMENT

H & B GROUP, INC.

DBA NISSAN OF BAKERSFIELD

2800 Pacheco Road BAKERSFIELD, CA 93313 (661) 835-8600

KBAK-TV

1901 WESTWIND DR BAKERSFIELD, CA 93301



DATE 30 APR 2016

2200-5552

PLEASE DETACH AND MAIL

WITH REMITTANCE TO:

NISSAN OF BAKERSFIELD


STATEMENT REMITTANCE

2800 Pacheco Road BAKERSFIELD, CA 93313

SOURCES: 3 SERVICE SALE - 4 PARTS SALE - 5 PAYMENT - 11 ADJUSTMENT

PLEASE CIRCLE INVOICES BEING PAID

DATE	SOURCE	INVOICE	REFERENCE	DESCRIPTION	AMOUNT	AGE IN DAYS	DATE	INVOICE	BALANCE
04-27	3	NICQ140221	NICQ140221	36	79.09	3	04-27	Q140221	79.09
		6	5110 Bandra	585					
'849 Q. (08/14)		July 2018	an						
SF677849 Q (08/14)									
CUF	RENT	OVER 30 I		OVER 60 DAYS	ACCOUNT NUMBE		DATE		PAY THIS AMOUNT
OVER	79.0 90 DAYS 0.0	OVER 120 DAYS		0.00 NEW BALANCE 79.09	2200-5552 STATEMENT DATE 30 APR 2016		04-30	2200-5552	79.09

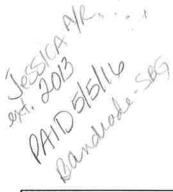



www.NissanofBakersfield.com

Phone: (661) 835-8600

2800 Pacheco Road Bakersfield, CA 93313

B.A.R. # ARD038916 E.P.A. # CAD982487415

CELL: 661-979-1226 CUSTOMER NO ADVISOR 120109 04/27/16 1235 5005 NICQ140221 ARIEL RUBIO STOCK NO LICENSE NO. COLOH 15,911 /sv KBAK-TV YEAH / MAKE (MODE. DELIVERY DATE DELIVERY MILES 1901 WESTWIND DR 14/NISSAN/NV/ PETE CAPRA SELLING DEALER NO PRODUCTION DATE BAKERSFIELD, CA 93303 1 N 6 A F 0 L Y 6 E N 1 0 4 8 7 5 04/27/16 RESIDENCE PHONE BUSINESS PHONE COMMENTS 661-327-7955 Mo: 15911 JOB# 1 CHARGES-----LABOR-----IMPORTANT J# 1 OONIZOIL *OIL CHANGE TECH(S):9999 20.28 CUSTOMER REQUESTS OIL CHANGE You may receive a OIL CHANGE DUE questionnaire from the PERFORMED OIL CHANGE AND REPLACED AIR FILTER manufacturer regarding this service visit. If for any reason PARTS-----QTY---FP-NUMBER-------DESCRIPTION-----LIST PRICE-UNIT PRICE-GENUINE NISSAN you cannot grade us 999BK - 05W30NW 3.00 3.00 21.00 11026-JA00A WASHER DRAIN 0.18 0.180.18 "Completely Satisfied" 15208-9E01A OIL FILTER 8.53 8.53 8.53 please contact our AF54M-7S00JNW 25.00 AIR FILTER-VALUE 25.00 25.00 Service Manager. TOTAL - PARTS 54.71 (661) 835-8600 JOB# 1 TOTALS-----LABOR 20.28 54.71 PARTS **SERVICE DEPT HOURS:** 74.99 JOB# 1 JOURNAL PREFIX NICQ JOB# 1 TOTAL JOB# 2 CHARGES-----Monday - Friday I AROR - - - -7:00am to 6:00pm J# 2 OONIZXINSP MULTIPOINT INSPECTIO TECH(S):9999 0.00 Saturday: 8:00am to 5:00pm MULTI-POINT INSPECTION REQUIRED MULTI-POINT INSPECTION REQUIRED MULTI-POINT INSPECTION PERFORMED Thank You For Your Business! 0.00 JOB# 2 JOURNAL PREFIX NICQ JOB# 2 TOTAL

TOTAL LABOR.... 20.28 TOTAL PARTS.... 54.71 0.00 TOTAL SUBLET... TOTAL G.O.G.... 0.00 TOTAL MISC CHG. 0.00 TOTAL MISC DISC 0.00 TOTAL TAX..... 4.10

INVOICE \$ 79.09

THANK YOU FOR YOUR BUSINESS!!

(08/14)

ø

CC721851

[] CASH

[] VISA

PAGE 1 OF 1

[] AMER XPRESS

CUSTOMER SIGNATURE

CUSTOMER HEREBY ACKNOWLEDGES RECEIVING

[] CHECK CK NO. [

[] OTHER

[] MASTERCARD

ORIGINAL ESTIMATE OF \$80.00 (+TAX)

CUSTOMER COPY

[] DISCOVER

[] CHARGE

[END OF INVOICE] 01:52pm

STATEMENT OF DISCLAIMER

The factory warranty constitutes all of the warranties with respect to the sale of this item/items. The Seller hereby expressly disclaims all warranties, either express or implied, including any implied warranty of merchantability or fitness for a particular purpose. Seller neither assumes nor authorizes any other person to assume for it any liability in connection with the sale of the item/items.

The Reynolds and Reynolds Company ERAINTINV14E SF677846 Q (01/15)

NOTICE TO CUSTOMER: PLEASE READ IMPORTANT INFORMATION ON REVERSE SIDE

VEHICLE INSPECTION SHEET

CHECKED AND OKAY MAY NEED FUTURE ATTENTION REQUIRES IMMEDIATE ATTENTION INTERIOPS/EXTERIOR Windshield Visite / Fut Lights / Turn Signate / Brake Lights / Head Lights / Turn Signate / Brake Lights / Head Lights / Turn Signate / Brake Lights / Head Lights / Head Lights / Fut Signate / Brake Lights / Head Ligh	Customer Name:		e:	Year/Model:		Date:					
MAY NEED FUTURE ATTENTION REQUIRES IMBRIDATE ATTENTION Windsheld DATE ATTENTION Windsheld State of Surges of Parke Lights / House of Warms Lights / Exterior Lamps Windsheld Condition (Inspect for Cracks, Chips, or Pitting) Windsheld Condition (In	Mileag	je:		VIN:			Repair Order #:				
Head Lights / Tail Lights / Tail Lights / Transfer Lights / Hazard Wanning Lights / Exterior Lamps Windshield Washer Spray / Wiper Operation / Wiper Blades Windshield Washer Spray / Wiper Operation / Wiper Blades Windshield Condition (Inspect for Cracks, Chips, or Pitting) Mimors / Glass Emergency Brake Adjustment Hom Operation Fuel Tank Cap Gasket Ar Conditioning Filter (if equipped) Clutch Operation (if equipped) Clutch Operation (if equipped) UNDER VEHICLE Shock Absorbers / Suspension / Struts Seering Gear Box / Linkage and Boots / Bail Joints / Dust Covers Mulfler / Exhaust Pipes / Mountings Engine Oil and/or Fluid Leaks Brake Lines / Hoose / Parking Brake Cable Drive Statt Boots / Constant Velodity Boots / U-joints / Transmission / Differential / Transmission / Differential / Transmission / Struts and Boits on Body Chassis UNDER HOOD Fluid Levels: City Coulant / Stately / Power Steering / Brake Fluid / Washer / Automatic Transmission Engine Air Filter Drive Bales (condition and adjustment) Engine Colonal Proloction Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Cormections / Air Conditioning Condensor (if equipped) Radiator Core / Air Conditioning Condensor (if equipped)	CHECKED AND OKAY MAY NEED FUTURE ATTENTION REQUIRES IMMEDIATE ATTENTION					MAY NEED FUTURE ATTENTION REQUIRES IMMEDIATE ATTENTION					
Windshield Condition (Inspect for Cracks, Chips, or Pritting) Mirrors / Glass Emergency Brake Adjustment Horn Operation Fuel Tank Cap Gasket Air Conditioning Filter (if equipped) Clutch Operation (if equipped) UNDER VEHICLE Shock Absorbers / Suspension / Shruts Steering Gear Box / Linkage and Boots / Ball Joints / Dust Covers Muffler / Exhaust Pipes / Mountings Engine Oil and/or Fluid Leaks Brake Lines / Hoses / Parking Brake Cable Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission Linkage (if equipped) Transmission Linkage (if equipped) Left Rear Right	a			Head Lights / Tail Lights / Turn Signals / Brake Lights /							
Mirrors / Glass Emergency Brake Adjustment Horn Operation Fuel Tank Cap Gasket Air Conditioning Filter (if equipped) UNDER VEHICLE Shook Absorbers / Suspension / Struts Steering Gear Box / Linkage and Boots / Ball Joints / Dust Covers Muffler / Exhaust Pipes / Mountings Engine Oil and/or Fluid Leaks Brake Lines / Hoses / Parking Brake Cable Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission Linkage (if equipped) Transmission Inkage (if equipped) Work Pattern Transmission Drifferential / Transfer Case (Check Fluid Level, Fluid Condition and Fluid Leaks) Fuel Lines and Connections / Fuel Tank Band / Fuel Tank Vapor Vent System Hoses Inspect Nuts and Bolts on Body Chassis UNDER HOOD Fluid Levels, Oil / Coolant / Batlery / Power Steering / Brake Fluid Visaher / Automatic Transmission Engine Air Filter Drive Bels (condition and adjustment) Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Commedions Radiator Core / Air Conditioning Condenser (if equipped)	Z			Windshield Washer Spray / Wiper Operation / Wiper Blad	des		Check Condition of Battery (St	orage Capacity Test)			
Emergency Brake Adjustment Horn Operation Fuel Tank Cap Gasket Air Conditioning Filter (if equipped) Clutch Operation (if equipped) UNDER VEHICLE Shock Absorbers / Suspension / Struts Sleering Gear Box / Linkage and Boots / Ball Joints / Dust Covers Muffler / Exhaust Pipes / Mountlings Engine Oil and/or Fluid Leaks Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission / Different Joint (Transfer Case (Check Fluid Levels, Fluid Conditions / Fuel Tank Band / Fuel Tank Vapor Vent System Hoses Inspect Nuls and Bots on Body Chassis UNDER HOOD Fluid Levels: Oil / Coolant / Batter / Power Steering / Brake Fluid / Washer / Automatic Transmission Engine Coolant Protection Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Right Front Right Front Right Front Transmission / Differer Fluid Levels (Interpretation of Transmission / Different Fluid / Washer / Automatic Transmission / Different Fluid / Washer / Automatic Transmission Drive Shaft South (Transmission / Different Hoses / Air Conditioning Hoses and Connections Right Front Right Front Right Front Right Front Right Rear Right				Windshield Condition (Inspect for Cracks, Chips, or Pittir	ng)	Pass	Recharge Retest	Fail			
Horr Operation Fuel Tank Cap Gasket Air Conditioning Filter (if equipped) UNDER VEHICLE Shock Absorbers / Suspension / Struts Sleering Gear Box / Linkage and Boots / Ball Joints / Dust Covers Muffler / Exhaust Pipes / Mountings Engine Oil and/or Fluid Leaks Brake Lines / Hoese / Parking Brake Cable Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission Linkage (if equipped) Transmission Linkage (if equipped) Brake Lines / Hoese / Parking Brake Cable Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission Linkage (if equipped) Brake Inspection Not Performed This Vialt COMMENTS / ESTIMATES COMMENTS / ESTIMATES Comment Linkage Linka	Z			Mirrors / Glass		is As all	BRAKE AND TIR	E			
Horn Operation Fuel Tank Cap Gasket Air Conditioning Filter (if equipped) Clutch Operation (if equipped) UNDER VEHICLE Shock Absorbers / Suspension / Struts Steering Gear Box / Linkage and Boots / Ball Joints / Dust Covers Muffler / Exhaust Pipes / Mountings Engine Oil and/or Fluid Leaks Brake Lines / Hoses / Parking Brake Cable Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission Linkage (if equipped)	Z			Emergency Brake Adjustment							
Fuel Tank Cap Gasket Air Conditioning Filter (if equipped) Clutch Operation (if equipped) UNDER VEHICLE Shock Absorbers / Suspension / Struts Steering Gear Box / Linkage and Boots / Ball Joints / Dust Covers Mutfler / Exhaust Pipes / Mountings Engine Oil and/or Fluid Leaks Brake Lines / Hoses / Parking Brake Cable Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission Linkage (if equipped) Transmission Linkage (if equipped) Puel Lines and Connections / Fuel Tank Band / Fuel Tank Vapor Vent System Hoses UNDER HOOD Fluid Levels: Oil / Cooling / Battery / Power Steering / Brake Fluid Levels: Oil / Automatic Transmission Engine Air Filter Drive Belts (condition and adjustment) Engine Coolant Potection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)				Horn Operation		Tire Tread	1 32nds	Tire Tread 32nds			
Clutch Operation (if equipped) UNDER VEHICLE Shock Absorbers / Suspension / Struts Steering Gear Box / Linkage and Boots / Ball Joints / Dust Covers Muffler / Exhaust Pipes / Mountings Engine Oil and/or Fluid Leaks Brake Lines / Hoses / Parking Brake Cable Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission Linkage (if equipped) Transmission / Differential / Transfer Case (Check Fluid Leve), Fluid Condition and Fluid Leaks) Fuel Lines and Connections / Fuel Tank Band / Fuel Tank Vapor Vent System Hoses Inspect Nuts and Bolts on Body Chassis UNDER HOOD Fluid Levels: Oil / Coolant / Battery / Power Steering / Brake Fluid / Washer / Automatic Transmission Engine Air Filter				Fuel Tank Cap Gasket							
UNDER VEHICLE Shock Absorbers / Suspension / Struts Steering Gear Box / Linkage and Boots / Ball Joints / Dust Covers Muffler / Exhaust Pipes / Mountings Engine Oil and/or Fluid Leaks Brake Lines / Hoses / Parking Brake Cable Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission Linkage (if equipped) Transmission Linkage (if equipped) Transmission Linkage (if equipped) Fuel Lines and Connections / Fuel Tank Band / Fuel Tank Vapor Vent System Hoses Inspect Nuts and Bolts on Body Chassis UNDER HOOD Fluid Levels: Oil / Coolant / Battery / Power Steering / Brake Fluid / Washer / Automatic Transmission Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)				Air Conditioning Filter (if equipped)		10000000000000000000000000000000000000	YA)	\supseteq			
Shock Absorbers / Suspension / Struts Steering Gear Box / Linkage and Boots / Ball Joints / Dust Covers Muffler / Exhaust Pipes / Mountings Engine Oil and/or Fluid Leaks Brake Lines / Hoses / Parking Brake Cable Drive Shaft Boots / Constant Velocity Boots / U-Joints / Transmission Linkage (if equipped) Transmission / Differential / Transfer Case (Check Fluid Level, Fluid Condition and Fluid Leaks) Fuel Lines and Connections / Fuel Tank Band / Fuel Tank Vapor Vent System Hoses Inspect Nuts and Bolts on Body Chassis UNDER HOOD Fluid Levels: Oil / Coolant / Battery / Power Steering / Brake Fluid / Washer / Automatic Transmission Engine Coolant Protection Drive Belts (condition and adjustment) Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (If equipped)				Clutch Operation (if equipped)	+ 4						
Steering Gear Box / Linkage and Boots / Ball Joints / Dust Covers Muffler / Exhaust Pipes / Mountings Engine Oil and/or Fluid Leaks Brake Lines / Hoses / Parking Brake Cable Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission Linkage (if equipped) Transmission / Differential / Transfer Case (Check Fluid Level, Fluid Condition and Fluid Leaks) Fuel Lines and Connections / Fuel Tank Band / Fuel Tank Vapor Vent System Hoses Inspect Nuts and Boits on Body Chassis UNDER HOOD Fluid Levels: Oil / Coolant / Battery / Power Steering / Brake Fluid / Washer / Automatic Transmission Engine Air Filter Drive Beits (condition and adjustment) Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)		34	LIV.	UNDER VEHICLE							
Muffler / Exhaust Pipes / Mountings Engine Oil and/or Fluid Leaks Brake Lines / Hoses / Parking Brake Cable Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission / Differential / Transfer Case (Check Fluid Level, Fluid Condition and Fluid Leaks) Fuel Lines and Connections / Fuel Tank Band / Fuel Tank Vapor Vent System Hoses UNDER HOOD Inspect Nuts and Bolts on Body Chassis UNDER HOOD Drive Belts (condition and adjustment) Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)	Z			Shock Absorbers / Suspension / Struts		U					
Engine Oil and/or Fluid Leaks Brake Lining mm Tire Tread 32nds Wear Pattern Tire Pressure ppi Tire Tread 32nds Wear Pattern Tire Tread 32nds Wear Pattern Tire Tread 32nds Wear Pattern Tire Tread 32nds Tire Tread 32nds Wear Pattern Tire Tread 32nds Tire Tread 32nds Wear Pattern Tire Tread 12nds Tire Tread 12nds	Z				st						
Brake Lines / Hoses / Parking Brake Cable Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission Linkage (if equipped) Transmission / Differential / Transfer Case (Check Fluid Level, Fluid Condition and Fluid Leaks) Fuel Lines and Connections / Fuel Tank Band / Fuel Tank Vapor Vent System Hoses Inspect Nuts and Bolts on Body Chassis UNDER HOOD Fluid Levels: Oil / Coolant / Battery / Power Steering / Brake Fluid / Washer / Automatic Transmission Engine Air Filter Drive Belts (condition and adjustment) Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)	Z			Muffler / Exhaust Pipes / Mountings		Left Rear		1			
Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission Linkage (if equipped) Transmission / Differential / Transfer Case (Check Fluid Level, Fluid Condition and Fluid Leaks) Fuel Lines and Connections / Fuel Tank Band / Fuel Tank Vapor Vent System Hoses Inspect Nuts and Bolts on Body Chassis UNDER HOOD Fluid Levels: Oil / Coolant / Battery / Power Steering / Brake Fluid / Washer / Automatic Transmission Engine Air Filter Drive Belts (condition and adjustment) Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)	4			Engine Oil and/or Fluid Leaks		Tire Tread	32nds	Tire Tread 32nds			
Transmission Linkage (if equipped) Transmission / Differential / Transfer Case (Check Fluid Level, Fluid Condition and Fluid Leaks) Fuel Lines and Connections / Fuel Tank Band / Fuel Tank Vapor Vent System Hoses Inspect Nuts and Bolts on Body Chassis UNDER HOOD Fluid Levels: Oil / Coolant / Battery / Power Steering / Brake Fluid / Washer / Automatic Transmission Engine Air Filter Drive Belts (condition and adjustment) Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)				Brake Lines / Hoses / Parking Brake Cable		Wear Path Tire Press	ern BC psi	Wear Pattern Tire Pressure psi			
Level, Fluid Condition and Fluid Leaks) Fuel Lines and Connections / Fuel Tank Band / Fuel Tank Vapor Vent System Hoses Inspect Nuts and Bolts on Body Chassis UNDER HOOD Fluid Levels: Oil / Coolant / Battery / Power Steering / Brake Fluid / Washer / Automatic Transmission Engine Air Filter Drive Belts (condition and adjustment) Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)	Z			Drive Shaft Boots / Constant Velocity Boots / U-joints / Transmission Linkage (if equipped)		Brake Inspec	tion Not Performed This Visit				
Inspect Nuts and Bolts on Body Chassis UNDER HOOD Fluid Levels: Oil / Coolant / Battery / Power Steering / Brake Fluid / Washer / Automatic Transmission Engine Air Filter Drive Belts (condition and adjustment) Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)	Z				1	THE HAT					
UNDER HOOD Fluid Levels: Oil / Coolant / Battery / Power Steering / Brake Fluid / Washer / Automatic Transmission Engine Air Filter Drive Belts (condition and adjustment) Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)	Z				k	Per.	Briter				
Fluid Levels: Oil / Coolant / Battery / Power Steering / Brake Fluid / Washer / Automatic Transmission Engine Air Filter Drive Belts (condition and adjustment) Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)	Z			Inspect Nuts and Bolts on Body Chassis	_						
Drive Belts (condition and adjustment) Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)	2			Fluid Levels: Oil / Coolant / Battery / Power Steering / Br	rake			*			
Engine Coolant Protection Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)			Z	Engine Air Filter D. Ay							
Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)	Z			Drive Belts (condition and adjustment)							
Hoses and Connections Radiator Core / Air Conditioning Condenser (if equipped)	Z										
	Z			Cooling System Hoses / Heater Hoses / Air Conditioning Hoses and Connections			×				
	INSP. CEN	(01/00)		Radiator Core / Air Conditioning Condenser (if equipped)		The Pouncide and	Revealds Company TO ORDER: union care	DUIGE COM: 1-800-344-0908: fav 1-800-531-0055			