


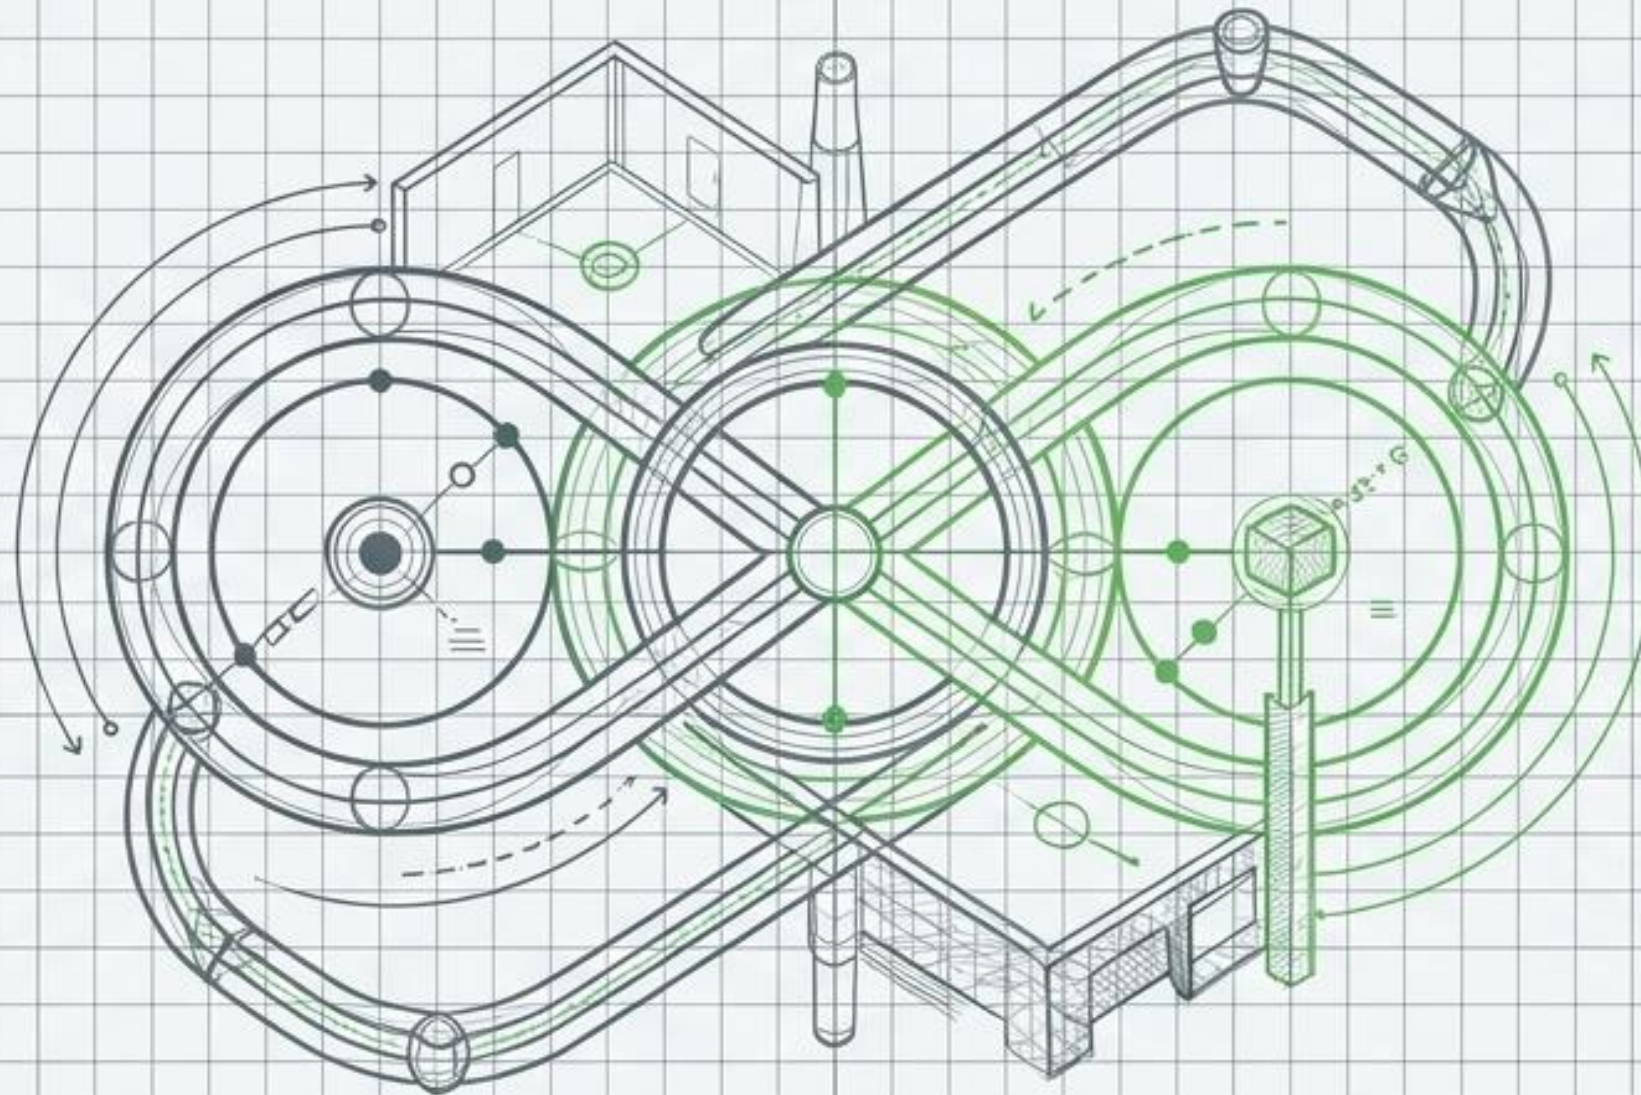

AGILE Work Management

The Essential Guide to Work Orders: Creation, Planning, and Quick Reporting

The Work Order Lifecycle

Stage 1 **Future** (Request)



A formal request for work to be performed at specific Locations or on Assets.

Stage 2 **Present** (Live Tracking)



The active phase. Tracks current status, resource requirements, cost predictions, and active tasks.

Stage 3 **Past** (Historical Record)



A permanent, completed record of activities that builds the comprehensive maintenance history of the Asset or Location.

The Core Decision: Planned vs. Emergency Work

Work Order Tracking Application

Use Case



Planned maintenance, initiated before work begins.



Workflow

Plan → Approve → Execute → Record

Data Profile



Contains detailed forward-looking planning information (Labor, Materials, Tools).

Quick Reporting Application

Use Case



Emergency work or after-the-fact reporting.



Workflow

Execute Work immediately → Report Results
→ System Auto-generates WO


Data Profile



Contains no prior planning information; strictly historical actuals.

Application 1: Work Order Tracking

Initiating the planned maintenance process.

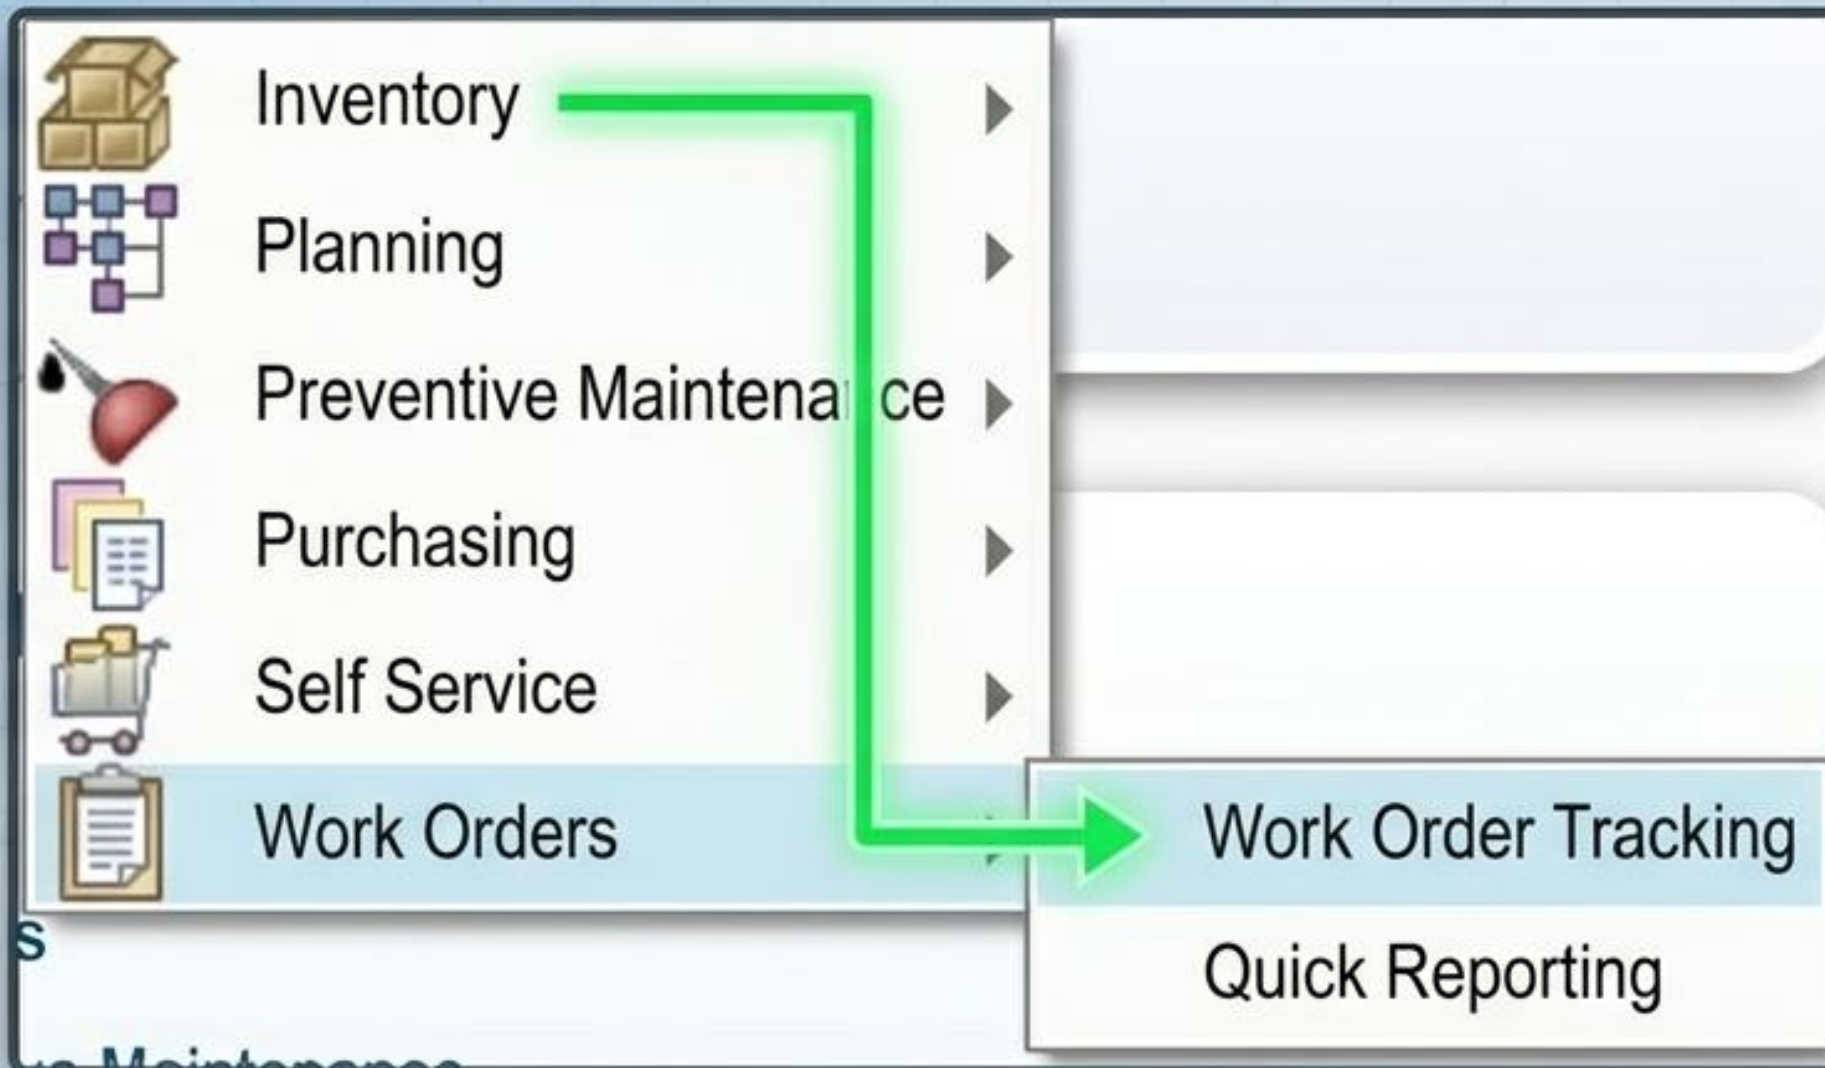

GoTo Menu

→ Work Orders

→ Work Order Tracking

The Navigation Architecture

Understanding the 8 core tabs of a Work Order record.



Step 1: Initialization & Asset Selection

The screenshot shows the 'Work Order Tracking' application interface. At the top is a navigation bar with a home icon, a menu icon, and the title 'Work Order Tracking'. Below this is a search bar with a 'Query' dropdown, a 'Find Work Order' input field, and a 'Select Action' dropdown. A toolbar contains icons for adding, editing, deleting, and saving records. The main area has tabs for 'List View', 'Work Order', 'Plans', 'Assignments', 'Related Records', 'Actuals', 'Safety Plan', and 'Failure Reporting'. The 'Work Order' tab is active. On the left, there are input fields for 'Work Order' (16000649), 'Location' (NP1WS), 'Asset' (NP100106), 'Class' (WORKORDER), 'Failure Class', 'Problem Code', and 'Parent WO'. The 'Work Order' field is annotated with 2a, 'Location' with 2c, and 'Asset' with 2d. In the center, there are dropdowns for 'RTG Crane Maintenance' and 'NPCT1 Workshop Repair Facility', with the latter annotated with 2b. To the right, there are fields for 'Site' (NPCT1), 'Work Type' (CM), 'GL Account', 'Storeroom Material Status', 'Work Package Material Status', 'Material Status Last Updated', and 'Closing Financial Period'. The 'Work Type' field is annotated with 2e. Further right, there is an 'Attachments' section with a 'Status' dropdown (WAPPR), a 'Status Date' (5/9/16 8:00 PM), and checkboxes for 'Inherit Status Changes?', 'Is Task?', 'Under Flow Control?', and 'Suspend Flow Control?'. The 'Status Date' field is annotated with 2d. At the bottom, there are sections for 'Job Details', 'Asset Details', and 'Priority'. The 'Job Details' section has fields for 'Job Plan' and 'Job Plan Revision #'. The 'Asset Details' section has checkboxes for 'Asset Up?' and 'SLA Applied?'. The 'Priority' section has fields for 'Priority' and 'Priority Justification'. The 'Save' icon in the toolbar is annotated with 2f.

2a

2a (Work Order):
Autonumbered by the system.

2b

2b (Description):
Manual input required.

2d

2d (Asset): Select the target Asset first.

2c

2c (Location): Automation
Note: Auto-populates based on your Asset selection.

2e

2e (Work Type): Define the maintenance category.

2f

2f (Save): Commit the record to generate the base Work Order.

The 4 Pillars of Resource Planning

Housed within the Plans tab, these four sub-tabs dictate exactly what is required to execute the maintenance.



Materials

Forecasting spare parts and physical inventory needs.



Labor

Defining internal craft requirements and external contractor dependencies.



Services

Requisitioning external tasks, standard or specialized.



Tools

Reserving shared equipment, tracking expected hours and rates.

Planning Pillar 1: Materials

The screenshot shows the 'Materials' tab in a software interface. At the top, there are tabs for 'Labor', 'Materials', 'Services', and 'Tools'. Below them is a 'Materials' section with a 'Filter' button and a list of materials. The first material is 'NP1000009' with a description 'Centrifugal Pump'. The quantity is '1.00', unit cost is '0.00', and line cost is '0.00'. The storeroom is 'NPCT1-EN'. Below this is a 'Details' section with various input fields. Callouts 3a through 3i point to specific fields: 3a points to the 'New Row' button; 3b points to the 'Item' field; 3c points to the 'Line Type' dropdown; 3d points to the 'Quantity' field; 3e points to the 'Unit Cost' field; 3f points to the 'Storeroom' field; 3g points to the 'Storeroom Site' field; 3h points to the 'Reservation Type' dropdown; 3i points to the 'Required Date' field. The 'Task' field is empty. The 'Issue To' field is empty. The 'Requested By' field is 'SE01'. The 'Vendor' field is empty. The 'Condition Code' field is empty. The 'Condition Rate' field is empty. The 'Condition Enabled?' checkbox is unchecked. At the bottom, there are buttons for 'Select Materials', 'Select Asset Spare Parts', and 'New Row'.

Task	Item	Description	Quantity	Unit Cost	Line Cost	Storeroom
	NP1000009	Centrifugal Pump	1.00	0.00	0.00	NPCT1-EN

Details

Task:

Item: Centrifugal Pump

Line Type:

Quantity:

Order Unit:

Unit Cost:

Line Cost:

Storeroom:

Storeroom Site:

Reservation Type:

Vendor:

Condition Code:

Condition Rate:

Condition Enabled? ☐

Issue To:

Required Date:

Requested By:

Step 1: Initiate

Click **New Row (3a)** to initiate a part request.

Manual Inputs

- **Item (3b)**: Select the part. Description auto-fills.
- **Quantity (3d)**: Defaults to 1.00.
- **Storeroom (3f)**: Select origin location.

System Auto-Fills

- **Line Type (3c)**: Defaults to Item.
- **Unit Cost (3e)**: Defaults to 0.00.
- **Storeroom Site (3g)**: Auto-fills upon Storeroom selection.
- **Reservation Type (3h)**: Defaults to AUTOMATIC.
- **Required Date (3i)**: Populates with current date.

Planning Pillar 2: Labor

The screenshot shows a software interface for labor planning. At the top, there are tabs for 'Labor', 'Materials', 'Services', and 'Tools'. Below these is a header bar with 'Labor', a 'Filter' button, and a status '1 - 1 of 1'. The main table has columns: Task, Craft, Skill Level, Vendor, Quantity, Labor, Duration (Hours), and Line Cost. A single row is visible with values: Task (empty), Craft (MECH), Skill Level (JUNIOR), Vendor (MITSUI), Quantity (1), Labor (empty), Duration (Hours) (1:00), and Line Cost (0.00). Below the table is a 'Details' section with various input fields. Callouts point to specific fields: '1b' points to the 'Craft' field (MECH); '1c' points to the 'Quantity' field (1); '1d' points to the 'Duration (Hours)' field (1:00); and '1a' points to the 'New Row' button at the bottom right of the details section. Other fields include 'Task', 'Vendor' (MITSUI), 'Labor Contract' (NP11001), 'Rats' (110,000.00), 'Line Cost' (0.00), 'Rate Changed?' (checkbox), 'Labor' (empty), and 'Outside?' (checkbox).

Step 1: Click New Row (1a) to assign a worker or craft.

Core Inputs:

- **Quantity (1c):** Number of workers needed.
- **Duration (1d):** Expected hours to complete the task.

The External Labor Dynamic

System automatically pulls from active labor contracts.

Auto-fills:

Skill Level, Vendor, Labor Contract, Rate

Select Craft (1b)

If sourced externally

Planning Pillars 3 & 4: Services & Tools

Services Planning

- Initiate via New Row (1a).
- Line Type (1b) dictates the next step:
 - If Service:** Description field becomes mandatory.
 - If Standard Service:** Choose pre-defined option from the Service field (1c).

Tools Planning

Tool	Quantity	Tool Hours	Rate	Total Cost
				New Row

- Initiate via New Row.
- Select the specific Tool.
- Input required Quantity, expected Tool Hours, and the internal/external Rate.

Exception Handling: Reworks



Context: Sometimes finished work is incomplete or fails to meet expectations. EMS requires reworks to be specifically marked to accurately measure maintenance performance.

The Rework Workflow

1. Open the specific **Work Order** intended to serve as the rework.
2. Check the **Is Rework?** box (1a).
3. Select the **Originating Record** (1b) – linking this new work order directly to the original failed/incomplete job.

Follow-up Work 

Is Rework?

☒ **1a**

Originating Record: **1b**

16000633  

Application 2: Quick Reporting

The workflow for emergency and after-the-fact maintenance.

Step 1: Perform Emergency Work

No prior plan exists.


Step 2: Access Quick Reporting

Navigate via Work Orders → Quick Reporting

Step 3: Report Actuals

Input post-work labor, materials, and tasks.

Result: The system automatically generates a retroactive Work Order based strictly on your reported results, lacking predictive planning data.

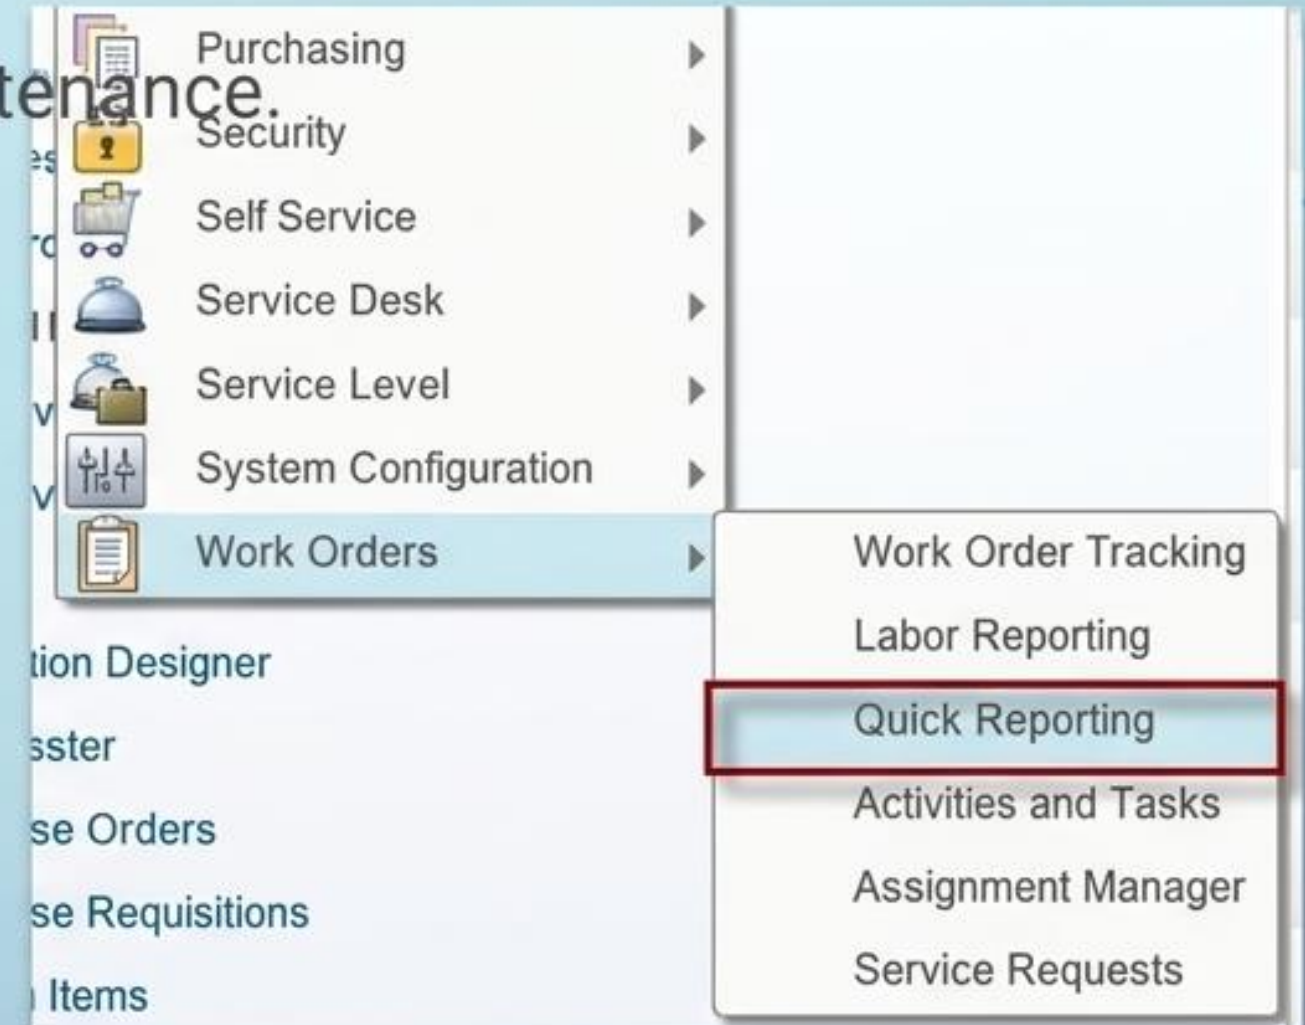

Quick Reporting: UI Anatomy

Search & Filter (List View)

Quickly locate records using the robust header filter (2a): Search by WO Number, Description, Location, Asset, Status, Scheduled Start, Priority, or Site.

WO Number	Description	Location	Asset	Status	Scheduled Start	Priority	Site
1002	Sample Quick Reporting SR 2	NP1		COMP		NPCT1	
1050	Sample Quick Reporting SR 0 Solian	NPCT1-ENG-STORE		IMPRG		NPCT1	
1026	Sample Quick Reporting 01	NP1		COMP		NPCT1	
1026		NP1		COMP		NPCT1	
1077		NP1		COMP		NPCT1	
1078	Sample SR 01	NP1		IMPRG		NPCT1	
1090	SR	NP1		COMP		NPCT1	
1092	Sample Repeat SR 23	NP071-ENG-STORE		COMP		NPCT1	
1027	Quick Reporting 0ft Sample 01	NP071-ENG-STORE		IMPRG		NPCT1	
1152	Sample GR - CM 01	NP071		COMP		NPCT1	

Logging Actuals (Detail View)

- The Quick Reporting tab (3a) bypasses planning and goes straight to recording reality.
- Header Data:** Identifies the WO (3b) and Description (3c).
- Execution Data:** Rapidly input completed parameters across dedicated sections for **Tasks** (3d), **Labor**, **Materials**, **Tools**, **Failure Reporting**, and communication **Logs** (3e).

Task	Summary	Estimated Duration	Measurement Point	Measurement Value	Measurement Date	Route Stop	Status
16	Sample Task 01	0.00					IMPRG

Task	Labor	Name	Approved?	Start Date	Start Time	End Time	Duration (Hours)	Rate
ELECT01		Decoded 01		1/30/16			0.00	0.00