


ALBI 4 - VERTICAL POST MIX DISPENSER

Installation Manual

Original instructions

English version – EN
Spanish – ESP
French – FR
German – DE
Italian – IT
Chinese – CHN

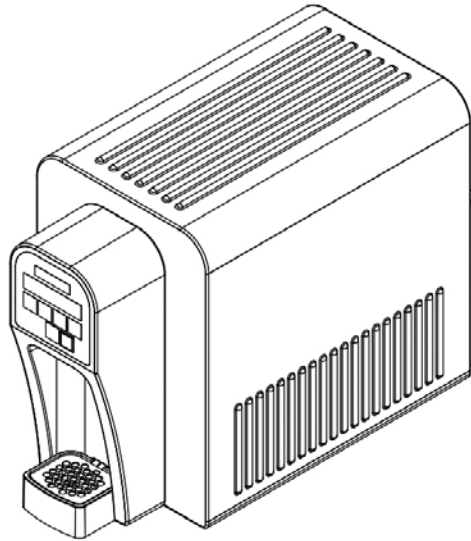

Appliance types covered:

Model	Type
14-2000-xx	220-240V / 50Hz
14-2001-xx	110-115V / 60Hz
14-2002-xx	220-240V / 60Hz
14-2003-xx	127V / 60Hz

PART No.	P1015616
REVISION:	No. 3
ISSUE DATE:	8/5/2017

Dear Customer

Please read the User Guide and Installation Manual carefully before operating this unit.

Please keep the User Guide and Installation safe and with the unit.

Examine the equipment immediately after supply for transport damage. Contact your equipment supplier and/or carrier if necessary. Damage, which arises by inappropriate treatment or operation, is not subject to guarantee \ warranty.

Equipment manufactured or supplied by Welbilt (Halesowen) Limited complies with the current legislation and standards of the EU and represents the current standard of technology. Safety during operation may only be assured by following the instructions in this guide.

Reproduction of any kind without previously written permission of Welbilt (Halesowen) Limited is prohibited.

Welbilt (Halesowen) Limited typically designs for a 5-10 year product lifetime dependent upon the type of equipment.

Section 1 – Warnings	4-7
Section 2 – General description and function of the unit	8
Section 3 – Installation & Commissioning of the unit Wiring and system schematics	9-18 19-20
Section 4 – Maintenance and cleaning	20
Section 5 – Spare parts list	24
Section 6 – Fault finding charts	25-28
Section 7 – Technical Specification	29
Section 8 – Declaration of conformity	32


Section 1 – Warnings

WARNING: THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.

WARNING: THERE ARE NO END USER SERVICEABLE PARTS. ANY FAULT OR PROBLEM WITH THE EQUIPMENT MUST ONLY BE RECTIFIED BY A QUALIFIED SERVICE ENGINEER.

WARNING: ALTHOUGH EVERY CARE IS TAKEN DURING MANUFACTURE, DAMAGE TO THE METALWORK DURING TRANSPORT, INSTALLATION AND GENERAL USE MAY OCCUR. THIS MAY RESULT IN SHARP OR JAGGED EDGES. AVOID CONTACT WITH METAL EDGES OR OTHER POTENTIAL HAZARDS.

WARNING: PLEASE REFER TO MANUAL HANDLING GUIDELINES WHEN LIFTING THIS EQUIPMENT.

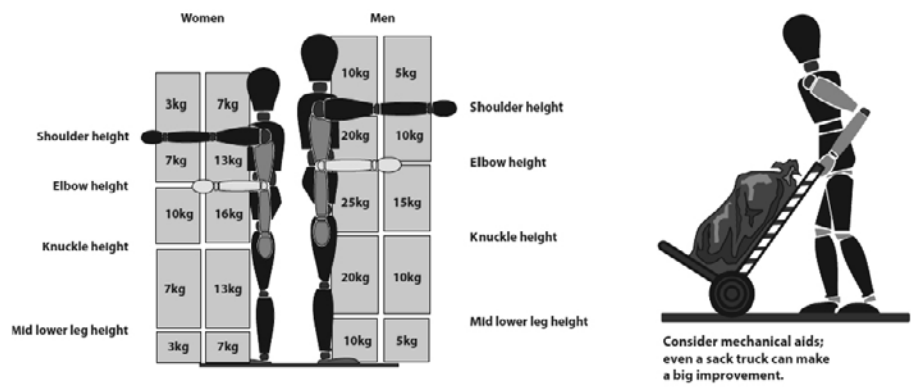

BEFORE LIFTING OR MOVING THIS EQUIPMENT IT IS RECOMMENDED THAT ALL PERSONS PERFORMING THESE TASKS SHOULD RECEIVE RELEVANT TRAINING IN SAFE HANDLING.

ALL PERSONS LIFTING OR MOVING THIS EQUIPMENT MUST BE WEARING THE CORRECT PERSONAL PROTECTIVE EQUIPMENT.

TO PREVENT PERSONAL INJURY WHERE PRACTICAL, TRANSPORTING OF THE UNIT OVER EXTENDED DISTANCES SHOULD BE DONE USING A MECHANICAL AID.

ALWAYS TRANSPORT THE UNIT IN THE CORRECT UPRIGHT POSITION, NEVER ON ITS SIDE OR TOP.

- WARNING:** IT IS UNSAFE TO LIFT OR ATTEMPT TO MOVE THE APPLIANCE DURING CLEANING OR AT ANY OTHER TIME WHEN THE UNIT IS OPERATING.
- WARNING:** ONLY USE EQUIPMENT FOR ITS INTENDED USE AS DESCRIBED IN THE INSTALLATION MANUAL. THERE ARE NO OTHER RECOMMENDED USES FOR THIS EQUIPMENT. UNINTENDED USE OF THE EQUIPMENT WILL INVALIDATE YOUR WARRANTY.
- WARNING:** WELBILT (HALESOWEN) LIMITED HAS DONE A COMPLETE QUALITY AND FUNCTION CHECK ON EACH UNIT. NEVERTHELESS, LEAKAGES ON WATER LINES DURING OPERATION CAN NOT BE EXCLUDED TOTALLY. REGULARLY INSPECT THE EQUIPMENT FOR SIGNS OF LEAKAGE.
- WARNING:** DO NOT DAMAGE THE REFRIGERANT CIRCUIT
- WARNING:** KEEP ALL VENTILATION OPENENINGS IN THE APPLIANCE CLEAR OF OBSTRUCTION
- WARNING:** DO NOT USE MECHANICAL DEVICES OR OTHER MEANS TO ACCELERATE THE DEFROSTING PROCESS, OTHER THAN THOSE RECOMMENDED BY THE MANUFACTURER.
- WARNING:** THE EVAPORATION TEMPERATURE IN THE REFRIGERATION CIRCUIT CAN TYPICALLY BE -10°C. WITHOUT TAKING PREVENTATIVE STEPS THIS CAN BE A POTENTIAL SOURCE OF INJURY.
- WARNING:** THE COMPRESSOR, CONDENSER, HIGH PRESSURE REFRIGERATION TUBES AND MOTORS WILL BECOME HOT DURING OPERATION. CONTACT WITH THESE PARTS DURING OPERATION SHOULD BE AVOIDED.
- WARNING:** SOME COMPONENTS WILL ROTATE FOR A SHORT PERIOD AFTER THE POWER TO THE UNIT HAS BEEN SWITCHED OFF. THESE COMPONENTS SHOULD BE AVOIDED UNTIL STATIONARY.



Warning

THIS EQUIPMENT IS CHARGED WITH R290 REFRIGERANT (PROPANE).

ONLY QUALIFIED SERVICE ENGINEERS HOLDING A VALID HANDLING CERTIFICATE FOR CARE 40 (PROPANE) CAN WORK ON THE REFRIGERATION SYSTEM OF THIS EQUIPMENT. PLEASE READ THE INFORMATION BELOW BEFORE ANY WORK IS CARRIED OUT.

Refrigeration R290 (Care 40, Propane)

Note: Only engineers who have been trained in the safe handling and use of hydrocarbon refrigerants should work on this system.

- Work on this system in a well ventilated area or outside.
- Use a local leak detector to indicate if there is hydrocarbon in the air around the system (place it at a low level as HCs are heavier than air)
- Ensure there are no sources of ignition (flames or sparking electrical components) within 3m (10 feet) of your work area.
- If replacing components use like for like replacements.
- Take great care when brazing to ensure all HC has been removed from the system.

Use refrigerant grade propane (R290 or Care 40)



WARNING: DO NOT DISPOSE OF THE UNIT WITHOUT FIRST REMOVING ALL R290 REFRIGERANT. THIS PROCESS CAN ONLY BE PERFORMED BY AN ENGINEER QUALIFIED TO HANDLE HYDROCARBON REFRIGERANTS.

WARNING: ALL UNITS ARE FITTED WITH A STANDARD EURO PLUG TO IEC83:1985 OR A UK PLUG OR COUNTRY SPECIFIC PLUG. BEFORE COMMENCING ANY CLEANING ISOLATE THE UNIT BY:

1. SWITCH OFF THE SOCKET THAT THE PLUG IS INSTALLED INTO.
2. REMOVE THE PLUG FROM THE SOCKET.

WARNING: IF THE MAINS LEAD FITTED TO THIS EQUIPMENT IS IN ANY WAY DAMAGED IT MUST BE REPLACED BY WELBILT (HALESOWEN) LIMITED, OUR SERVICE AGENT OR A QUALIFIED ELECTRICAL ENGINEER. THE MAINS LEAD CONNECTION IS A 'Y' TYPE.

WARNING: THIS EQUIPMENT MUST BE EARTHED.

WARNING: THE CARBONATOR IS AN INTEGRAL PART OF THE UNIT AND IT SHOULD BE NOTED THAT THE CARBONATION PROCESS INVOLVES THE USE OF HIGH PRESSURE AND POTENTIALLY NOXIOUS GAS. AS SUCH SUE CARE MUST BE TAKEN WHEN USING THE EQUIPMENT.

WARNING: CARBON DIOXIDE LEAKS ARE POTENTIALLY FATAL IF CONCENTRATIONS RISE TO A DANGEROUS LEVEL. IN VIEW OF THIS THE INSTALLATION SHOULD BE REGULARLY CHECKED FOR INTEGRITY AND THE GENERAL AREA OF INSTALLATION PROPERLY VENTILATED AT ALL TIMES.

IT IS RECOMMENDED THAT A CO₂ LEAK DETECTOR IS FITTED IN THE VICINITY OF THE EQUIPMENT.

CO₂ CYLINDER SAFETY INFORMATION


**DANGEROUS
WARNING**


- 1. ALWAYS**
connect the CO₂ or gas cylinder to a REDUCING VALVE.
- 2. NEVER**
try to connect cylinder directly to product container.
- 3. NEVER**
interconnect soft drinks, CO₂ or
gas cylinder equipment with other equipment.
- 4. ALWAYS**
secure cylinder upright whilst in use.
- 5. ALWAYS**
keep cylinder away from heat.
- 6. NEVER**
drop or throw cylinders.
- 7. NEVER**
try to unscrew fittings from containers.
- 8. ALWAYS**
ventilate area after CO₂ leakage.

This information should be displayed in a position adjacent to the CO₂ supply cylinder at all times.

WARNING: IN ORDER TO COMPLY WITH UK WATER REGULATIONS A WRAS APPROVED DOUBLE NON RETURN VALVE MUST BE INSTALLED ON THE INCOMING MAINS WATER SUPPLY BEFORE THE APPLIANCE IN THE SYSTEM.

FOR INSTALLATION OF EQUIPMENT ACROSS EUROPE A CLASS 3 PROTECTIVE DEVICE AS DEFINED BY EN1717, APPROVED FOR THE COUNTRY OF INSTALLATION MUST BE INSTALLED ON THE INCOMING MAINS WATER SUPPLY BEFORE THE APPLIANCE IN THE SYSTEM.

Section 2 – General description and function of the unit

This equipment is an Over-counter post mix dispenser to dispense chilled Carbonated Beverages. The equipment is freestanding and contains a refrigeration system for cooling the product, a carbonation system for carbonating mains water and syrup pumps to draw syrup from a bag in box syrup. The system is designed to operate with syrup ratio's of between 4:1 and 10:1 but is set to use post mix syrups of 5:1 ratio. This equipment is designed to be installed on a counter or back bar at the point of dispense. There are NO other recommended uses for this equipment.

This equipment should be used only in accordance with the instructions; it should not be used for any other purpose.

- The equipment is not intended for use with alcoholic, fruit juice or milk based beverages.
- Do not operate the equipment in a wet environment.
- Do not install or use the unit outdoors.
- Do not install the unit where a steam or water hose could be used in the vicinity of or on the unit.

Any spillage must be wiped dry immediately.

The unit should not be installed in small enclosed spaces or next to equipment that generates heat or where fresh air flow is restricted. Always install in a well ventilated area.

Keep the unit free from excessive heat and cold. Minimum and maximum ambient temperatures are:

Minimum: 12°C

Maximum: 32°C

Misuse or use of the equipment for any other purpose than those identified above will invalidate any warranty, and may constitute a danger to yourself and others.


Section 3 – Installation & Commissioning

Unpack the unit from its transportation packing and visually check for any signs of damage. Place the unit in a convenient location on the countertop or back-bar where it is to be sited and within reach of an accessible power supply socket. Always site the equipment on a horizontal level surface of sufficient size to support the unit without it overhanging. When siting the unit, ensure that there is sufficient space to work around the unit for installation and cleaning and to allow adequate ventilation for the refrigeration system. A minimum clearance of 100mm to either side of the unit is recommended, and clear access in front of the unit to allow dispense of drinks.

Allow enough space at the rear of the unit for four bag in box syrup lines, a mains water supply, Co2 supply and detachable mains cable supply connection.

Above the unit, ensure there is enough room to remove the top cover so that the water bath can be filled with water upon installation.

Unit dimensions

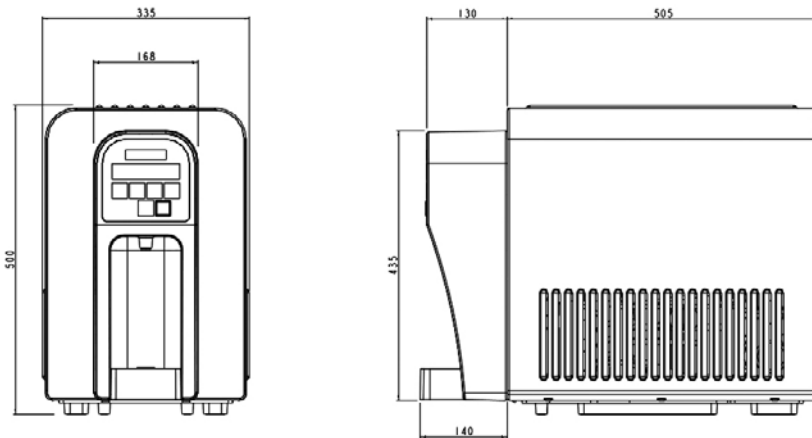


At the rear of the unit, all of the connections are labelled. Connect the above utilities as follows to the appropriate John Guest 3/8" connectors on the unit:-

1. Connect a 3/8" OD hose suitable for use with John Guest connections to the John Guest connector labelled "WATER" on the rear of the unit. The mains water pressure should be MIN 0.138Mpa (20psi) \ MAX 0.345Mpa (50psi). Do not turn the water supply on yet.
2. Connect the CO2 supply to the connector labelled Co2. The Co2 pressure should be MIN 0.517Mpa (75psi) \ MAX 0.552Mpa (80psi). Do not turn the CO2 supply on yet.

3. Connect the bag in box syrup lines to the connectors labelled syrup 1 - syrup 4. The bag in box syrup **MUST** be within 2 meters of the unit and can be level with or below the unit.
4. Plug the detachable mains lead into the power inlet socket and the plug into the mains supply socket on the wall. Do not switch the mains power on yet.

Utility Connection Locations

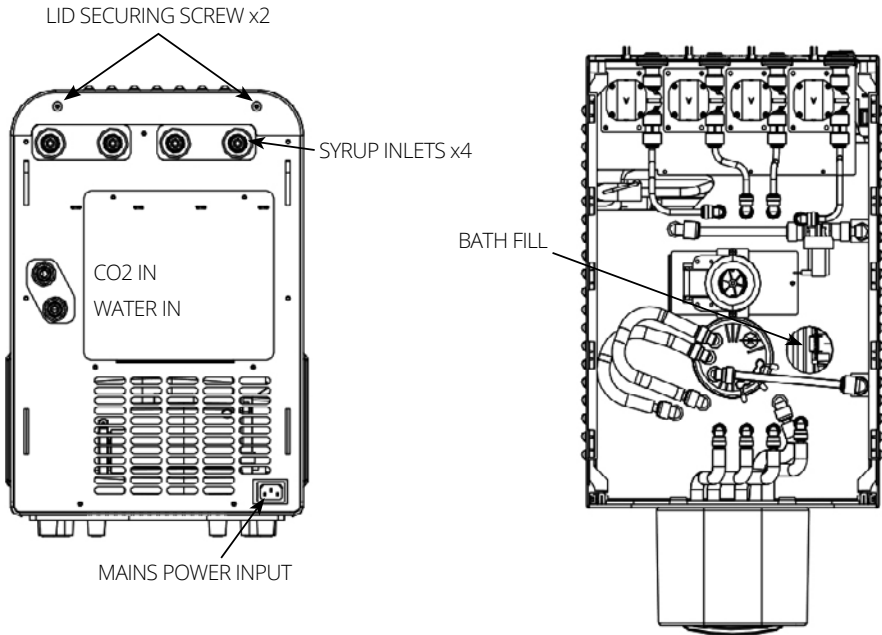


Commissioning instructions


The following instructions detail the processes to be followed to prime and brix the unit before putting the unit into dispense mode to dispense drinks. Please read and follow these instructions carefully.

1. Remove the top cover by removing the securing screws located at the rear of the unit as shown above.
2. Remove the bath fill cap and carefully and using a funnel, fill the water bath with cold clean water until it trickles from the overflow tube which exits via a tube into the drip tray. The fill volume is approximately 10 litres.
3. Turn on the mains water supply and check for leaks externally and internally.
4. Turn on the CO2 supply and check for leaks externally and internally.
5. Replace the lid and securing screws.

- 6. At power up, the screen will display INITIALISING (and the software version) for duration of 5 seconds. During this time it can be put into one of several modes by pressing then releasing two keys. See below:-

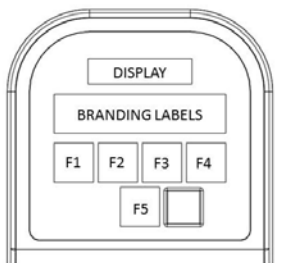

Top Level Software Structure

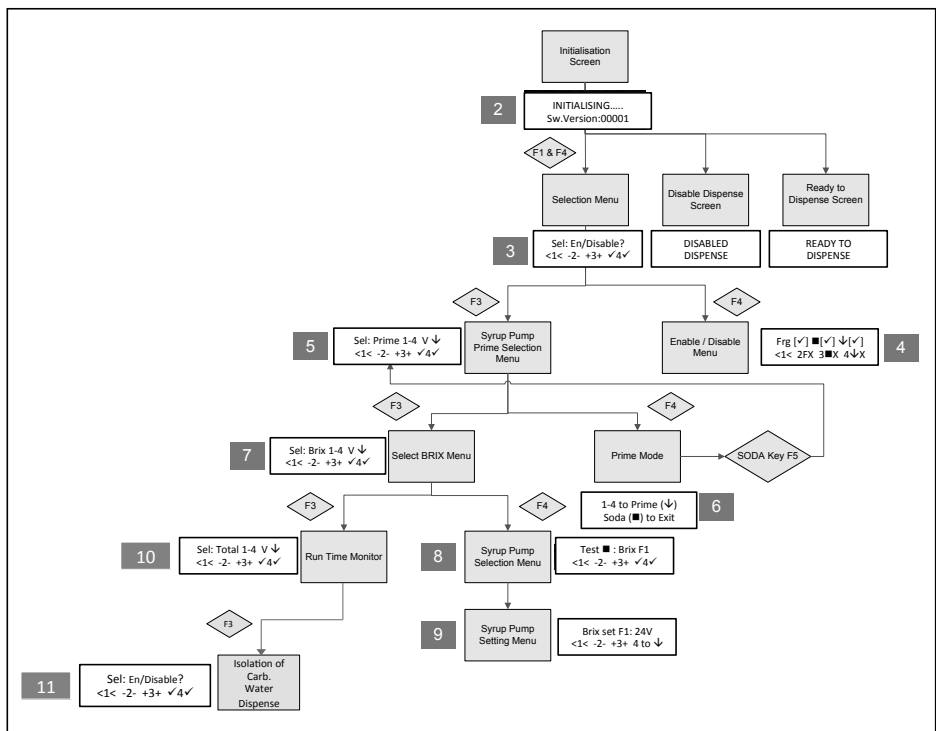


- 7. Note the equipment does not have an ON/ Switch to energise the equipment. To activate and deactivate controls, switch power ON/OFF at the electrical supply.


Note: Switching OFF Machine: After 4 seconds current display changes to ===== then after a further 3 seconds screen powers off.

- 8. The syrup lines need to be primed first to fill them with syrup up to the point of dispense.


Power-Up and Software Initialisation

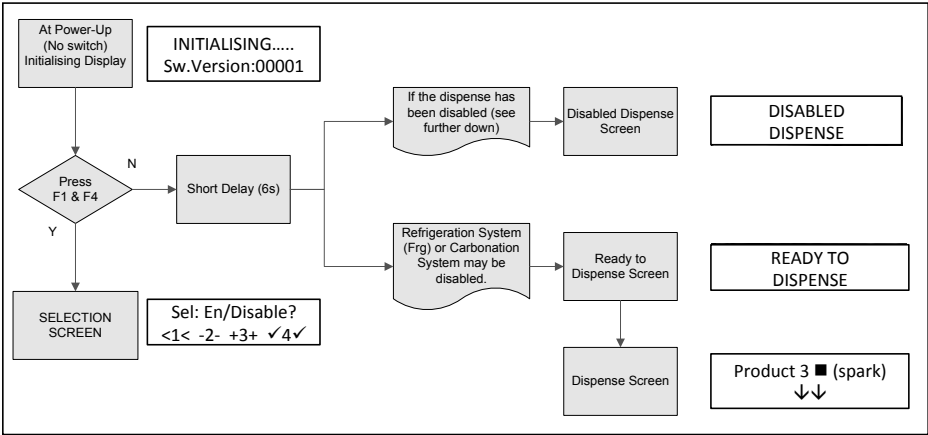

Main Selection Screen

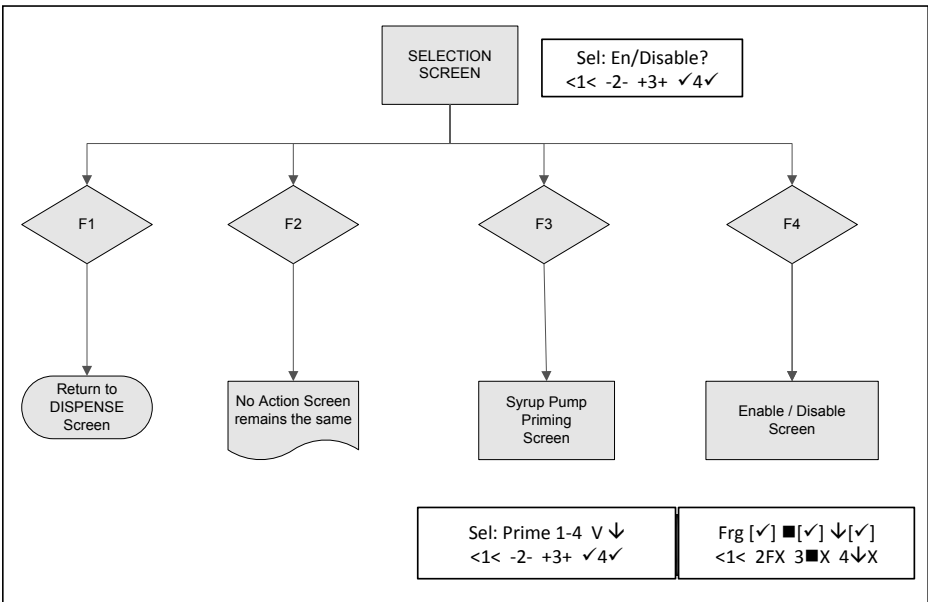


Enable/ Disable Mode

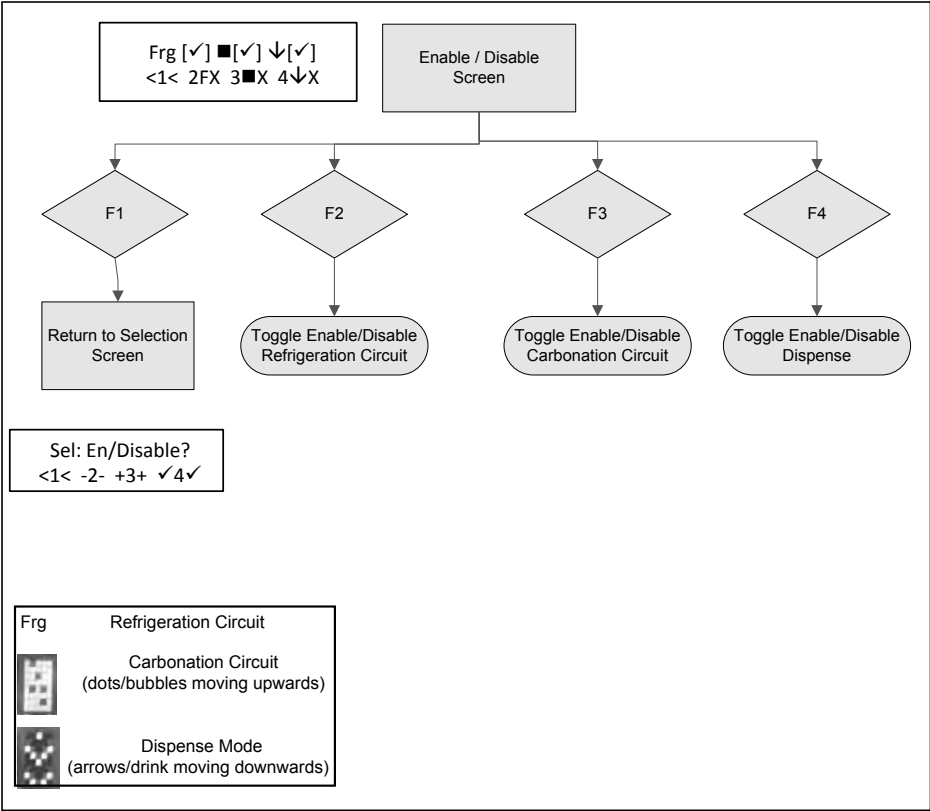

9. The Enable/ Disable Mode enables and disables the refrigeration circuit, carbonation circuit and the dispense mode.


Note: The dispense mode being disabled results in the “Dispense Disabled” Screen after initialisation. The refrigeration and carbonation circuits being disabled do not have this affect giving the “Ready to Dispense Screen” after the initialisation screen.

Syrup Pump Priming & Brix Adjustment Menus

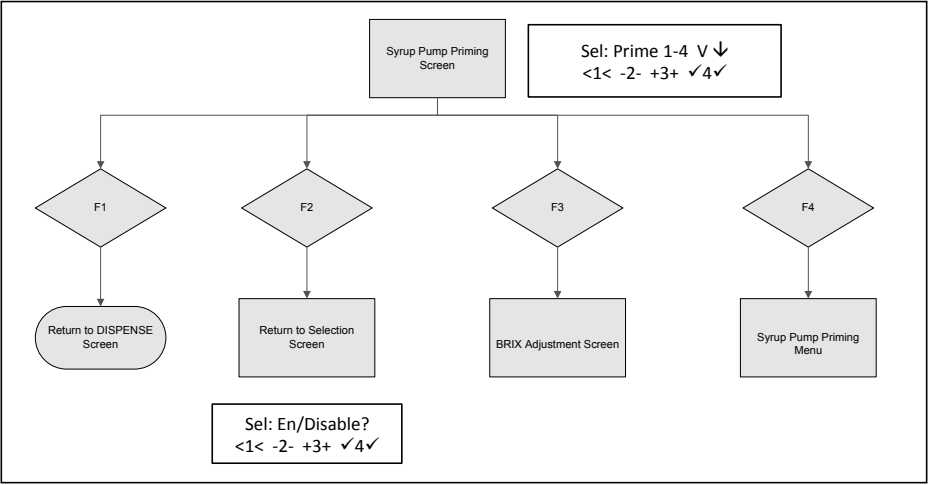


10. Syrup priming mode is used to activate the syrup pumps to draw syrup from Bag in Box to point of dispense.

Syrup Pump Priming Mode

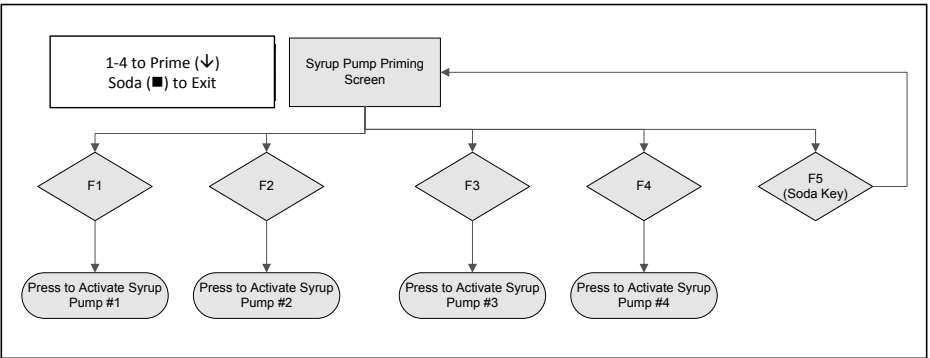


Pump Selection, BRIX Adjustment & Carbonated Water

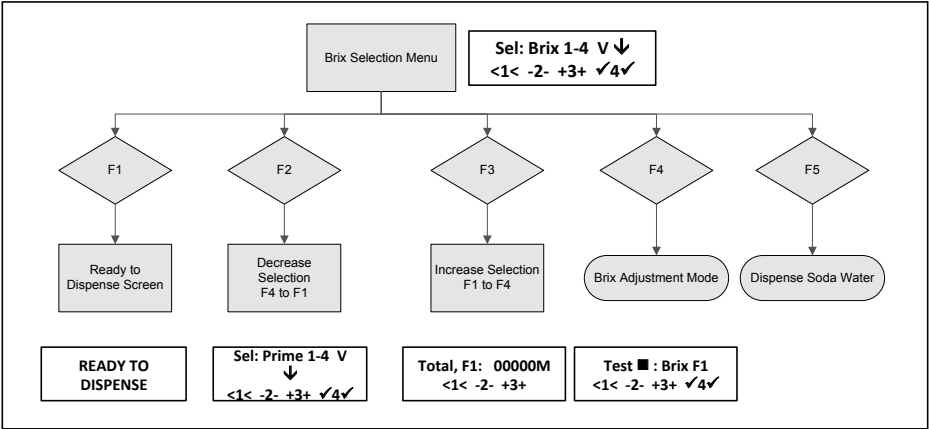


- 11. F2 and F3 Keys are used to step upwards and downwards through the syrup pumps #1,#2,#3 and #4.
- 12. The SODA key (F5) is used to dispense 7 seconds of SODA water to assess carbonation levels and BRIX ratio.

BRIX Pump Selection Mode

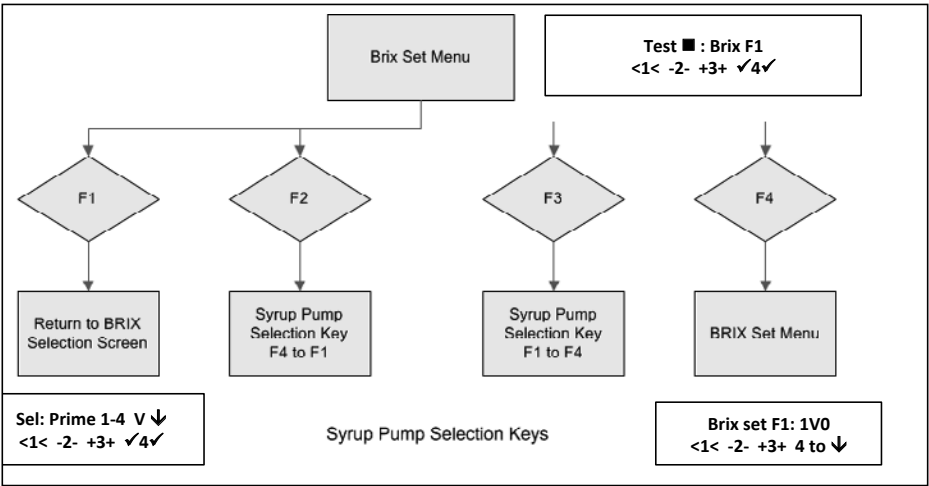


- 13. Select which syrup pump that needs to be adjusted F1, F2, F3 or F4.
Note: After selecting which pump is to be adjusted, this menu leads to the menu that allows adjustment to take place.

Brix Adjustment Mode

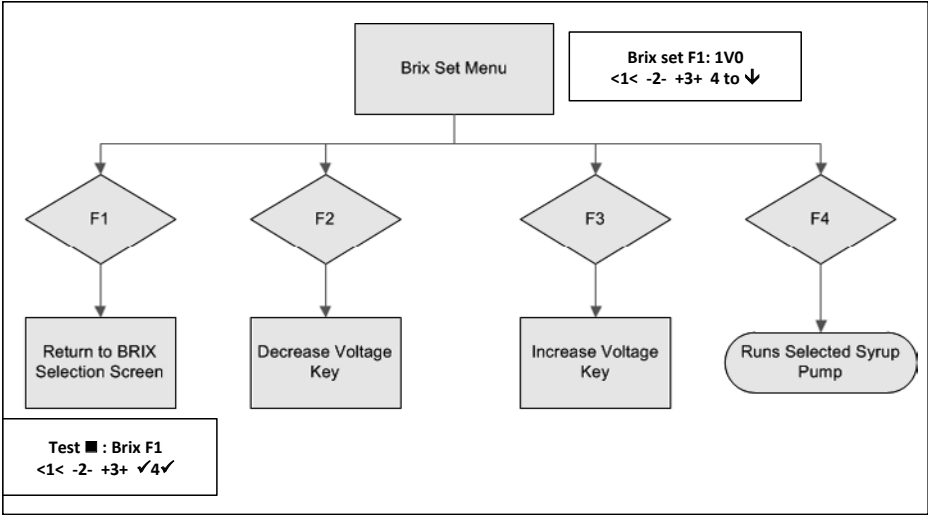


- 14. The DC voltage to the syrup pump controls the speed of the pump. The pump runs for 7 seconds. The voltage is usually set at 2.2v DC and can be adjusted between 0.6 and 5V DC.
Note: The Voltage shown here 1V0 is 1.0V DC, 2V5 is 2.5V DC etc.
- 15. Pump runs for 7 seconds. This allows syrup quantity to be compared to carbonated water quantity over the same period to measure BRIX Ratio.


Syrup Run Time Monitoring

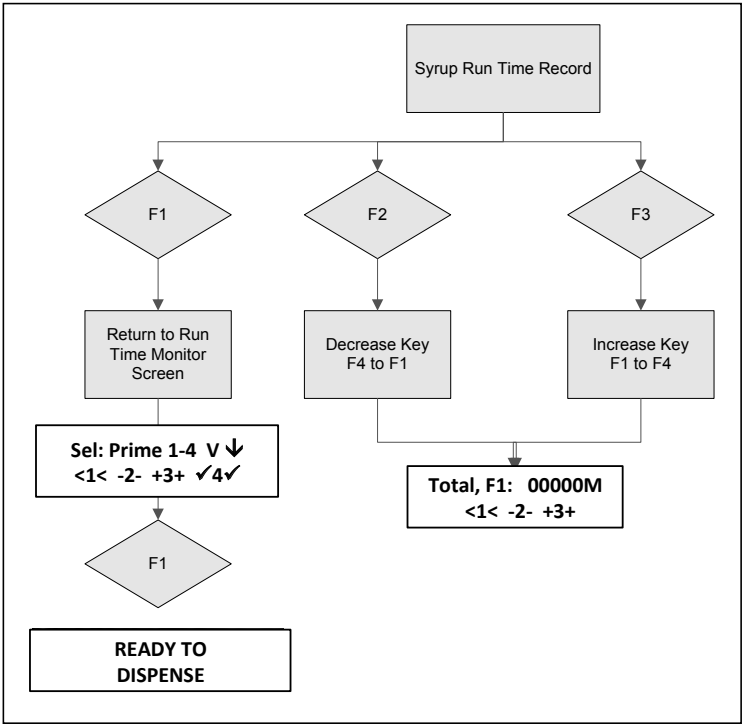

16. After selecting which pump is being viewed, the run time will be displayed. Run time in dispense mode starting from zero and measured in minutes.
NOTE: This cannot be reset.

Fault Screens

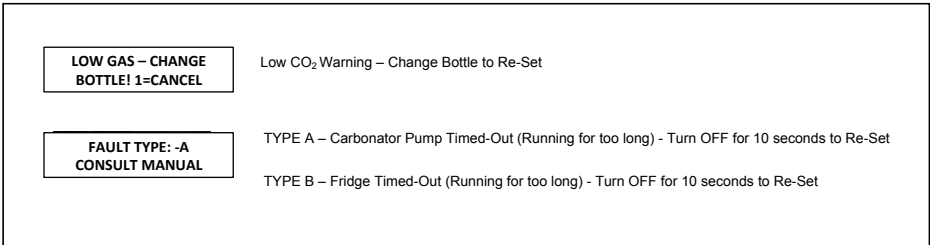

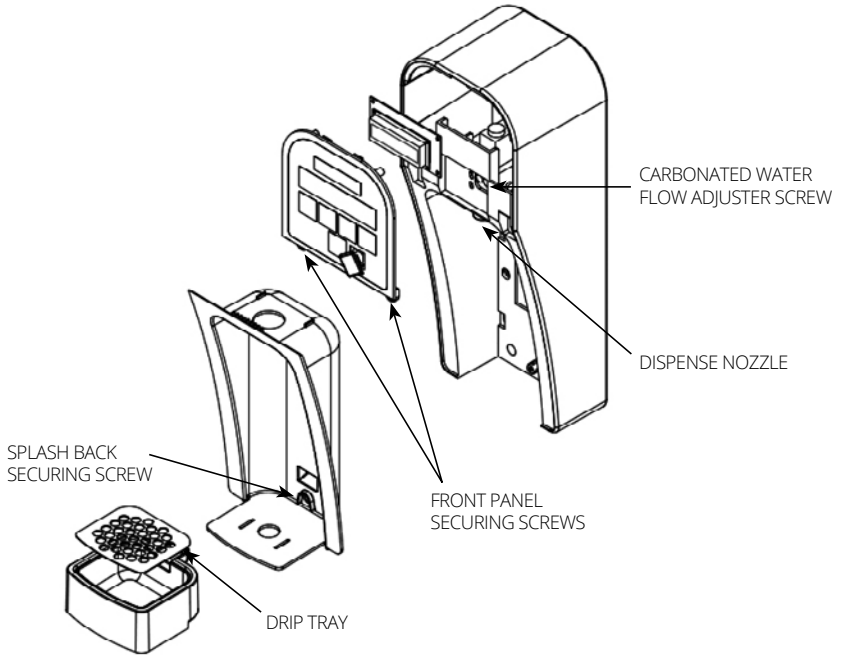

DISPENSE MODE

Once the unit has been set up, the unit can be switched on and it will automatically go into dispense mode if no keys are pressed. The dispense is push to pour and it will dispense a maximum of a 10 second pour while the chosen flavour button is pressed. If a top up is required, re-press the key to instigate a second 10 second pour time window.


CARBONATOR FILL TIME OUT

In the event of the water supply being turned off, a blockage in the internal water circuit, carbonator pump failure or a freeze up, the system has an in built time out which will turn off the carbonator pump after a period of three minutes if the carbonator bowl fails to fill. If this happens, the display will read FAULT TYPE B- CONSULT MANUAL (SEE ABOVE). Before resetting the system, the fault must be rectified. Turn off unit for 10 seconds to reset.

RE- PRIMING THE SYSTEM IF THE BAG IN BOX SYRUP RUNS OUT

If the bag in box of syrup runs out, then the system needs to be re-primed following connection of a new one. Follow step 10 in Syrup Priming Mode to re-prime the syrup lines. There should be no need to re-brix the system.

ALBI 4 DISPENSER WIRING DIAGRAM

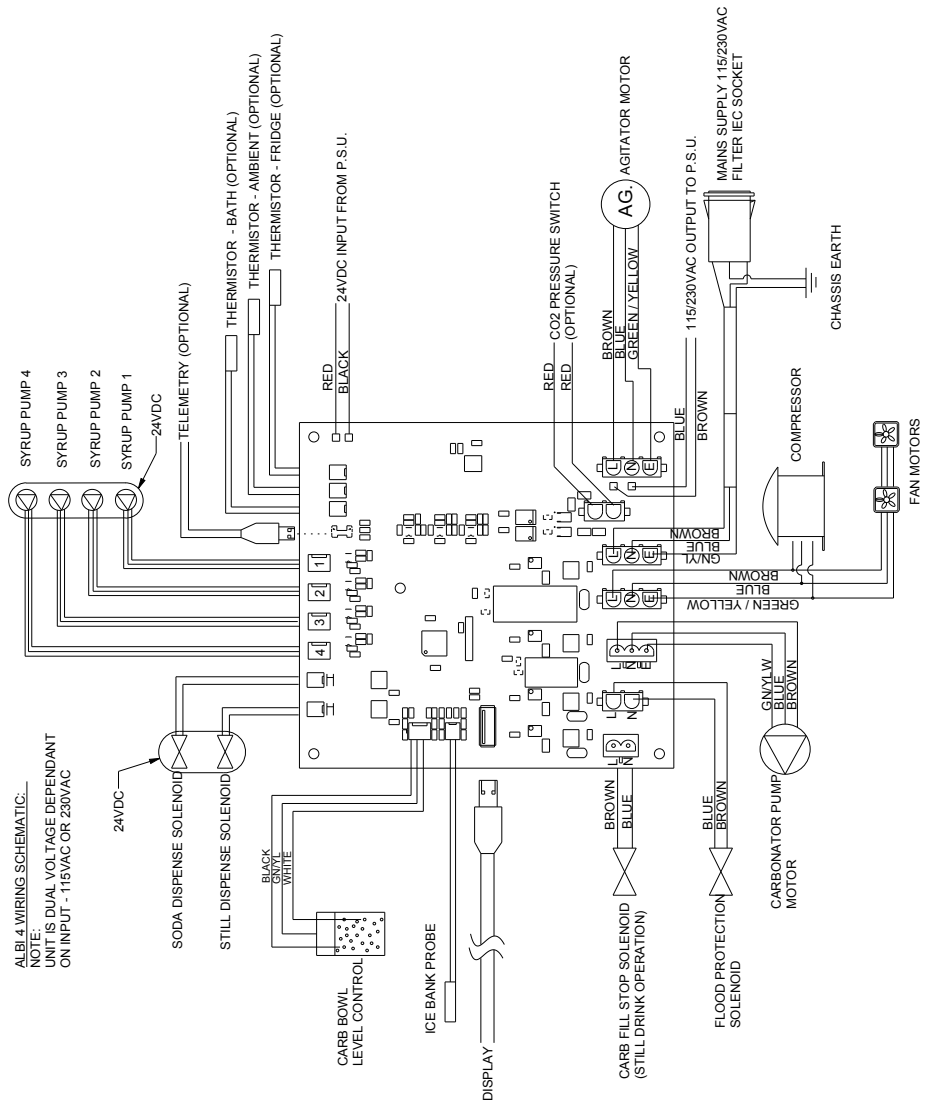

ALBI 4 WIRING SCHEMATIC
NOTE:
UNIT IS DUAL VOLTAGE DEPENDANT
ON INPUT - 115VAC OR 230VAC

Section 4 – Maintenance and cleaning

- Service & Maintenance of the equipment should only be carried out by Welbilt (Halesowen) Limited. trained, competent, technicians, abiding by all the relevant statutory regulations and industry recommendations.
- Before removing the panels from the equipment the mains supply must be disconnected, either by removal of the plug from the wall socket, or in the case of hard wired equipment, switched off at the isolator. In both cases the equipment must be locked off to prevent the equipment inadvertently being powered up.
- Live testing must be avoided wherever possible, in most cases components can be tested with a multi-meter or insulation tester. Where live testing becomes necessary, all possible precautions to prevent injury to the maintenance technician and other people within the vicinity must be taken.
- In the event of the unit freezing up, disconnect the unit from the mains power supply and leave the unit to defrost until all the ice in the water bath has disappeared. Check the plumbing on the unit for leaks, (in the event of a leak call your service provider). If the unit has no leaks, reconnect the power to the unit and leave for 2 hours to rebuild the ice bank. Check for normal operation of the unit. In the event that the unit freezes up a second time or fails to operate as normal you **MUST** notify your service provider of a fault with the system.

WARNING:

- Persons performing cleaning/ sanitizing operations **MUST** be competent and fully trained in safe methods of use of cleaning/sanitising agents and their applications.
- Personal protective equipment should always be used.
- Flush sanitising solution from the unit thoroughly. Residual cleaning fluids or chemicals left in the system could create a health hazard.
- Do not use a water jet or steam hose to clean the appliance at any time.
- Regarding the cleaning and sanitising procedures please refer to national/EU regulations.
- The appliance must be thoroughly sanitised upon installation and before commissioning.
- For reasons of hygiene it is necessary that the system be flushed thoroughly after extended periods without use.

For the UK please follow the procedure below:

BASIC INSPECTION CHECKS BY THE END USER

DAILY:

1. Remove the dispense nozzle from the dispense valve and sanitise using unscented bleach or commercial sanitizer with hot water to a concentration of 100ppm available chlorine.
2. Empty the drip tray and sanitise as above together with the cup-rest.
3. Remove any splashed product from the dispense area.

WEEKLY:

There is no end user training required on this appliance other than understanding the weekly basic checks for safe unit operation. It is not recommended that the end user makes any adjustments or carries out any maintenance other than:

1. Visually check the condition of the mains lead and plug.
2. Visually check the unit and its pipework for evidence of leaks.

MONTHLY:

1. Isolate the appliance from the mains power supply when maintaining the equipment.
2. Remove any extraneous debris from the unit or its casing using a vacuum cleaner or brush.

TWICE ANNUALLY:

1. Isolate the unit from the mains electricity supply.
2. Clean and sanitize the product lines following the syrup suppliers\service providers instructions.

ANNUALLY:

1. Clean the condenser
2. Check the BRIX ratio

Sanitizing BEVERAGE SYSTEM CLEANING

Sanitize the beverage system at initial start-up as well as regularly scheduled cleaning. The drain pan must be in place under soda valves, to carry away detergent and sanitizing agents that will be flushed through valves.



BAG-IN-BOX SYSTEM SANITATION

The procedure below is for the sanitation of one syrup circuit at a time. Repeat to sanitize additional circuits.


You will need the following items to clean and sanitize the Bag-in-Box (BIB) beverage system:

- Three (3) clean buckets.
- Plastic brush or soft cloth.
- Mild detergent.
- Unscented bleach (5% Na CL O) or Commercial sanitizer.
- Bag-In-Box bag connector.


1. Prepare the following in the buckets:
 - Bucket 1 — warm to hot tap water for rinsing.
 - Bucket 2 — mild detergent and warm to hot water.
 - Bucket 3 — mix a solution of unscented bleach(5% Na CL O) or commercial sanitizer and warm to hot water. Mixture should supply 100 PPM available chlorine (1/4 oz. bleach to 1 gallon water).
2. Disconnect the “syrup-line side” of the BIB connector
3. Rinse connector with warm tap water
4. Connect syrup connector to BIB connector and immerse both into Bucket 1. A “bag-side” connector can be created by cutting the connector from an empty disposable syrup bag.
5. Draw rinse water through system until clean water is dispensed. Most beverage valves allow the syrup side to be manually activated by depressing the syrup pallet.
6. Connect Bucket 2 to system.

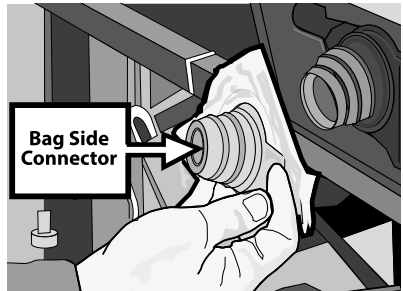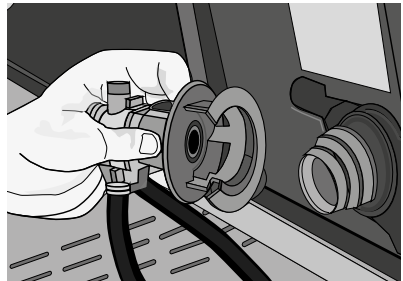

7. Draw detergent solution through system until solution is dispensed.
8. Repeat steps 2-7 until all syrup circuits contain detergent solution.
9. Allow detergent solution to remain in the system for 5 minutes.
10. Connect Bucket 3 to system.
11. Draw sanitizing solution through system until solution is dispensed.
12. Repeat step 11 until all syrup circuits contain sanitizer solution.
13. Allow sanitizer solution to remain in system for 15 minutes.
14. Remove nozzles and diffusers from beverage valves.
15. Scrub nozzles, diffusers and all removable valve parts (except electrical parts with a plastic brush or a soft cloth and the detergent solution.
16. Soak nozzles, diffusers and removable valve parts (except electrical parts) in sanitizer for 15 minutes.
17. Replace nozzles, diffusers and valve parts.
18. Connect Bucket 1 to system.
19. Draw rinse water through system until no presence of sanitizer is detected.
20. Attach syrup connectors to BIBs.
21. Draw syrup through system until only syrup is dispensed.
22. Discard first 2 drinks.

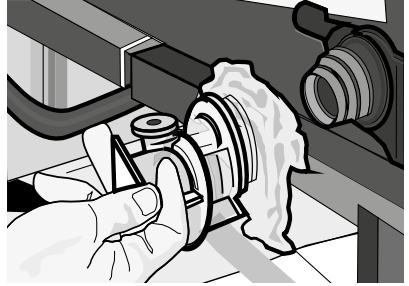

Section 5 – Spare parts list

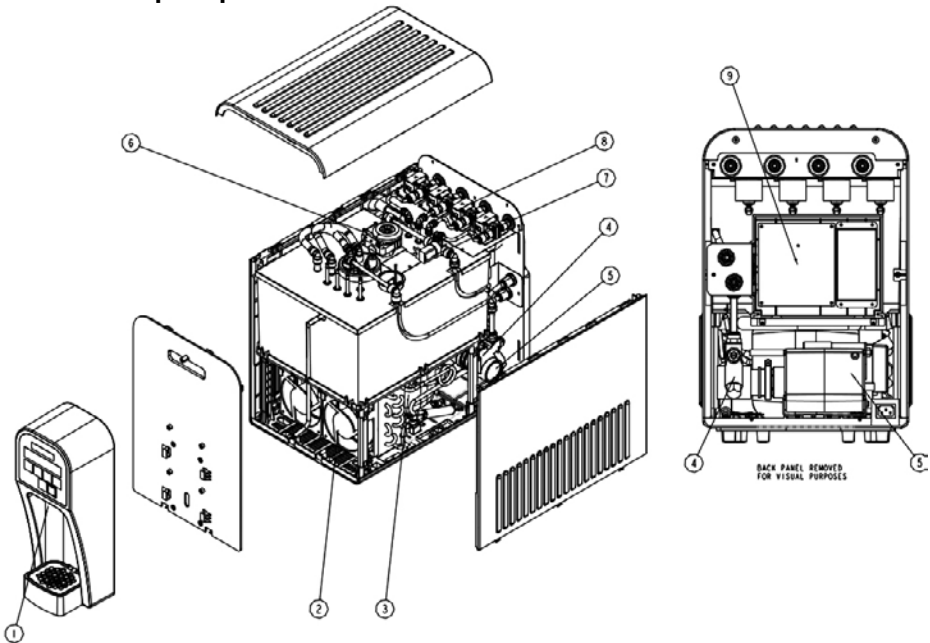

230V 50Hz

ITEM	PART No.	DESCRIPTION	QTY
1	PI015507	DISPENSE VALVE	1
2	MO4E685	4" BOX FAN	2
3	CM015501	TL4CN COMPRESSOR	1
4	PI42125	150W CARB MOTOR	1
5	PU70172-00	CARB PUMP	1
6	SA53097	AGITATOR MOTOR	1
7	P147525	SOLENOID VALVE	1
8	PU015503	PERISTALTIC PUMP - SYRUPS	4
9	PI015502	CONTROL PCB	1

110V 60Hz

ITEM	PART No.	DESCRIPTION	QTY
1	MO16328	4" BOX FAN	2
2	CM015930	TL4CNX.2 COMPRESSOR	1
3	MO57932	CARB PUMP MOTOR	1
4	MO016329	AGITATOR MOTOR	1
5	PI016343	SOLENOID VALVE	1


127V 60Hz

ITEM	PART No.	DESCRIPTION	QTY
1	MO016346	CARB PUMP MOTOR	1

Note: All other parts for this model are the same as the 110V/60Hz version


Section 6 – Fault finding charts

Refrigeration system \ Warm drinks

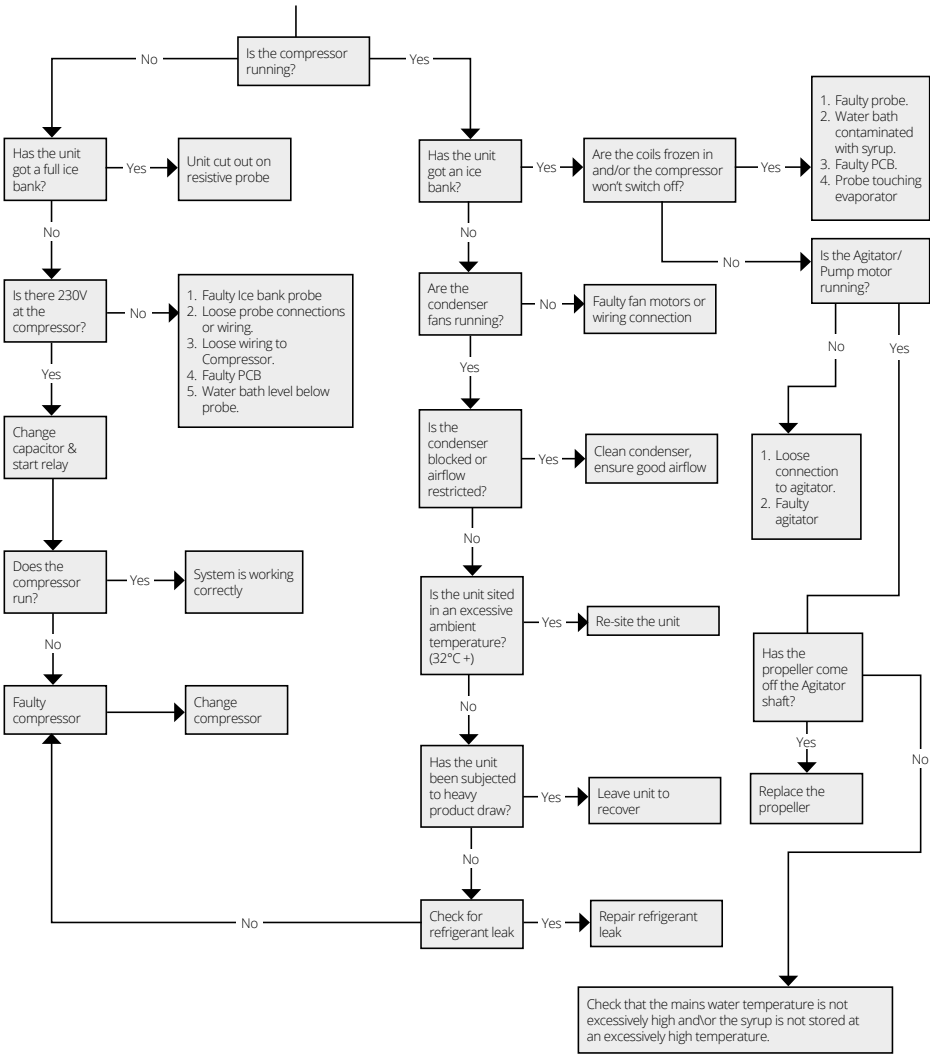


Fault finding charts

Unit will not dispense drinks and/or gas only

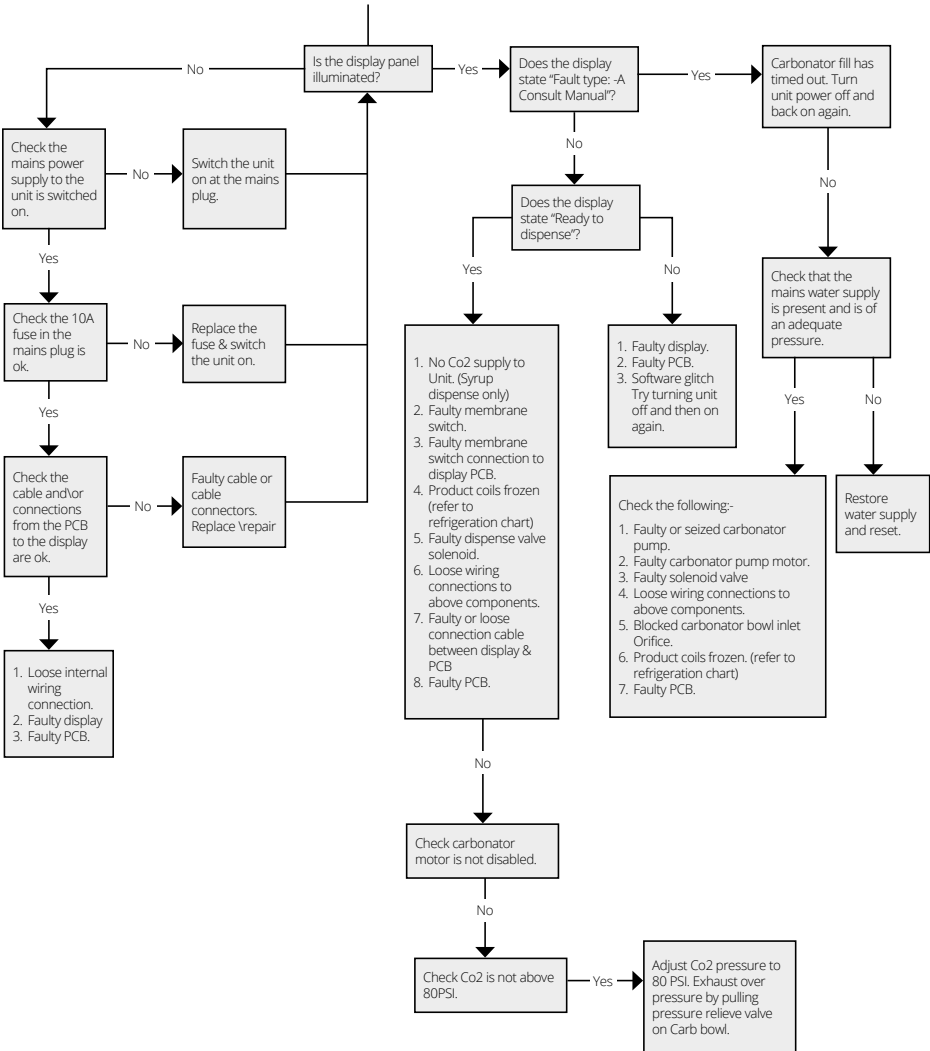


Fault finding charts

Flat drinks

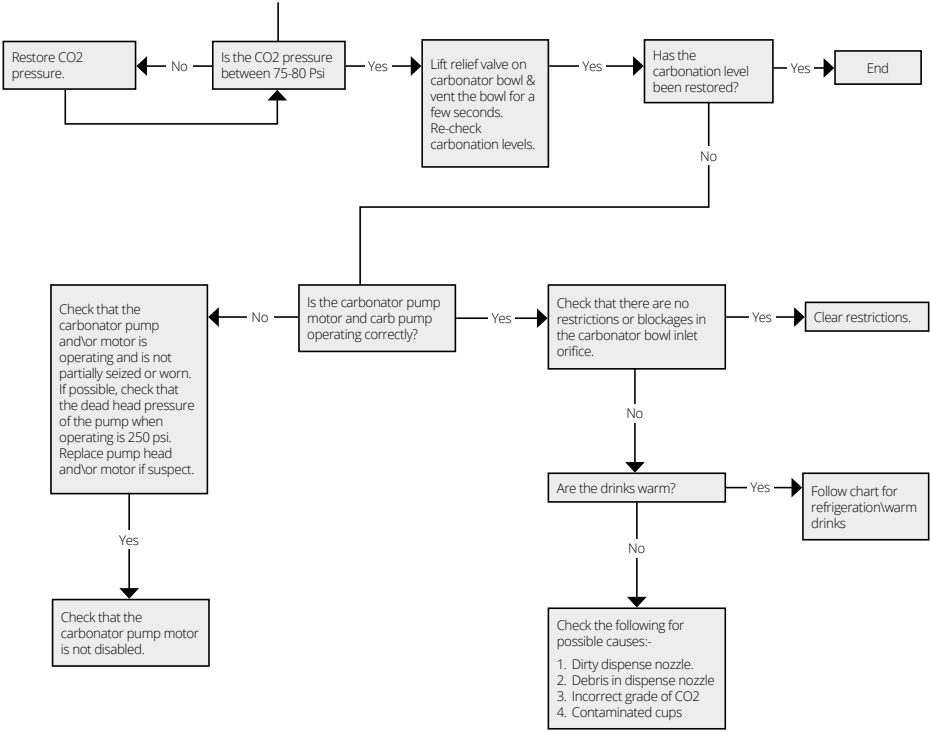

Fault finding charts

Incorrect mixture ratio (Weak or strong drinks)

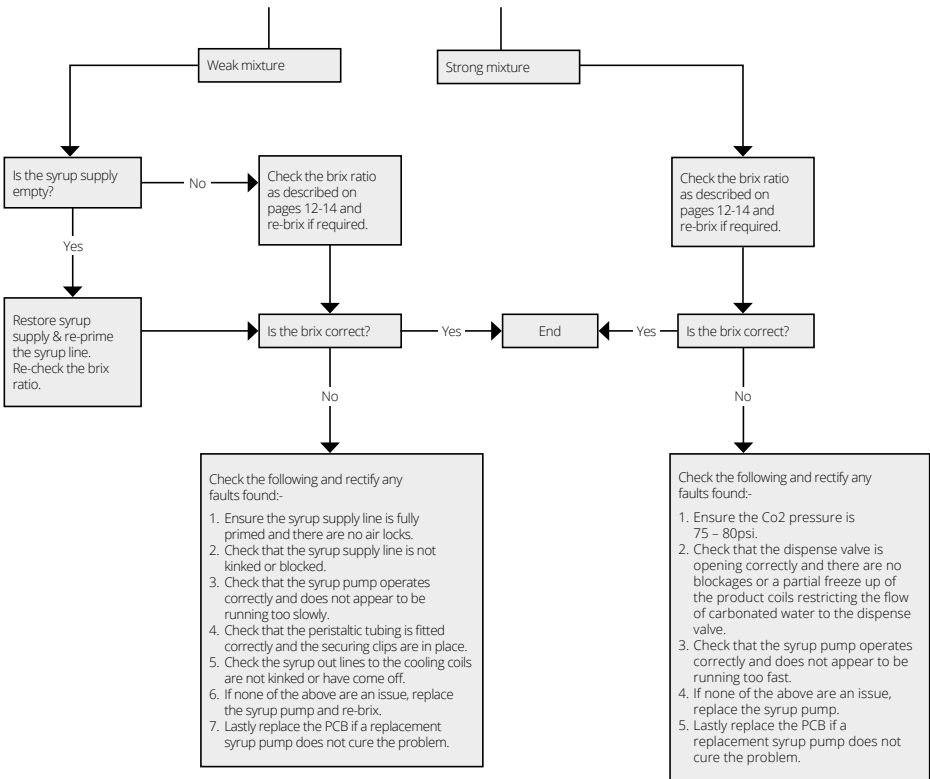

Section 7 – Technical Specification

Specifications

	14-2000-XX	14-2001-XX	14-2002-XX	14-2003-XX
Physical Data				
Height	500mm	500mm	500mm	500mm
Width	324mm	324mm	324mm	324mm
Depth	645mm	645mm	645mm	645mm
Max Noise dB(A)	<70dB(A)	<70dB(A)	<70dB(A)	<70dB(A)
Climatic Class	N/A	N/A	N/A	N/A
Weight	34kg	34kg	34kg	34kg
Total Shipping Weight	34kg	34kg	34kg	34kg
Total Operating Weight	34kg	34kg	34kg	34kg
Electrical				
Mains Supply	220-240V / 50Hz	110-115V	220-240V / 60Hz	110-115V
Current	3.5A	7.6A	3.5A	7.6A
Fuse rating	10A	N/A	N/A	N/A
Refrigeration				
Compressor	TL4CNX	TL4CNX.2	EMI70EUR	TL4CNX.2
Refrigerant	R290 (GWP 3 CO2e 0.23kg)			
Charge	75g	78g	75g	78g
Controls				
	ALBI 4 PCB + Display			
System protection				
Compressor	Klixon			
Carbonator Pump	Thermal fuse and carb bowl time out			
Coils				
Syrup coils	6.35mm x 0.5mm 316 stainless steel			
Soda coil	6.35mm x 0.5mm 316 stainless steel			
Pre-chill coil	6.35mm x 0.5mm 316 stainless steel			

Section 8 – Declaration of conformity



- EC Guideline Electro Magnetic Contract 2014/30/EU
- Machinery Directive 2006/42/EC
- Pressure Equipment Directive 2014/68/EU
- Food safety 1935/2004/EC
- Plastic materials in contact with food 10/2011/EU
- Good manufacturing practice for articles in contact with food 2023/2006/EC
- RoHS2 2011/65/EU
- WEEE 2002/96/EC
- REACH 1907/2006/EC
- Water Supply (Water Fittings) Regulations of 1999

Marking of the equipment:

- | | |
|---------------------|---------------------------|
| - 14-2000-xx | ALBI 4 230V / 50Hz |
| - 14-2001-xx | ALBI 4 115V / 60Hz |
| - 14-2002-xx | ALBI 4 220V / 60Hz |
| - 14-2003-xx | ALBI 4 127V / 60Hz |

The above named appliances have been developed, built and manufactured in agreement with above listed EC Guidelines in sole responsibility of the company

Welbilt (Halesowen) Limited

The following coordinated standards have been applied:

- EN 55014-1:2006 + A1:2009 + A2:2011
- EN 55014-2:2015
- EN 60335-1:2012 + A11:2014
- EN 60335-2-75:2004 + A2:2008
- EN 60335-2-89:2010 + A1:2016
- EN 61000-3-2:2006 + A1:2009 + A2:2009
- EN 61000-3-3:2008
- EN 1672-1:2014
- EN 1672-2:2005 + A1:2009
- BS EN ISO 12100:2010
- BS 6920 - 1:2014

A complete technical documentation is available. A quality safety system according to DIN ISO 9001 is installed in the business.