



NEXT

0150NEXTSNV.000


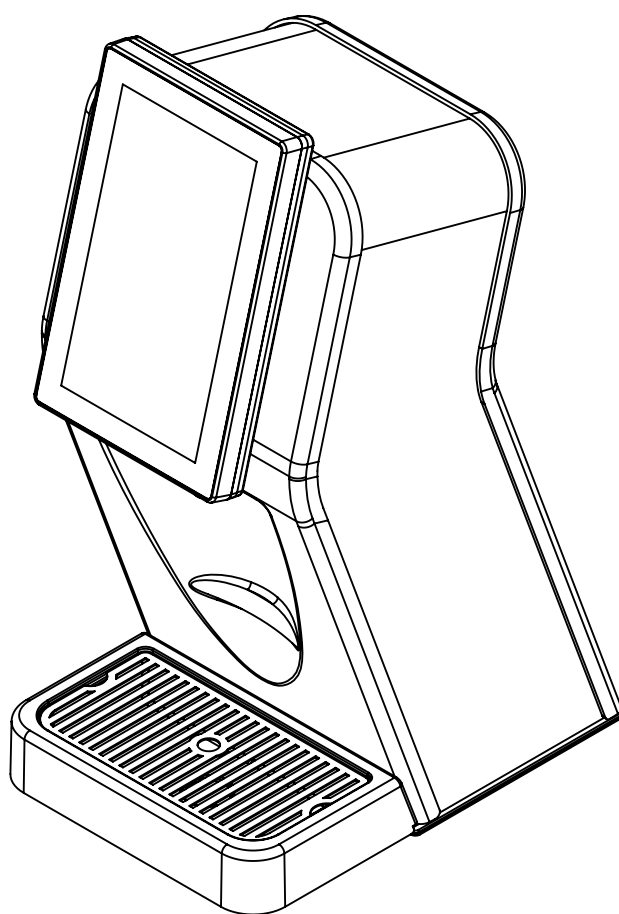


FIG.1

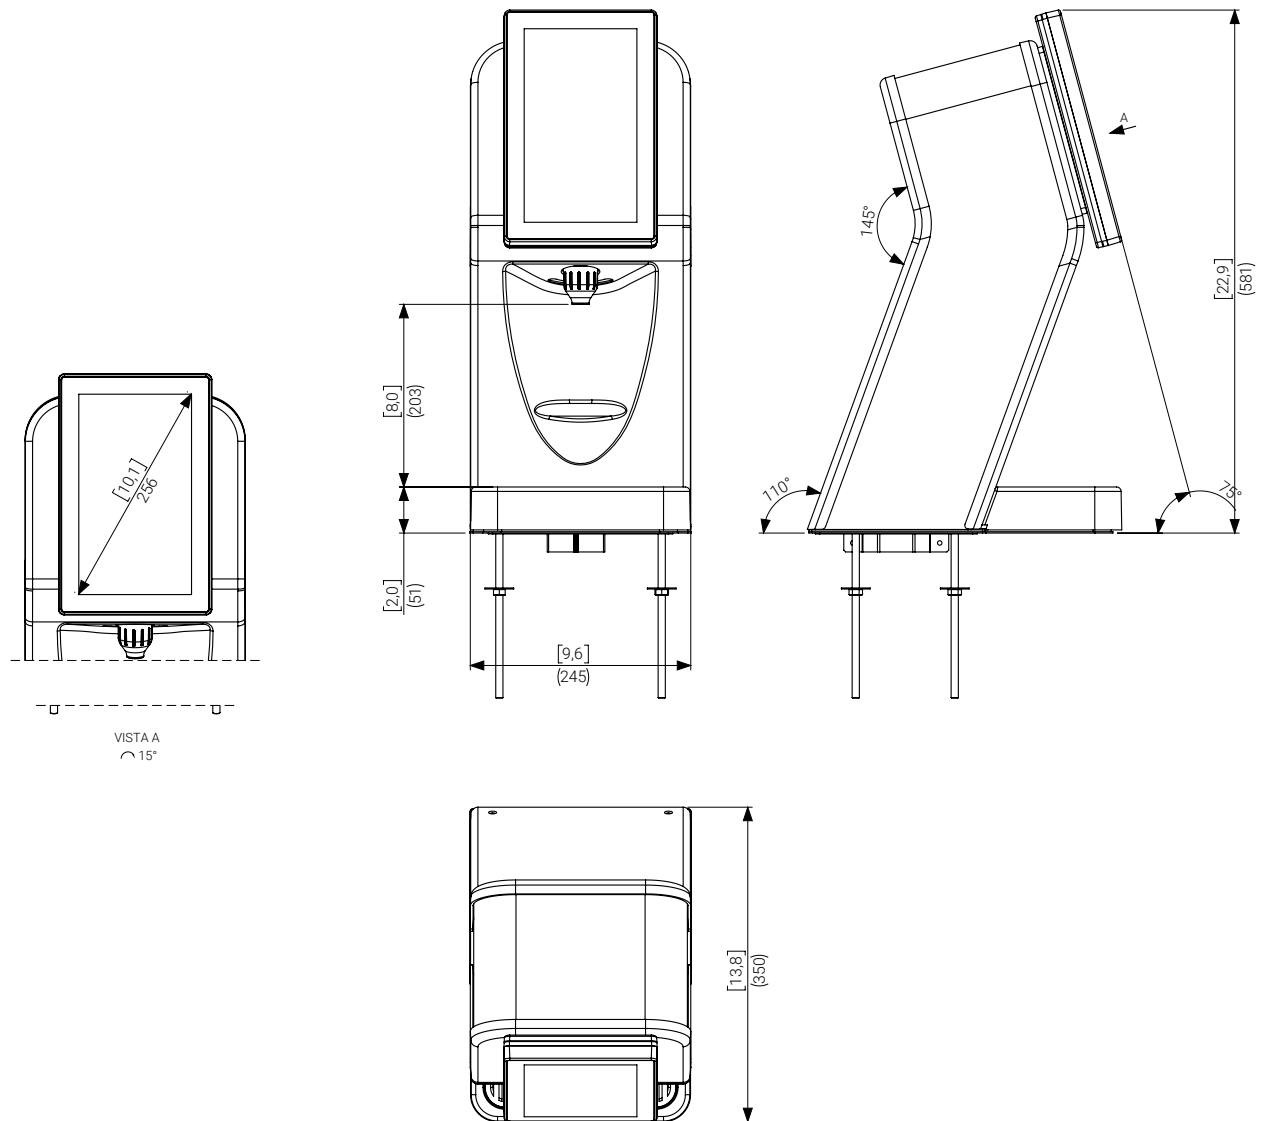

(mm)
[in]

FIG.2

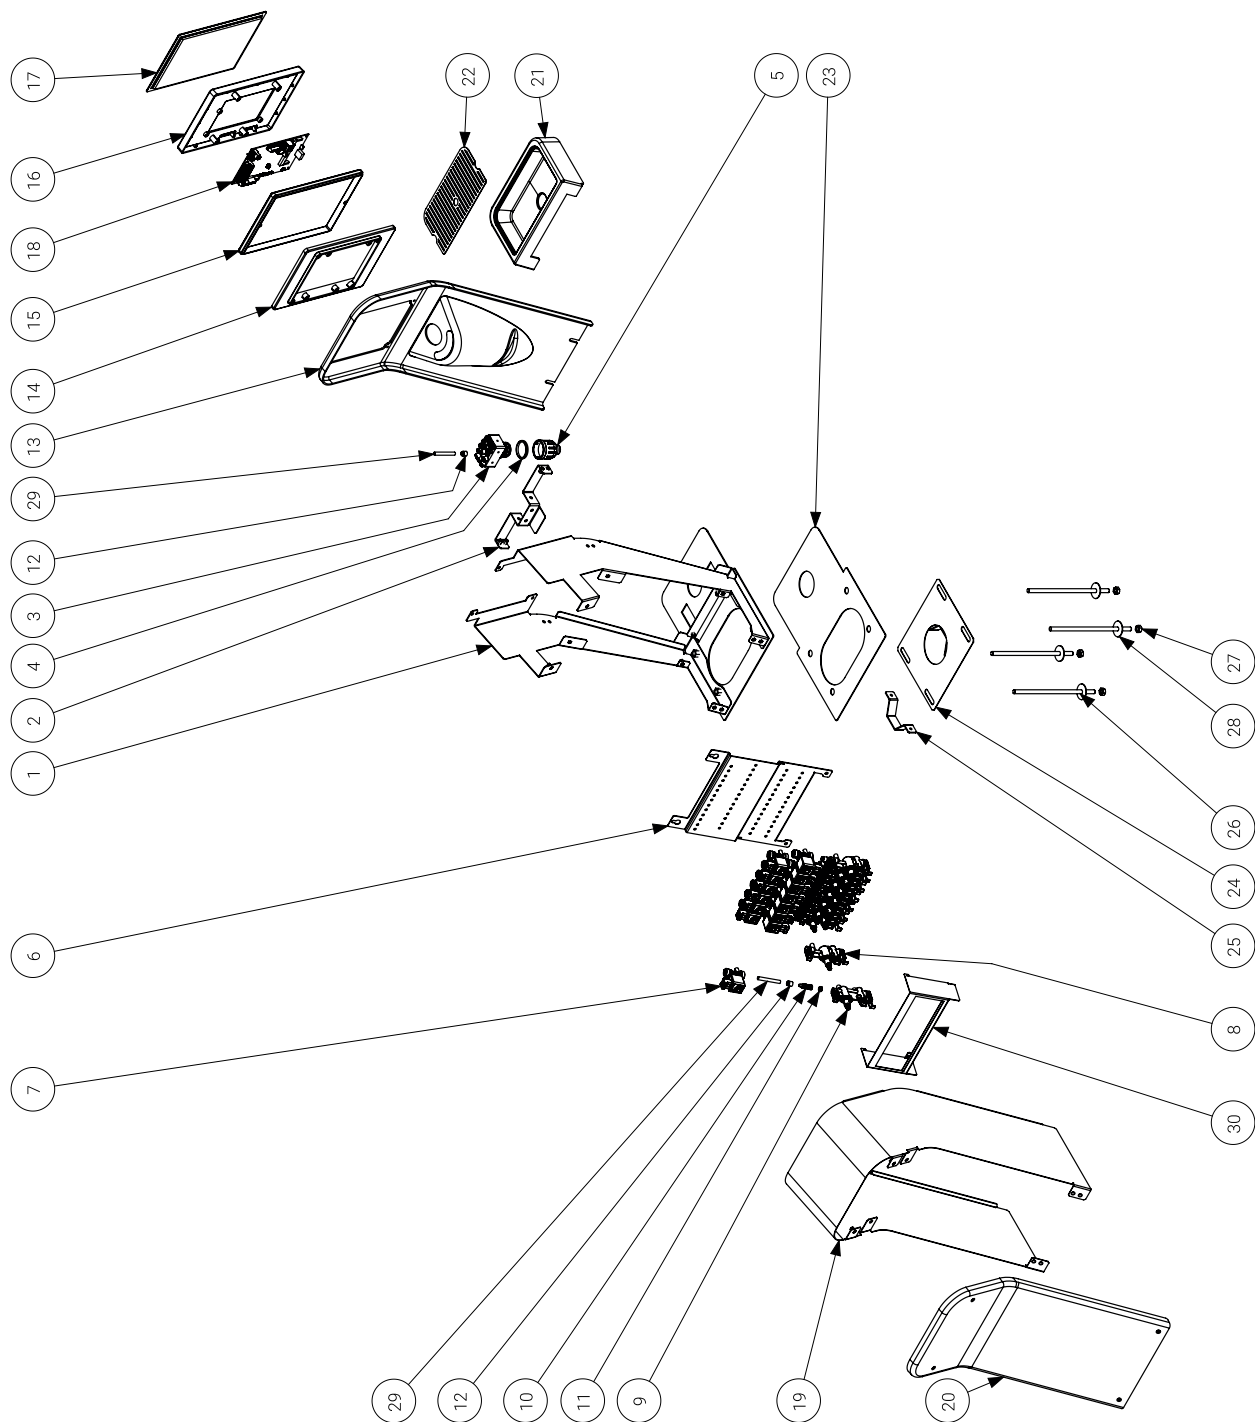


FIG.3


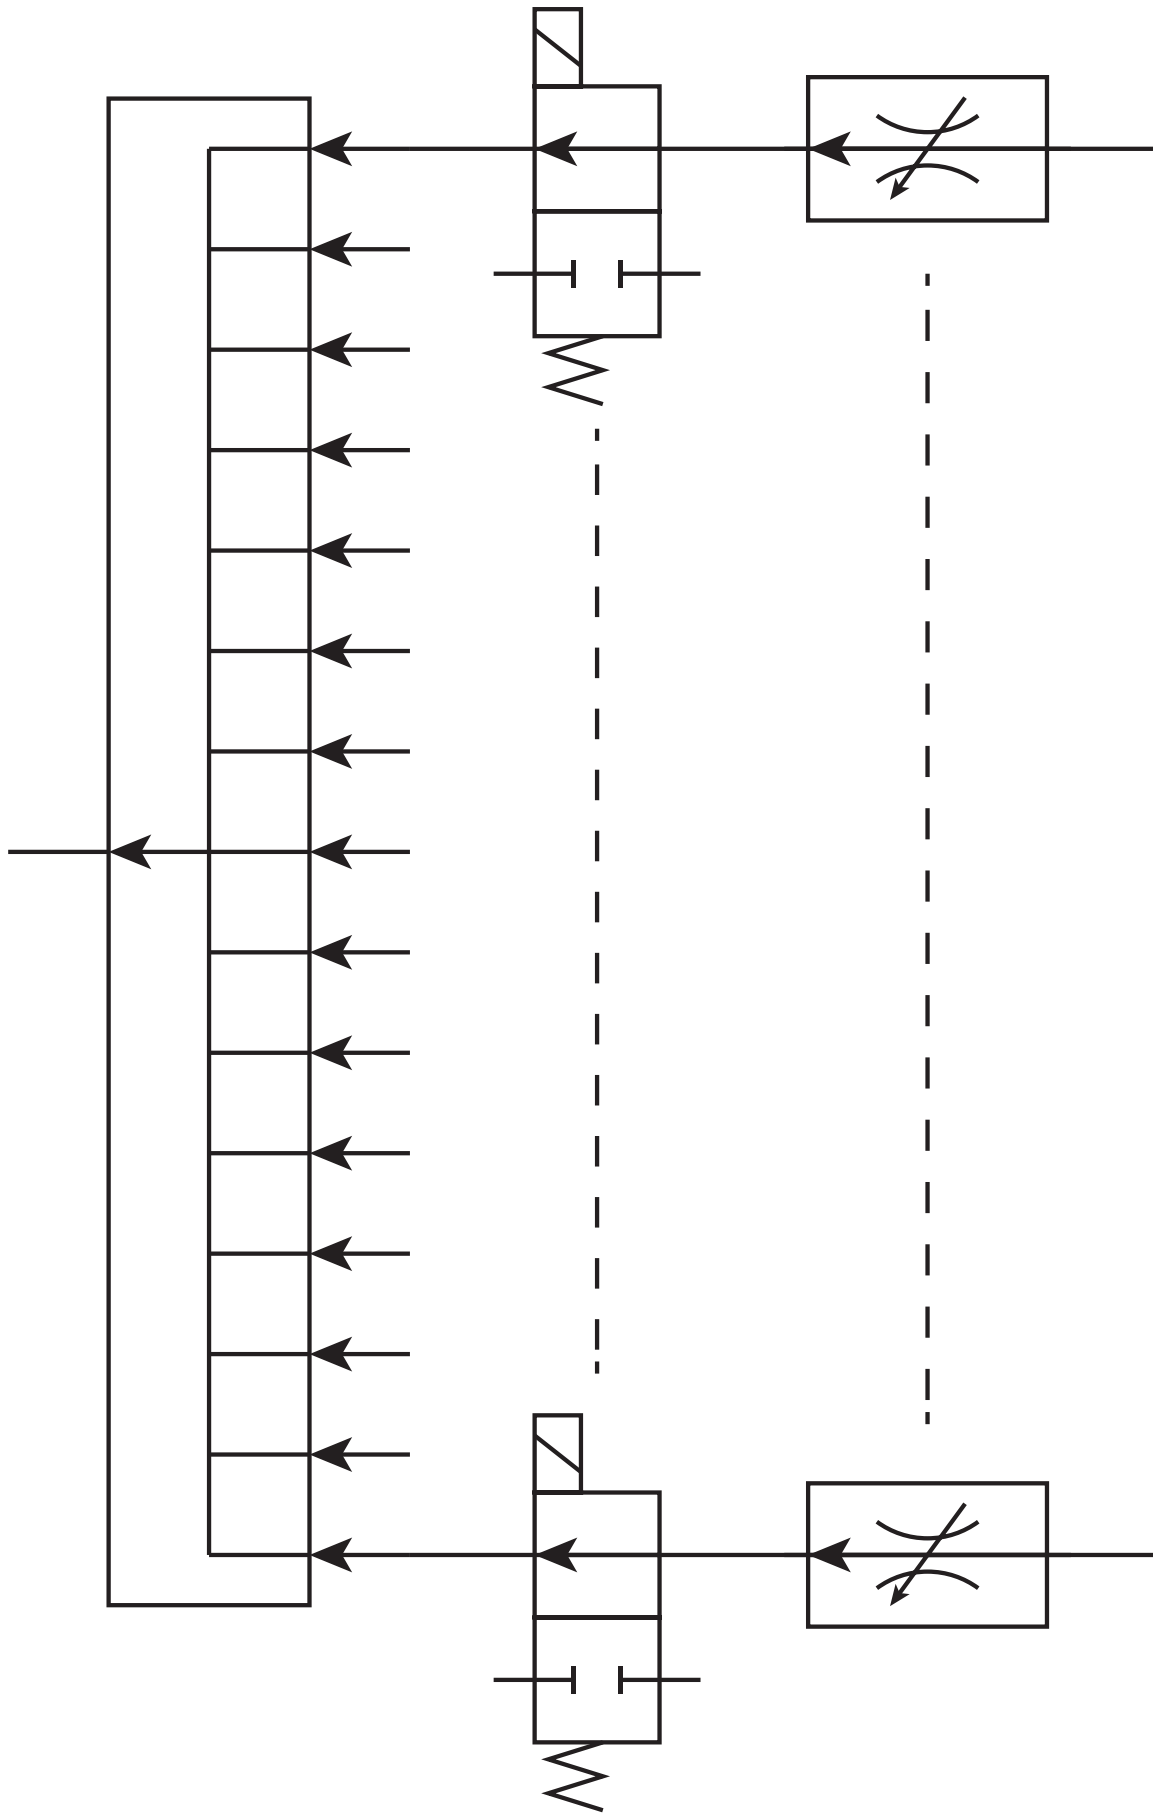


FIG.4



OPERATION AND MAINTENANCE BOOK

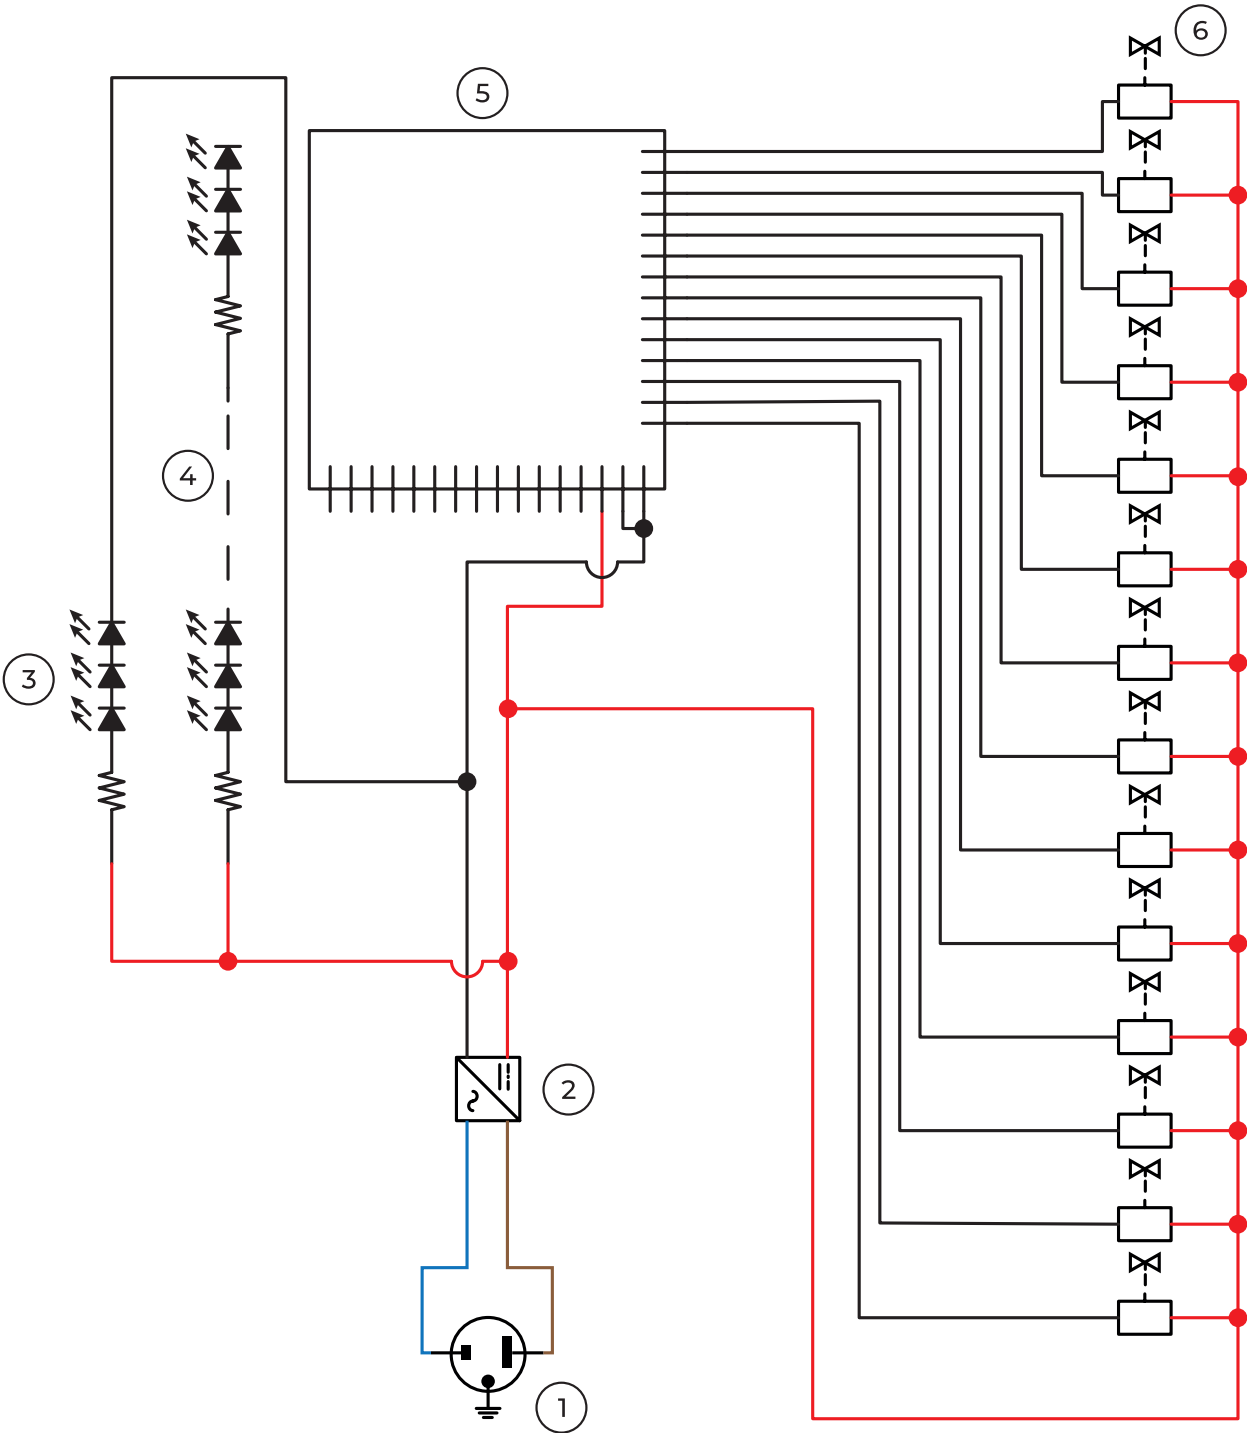

1. PREAMBLE


This manual must be considered as an integral part of the machine, and it must always be available for the people interacting with the machine itself; the manual must always accompany the machine, even if it is transferred to another user.

The operators must read this manual and carefully follow the instructions given therein, as VINSERVICE MICRO MATIC shall not be held responsible for damage caused to people and/or property, or suffered by the machine itself, if the following conditions are not complied with.

The Customer is required to keep trade secrets, therefore these documents and attachments must not be tampered with or modified, reproduced or transferred to third parties without the permission of VINSERVICE MICRO MATIC.

2. SYMBOLS AND SIGNS

The manual, and/or in some cases the machine, feature: plates, symbols or icons that indicate an obligation, a danger or a prohibition.

OBLIGATION SIGNS		
Obligation to consult the document, which must be available for future use and must not be deteriorated in any way.		
Operations that require the use of specialised and authorized personnel.		
Obligation to wear personal protective equipment (PPE) made available to the employer (e.g. leather gloves) when performing certain tasks.		
Obligation to turn off the machine before carrying out any installation, cleaning, topping up, maintenance operation, etc.; remove the plug.		
Obligation to dispose of electrical and electronic waste.		

DANGER SIGNS		
Operations or situations in which the staff must pay close attention: general danger or dangerous voltage.		
- Low or high temperature zones; - Condensation or product leakage which may cause the operator to slip or may injure him/her.		
- Danger due to electromagnetic interference or emission of fumes with a high level of inflammability. - Possible danger of explosion.		

PROHIBITION SIGNS	
Prohibition to access the area examined or prohibition to carry out this operation.	

CAUTION	
Risk of fire	

3. NEXT MAIN COMPONENTS (FIG.2)

N°	CODICE_GESTIONALE	DESC_ENG	QTY
1	2426NEXTINT.000	MAIN STRUCTURE NEXT	1
2	1445NEXTTES.000	NEXT HEAD SUPPORT BRACKET	1
3	2065TERODIF.14V	DISPENSE HEAD + DIFF 14 CH UP	1
4	0440DIFNZBG.000	TAPRITE NOZZLE SEAL 5PCS	1
5	1825BECRANE.000	RATTLER BLACK NOZZLE	1
6	1445NEXTSGF.000	FLOW CONTROL NEXT PLATE	1
7	101024V1414.000	24VDC SOLENOID VALVE 1/4" QFIT	14
8	1605VFCSTDL.000	FLOW CONTROL VALVE STD LONG	7
9	1605VFCSTDC.000	FLOW CONTROL VALVE STD SHORT	7
10	0464156INDR.000	FITTING, INLET, GUN	14
11	04542010INC.000	O-RING 2-010	28
12	0494FERU250.000	FERRULE FITTING .250 (1/4")	28
13	2438NEXTFRO.000	FRONT THERMOFORMED NEXT	1
14	0850NEXTPOS.T01	NEXT MONITOR FRAME SUPP-CHROME	1
15	0335NEXTOPA.000	NEXT OPAL FRAME	1
16	0850NEXTFRO.T01	NEXT DISPLAY FRONT FRAME-CHROM	1
17	120710INSNV.000	10.1" CUSTOM TOUCH DISPLAY	1
18	1205HMICARR.000	SNV ELECTRONIC BOARD	1
19	2426NEXTEST.000	External Next sheet metal	1
20	2438NEXTPOS.000	BACK THERMOFORMED NEXT	1
21	2815NEXTRAC.000	NEXT DRIP TRAY	1
22	2820NEXTXXX.000	GRID X DROP COLLECTOR NEXT	1
23	0440NEXTXXX.000	Next column gasket	1
24	1445NEXTCOL.000	NEXT CLIP PLATE	1
25	1445NEXTBLO.000	NEXT COLLAR LOCK	1
26	0408200MA8A.000	THREADED BAR M8 200mm	4
27	042208OTTON.000	M8 NUT	4
28	04800832ACC.000	SS 8X32 WASHER	4
29	2020TFGUL14.VAL	FLAVOURGUARD ULTRA 1/4" TUBE	2
30	0825NEXTSIC.000	SECURITY PLATE NEXT	1

4. SUMMARY

FIG.1	2
FIG.2	3
FIG.3	4
FIG.4	5
1. PREAMBLE.....	6
2. SYMBOLS AND SIGNS.....	7
3. NEXT MAIN COMPONENTS (FIG.2)	8
4. SUMMARY	9
5. SUPPLY CONDITIONS.....	10
6. REFERENCE STANDARDS.....	10
7. ACCIDENT PREVENTION AND RESIDUAL RISKS	11
8. LIFTING AND TRANSPORT	12
9. AIM OF THE DOCUMENT	12
10. PERSONNEL QUALITIES.....	13
11. FIELD OF EMPLOYMENT	13
12. QUICK OPERATION GUIDE.....	14
FIELD OF EMPLOYMENT	14
INSTALLATION.....	14
13. TOUCH SCREEN	18
Valves	19
Dispense screen.....	19
Cup sizes	19
Customization.....	20
Password.....	20
Brixing.....	21
Cleaning	21
Flow rates.....	21
Update via USB	22
System log (<i>currently under development</i>).....	22
14. MAINTENANCE.....	22
Routine maintenance:.....	22
Flow Control adjustment:	22
15. NOTES	23
16. DECLARATION OF CONFORMITY	26

5. SUPPLY CONDITIONS

- **VINSERVICE MICRO MATIC** will not be held liable for any failure to comply with the standards governing correct installation.
 - **VINSERVICE MICRO MATIC** will not be held liable for any loss in production, unless expressly shown in the purchase order.
 - **VINSERVICE MICRO MATIC** will not be held liable for any defects or malfunction arising from improper use of the equipment, alterations due to the transportation or peculiar environmental conditions, lack of or improper maintenance, manhandling or improper service; operation by unqualified personnel and the use of product accessories not belonging to the equipment.
 - **VINSERVICE MICRO MATIC** will not be held liable for damages arising from inappropriate or imprudent operations not conforming to those described within this manual and in the attached documentation performed by both expert and inexperienced personnel.
 - Since it is not possible to foresee all the installations and environments in which this equipment will be installed, therefore customer must check the following:
 - Environmental conditions where the equipment is installed;
 - Beverages, water and CO2 feeding and pushing systems;
 - The capabilities of the personnel entrusted with the installation and/or use of the machine.
 - The customer must only use original spare parts installed in accordance with their prescribed use.
- N.B. Manufacturer accepts liability for commercial parts. If in doubt, ask for documentation.
- **VINSERVICE MICRO MATIC** will not be held liable for the disposal of equipment parts or materials needed to operate the machine.
 - Please remember that this is an electrical equipment and thus its components must be disposed in compliance with the regulations enforced in its country of installation.

List of enclosures:

In addition to this operation and maintenance manual the following documents are supplied along with the equipment:

Declaration of conformity

6. REFERENCE STANDARDS


This Machine is manufactured in compliance with:

- D.lgs. n° 81(3april2008) 3 august 2009 N° 103.
- D.lgs. n° 89/391, 89/654, 655/CEE, 89/656, 90/269, 90270, 90/394, 90/679, 93/88/CEE, 95/63/CE, 97/42/CE, 98/24/CE 99/38/CE, 99/92/CE, 2001/45/CE, 2003/10/CE, 2003/18/CE e 2004/40/CE
- D.lgs. n° 791, 18 October1977 and D.lsg. (25 November1996) n°626 (2006/95/CE) (September 19th, 1994)
- D.Lgs. n° 194, 6 November 2007 European Community (CEI EN 2004/108/CE) (EMC)
- CEI EN 2006/42/CE Machines
- CEI EN 60335-2-89: Refrigerating equipment
- CEI EN 60335-2-89/A1/A11 February 2006
- CEI EN 60335-2-89/A2 November 2007
- UNI EN ISO 12100-1 - UNI EN ISO 12100-2 (EMC) Electromagnetic compatibility - CEI E55014-1: CEI E55014-2: (EMC) Electromagnetic compatibility
- ANSI/UL 471, Issue: 2010/11/24, Ed:10, Rev: 2013/06/28, Standard for Safety Commercial Refrigerators and Freezers
- CSA Standard for Refrigeration equipment, CSA C22.2 No. 120 - Issued: 2013/03/01, Ed: 4
- NSF 18:2016 Manual Food And Beverage Dispensing Equipment

7. ACCIDENT PREVENTION AND RESIDUAL RISKS

Although this equipment has been manufactured under the strictest safety regulations, however for obvious reasons it is not possible to foresee all the installations and environments in which this equipment will be installed. Therefore it is pertinent that customer should inform the manufacturer of peculiar installation conditions.

The instructions set out in this manual do not replace the safety instructions and technical data on installation and operation of the equipment. It neither replaces common sense nor the safety regulations enforced in the country of installation.



- Operators must be given correct information. They must therefore read and follow the technical information set out in the manual and in the attached documentation. Carefully keep the technical documentation accompanying the equipment.
- **VINSERVICE MICRO MATIC** will not be held liable if installation instructions are not followed.
- Do not use the equipment if any operating fault occurs.
- The equipment has been designed under strictest energy saving regulations enforced in the manufacturing country therefore customer should avoid unnecessary energy waste.
- The equipment must not be installed outdoors or in adverse environmental conditions (sun, rain, snow, wind, high humidity, etc.) Also make sure that there is no electromagnetic interference.
- Equipment has not been designed to operate in environments in which there is a danger of fire or explosions.
- It is absolutely forbidden to tamper and/or inhibit or modify the safety devices.
- In case of fire, make use of carbon dioxide extinguishers and automatic suction systems to fight against fire in closed environments. Pay attention to flammable beverages.



- Cleaning and maintenance operations must be carried out when the machine is off after 5 minutes of unplugging the power cord.
- Personnel must NOT go anywhere near the equipment on bare feet or with wet hands. Personnel must also make use of suitable personal protection device used accordingly. Beverage leaks may cause slippage.
- Maintenance personnel must report any fault or deterioration due to wear or aging so that safety conditions can be promptly restored.
- Do not carry out makeshift repairs. Only manufacturer-approved spare parts must be used for the repairs and installed accordingly. Components must then be reassembled in the original position and condition.
- If the power supply cable is broken or damaged it needs to be replaced by the constructor or by specialized personnel.
- Cleaning of the equipment should be done with suitable devices and detergents that will not cause it any damage.
- The use of water jets for equipment cleaning or washing is strictly prohibited. Food circuits must be washed or cleaned with suitable non toxic products.





- The installation, removal and/or re-installation in other place and extraordinary maintenance operations must be done only by specialized personnel in compliance with the instructions outlined within this manual.
- Proper illumination of equipment installation location is advised in order to guarantee that all necessary operations are carried out in safe conditions.



- Although **VINSERVICE MICRO MATIC** has removed sharp edges where possible, however the use of personal protective device e.g. leather gloves is recommended when handling: sheet metal, self-threading screws, etc....
- The single equipment's output sound level (Noise) when operating at full capacity and correct maintenance is inferior to 70dBA thus absolutely harmless to the operator. Whenever the noise threshold is exceeded due to different and unpredictable installation cases, ask for the intervention of a specialized technician.
- Handling and/or lifting of heavy objects (more than 30Kg) must be carried out by means of suitable lifting devices.

8. LIFTING AND TRANSPORT

- The equipment is usually shipped in a cardboard box packaging, adequately protected on all its edges. The packaging in its dry and integral state is self-supporting and sturdy enough for machine lifting and handling. If packaging is in a wet state, pay attention while lifting and make sure lifting bands are placed in the centre.
- Stacking of equipment over another is only allowed when packaging is in its integral and dry state.
- Equipment should be lifted one at a time.
- The lifting device (ropes, polyester belts, chains) must be designed to bear the weight of the machines: the opening angle must be the same as or less than 50°-60° in order to avoid crashing or damaging the packaging and/or the bodywork sheet metal.
- During handling, check that the weight of the loads is correctly distributed on the ropes and do not make sudden movements that could create dangerous oscillations.
- Remember that packing elements (wood, nails, paper, cellophane, metal points, adhesive tape, straps, cords, etc...) may cut and/or cause injury unless they are handled with care. They must be removed with appropriate instruments and must be kept out of the reach of irresponsible persons (e.g. children). These rules also apply to the instruments used in removing the packing (scissors, hammers, pliers, knives, etc...). The packing must also be eliminated and disposed of in accordance with the regulations in force in the country of installation.
- When opening the packing, check the machine for damage and check that no machine parts or accessories are missing.



- If you detect faults or deterioration, suspend operations immediately and contact the carrier or shipper and also notify.

9. AIM OF THE DOCUMENT

This document (OPERATION AND MAINTENANCE MANUAL) is a useful guide that enables safe working and the performance of all operations necessary to keep the equipment in a safe working order.

- The instructions set out in this manual do not replace the safety instructions and technical data on installation and operation of the equipment. It neither replaces common sense nor the safety regulations enforced in the country of installation.
- Personnel dealing with the equipment must read this manual carefully; operators must also be made aware of residual risks arising from its use.



10. PERSONNEL QUALITIES



- Only expert operation or maintenance personnel familiar with the described task and knowledgeable enough to execute them must use this equipment. They must be able to sufficiently carry out the instructions contained in this manual, thoroughly carry out checks and ensure safety.
- The use of unqualified personnel especially for installation and maintenance operations is strictly prohibited.
- Since it is not possible to describe all operational information for the equipment, it is therefore mandatory that persons in operational contact with the equipment possess basic knowledge of its operations in order to perform their duties.
- Personnel in operational contact with the equipment must use the personal protective device required by law: leather gloves for sharpened or pointed objects or components at high temperatures.

11. FIELD OF EMPLOYMENT

VINSERVICE MICRO MATIC will not be held liable for damages of any type arising from non compliant or unwise usage. The equipment **MUST** neither be operated by unqualified personnel nor qualified personnel doing so in non compliance with what is described in the present user's manual and attached documentation.

The use of this equipment for other purposes rather than those of which it were designed is strictly prohibited. This equipment has been designed to dispense post-mix beverages, with the possibilities and features described herein.



Limits of use:

- Allowed room temperature: (+ 5 / + 45 °C) 41°F / 86 °F;
- Do not use liquids or beverages with high volatility or flammability degree or that can cause fire;
- Protection Class IP20 Insulation Class 5-T.

Prohibited uses:

- It is strictly prohibited to use the equipment or parts of it in flammable environments. The equipment cannot be operated or installed in environments where gases or explosive volatile substances are present.



N.B VINSERVICE MICRO MATIC will not be held liable for unsuitable and/or unhygienic conditions in the workplace.

- VINSERVICE MICRO MATIC will not be held liable for damages of any type arising from non compliant or unwise usage.
- Dispensing beverages without prior cleaning and sanitizing of equipment is strictly prohibited.
- The use of this equipment or part of it for other purposes other than those for which it is designed or not compliant with its proper usage is strictly prohibited.
- Only expert operation or maintenance personnel familiar with the described task and knowledgeable enough to execute them must use this equipment. They must be able to sufficiently carry out the instructions contained in this manual, thoroughly carry out checks and ensure safety.
- The use of unqualified personnel especially for installation and maintenance operations is strictly prohibited.
- Since it is not possible to describe all operational information for the equipment, it is therefore mandatory that persons in operational contact with the equipment possess basic knowledge

of its operations in order to perform their duties.

- Personnel in operational contact with the equipment must use the personal protective device required by law: leather gloves for sharpened or pointed objects or components at high temperatures.
- This machine, can be used by children over 8 years old and people with poor mental or sensory skills, or people without enough experience or knowledge, only under surveillance or after they have been taught about the machine working and the risk connected to it.



- Children must not play with the machine.
- Children and people with poor mental or sensory skills, or people without enough experience or knowledge, can't perform cleaning procedures without surveillance.

12. QUICK OPERATION GUIDE

FIELD OF EMPLOYMENT

- **VINSERVICE MICRO MATIC** declines any responsibility for damages of any type that arose from non compliant or unwise usage. The machine **MUST NOT** be operated by inexperienced personnel who operate the unit not in compliance with what is described in the present user's manual and attached documentation.
The use of this equipment for other purposes not complying with its proper usage is absolutely forbidden.

This equipment has been designed to dispense beverages and food liquids, with the possibilities and features described herein.



Do not use liquids or beverages with high volatility or flammability degree or that can cause fire.

Prohibited uses:

- It is strictly forbidden to use the machine or parts of it in flammable environments. The machine can **NOT** be operated or installed in environments with presence of gases or explosive volatile substances.



N.B. VINSERVICE MICRO MATIC declines any responsibility for unsuitable and/or hygiene conditions in the workplace.

- **VINSERVICE MICRO MATIC** declines any responsibility for damages of any type that arose from non compliant or unwise usage.
- The use of this equipment or parts of it for other purposes not complying with its proper usage is absolutely forbidden.

INSTALLATION

ATTENTION:

1. **VINSERVICE MICRO MATIC** advises the cleaning of the equipment prior to use with a suitable cleaning agent.
2. It is recommended to protect the unit with a ground-fault circuit interrupter.
3. It is recommended to install a residual-current device (RCD) a nominal operating residual current below 30mA.
4. Water pipes connections and fixtures directly connected to a potable water supply shall be sized, installed and maintained in accordance with federal, state and local codes.

After removing the machine from its packaging, check that:

- a – The area where the machine is to be installed is solid and perfectly level;

b – The machine is positioned far from heat or humidity sources.

Start up:


The unit operation is completely automatic and does not require any particular operation by the operator. First of all make sure that there are no leaks present in the system and carry out a periodic control, as the unit can be left always running.

- After making sure that all previously described conditions are present (water and electrical connections, etc...), power on the machine.


Hydraulic connection:

Once received the fount the user need to connect the python to the fount. To do so follow the following step:


1. Open the back panel of the fount by unscrewing the 4 screws.

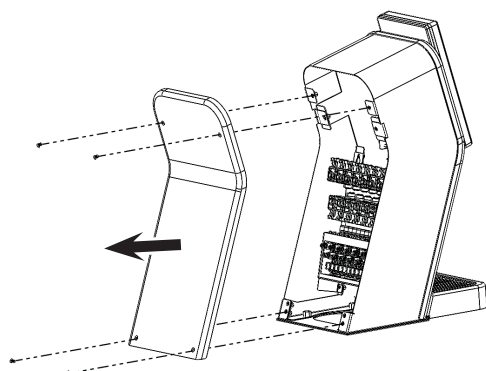


2. Remove the flow control protection by unscrewing the two screws and then pushing it upward to disengage the two metal teeth, then pull it.

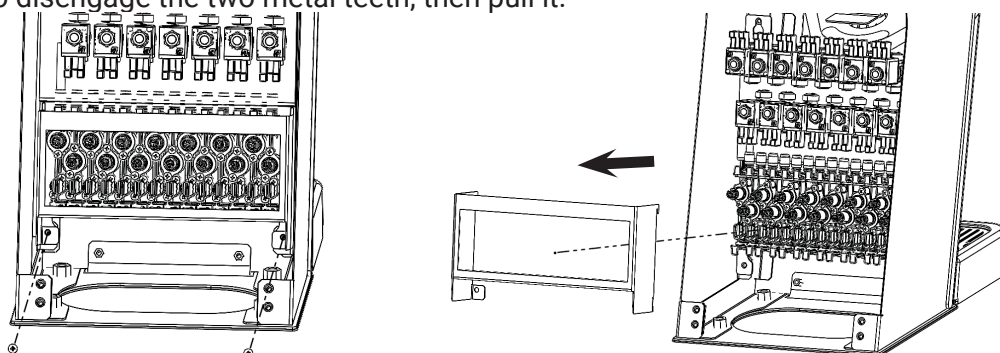


3. Open the bottom red clip of the flow control by pulling it.

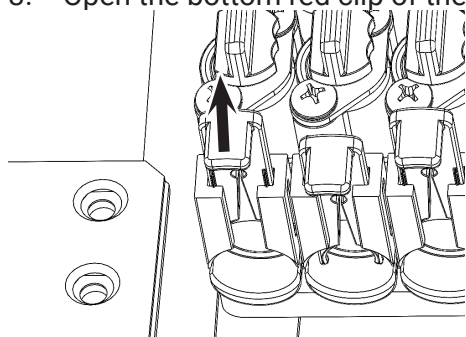


4. Insert the corresponding tube of the python to each flow control (the flow control and the python tubes are both numbered, be careful to match the numbers).

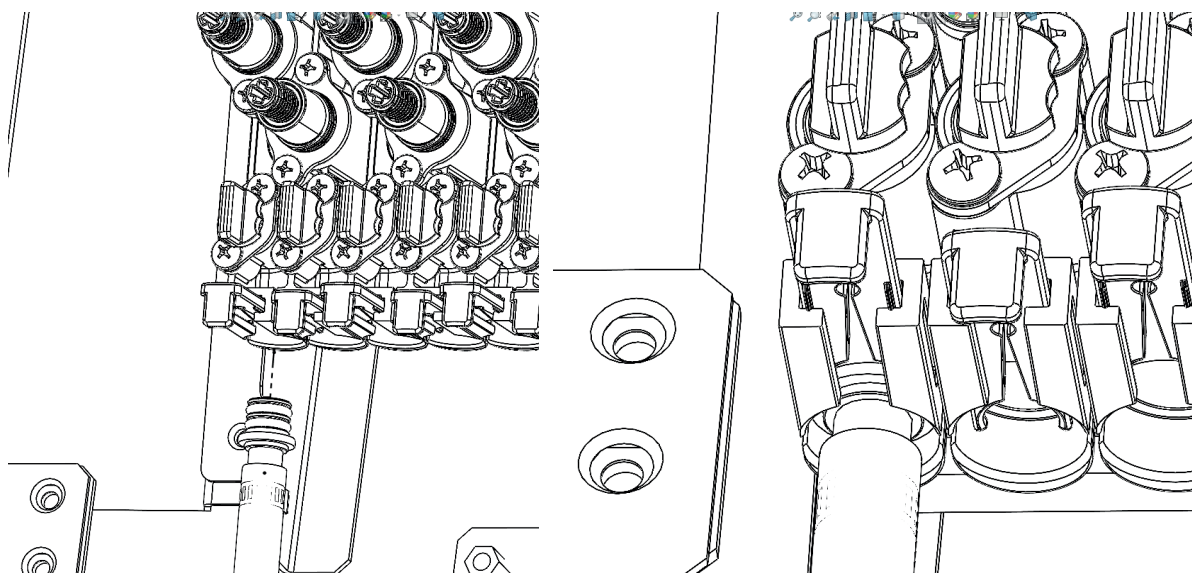


5. Secure the red clip by pushing on them.

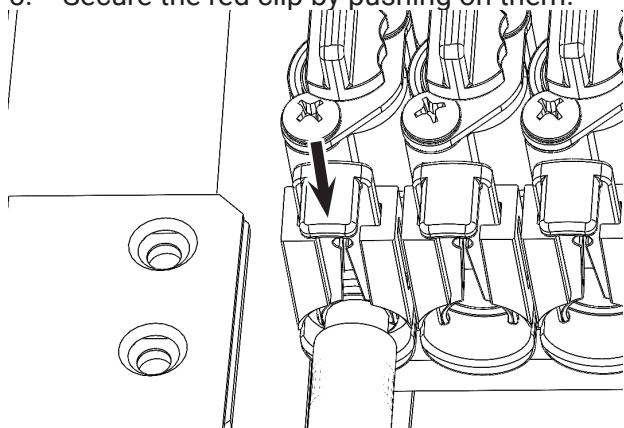


6. Set the flow control for each line (use the brixing menu, see "touch screen" chapter). To reduce the flow turn the flow control adjustment screw counterclockwise. To increase the flow turn the flow control adjustment screw clockwise.

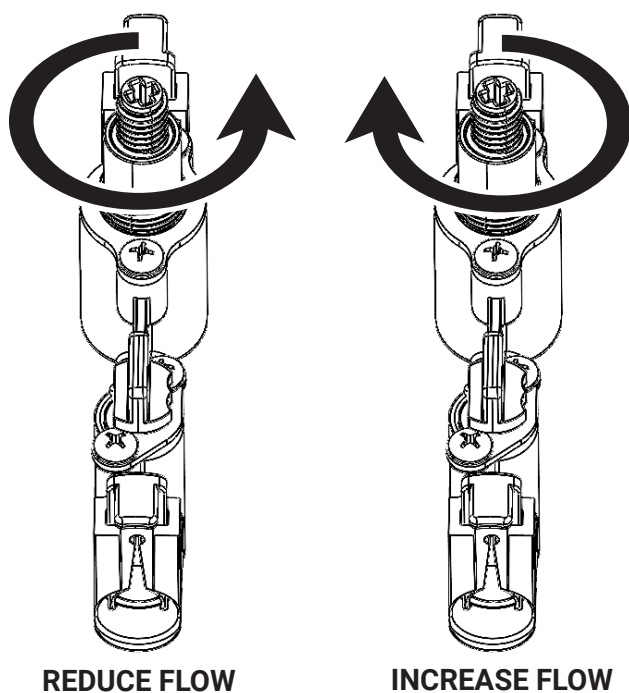


7. Replace the flow control protection in position and secure it using the two screws.

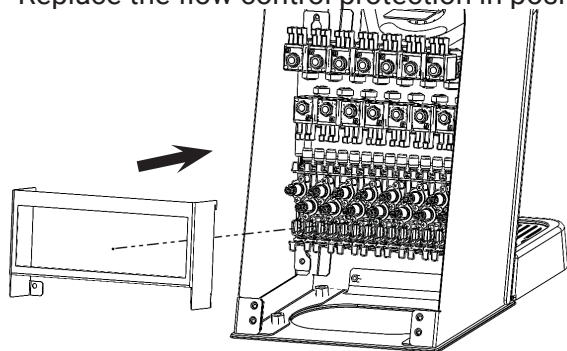


8. Close the back panel using the 4 screws.

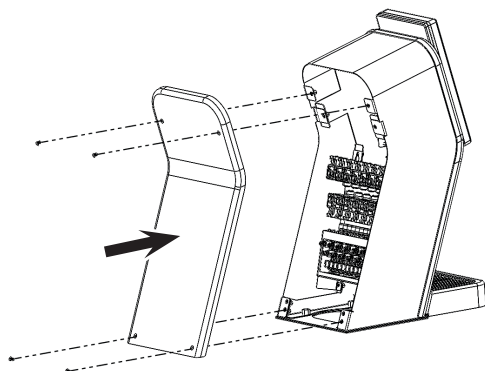

13. TOUCH SCREEN

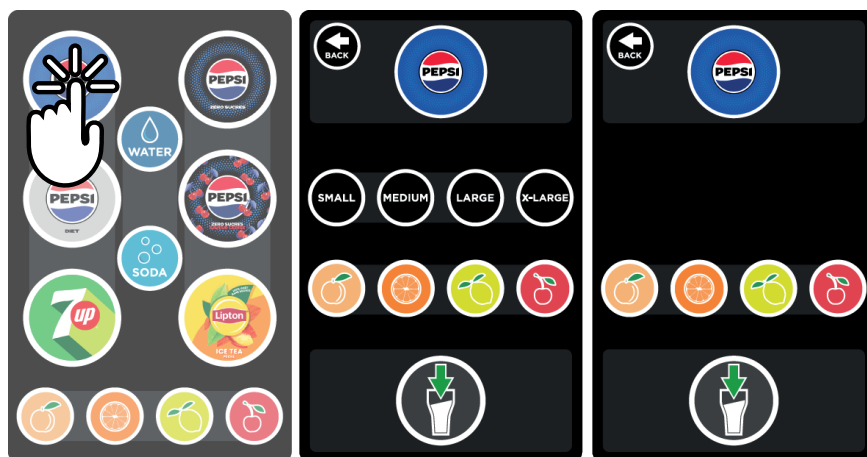

By pressing on a product icon the product page will pop up. From there the user can choose the cup size if the Next is in portion control mode, or else the user can dispense pressing and holding the pouring button as long as he want (push to pour mode). In the same page the user can also choose a flavour (if the option is available). If the user don't make any selection the Next will go back to the main page after 10 seconds

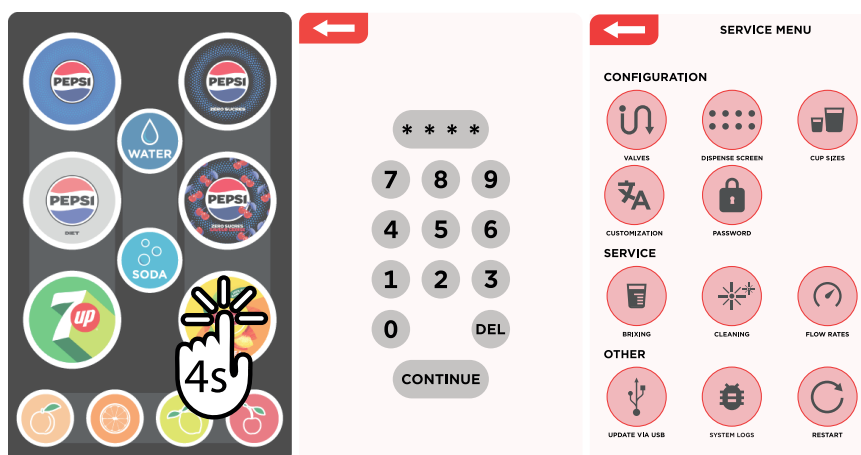


If the user press and hold the bottom right product icon the technician menu access page will pop up.

Default password is set to 1234

In the technician menu the user will find the following settings:


- Valves: to change the association between products and valves;
- Dispense screen: to change the position of the products on the main page;
- Cup sizes: to set cup sizes and/or activate and deactivate them
- Customization: to change between different purging modes and measurements units (from ml to ounce)
- Password: to change technician menu access password
- Bricking: to calibrate the flow controls without using a syrups separator
- Cleaning: to empty and clean the products lines
- Flow rates: to set the water and soda flow rates
- Remote access: to connect to the fount through the Android app (already developed but to be updated)
- Update via USB: to update the fount firmware through an USB stick
- Restart: to reboot the system (to be used after a cup size activation/deactivation)

Valves

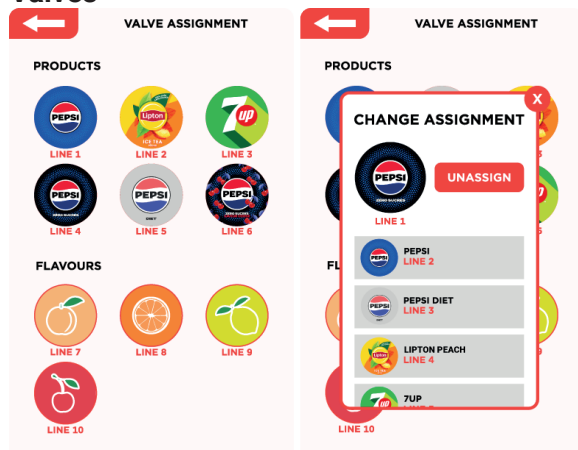


By selecting the product line to be changed, the products library will pop up and the user can both unassign completely the line or select a new product for the line. Under the product name there is written if the product is already selected on another line or if it's currently unassigned.

Dispense screen

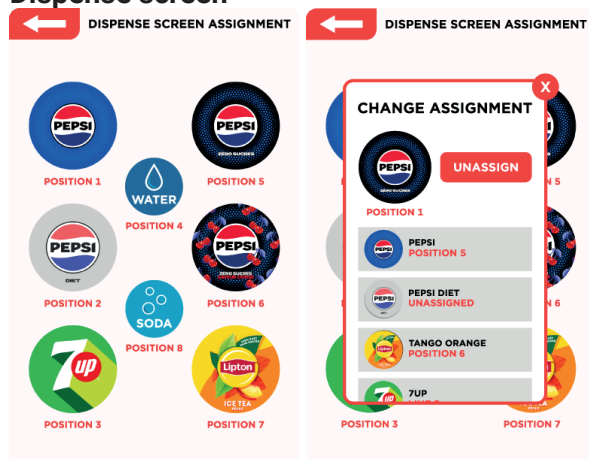

By selecting the product position to be changed, the products library will pop up and the user can both unassign completely the position or change a new product for the position. Under the product name there is written if the product is already placed in another position or if it's currently unassigned.

Cup sizes

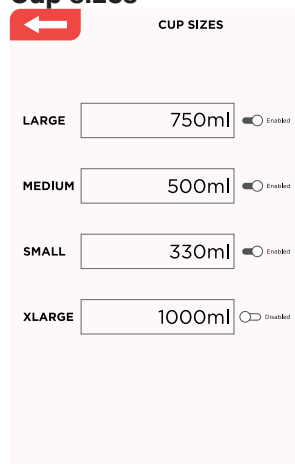

By pressing on the cup size the user can change the quantity of product for each size. Using the toggle on the right the user can enable or disable a cup size. **ATTENTION!** in order to make the en-

abling/disabling of a cup dimension active the user need to restart the fount using the “Restart” function in the technical menu

Customization

The first two screenshots show the 'REGION' screen with the following options:

- LANGUAGE: NONE
- REGION: NONE
- POURING MODE: VOLUME BASED CUPS
- VOLUME UNITS: ml

The third screenshot shows the 'SERVICE MENU' with the following options:

- CONFIGURATION: VALVES, DISPENSE SCREEN, CUP SIZES
- SERVICE: CUSTOMIZATION, PASSWORD, BRIKING, CLEANING, FLOW RATES
- OTHER: UPDATE VIA USB, SYSTEM LOGS, RESTART

By pressing on the volume units the user can choose between ml and ounces. All the technician submenu will change the volume unit displayed and make the conversions (cup sizes, flow rates...).

By pressing on the pouring mode the user can choose between volume based cups and press to pour options. If press to pour is selected both the volume units and the cup sizes will be hidden.


Password

The 'CHANGE PASSWORD' screen displays the following fields and controls:

- Enter old PIN
- Enter new PIN
- Confirm new PIN
- Numeric keypad with digits 0-9 and a DEL button
- CONTINUE button

The user in order to change password need to first enter the old one, then the new one and at last confirm the new password. There is the possibility on request to have a master password that cannot be change from the touchscreen, but only during Next production. Said password will always work even if the standard password will be changed.

Brixing

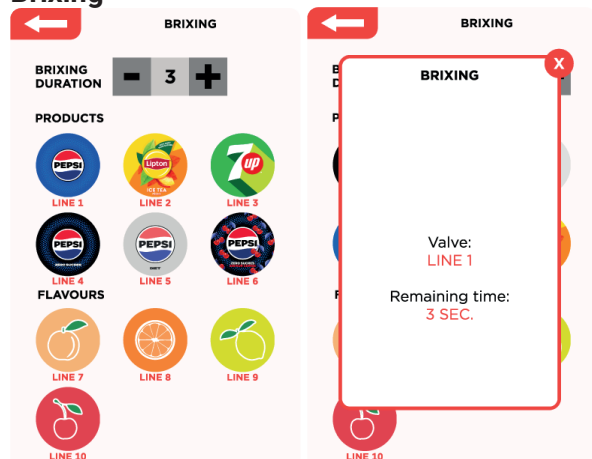


By pressing on plus and minus symbol the user can change the brixing time. Pressing the product logo will open the corresponding line (only the syrups line) for the selected amount of time. By default the brix duration is set to 4 seconds, exiting from the brixing menu will set the duration back to default.

Cleaning



By pressing on plus and minus symbol the user can change the cleaning time. Pressing the product logo will select the corresponding line (only the syrups line). Pressing on start cleaning button will open each line selected for the selected amount of time (each line will be open for the total time amount selected). By default the cleaning duration is set to 120 seconds, exiting from the brixing menu will set the duration back to default.

Flow rates

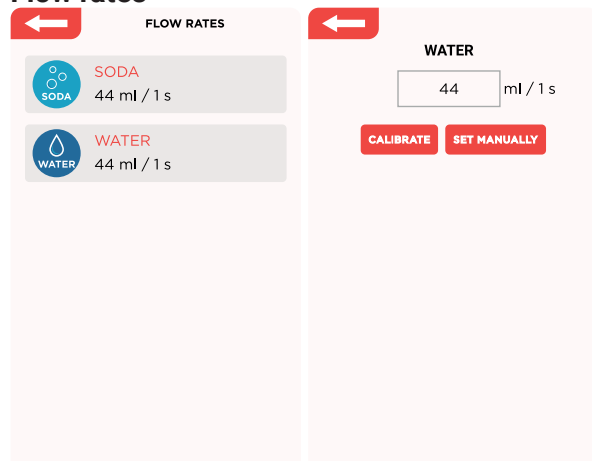

By pressing on the soda or water, the calibration page will pop up. The user can choose to cali-

brate the water/soda automatically: the fount will dispense for 10 seconds and then ask for the amount of water/soda dispensed (place a graduated container under the nozzle before doing so). Or the user can choose to set the flow rate manually typing in the value.

Update via USB

It is possible to update the product library and logos using a USB stick. To do so connect the USB stick to the USB port on the back of the screen or to the extension cord on the bottom of the fount. Press the update button on the fount and wait until the procedure is finished. If the procedure has been done correctly the fount will restart.

Contact **VINSERVICE MICRO MATIC** to receive the update files to be copied on the USB stick

System log *(currently under development)*

Through this menu is possible to download errors logs, telemetry logs or configuration (to transfer setting to other fount). To download the files connect the USB stick to the USB port on the back of the screen or to the extension cord on the bottom of the fount. Press the preferred log button on the fount and wait until the procedure is finished. When downloading the button will turn grey, once finished the button will turn red again.

The file downloaded is a csv format.

14. MAINTENANCE

Routine maintenance:

Routine maintenance can be carried out by common personnel in compliance with the rules stated below.

- Daily: check for leaks.
- Every month or as needed, sanitize or wash the lines through which liquids passes. Wash and rinse them with plenty of water. Use detergents suitable for food industry according to the supplier's instructions.
- Every month clean the machine vacuum dust, filaments, paper, that may overheat electrical parts or cause faulty operation.

Flow Control adjustment:

To access the flow control, remove the 4 screws from the back pannel.


To reduce the flow loosen the red adjustment screw, turning it anticlockwise.

To increase the flow thighten the red adjustment screw turning it clockwise.



WARNING:

Disconnect power to the unit before servicing. Verify all power is off to the unit before performing any work. Failure to comply could result in serious injury, death or damage to the equipment.

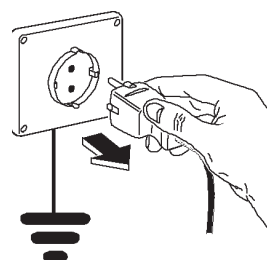

15. NOTES

[illegible]

[illegible]

16. DECLARATION OF CONFORMITY



IN ACCORDANCE WITH DIRECTIVES:

"MACHINE" 2006/42/CE

"LOW TENSION" 2006/95/CE

"EMC" 2004/108/CE

ANSI/UL 471

CSA C22.2 No. 120

NSF 18:2016

VINSERVICE MICRO MATIC S.R.L. - VIA G.FALCONE 26/34. 24050 ZANICA (BG)

Declares under their own responsibility that:

NEXT

HAS BEEN BUILT AND DESIGNED IN ACCORDANCE WITH THE SAFETY
REQUIREMENTS PROVIDED FOR BY "CE" MARKING STANDARDS

GIULIO GUADALUPI MANAGING DIRECTOR

